TOSHIBA

FILE NO. 030-200103

SERVICE MANUAL

COLOUR TELEVISION

C9PJ Chassis

40PW13

PRINTED IN JAPAN Feb., 2001 Ⓣ

TABLE OF CONTENTS

CHAPTER 1 **GENERAL ADJUSTMENTS**

SAFETY INSTRUCTIONS 3
CRT ASSEMBLY REPLACEMENT AND MOUNTING 4
PICTURE TUBE COMPONENTS ADJUSTMENT 6
SERVICE POSITION 9
SERVICE MODE 10
DESIGN MODE 13
ELECTRICAL ADJUSTMENT 14
CONVERGENCE ADJUSTMENT 23
SCREEN AND MIRROR ALIGNMENTS 32
CIRCUIT CHECKS 33

CHAPTER 2 **SPECIFIC INFORMATIONS**

SETTING & ADJUSTING DATA 34
LOCATION OF CONTROLS 35
CIRCUIT BLOCK DIAGRAM 37
MECHANICAL DISASSEMBLY 38
CHASSIS AND CABINET REPLACEMENT PARTS LIST 39
PC BOARDS TOP VIEW 60
PC BOARDS BOTTOM VIEW 61
TERMINAL VIEW OF TRANSISTORS 75
SPECIFICATIONS 79
APPENDIX:
CIRCUIT DIAGRAM

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE “X-RAY RADIATION PRECAUTION”, “SAFETY PRECAUTION” AND “PRODUCT SAFETY NOTICE” INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is (A) kV at zero beam current (minimum brightness) under a (C) V AC power source. The high voltage must not, under any circumstances, exceed (B) kV.

   Refer to table-1 for high voltage (A), (B) & AC voltage (C). (See SETTING & ADJUSTING DATA on page 34)

   Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended that the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
2. The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
3. Some part in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

SAFETY PRECAUTION

WARNING : Service should not be attempted by anyone unfamiliar with the necessary precautions on this receiver. The following are the necessary precautions to be observed before servicing this chassis.

1. An isolation transformer should be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
2. Always discharge the picture tube anode to the CRT conductive coating before handling the picture tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled. Use shatter proof goggles and keep picture tube away from the unprotected body while handling.
3. When replacing a chassis in the cabinet, always be certain that all the protective devices are put back in place, such as; nonmetallic control knobs, insulating covers, shields, isolation resistor-capacitor network etc.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.
Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire, X-ray radiation or other hazards.

CRT ASSEMBLY REPLACEMENT AND MOUNTING

CAUTION : DO NOT LOOSEN THE HEX HEAD BOLTS WITH SPRINGS (12 PCS), BECAUSE THOSE ARE FOR SEALING OF CRT COOLANT.

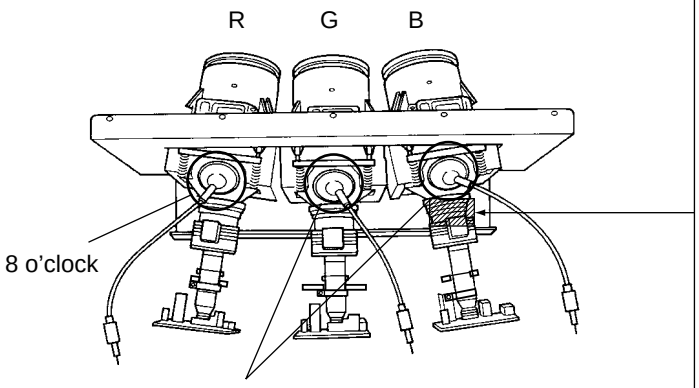

Attention Serviceman

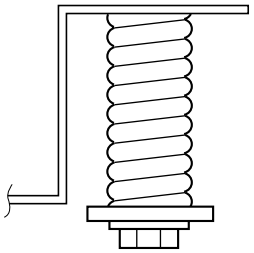

The Hex Head Bolts with Springs. (see sketch) used on CRT assembly, are "NOT" Adjustment Screws DO NOT LOOSEN-FLUID LEAKAGE WILL OCCUR.

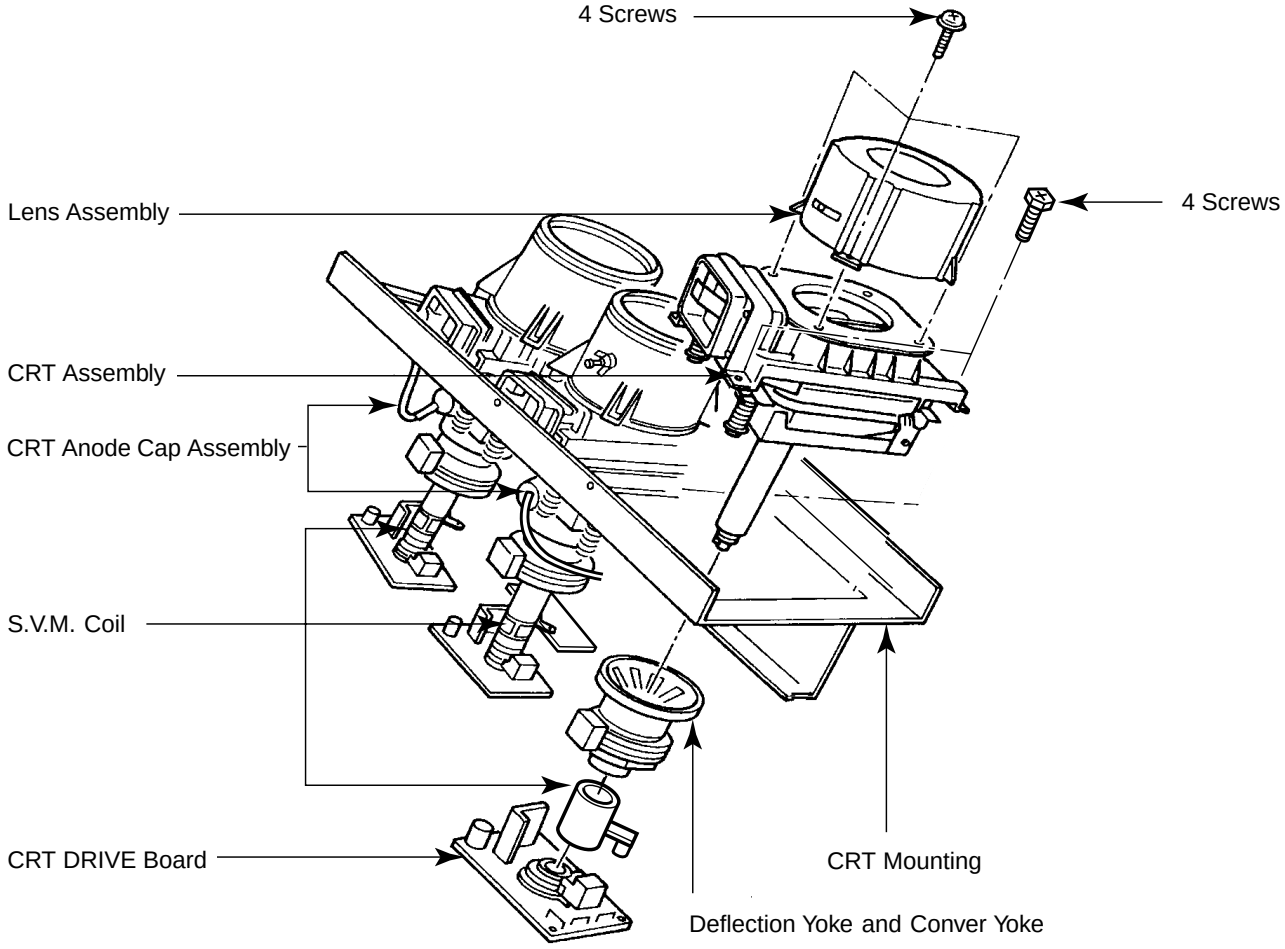

Lens and Neck Components View

TO REMOVE CRT (Same procedure for R, G, B)

1. Remove CRT DRIVE Board, S. V. M. COIL and DEF. YOKE from CRT.
2. Remove Lens Assembly.
3. Detach CRT Anode Cap from CRT.
4. Remove CRT Assembly from CRT Mounting.

CRT REPLACEMENT (Same procedure for R, G, B)
Reverse the removal procedures except the followings.

1. Anode Cable should be replaced with new one. See "SERVICING PRECAUTIONS" shown below.
2. Install silicon (T461B) to the CRT, replace the Anode cable and put enough silicon again on around the Anode Cap as illustrated.

CAUTION: Align the Anode cable as illustrated on page 4.

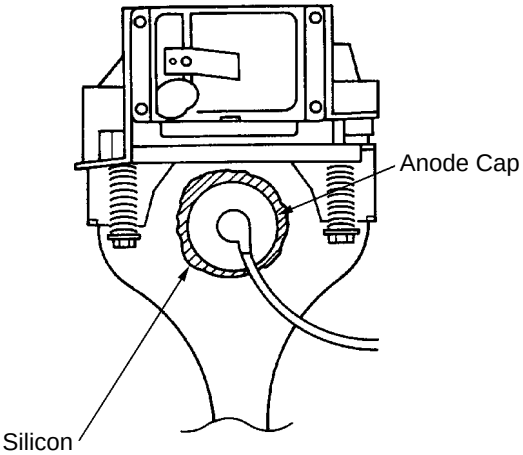

ADJUSTING PROCEDURE IN REPLACING CRT

1. R.G.B. CUTOFF (SCREEN VR) ADJUSTMENT (page 6.)
2. R.G.B. FOCUS ADJUSTMENT (page 6.)
3. PICTURE TILT ADJUSTMENT (page 7.)
4. USER CONVERGENCE CENTER CHECK (Refer to owner's manual.)
5. CENTERING ADJUSTMENT (page 7.)
6. CONVERGENCE ADJUSTMENT (page 23.)
7. WHITE BALANCE ADJUSTMENT (page 15.)

Adjustments are complete.

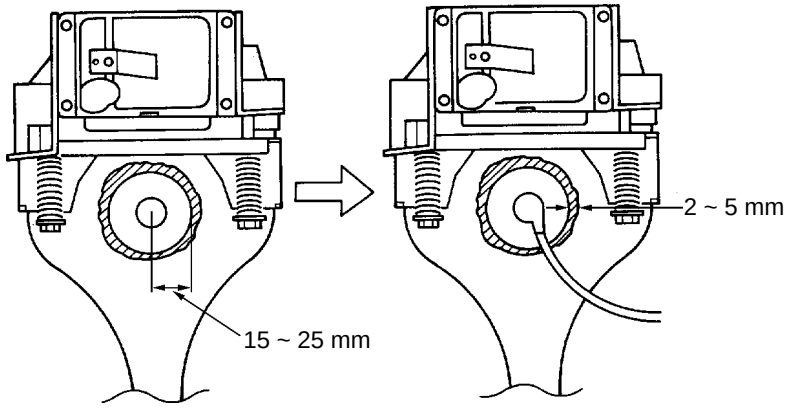

SERVICING PRECAUTIONS

■ Do not use a magnetized screw driver for screws of Deflection Yoke and Velocity Modulation Coil to avoid magnetization of electron gun. Magnetization of electron gun will degrade basic function and result in unbalance of right and left shift of user static convergence, and result in no variable quantity.

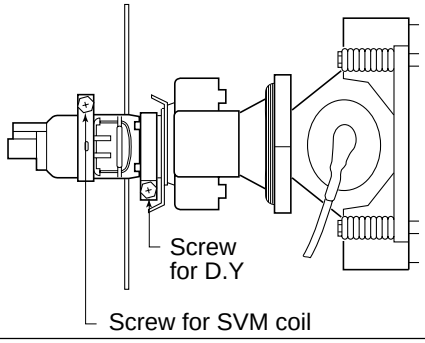

■ When replacing the anode cap assembly (CRT) or anode lead assembly (F.B.T.), remove the anode lead holder from old one and attach the holder again to new anode lead.

■ Check the point of anode lead in a straight line, if it is winding, please revise it.

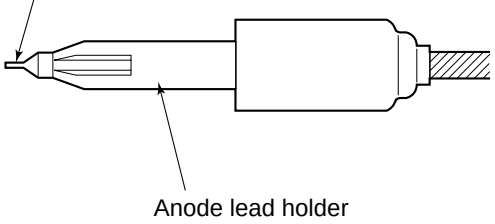

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

PICTURE TUBE COMPONENTS ADJUSTMENT

ADJUSTING PROCEDURE IN REPLACING CRT

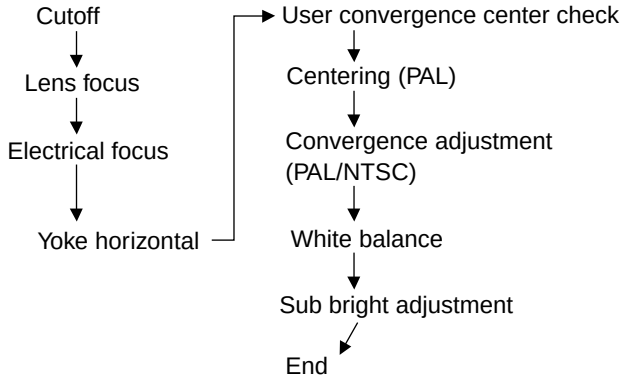

DESCRIPTION OF NECK COMPONENTS

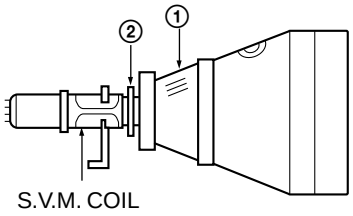

① Deflection yoke and convergence yoke.
The position on the neck is required most front (CRT funnel side) and the screw is fastened after rotating yoke adjusting picture tilt.

② Centering magnet
After adjusting picture tilt, picture position is finally fixed by this magnet.
In order to get maximum margin of user convergence control for center of screen, this magnet have to be used for center convergence adjustment.

PREPARATION
Operate the receiver for at least 5 minutes.

R, G, B CUTOFF (SCREEN VR) ADJUSTMENT

1. Adjust before replace the screen assembly.
2. Set user control to reset position.
   (CONTRAST → Max
   BRIGHTNESS, COLOR, TINT → Center.)
3. Call up the adjustment mode display, then select the item RCUT.
4. Adjust the data of items **RCUT**, **GCUT**, and **BCUT** to "40H".
5. Press the -/-- button on Remote. (Y-MUTE : ON)
6. Gradually rotate R, G and B screen volume of FOCUS PAC clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them.
   (Lookin to the lens in order to check the raster.)
7. Press the -/-- button on Remote. (Return to Normal Picture)

RGB FOCUS ADJUSTMENT

1. Call-up the adjustment mode (see page 10)
2. Press ⊖ button on the remote controller in order to display the internally-generated cross-hatch (See TEST SIGNAL SELECTION on page 11.)
3. Expose only RED by covering the GREEN and BLUE lenses with caps.
4. Loosen the RED lens fixing screws (refer to Fig. a), and adjust the RED lens focus to obtain the sharpest point while observing the middle and peripheral sections of the screen.

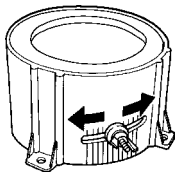

Fig. a

5. Use the focus VR of "R" of the focus pack in order to adjust the electric focus in the middle and peripheral sections of the screen to its sharpest level.
6. Check the RED focus of the whole screen and if necessary repeat steps 4 and 5.
7. Fix the RED lens by tightening its fixing screws.
8. Expose only GREEN by covering the RED and BLUE lenses with caps.
9. Display the internally-generated cross-hatch signal.
10. Adjust the GREEN lens focus on the left border of the screen to its sharpest level, then check the focus on the right border, and if it is at its sharpest level, fix it in that position by tightening the lens screws.

    (1) If the horizontal line toward the right border is red-flared, turn the lens screw slightly right in order to balance it with the left border. (After adjustment, the left border tends to be slightly green-flared, and the right border tends to be slightly red-flared.)
    (2) If the horizontal line toward the right border is green-flared, turn the lens screw slightly left in order to balance it with the left border. (After adjustment, the left border tends to be slightly red-flared, and the right border tends to be slightly green-flared.)

Note: The aim of the above-described adjustment procedure for the Green lens focus is to obtain the best lens focus after 2 - 3 hours of warming up taking into account the focus drift; it applies if the warming up time before the adjustment is less than 30 minutes. (The horizontal line in the screen middle section tends to be slightly red-flared.)

In case of warming up of more than 2 hours under a condition that the large anode current is running through the projection tube so that for example the all-white pattern appears, adjust to obtain the sharpest focus while observing the whole screen like in the RED case.

11. Press ⊖ button on the remote controller in order to display the internally-generated black cross-hatch. (See TEST SIGNAL SELECTION on page 11.)

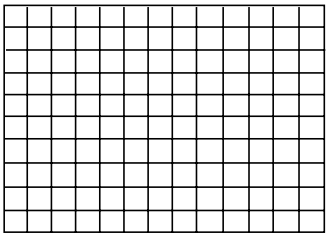

12. Use the focus VR of "G" of the focus pack in order to adjust the electric focus in the middle section of the screen to its sharpest level.

Note: Normally the most clearly visible point of the scanning line is the sharpest point of the Green focus, however as the characteristics vary depending on the projection tube, the sharpest focus points of the vertical and horizontal lines may not match each other, thus when you turn the focus VR, if the picture tends to be tremendously unstable (rolls horizontally or vertically), adjust the balance of the vertical and horizontal lines to its best position.

13. Check the GREEN focus of the whole screen and if necessary repeat steps 10 and 11.
14. Fix the GREEN lens by tightening up its fixing screws.
15. Expose only BLUE by covering the RED and GREEN lenses with caps.
16. Press ⊖ button on the remote controller in order to display the internally-generated cross-hatch (See TEST SIGNAL SELECTION on page 11.)
17. Loosen the BLUE lens fixing screws (refer to Fig. a), and adjust the BLUE lens focus while observing the middle and peripheral screen sections.
18. Press ⊖ button on the remote controller in order to display the internally-generated black cross-hatch (See TEST SIGNAL SELECTION on page 11.)
19. Use the focus VR of "B" of the focus pack in order to adjust the focus in the middle section of the screen to its sharpest level.
    (The point of the Blue focus becomes sharpest when the brightness level of BLUE is lowest, the cross-hatch is clearly visible.)

Note: Keep in mind that only the BLUE electric focus is adjusted with the black cross-hatch.

20. Check the BLUE focus of the whole screen and if necessary repeat steps 17 and 19.
21. Fix the BLUE lens by tightening its fixing screws.

TILT ADJUSTMENT

Rotate R, G, B deflection yoke so that picture becomes horizon, then fasten screw.

CENTERING ADJUSTMENT

1. Stretch a thread between two center slots of screen edge (top and bottom, left and right).

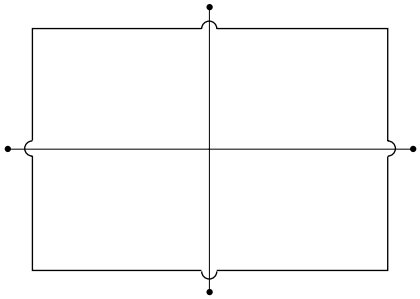

2. Select the adjustment mode. (See page 10.)
3. Press TV/VIDEO button on the Remote Control to display the black cross-hatch.

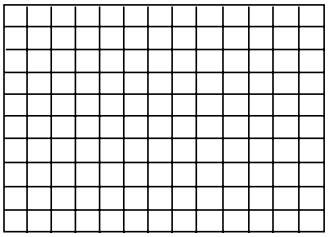

4. Adjust G centering magnet so that the cross-hatch pattern center comes to screen center.
5. Perform HEIGHT adjustment . (See page 14.)
6. Perform WIDTH adjustment. (See page 14.)
7. Check whole quality of green line.
8. Adjust R, B centering magnet so that the cross-hatch pattern center comes to screen center.

LOCATION OF SCREEN AND FOCUS VR'S

To remove the Speaker grille and Front panel.

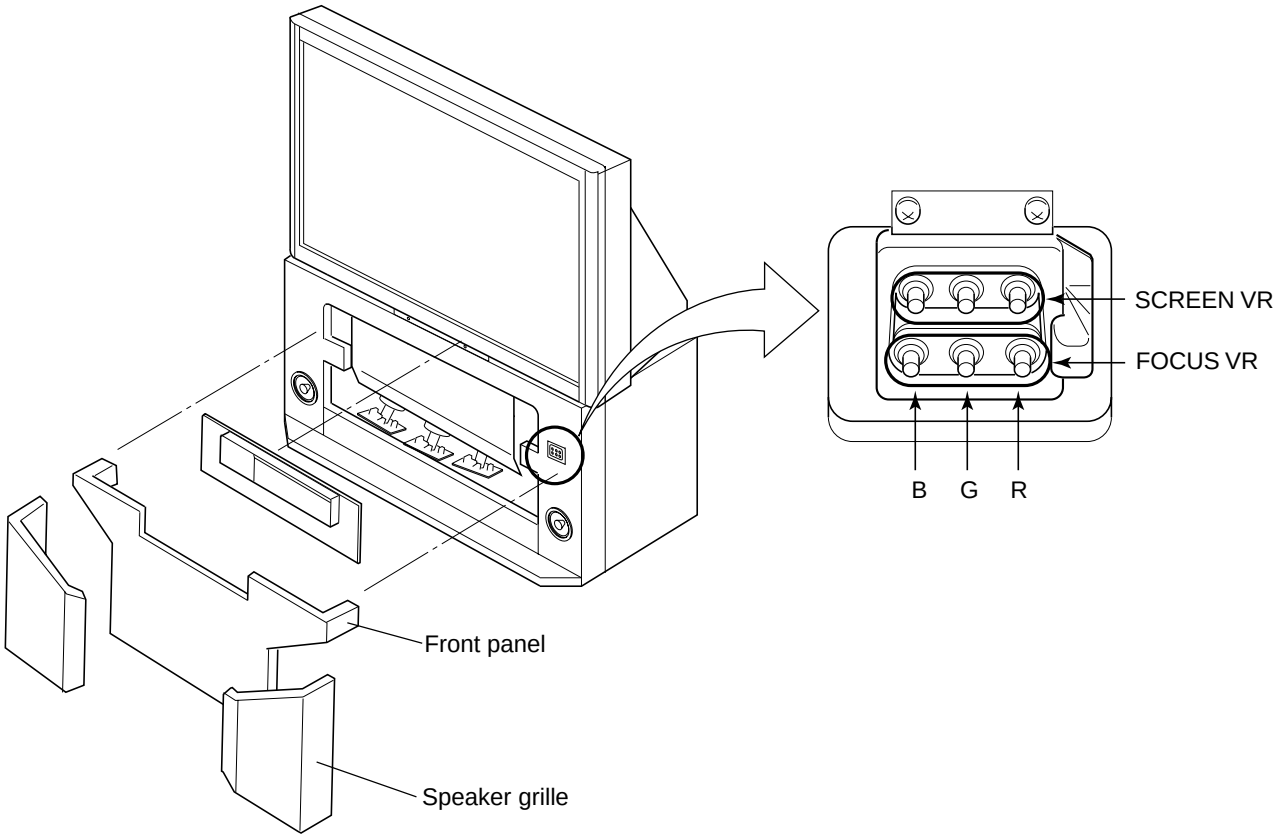

REPLACEMENT OF HIGH VOLTAGE CABLE

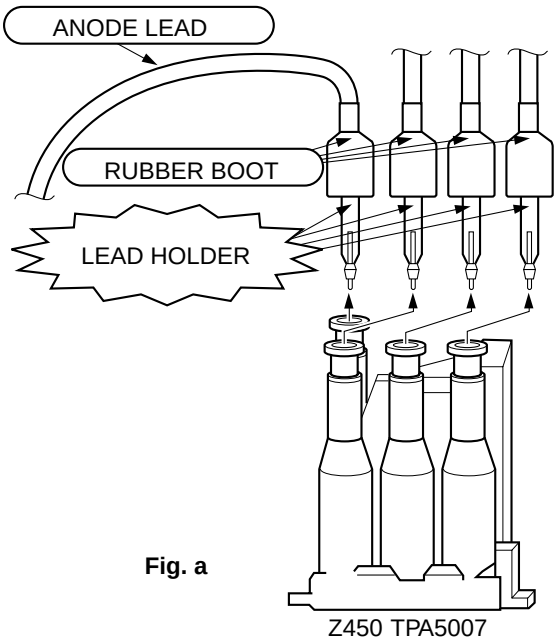

Fig. a

1. When replacing Anode Lead or Anode Cap with new one, remove Lead Holder from old lead as shown in figure below, and put it on new lead. Do not throw away Lead Holder.

NOTE : THE LEAD HOLDER IS ATTACHED TO TPA5007 (Z450), BUT IS NOT ATTACHED TO ANODE LEAD AND ANODE CAP. RUBBER BOOT IS ATTACHED TO ANODE LEAD AND ANODE CAP.

2. Detaching Lead Holder

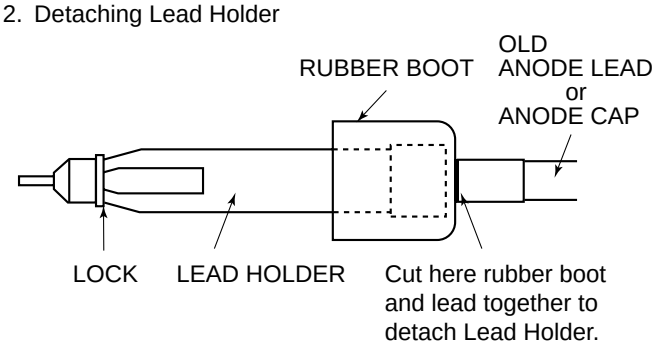

Fig. b

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

SERVICE POSITION

In order to assure the performance, processed wires shall be replaced after the repair work.
Work procedures are as follows:

1. Remove the back board.
2. Remove lead wires.
3. Draw out the chassis.
4. Rest the chassis against the back cabinet, chassis as shown bellow.

After repair work finished, replace it in the opposite procedure.

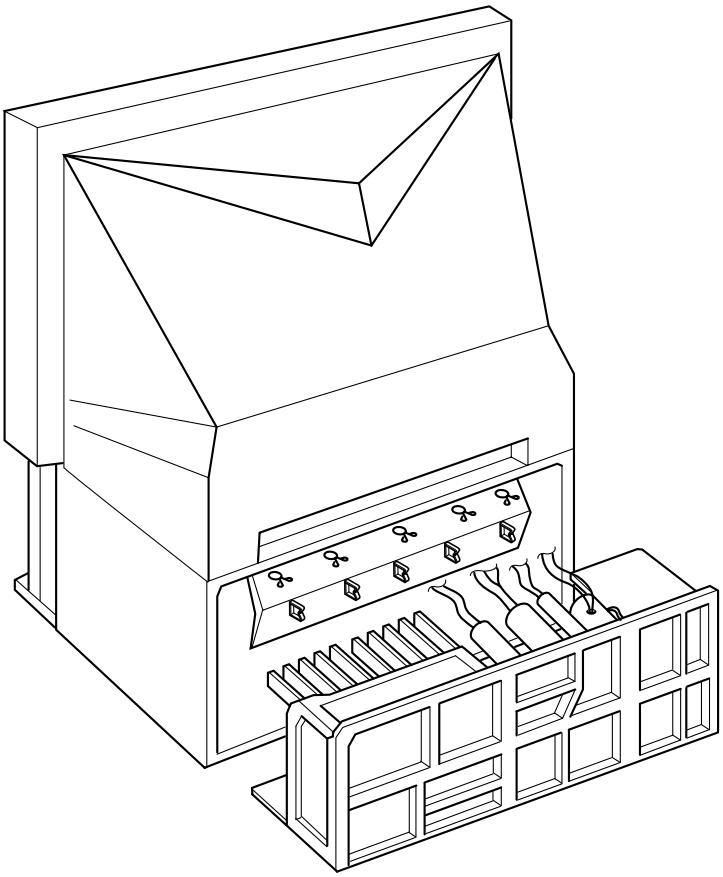

SERVICE MODE

1. ENTERING TO SERVICE MODE

1) Press 🔇 button once on Remote Control.
2) Press 🔇 button again to keep pressing.
3) While pressing the 🔇 button, press MENU button on TV set.

(Service mode display)

2. DISPLAYING THE ADJUSTMENT MENU

1) Press MENU button on TV.

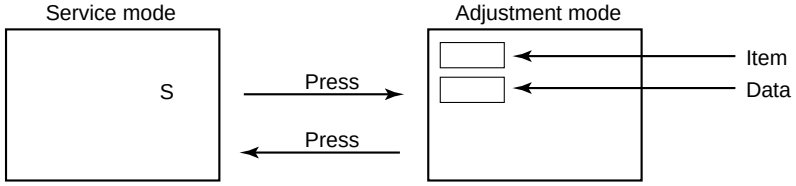

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

Screen adjustment mode ON/OFF:	-/-- button (on Remote)
Test signal selection :	⊖ button (on Remote)
Selection of the adjustment items :	Channel ▲/▼ (on TV or Remote)
Change of the data value :	Volume ◿ +/– (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	CALL + Channel button on TV (▲)
Reset the count of operating protect circuit to “00”:	CALL + Channel button on TV (▼)
“RCUT” selection :	1 button
“GCUT” selection :	2 button
“BCUT” selection :	3 button
“SCNT” (or “CNTX”) selection :	4 button
“COLC” (or “SCOL”) selection :	5 button – – – – – Color thickness correction
“TNTC” selection :	6 button note: Displayed differently as shown below, de-
Convergence adj :	YELLOW button pending on the setting of the receiving color
Self diagnostic display ON/OFF :	9 button system.
	COLP (PAL)
	COLC (NTSC)
	COLS (SECAM)

CAUTION : Never try to perform initialization unless you have changed the memory IC.

4. SELECTING THE ADJUSTING ITEMS

1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2. (▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode.
(See SETTING & ADJUSTING DATA on page 34)

5. ADJUSTING THE DATA

1) Pressing of VOLUME +/– button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

6. EXIT FROM SERVICE MODE

1) Pressing POWER button to turn off the TV once.

■ INITIALIZATION OF MEMORY DATA OF QA02

After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the CALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been complated.
3. Check the picture carefully. If necessary, adjust any adjustment item above. Perform “Auto search Memory” on the owner’s manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.

7. TEST SIGNAL SELECTION

1) Every pressing of ⊖ button on the Remote Control changes the built-in test patterns on screen as described below in SERVICE MODE.



Signals	Picture
• Red raster • Green raster • Blue raster • All White	
• Black cross-hatch	

* The signals marked with ▒ are not usable to display in the Test signal for some model.

8. SELF DIAGNOSTIC FUNCTION

1) Press “9” button on Remote Control during display of adjustment menu in the service mode.
   The diagnosis will begin to check if interface among IC’s are executed properly.
2) During diagnosis, the following displays are shown.

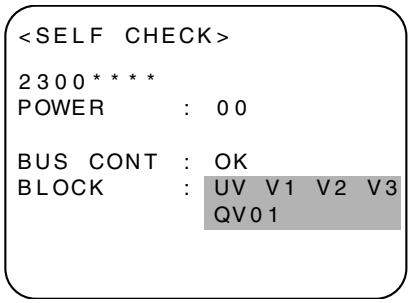

Indicated color of mode now selected : Green and Red
Indicated color of other modes : White

Green : Normal
Red : The microcomputer operates to provide judgement of no video signal. The red color is still indicated though the signal is input, failure may exist in input signal line including QV01.
QV01 : In case of indication green ---Normal
In case of indication red with input signal----
Failure may exist in output line including QV01.

① Part number of microcomputer (QA01)
② Operation number of protecting circuit ----“00” is normal.
When indication is other than “00”, overcurrent apts to flow, and circuit parts may possibly be damaged.
③ BUS CONT ----“OK” is normal.
When indication shows “Q ○○○ (Green: OK, Red: NG)”, the device with the number may possibly be damaged.
④ BLOCK
UV : TV reception mode
V1 : VIDEO 1 input mode (←①)
V2 : VIDEO 2 input mode (←②)
V3 : VIDEO 3 input mode (←③)

NOTE: Component which controls character display on screen is QT01 (TELETEXT IC.). If this display function fails to operate due to damage in QT01, self diagnosis procedure is as follows.
(1) In case that on timer indicator is blinking with interval of 0.5 seconds; it means protecting circuit (Current limiter) is operating, and circuit components may possibly be damaged. Check related components.

* The items marked with ▒ are not usable to display in the SELF DIAGNOSTIC FUCTION for some model.

DESIGN MODE

1. ENTERING TO DESIGN MODE

1) Select the Service mode. 2) While pressing CALL button on Remote and press MENU button on TV. 3) Press MENU button on TV.

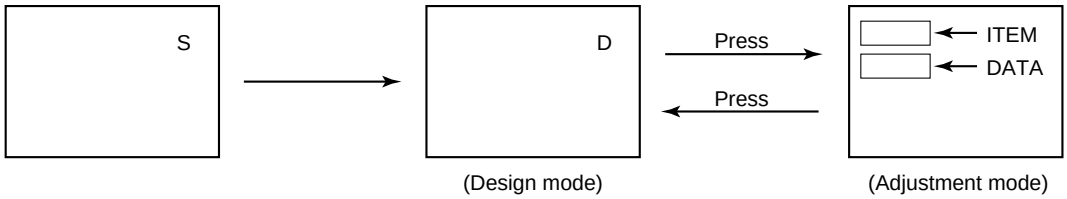

When QA02 is initialized, items “OPT0” and “OPT1” of DESIGN MODE are set to the data of the representative model of this chassis family.
Therefore, because ON-SCREEN specification remains in the state of the representative of model. This model is required to reset the data of items “OPT0” and “OPT1”.

2. SELECTING THE ADJUSTING ITEMS

Every pressing of CHANNEL ▼ button in the design mode changes the adjustment items in the order of table-3. (▲ button for reverse order)

Refer to table-3 for data of design mode.
(See SETTING & ADJUSTING DATA on page 34)

3. ADJUSTING THE DATA

Pressing of VOLUME ▲ or ▼ button will change the value of data.

ELECTRICAL ADJUSTMENT

PAL

ITEM	ADJUSTMENT PROCEDURE
WIDTH (WID)	1. Select picture size WIDE mode. 2. Call up the adjustment mode display, and press the TV/VIDEO button on the remote untill the white cross dot pattern appears on the screen. 3. Press the CHANNEL ▲ or ▼ button to select the item **WID** and press the VOLUME ▲ or ▼ button to get the pictuer so the left and right edges of rester begin to lack. 4. Press the VOLUME ▲ or ▼ to advance the data 22 steps. * CAUTION "**WID**" data don't adjust other picture size, only WIDE mode.
HEIGHT (HIT)	1. Call up the adjustment mode display, then select the item **HIT**. 2. Press the VOLUME ▲ or ▼ button to get the picture so the top of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by following steps. WIDE: 7 steps Super Live: 11 steps CINEMA: 10 steps * CAUTION First adjust WIDE mode next other. Note : Check the vertical picture position is correct.

NTSC

WIDTH (NWID)	1. Select picuter size wide mode. 2. Call up the adjustment mode display, and press the TV/VIDEO button on the remote untill the white cross dot pattern appears on the screen. 3. Press the CHANNEL ▲ or ▼ button to select the item **WID** and press the VOLUME ▲ or ▼ button to get the pictuer so the left and right edges of rester begin to lack. 4. Press the VOLUME ▲ or ▼ to advance the data 16 steps. 5. Change picture size Super Live and CINEMA adjust "NWID" data same value for WIDE mode.
HEIGHT (NHIT)	1. Call up the adjustment mode display, then select the item **HIT**. 2. Press the VOLUME ▲ or ▼ button to get the picture so the top of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by following steps. WIDE: 7 steps Super Live: 13 steps CINEMA: 10 steps Note : Check the vertical picture position is correct.

ITEM	ADJUSTMENT PROCEDURE
WHITE BALANCE (RCUT) (GCUT) (BCUT) (RDRV) (BDRV)	Black and White pattern 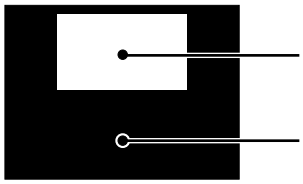 High light area Adjust "RDRV" or "BDRV" to be white. Low light area Fine adjust "RCUT", "GCUT" or "BCUT" to be black. 1. Set user control to reset position. (CONTRAST → Min. BRIGHTNESS, COLOR, TINT → Center.) 2. Call up the adjustment mode display, then select the item RCUT. 3. Adjust the data of items **RCUT**, **GCUT**, and **BCUT** to "40H". 4. Press the ⊕ button on PJTV. (Y-MUTE : ON) 5. Gradually rotate R, G and B screen volume of FOCUS PAC clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them. (Lookin to the lens in order to check the raster.) 6. Press the ⊕ button on PJTV. (Return to Normal Picture) 7. Press the ⊕ button on Remote, and select the Black and White pattern. 8. Adjust the data of items **RCUT**, **GCUT** and **BCUT** for proper white-balanced picture in low light area. 9. Adjust the data of items **RDRV** and **BDRV** for proper white-balanced picture in high light area. 10. Check the white balance in both low and high light areas. If necessary, perform again steps from 8 to 9.

(Reference factory adjustment)

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
[SCNT]	Sub-contrast	Dynamic mode Audio system: I	Sub-bright signal (PAL-I signal)	TP46B SIGNAL unit	① Adjust the amplitude from the pedestal level to the white peak.	2.4 ± 0.1 Vpp
[BRTC]	Sub-bright center	Dynamic mode	Sub-bright signal	Screen adjustment	① Adjust the number of collapsed black lines of the sub-bright signal. ② Carry out adjustment after adjusting the W/B and SCNT.	4 ± 1.5 linee
[COLP]	Sub-color center PAL	Dynamic mode	Sub-bright signal (PAL)	TP46B SIGNAL unit	① Adjust the amplitude of the color bar. ② Adjust the P-P value of the upper half.	1.30 ± 0.1 Vpp
[BELL]	BELL filter		SECAM color bar	TPM01 SIGNAL unit	① Use a synchroscope and adjust so that the waveforms can become flat. ② Adjust at the white part.	100 ± 10 %
[COLS]	Sub-color center SECAM	Dynamic mode	SECAM color bar	TP46B SIGNAL unit	① Adjust the amplitude of the color bar. (Apply SCREEN mute during adjustment) ② Adjust the P-P value of the upper half.	1.95 ± 0.1Vop
[SRY]	SECAM R-Y black level	Dynamic mode	SECAM color bar	TP02 SIGNAL unit	① Adjust so that the level of the monochrome signal part can meet the level of the H.BLK. ② Carry out adjustment after adjusting the BELL.	0 ± 10 mV
[SBY]	SECAN B-Y black level	Dynamic mode	SECAM color bar	TP01 SIGNAL unit	① Adjust so that the level of the monochrome signal part can meet the level of the H.BLK. ② Carry out adjustment after adjusting the BELL.	0 ± 10 mV

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
Screen adjustment	Screen	Factory- screen-adjustment mode		CRT screen	① Make the surrounding as dark as possible. ② Enter factory-screen-adjustment mode. (Y mute, DRV.CUT. = 40 H) ③ Directly observe the CRT screen, and adjust the screen VR to the point where it begins to emit light. ④ Use R, G, and B tubes respectively to perform above-mentioned adjustments.	Point where it begins to emit light.
Focus adjustment	Focus	Dynamic mode Cinema mode	Retoma signal (PAL-I)	Crosshatch signal Screen adjustment	① Make adjustments to achieve the best possible position by repeating electrical and optical focusing. ② Use jigs to protect the CRTs, except the axis under adjustment, from any light. ③ Use R, G, ad B tubes respectively to perform above-mentioned adjustments.	For details, refer to the focus adjust-ment method introduced in the next page.
RDRV BDRV	Bright part W/B			Screen adjustment	① Adjust the color temperature of the bright part (103cd/m^2).	8750k–0.002uv
RCUT BCUT	Dark part W/B			Screen adjustment	① Adjust the color temperature of the dark part (17cd/m^2).	8750k–0.002uv
High voltage adjustment	High voltage	Dynamic mode	Phillips pattern (PAL-I)	Between T461 and Z450	① Connect a voltmeter between T461 and Z450 and adjust the high voltage with R450. (User adjustment standard)	30.7 ± 0.2kV

Focus adjustment method (1/2)

Model	Adjustment points	Adjustment methods
40PW13G 40PW13B		Conditions: (1) RED, BLUE: Internal Retoma signals (PAL) (2) GREEN: Internal crosshatch signal (white crosshatch on black background) (3) User adjustment: Dynamic mode, cinema mode (4) Carry out electrical focus and lens focus after rough adjustment. (5) Use the jig to protect everything, except the color subjected to adjustment, from exposure to light.
	Electrical focus	(1) Receive the internal Retoma signals, use the focus VR of the focus pack (Z410), and adjust the electrical focus of each R and B projection tube to the position where the center of the screen gets optimally focused. (2) Receive the internal crosshatch signals, use the focus VR of the focus pack (Z410), and adjust the electrical focus of G so that the vertical scanning lines on the screen center can appear most clearly.
	Lens focus (Precautions)	(1) R, B: Receive the internal Retoma signals, watch the screen center and its periphery, and make adjustment to the best possible focus. (2) G: Adjust this by the method introduced in the next page. ① Carry out anticipated adjustment on the G lens, considering the time until the lens focus stabilizes. ② The level of anticipated adjustment on the G lens results in a required level of correction, if an adjustment point is set on the screen. ③ During a heat run, be sure to keep lower the G's screen VR of the focus pack from turning on the power of the set until immediately before the cutoff adjustment in order to stabilize the G's coupling liquid temperature.

Focus adjustment method (2/2)
GREEN lens focus adjustment

Model	Metodo di regolazione
[1] 40PW13 series 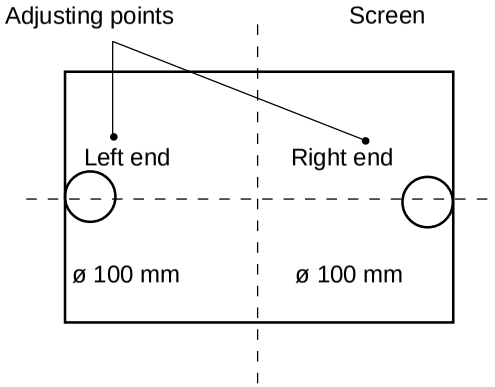 (Point of observation) Inside the circle of 100mm that is in contact with left and right bezels.	(1)Receive internal crosshatch signals, use the lens cap, and concentrate on the single color of G. (2)Watch the horizon of both the left and right ends on the horizontal axis of the screen, adjust the lens focus of G to the very best, and check that the left-and-right focus balance is appropriate. (Check left-and right balance of G lens focus) ① Use the left (or right) end crosshatch and make the best adjustment on the G's lens focus. ② Check the right (or left) end focus. (3)If the left and right lens focus is not properly balanced (tendency for flare), divide and adjust it to the middle grade. (4)Check on the periphery, and make certain that the focus grade lies within a tolerable level (including flare).

Completion of adjustment

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
Screen position adjustment		Dynamic mode	Phillips pattern (PAL-I)	Screen adjustment	(1)Adjust the vertical and horizontal screen positions and centering magnet so that the central + mark of the dummy screen and the + mark of the Phillips pattern can overlap in conformity. Carry this out individually on 3 tubes of R, G, and B (Note) Do not move HPOS, VPOS data	Less than ø7mm
HIT VLIN	Vertical amplitude adjustment (PAL WIDE)	Dynamic mode WIDE mode	Phillips pattern (PAL-I)	Screen adjustment	(1)Turn the screen size to WIDE. (2)In the first place, shorten the vertical amplitude using HIT data until the upper and low flags emerge on the screen. (3)Then, extend the vertical amplitude with the HIT data until either upper or lower flag end conforms to the screen end (Adjust the vertical center of the pattern to the central mark of the screen.)	Upper and lower flags are to be in contact
HIT VLIN	Vertical amplitude adjustment (PAL Super-live)	Dynamic mode Super-live mode	Phillips pattern (PAL-I)	Screen adjustment	(1)Turn the screen size to Super-live. (2)Adjust with the HIT so that the top and bottom of the inner circle of Phillips pattern will contact the screen edge. (Note) VLIN adjustment is not performed.	The inner circle is to contact the screen edge
HIT VLIN	Vertical amplitude adjustment (PAL cinema)	Dynamic mode CINEMA mode	Phillips pattern (PAL-I)	Screen adjustment	(1)Turn the screen size to CINEMA. (2)Adjust the registers on the top and bottom of the Phillips pattern as shown in the next page. (Note) Do not touch the centering magnet	

Completion of adjustment

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
HIT VLIN	Vertical amplitude adjustment (PAL SUB-TITLE)	Dynamic mode SUB-TITLE mode	Phillips pattern (PAL-I)	Screen adjustment	(1) Turn the screen size to SUB-TITLE. (2) Adjust the registers on the top and bottom of the Phillips pattern as shown in the next page. (Note) Do not touch the centering magnet	
WID	Vertical amplitude adjustment PAL WIDE	Dynamic mode WIDE mode	Phillips pattern (PAL-I)	Screen adjustment	(1) Turn the screen size to WIDE. (2) Adjust with the WID to make 6-lines of the left and right flags in the phillips pattern. (3) The user center position adjustment is to be 0.	
NHIT NLIN	Vertical amplitude adjustment NTSC WIDE	Dynamic mode WIDE mode	Monosco signals NTSC LEADERE-435B	Screen adjustment	(1) Turn the screen size to WIDE mode. (2) The 1st line on the screen is to be hidden by the mask.	
NHIT	Vertical amplitude adjustment SUPER-LIVE NTSC	Dynamic mode SUPER-LIVE mode	Monosco signals NTSC LEADER-435B	Screen adjustment	(1) Turn the screen size to SUPER-LIVE mode. (2) Adjust so that the upper side 3rd line on the screen will contact the screen edge. (3) Do not adjust the NVLI.	
NHIT NLIN	Vertical amplitude adjustment CINEMA NTSC	Dynamic mode CINEMA mode	Monosco signals NTSC LEADER-435B	Screen adjustment	(1) Turn the screen size to CINEMA mode. (2) Adjust so that the character 30 on the upper, lower, and left-and-right ends will contact the screen edge.	
NHIT NLIN	Vertical amplitude adjustment SUB-TITLE NTSC	Dynamic mode SUB-TITLE mode	Monosco signals NTSC LEADER-435B	Screen adjustment	(1) Turn the screen size to SUB-TITLE mode. (2) Adjust so that the upper side 5th line of the register on the screen will contact the screen. (3) The NVLI is not to be adjusted.	

Completion of adjustment

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
NWID	Horizontal amplitude adjustment WIDE NTSC	Dynamic mode WIDE mode	Monosco signals NTSC LEADER-435B	Screen adjustment	(1)Turn the screen size to WIDE. (2)Adjust the 2nd left register to the left edge of the screen. (3)When you change the NWID value on the WIDE screen also input the identical data to SUPER-LIVE and CINEMA.	

Unit adjustment DIGITAL-CONVER

Item	Name	Setting	Input signal	Measuring point	Adjusting method	Adjustment standard
PLL Frequency adjustment				Q709 Emitter	(1)Apply +5V to #15, #16 terminals of P701 +9V to #13 terminal of P701 –9V to #14 terminal of P701 (2)Adjust emitter's frequency to Q709 with L719.	32 ± 0.1 MHz

CONVERGENCE ADJUSTMENT

1. Screen Adjustment

The four PAL screens Wide/4:3, Super Live, Cinema and Subtitle, and the four NTSC screens Wide/4:3, Super Live, Cinema and Subtitle are adjusted. When adjusting, input an external signal for matching the sync.

CAUTION: The convergence circuit eliminates screen distortion but cannot make large corrections such as changing the overall screen size. Use caution because the protection circuit will be activated if corrections are excessively large. Before starting to adjust the various screens, always adjust the vertical size (HIT) and horizontal size (WID) by changing the main deflection data.

Execute the adjustment screens in the sequence Wide/4:3 → Super Live → Cinema → Subtitle for both PAL and NTSC.

1-1. Entering Adjustmet Menu

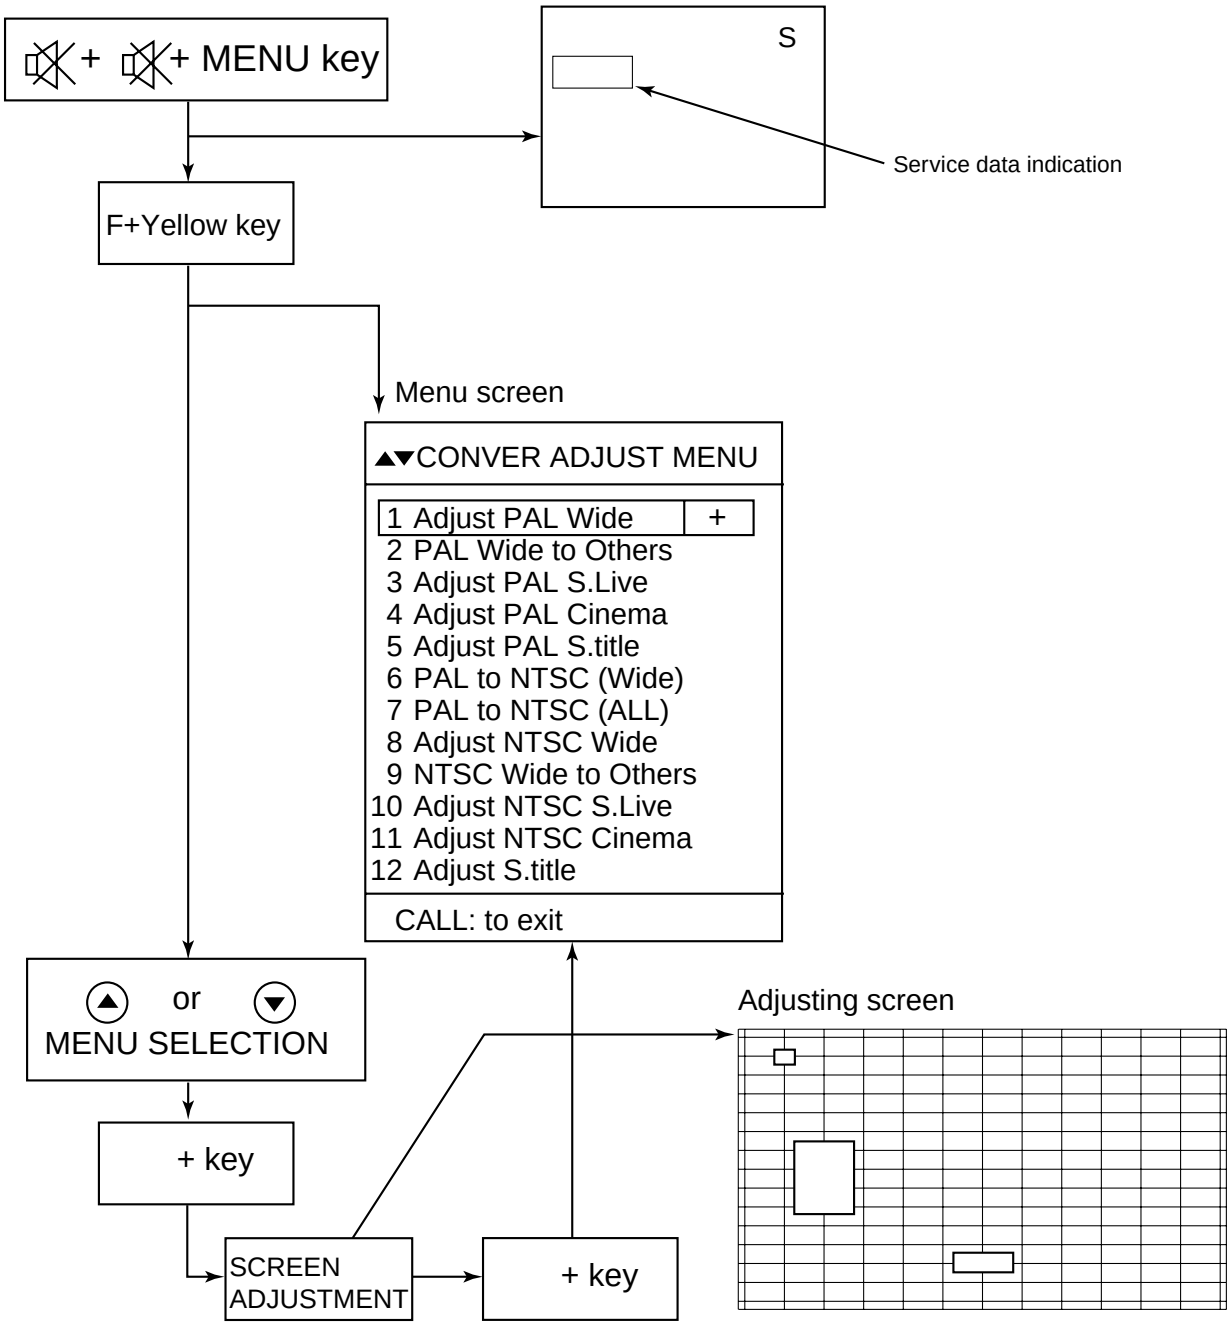

1-2. Remote Control Key

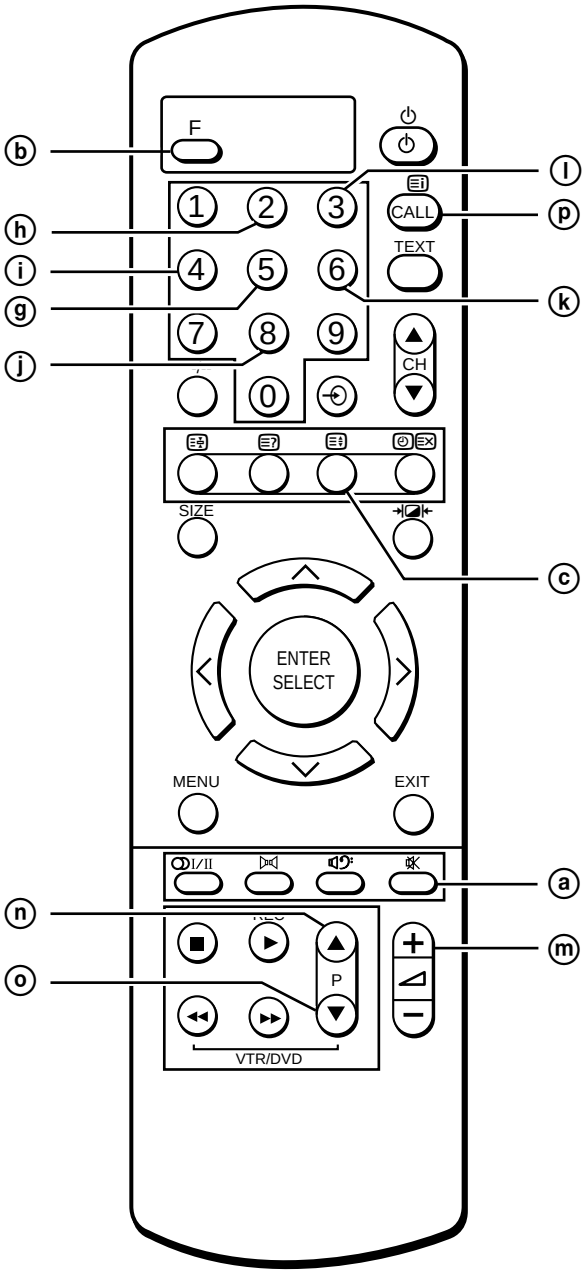

ⓐ 🔇 key ..... Push this key twice and the set console menu key to enter the service mode.
ⓑ F key ..... Push this key and yellow key to enter the convergence menu.
ⓒ Yellow or 7 key .. Convergence menu key.
ⓖ 5 key ..... Cursor shift / data change mode change-over.
ⓗ 2 key ..... Cursor up / adjusting point up.
ⓘ 4 key ..... Cursor left / adjusting point left
ⓙ 8 key ..... Cursor down / adjusting point down
ⓚ 6 key ..... Cursor right / adjusting point right
ⓛ 3 key ..... Cursor colour change (Adjusting colour selection).
ⓜ + key ..... Execution key on convergence menu.
ⓝ ▲ key ..... Up key on convergence menu.
ⓞ ▼ key ..... Down key on convergence menu.
ⓟ CALL key ..... Termination key on convergence menu.

Fig. 2

1-3. Adjusting Screen

1) Adjusting menu

NO	Item	Description
1	Adjust PAL Wide	Used for manual adjustment of the Wide/4:3 screen in the PAL mode. Returns to the original screen data screen before data conversion, explained below.
2	PAL Wide to others	Automatically saves approximate supplementary data for the other PAL screens based on the PAL Wide/4:3 screen data. First, the PAL Wide/4:3 screen data are converted to Super Live and the values are saved. Next, the data are converted to Cinema and the values are saved. Finally, the data are converted to Subtitle and the values are saved, and then the operation ends. Manually check the other screen modes as described below and make corrections if distortion, etc., is present. Please be aware that all PAL screens are re-adjusted when this menu is selected and executed.
3	Adjust PAL S.Live	Used for manual adjustment of the PAL Super Live screen. Select this mode for Super Live screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
4	Adjust PAL Cinema	Used for manual adjustment of the PAL Cinema screen. Select this mode for Cinema screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
5	Adjust PAL S.title	Used for manual adjustment of the PAL S.title screen. Select this mode for S.title screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
6	PAL to NTSC (Wide)	PAL Wide/4:3 screen data is calculated, converted to NTSC Wide/4:3 approximate data and saved. To assure accurate adjustments, select the manual mode explained below and check, then apply color matching and distortion adjustments.
7	PAL to NTSC (All)	Data for all PAL screens is converted to approximate data for the NTSC screens and saved. To assure accurate adjustments, select the manual mode explained below and check, then apply color matching and distortion adjustments.
8	Adjust NTSC Wide	Used for manual adjustment of the NTSC Wide/4:3 screen. Select this mode for Wide/4:3 screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
9	NTSC Wide to others	Approximate supplementary data for the other NTSC screens is automatically saved based on the NTSC Wide/4:3 screen data. First, the NTSC Wide/4:3 screen data are converted to Super Live and the values are saved. Next, the data are converted to Cinema and the values are saved. Finally, the data are converted to Subtitle and the values are saved, and then the operation ends. Manually check the other screen modes as described below and make corrections if distortion, etc., is present. Please be aware that all NTSC screens are re-adjusted when this menu is selected and executed.

NO	Item	Description
10	Adjust NTSC S.Live	Used for manual adjustment of the NTSC Super Live screen. Select this mode for Super Live screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
11	Adjust NTSC Cinema	Used for manual adjustment of the NTSC Cinema screen. Select this mode for Cinema screen color matching and distortion adjustment. Use the specified dimensions when adjusting.
12	Adjust NTSC S.title	Used for manual adjustment of the NTSC Subtitle screen. Select this mode for Subtitle screen color matching and distortion adjustment. Use the specified dimensions when adjusting.

2) Adjustment Screen

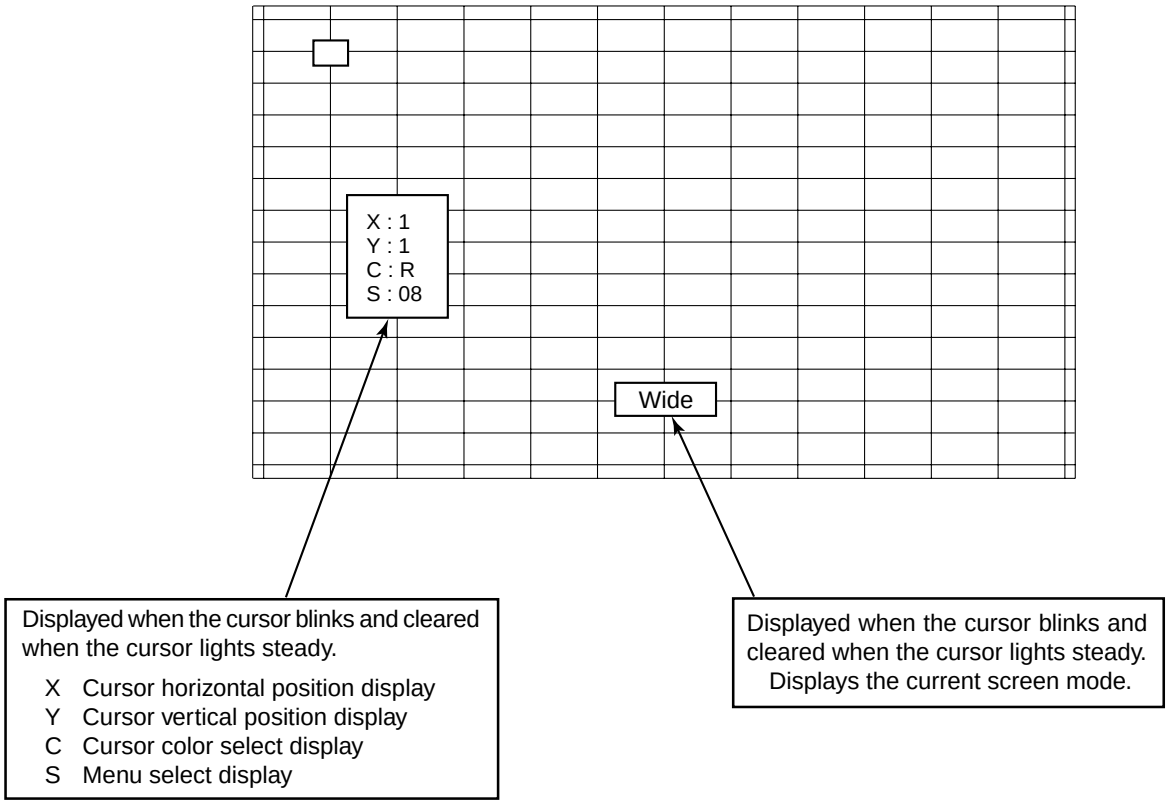
X : 1
Y : 1
C : R
S : 08
Wide
Displayed when the cursor blinks and cleared when the cursor lights steady.
X Cursor horizontal position display
Y Cursor vertical position display
C Cursor color select display
S Menu select display
Displayed when the cursor blinks and cleared when the cursor lights steady.
Displays the current screen mode.

3) Adjustment Sequence

When the initial screen opens, X = 1, Y = 1, C = R and S = [Select Menu] are displayed as the defaults. The cursor can now be moved up, down, left and right using the (2), (8), (4) and (6) keys of the remote control. Select the desired adjustment and press the (5) key; the cursor will light steady and the screen display will be cleared. Again press the (2), (8), (4) and (6) keys of the remote control to adjust the shape of the screen. When adjustment has been completed, press the (+) key to return to the Adjustment Menu. When all of the screen adjustments have been completed, turn off the main power supply of the set to reset the menu.

2. Case Study

In many cases, color matching problems can be solved by returning the HIT and WID data for main deflection to the initial adjustment values. Convergence cannot be re-adjusted in the following cases.

2-1 When the CRT has been replaced

Main deflection re-adjustment and color matching are necessary when the CRT has been replaced. Use the following procedure.

1. Replace the blue and red CRTs.
2. Perform the blue and red yoke horizontal adjustments in relation to the green CRT. Press the yokes and speed modulation coils + alignments onto the CRTs and fasten after making sure that there are no gaps.
3. Adjust the blue and red alignments (refer to the detailed alignment adjustment item).
4. Use centering magnets to center the blue and red CRTs in relation to the green CRT.
5. Adjust the main deflection HIT and WID data, using the most accurate location in relation to the green as data.
6. Use convergence to match the colors for each screen. Green will not work at this time.
7. When the convergence adjustments have been completed for all screens, then replace the green CRT.

Repeat the procedures in steps 2 - 5 for the green CRT but this time use convergence to match the colors using red and blue as reference.

2-2 When replacing the convergence unit

Generally, all of the screens must be re-adjusted when the convergence unit is replaced, but the process can be greatly shortened by using the following method.

1. Replace the memory (Q711, Q712, Q713) of the new unit with the memory (Q711, Q712, Q713) of the defective unit. This makes it possible to quickly reproduce the previous screen status when installed in the set.
2. Install the new unit with the old memory in the set and turn on the power. The entire screen will move linearly in either the vertical or horizontal direction.
3. Use centering magnets to re-adjust the green, red and blue centers.
4. There is possibility of color mismatching or differences in screen size when the various screens are checked. In such case, adjust the main deflection and apply a slight amount of convergence color matching.

2-3 When none of the above cases apply (rare case)

An unexpected situation or major operational error, etc., could be considered but it is recommended that all screens be matched starting from the beginning. If the initial positions of the centering magnets are unknown, disconnect the connectors for the convergence sub-yoke outputs one at a time, adjust the CRT centering and then start the following adjustments.

1. Make sure that there is plenty of room for the static cross convergence to be moved left, right, up and down. If sufficient space is not available, move to an appropriate location and then re-adjust the centering.
2. Enter the convergence adjustment mode and call out the menu. (Leave the PAL signal connected.)
3. Select 1. Adjust PAL Wide and adjust the PAL mode Wide/4:3 screen manually in accordance with the dimension diagram.
4. When the Wide/4:3 screen adjustment has been completed, return to the Main Menu and select 2. PAL Wide to others.

   The screen will change automatically and the Wide, Cinema and Subtitle screens will be created automatically.
5. Next, select 3. Adjust PAL S.Live and mainly adjust in the horizontal direction in accordance with the dimension diagram.
6. Next, select 4. Adjust PAL Cinema and fine adjust to remove any Cinema screen distortion.
7. Next, select 5. Adjust PAL Subtitle and fine adjust to remove any Subtitle screen distortion.
8. Next, select 7. PAL to NTSC (ALL), then calculate and copy the data for all PAL screens in the NTSC mode. At this time, the calculations and screen shape changes will be performed automatically and the NTSC screen data corresponding to the PAL screens will be transferred.
9. Select in sequence 8. Adjust NTSC Wide, 10. Adjust NTSC S.Live, 11. Adjust NTSC Cinema and 12. Adjust NTSC Subtitle, check the respective NTSC screen modes and, if necessary, adjust for any distortion.

All of the screens can be adjusted with the above process but make every effort not to change the factory data unless absolutely necessary. Try not to change the convergence data any more than necessary.

3 Screen adjustment dimensions

3-1 WIDE/4:3 (PAL mode)

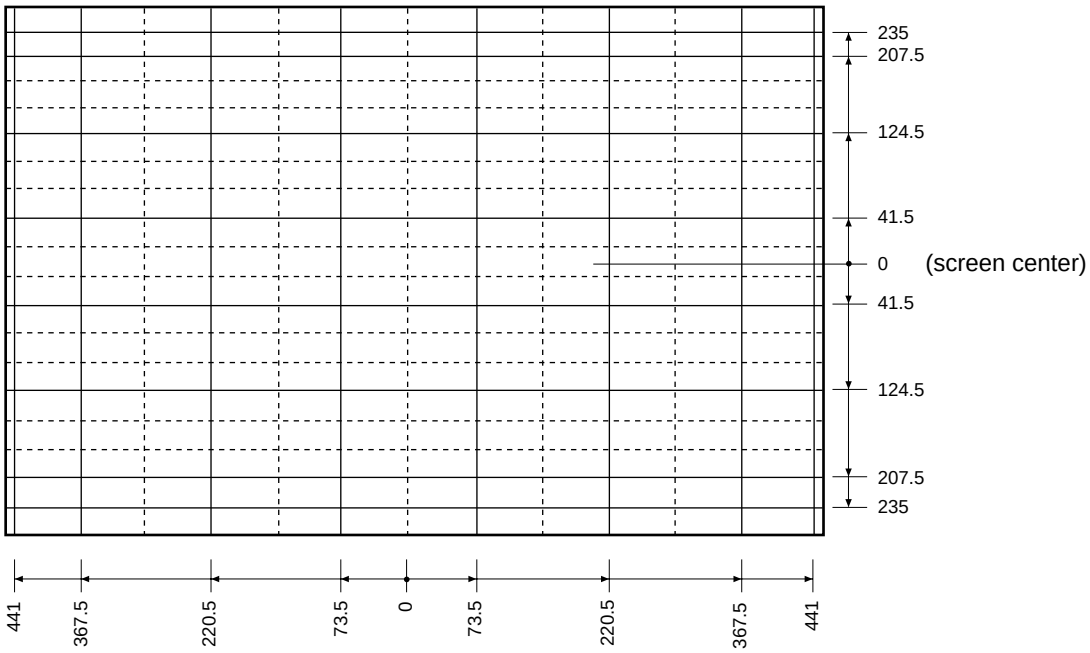

3-2 Super Wide (PAL mode)

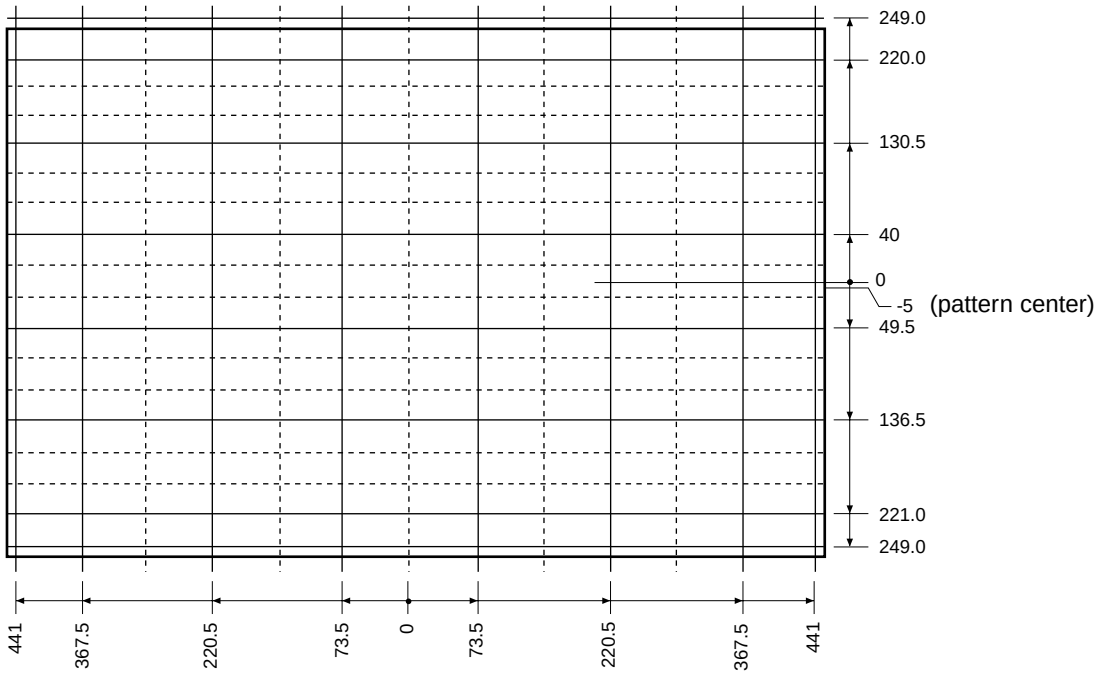

Caution: Do not perform the VLIN adjustment.

3-3 Cinema (PAL mode)

Note: The cursor will move outside the screen limits in the Cinema mode; therefore, be careful to consider the position of the cursor displayed on the screen when making adjustments.

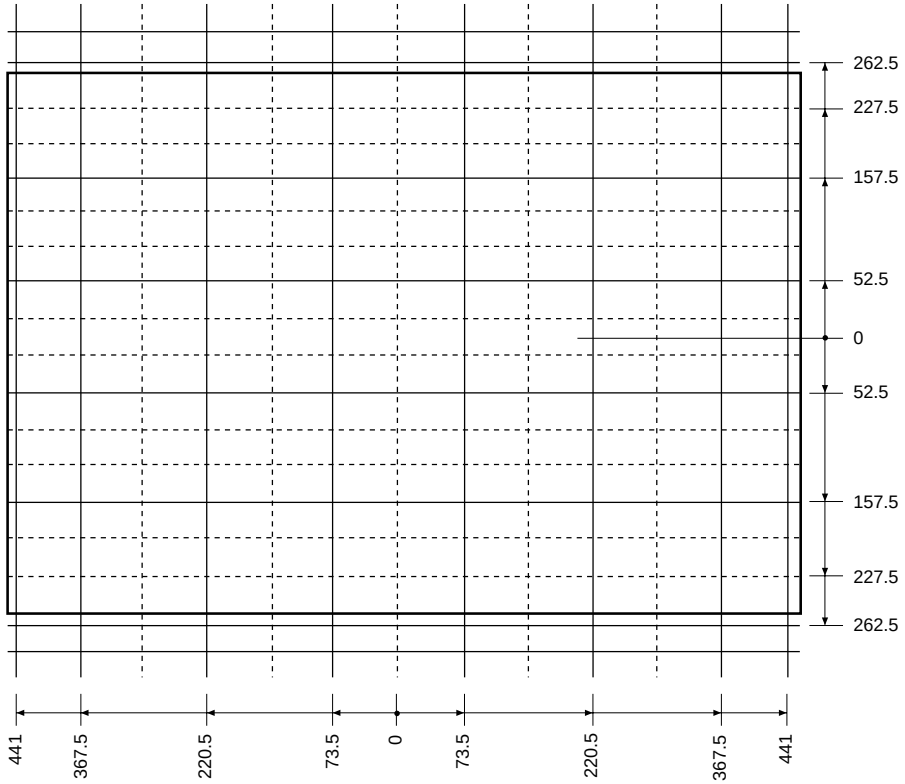

3-4 Subtitle (PAL mode)

Note: The cursor will move outside the screen limits in the Subtitle mode; therefore, be careful to consider the position of the cursor displayed on the screen when making adjustments.

Note: Please be aware that the Subtitle screen convergence pattern center is located at the center of the screen but the image center is located approximately 13mm above that.

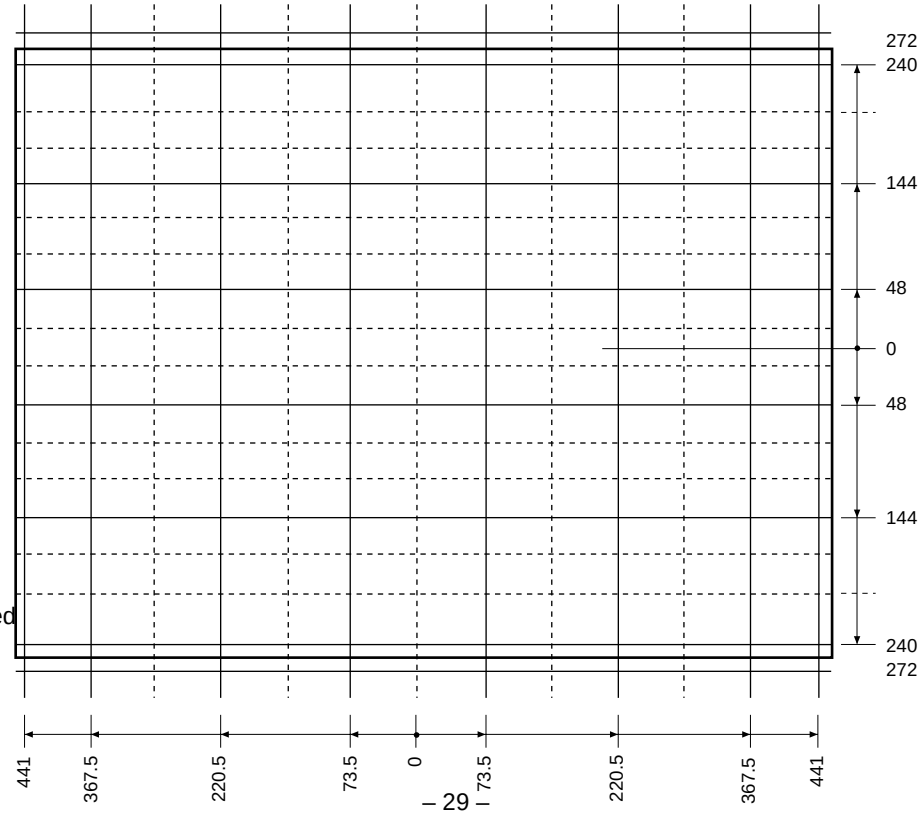

Screen limit changed

3-5 WIDE/4:3 (NTSC mode)

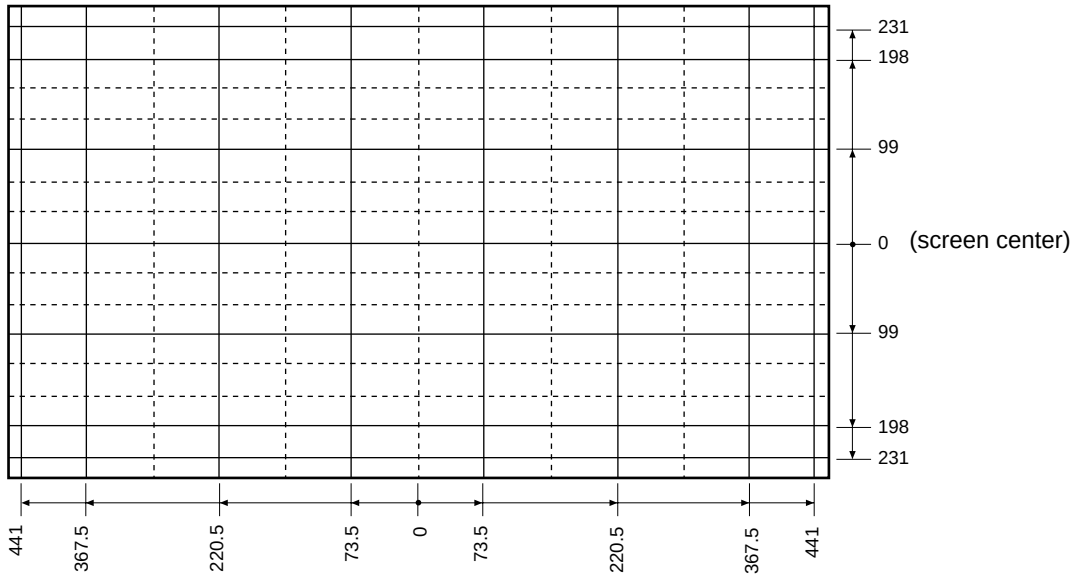

3-6 Super Live (NTSC mode)

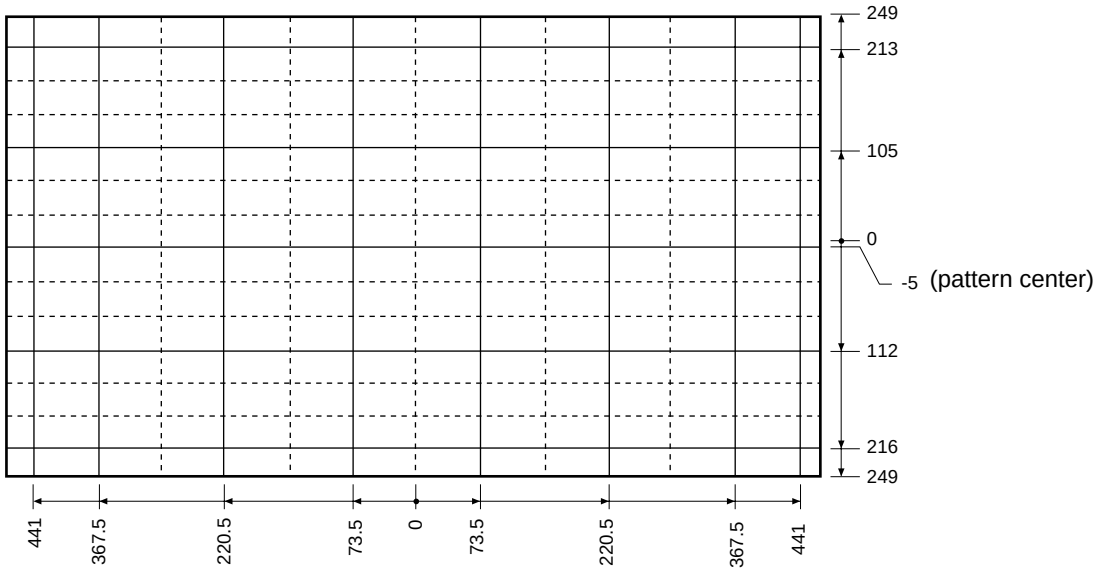

Caution: Do not perform the VLIN adjustment.

3-7 Cinema (NTSC mode)

Note: The cursor will move outside the screen limits in the Cinema mode; therefore, be careful to consider the position of the cursor displayed on the screen when making adjustments.

Note: Please be aware that the Cinema screen convergence pattern center is located at the center of the screen but the image center is located approximately 13mm above that.

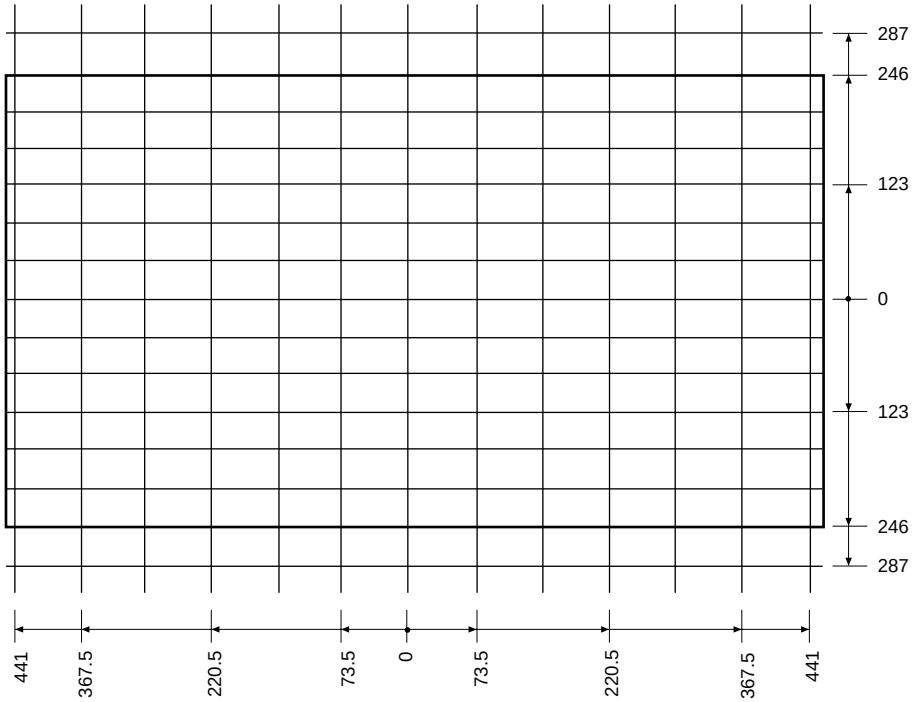

3-8 Subtitle (NTSC mode)

Note: The cursor will move outside the screen limits in the Subtitle mode; therefore, be careful to consider the position of the cursor displayed on the screen when making adjustments.

Note: Please be aware that the Subtitle screen convergence pattern center is located at the center of the screen but the image center is located approximately 32mm above that.

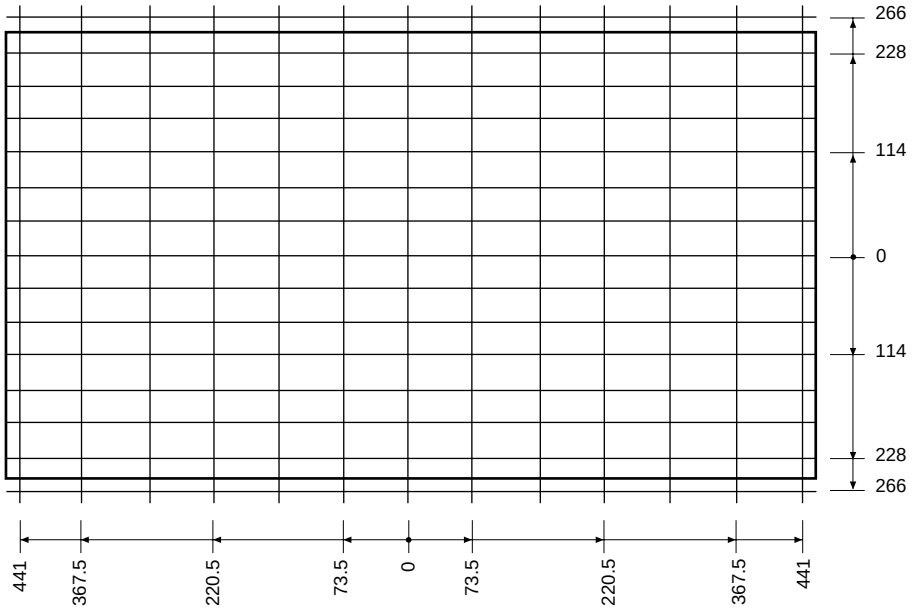

SCREEN AND MIRROR ALIGNMENTS

ASSEMBLING AND MOUNTING OF FRONT SCREEN

* Please refer to MECHANICAL DISASSEMBLY page.38.

CLEANING OF LENS AND MIRROR

CAUTION : Do not hold the optical system parts (lens and mirror) with bare hand to avoid finger-prints on the surface of those parts.

HOW TO CLEAN LENS AND MIRROR

1. Be sure to remove sand dust with an air brush, etc.
2. When it is stained slightly, breathe upon it and wipe away with the specified cleaning cloth.
   For other stains than the above, wipe the stains away with the specified cloth into which a cleaning liquid has been soaked.

Cleaning liquid ..... **LENS LUSTER** (Manufactured by Edmund Scientific Co.), etc.

HOW TO CLEAN SCREEN

When cleaning the screen, use a soft cloth so as not to damage the screen.

1. Wipe the stain away with a diluted neutral detergent soaked cloth.
2. Wipe the detergent away with a water soaked cloth.
3. Wipe the screen with a dry cloth to remove moisture on the screen.

Note : Absolutely do not use alcohol, benzine, thinner, etc. for cleaning in order not to wipe away the black print on the surface.

CIRCUIT CHECKS

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis. Checking should be done following the steps below.

1. Connect an accurate high voltage meter to the anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST to minimum (zero beam current).
3. High voltage must be measured below (B) kV.

   Refer to table-1 for high voltage (B).
   (See SETTING & ADJUSTING DATA on page 34)
4. Vary the BRIGHTNESS to both extremes to be sure the high voltage does not exceed the limit under any conditions.

CAUTION:

When the following parts fail, check the High Voltage after replacing.

Location No.	Name	Name
T461	Flyback Trans.	TFB3078BD
D489	Zener Diode	MTZJ3.6B
Q480	Transistor	2SC2023
Q483	IC	TA7508P(J)
R435	Resistor	33k ohm, ±5%
R489	Resistor	3.3k ohm, ±5%
R490	Resistor	3.3k ohm, ±5%
R450	VR	1k ohm
C440	Capacitor	1000pF, ±3%
C443	Capacitor	6800pF, ±3%
C444	Capacitor	5100pF, ±3%

ANODE VOLTAGE MEASURING METHOD

CAUTION: Take extra precaution when measuring this high voltage. High voltages are also present in surrounding circuit boards (CRT DRIVE assembly, DEFLECTION assembly, and POWER SUPPLY assembly).

1. Disconnect the FBT anode cable as outlined below. Measure high voltage at the point where the cable enters the FBT.
2. Holding the rubber cover firmly, turn it counterclockwise and check that the lock has been disengaged. (See Fig. b on page 8.)
3. Determine the extent of the rubber cover before disconnecting the cable.
4. Pull straight up the anode cable to disconnect.
5. When reconnecting the cable, proceed in the reverse order.
   After reconnecting, tug on the cable to check that it is secure.

SETTING & ADJUSTING DATA

【 SAFETY INSTRUCTIONS 】

		40"
HIGH VOLTAGE AT ZERO BEAM:	(A)	31.9 kV
MAX HIGH VOLTAGE:	(B)	32.5 kV
AV VOLTAGE	(C)	230 V

Table-1

【 SERVICE MODE 】

ADJUSTING ITEMS AND DATAS IN THE SERVICE MODE:

Item	Adjustment	Reference data
RCUT	R CUTOFF (B/W)	40H
GCUT	G CUTOFF (B/W)	40H
BCUT	B CUTOFF (B/W)	40H
RDRV	R DRIVE	40H
BDRV	B DRIVE	40H
CNTX	SUB CONTRAST MAX	7FH
BRTC	SUB BRIGHT CEN	80H
COLC	SUB COLOR CEN NTSC	FDH
TNTC	SUB TINT CEN	45H
COLP	SUB COLOR CEN PAL	50H
COLS	SUB COLOR CEN SECAM	38H
SCNT	SUB CONTRAST	07H
BELL	SECAM BELL FILTER	80H
SRY	SECAM R-Y	08H
SBY	SECAM B-Y	08H

Item	Adjustment	Reference data
HPOS	50Hz H-POSITION	0CH
VPOS	V-POSITION	01H
HIT	HEIGHT	26H
GMPS	V-POSITION (RASTER)	00H
VLIN	V-LINEARITY	15H
VSC	V-S CORRECTION	26H
VPS	V-SHIFT	12H
VCP	V-COMPENSATION	05H
WID	PICTURE WIDTH	1EH
PARA	E-W PARABOLA	02H
CNR	E-W CORNER	10H
TRAP	TRAPEZIUM	40H
HCP	H-COMPENSATION	04H
VFC	V-F CORRECTION	0FH

Table-2

【 DESIGN MODE 】

ADJUSTING ITEMS AND DATAS IN THE DESIGN MODE:

Item	Name of adjustment	Preset Data	40PW13G	40PW13B	Remarks
RCUT					
OPT1	OPTION 1	4CH	4CH	4CH	
OPT0	OPTION 0	80H	80H	81H	
OSD					
.					
.					
.					
.					
RCUT					

Table-3

LOCATION OF CONTROLS

Front

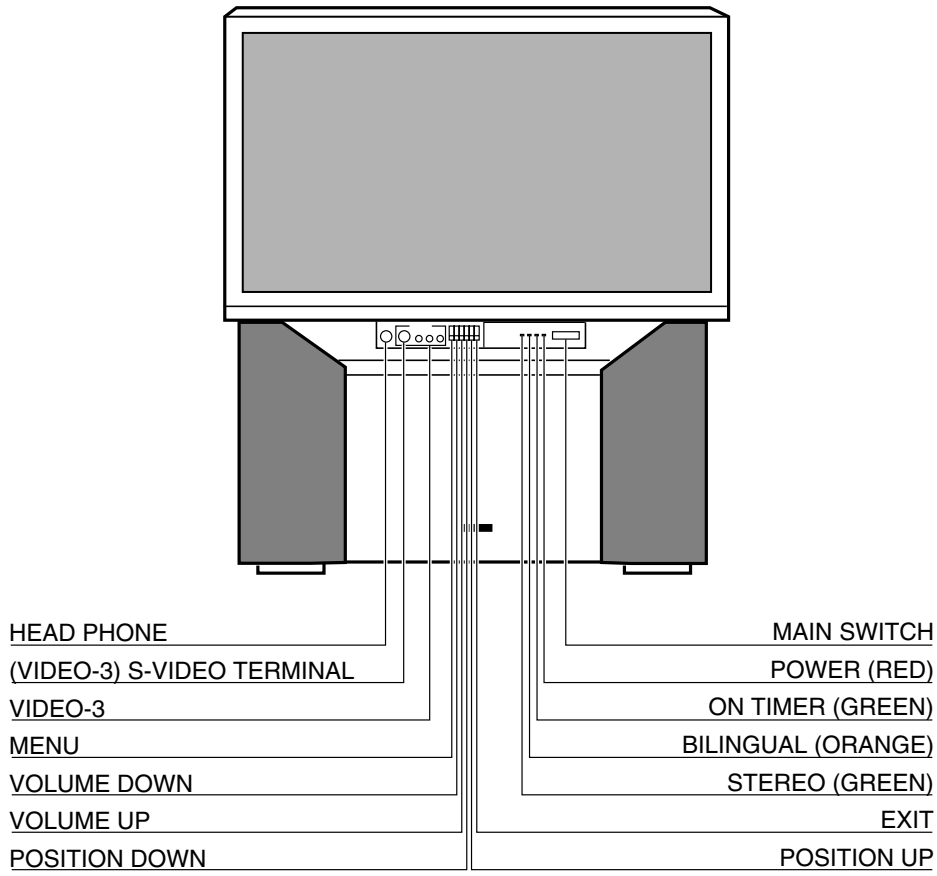

Back

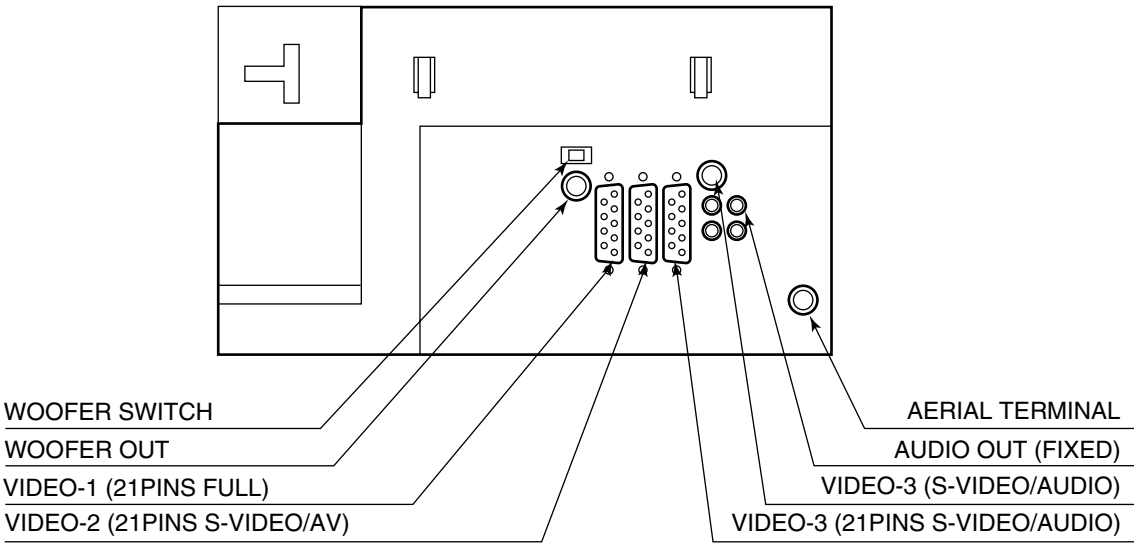

Remote Controller

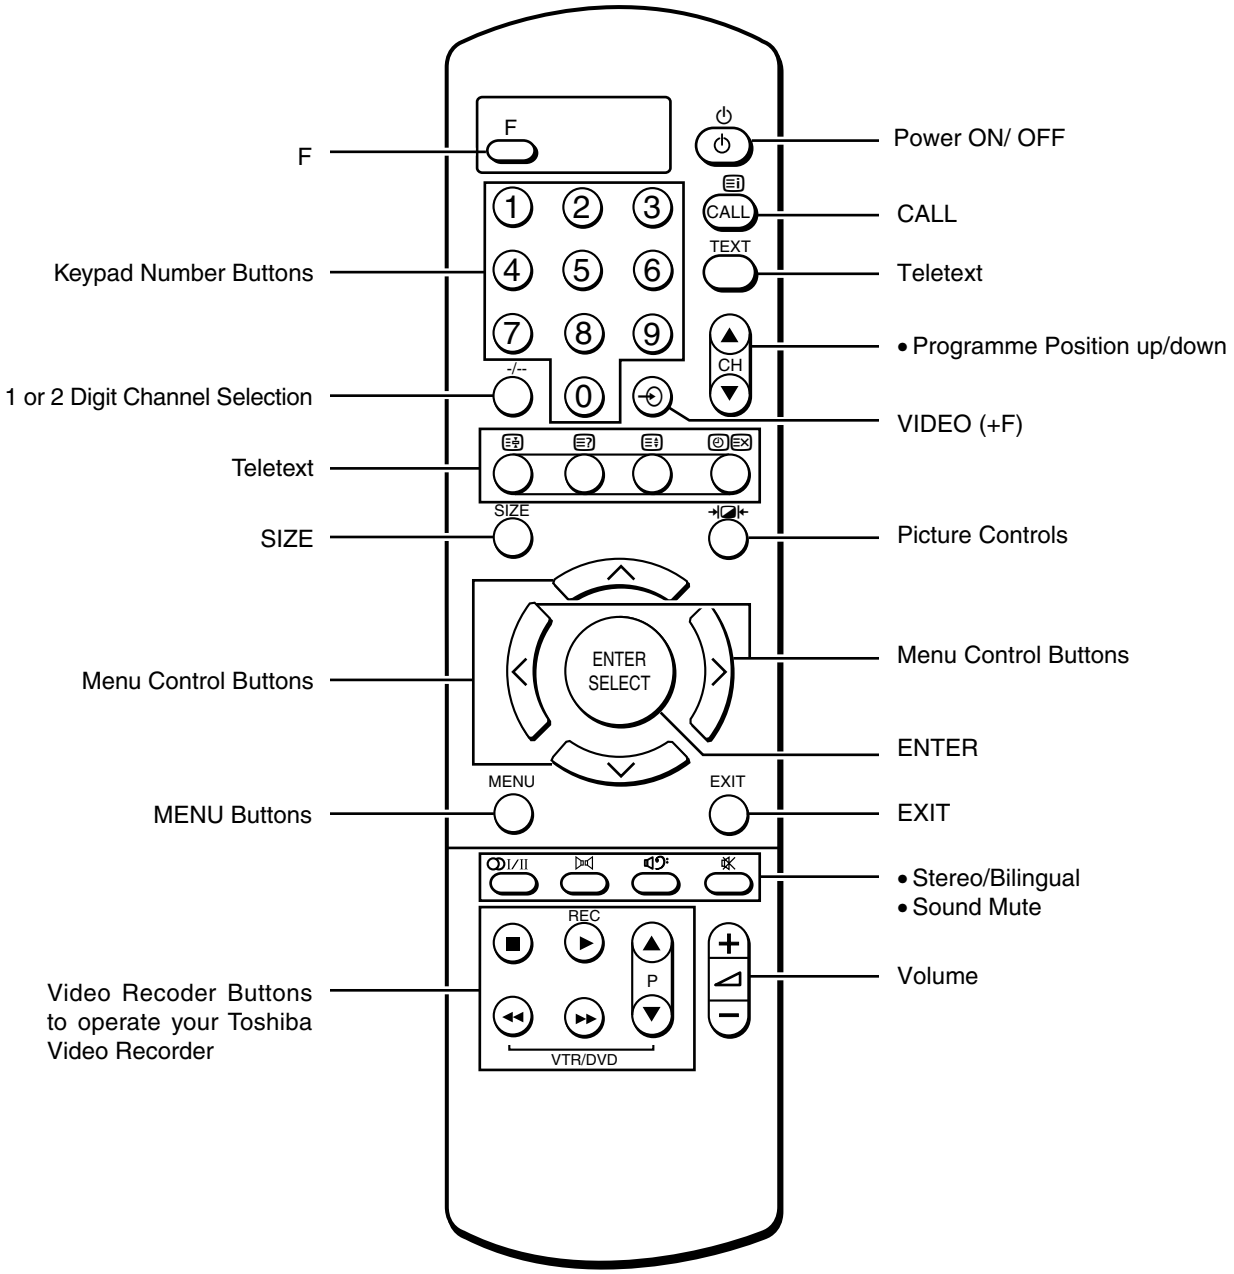

CIRCUIT BLOCK DIAGRAM

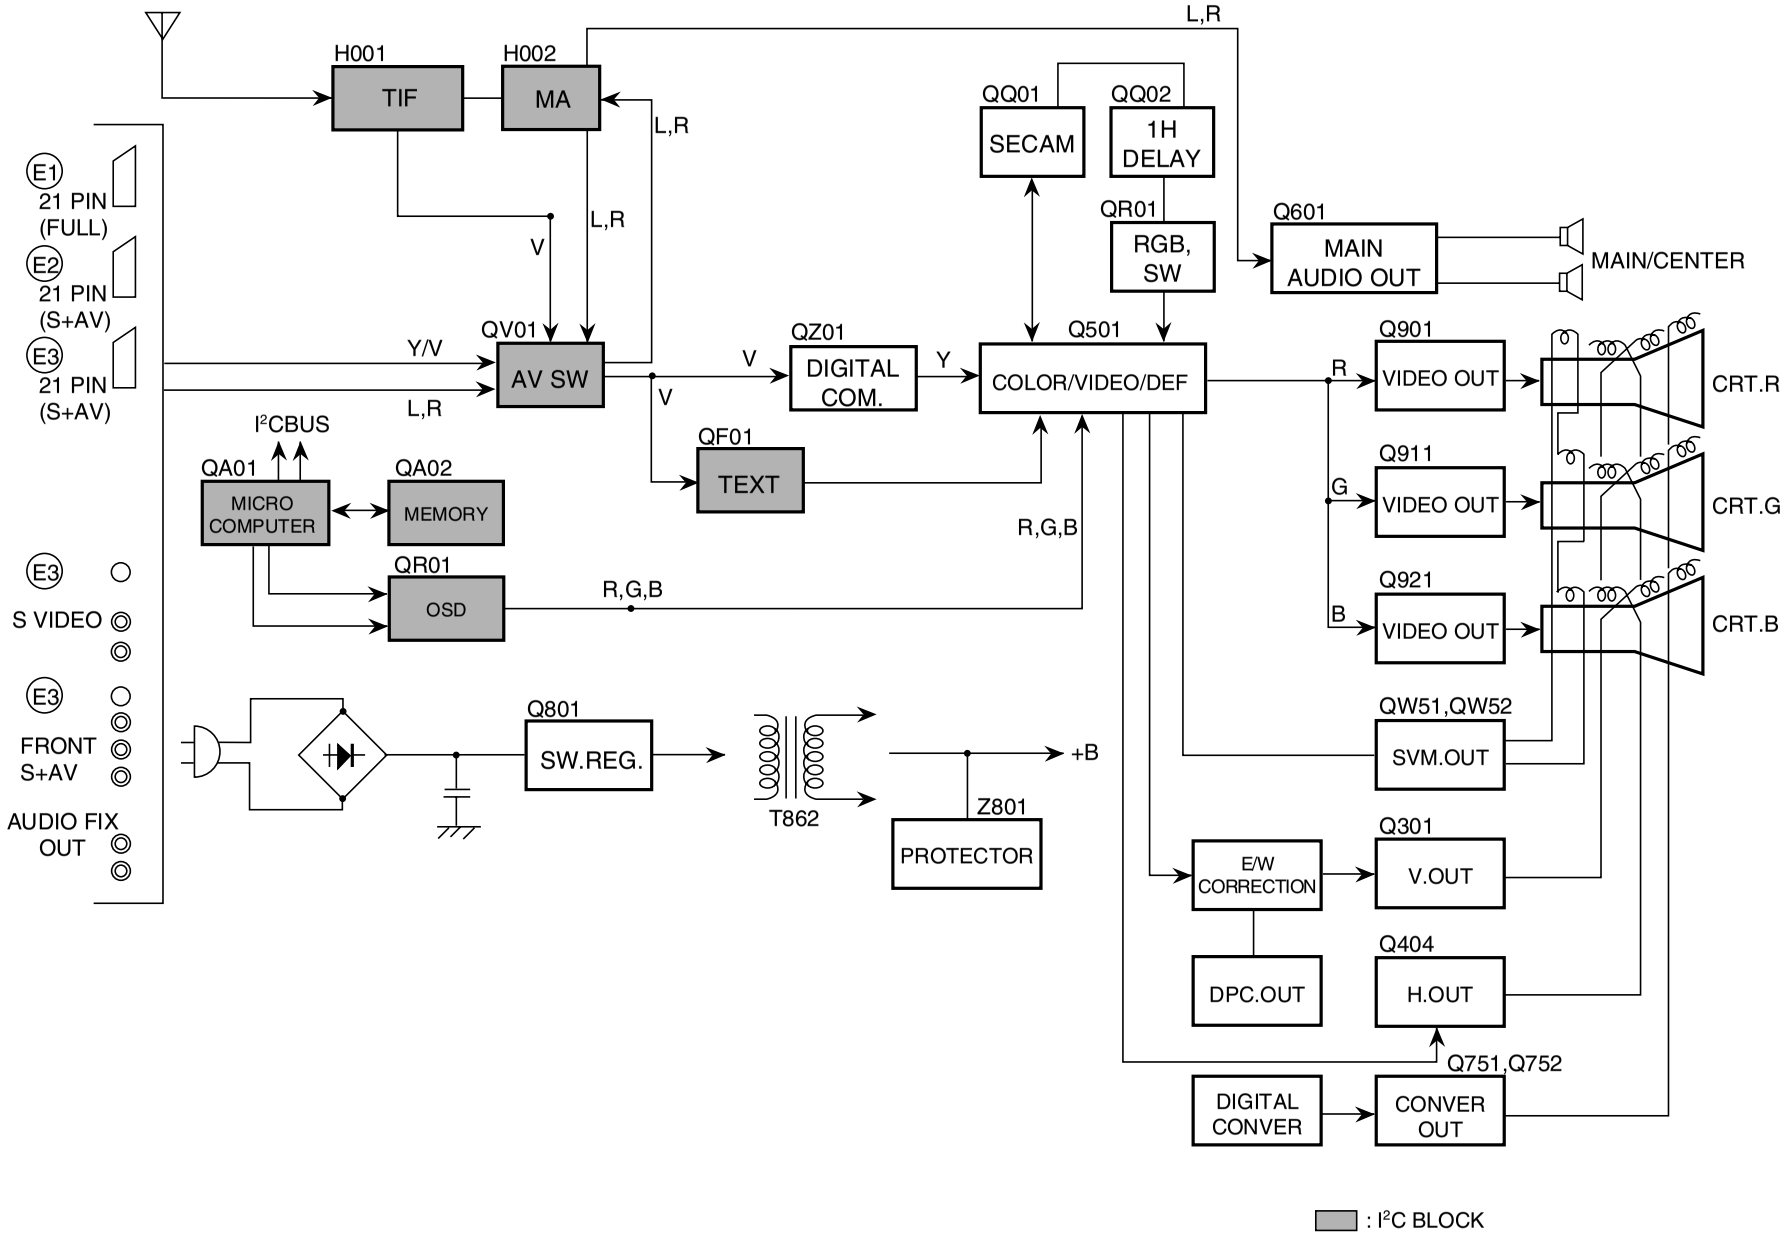

MECHANICAL DISASSEMBLY

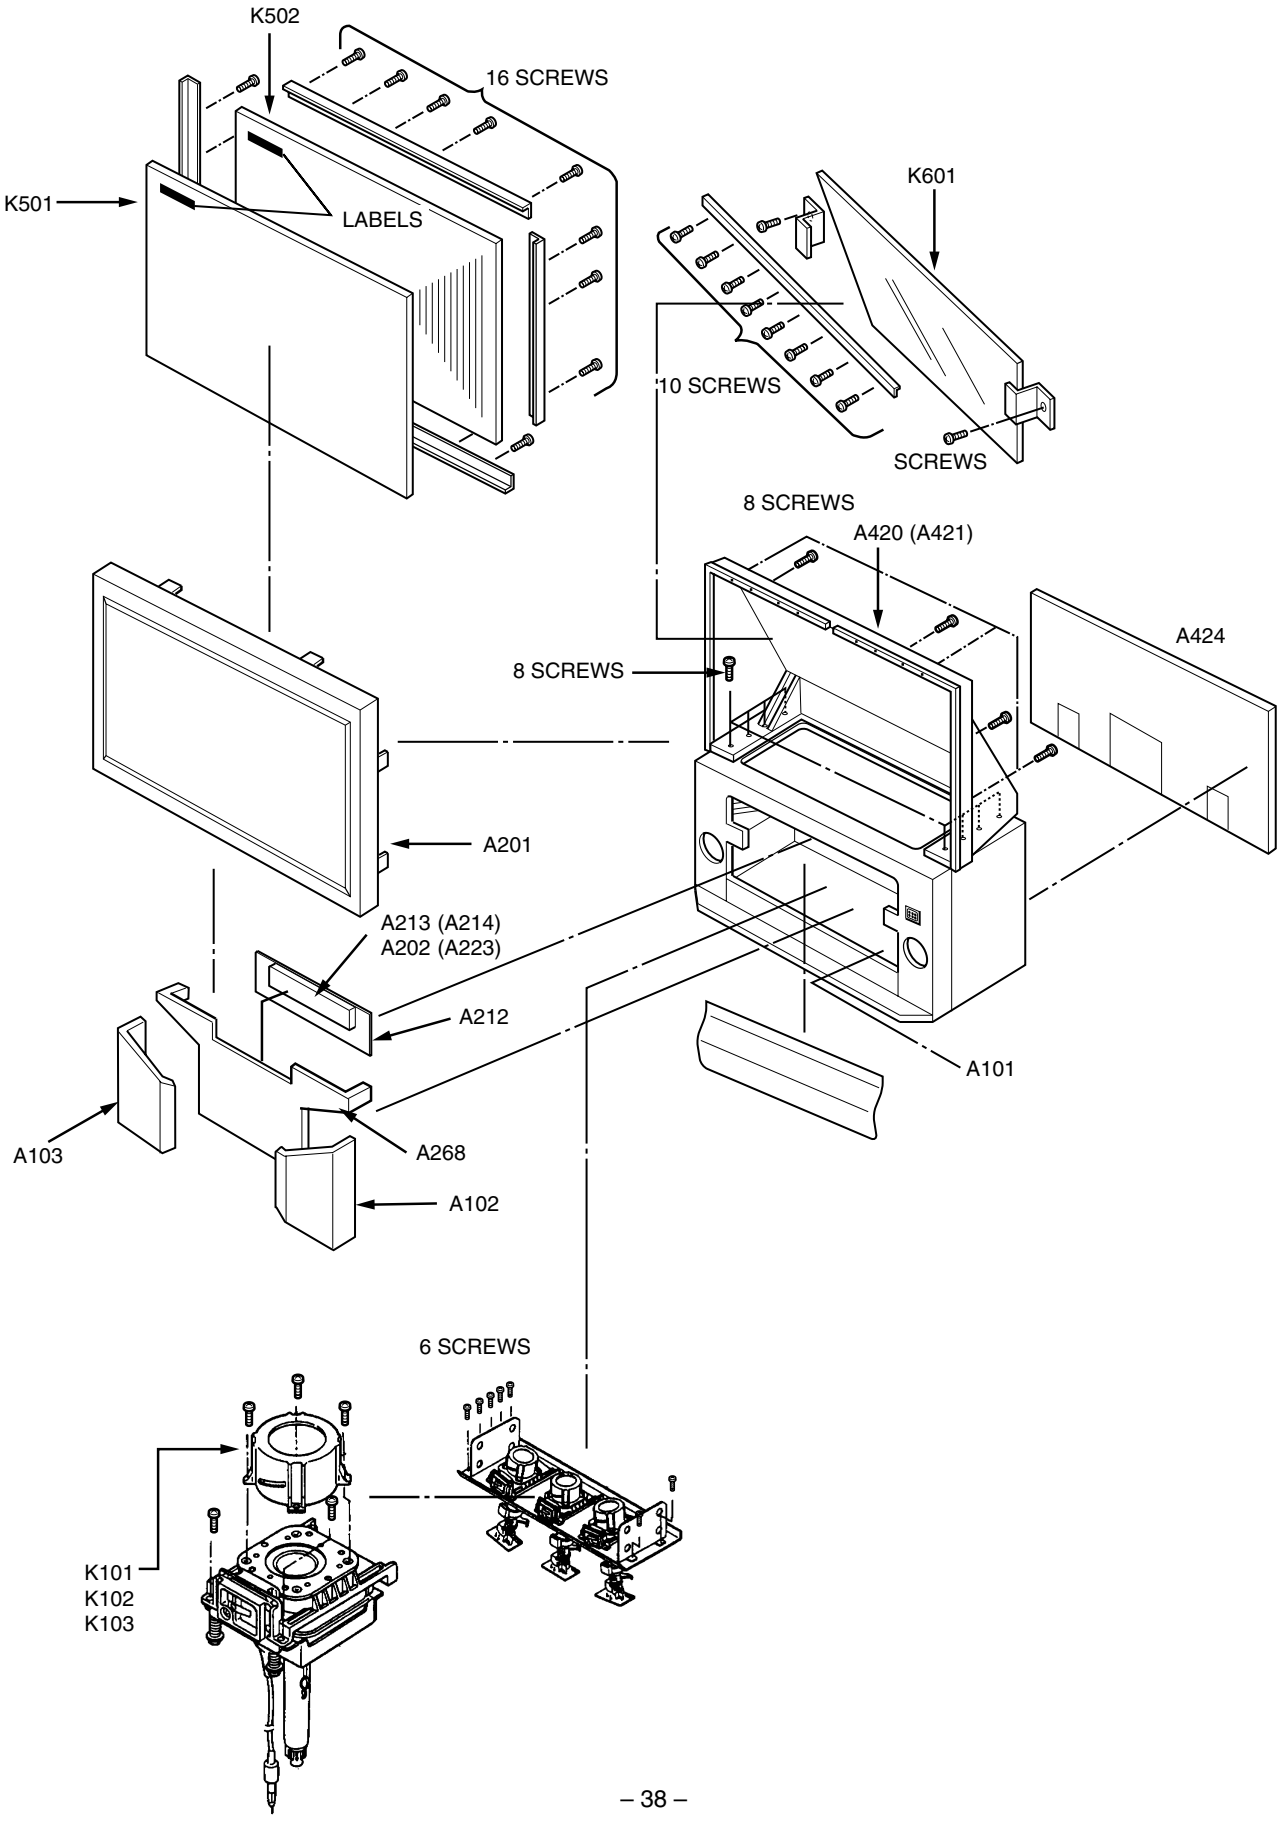

CHASSIS AND CABINET REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

NOTICE:
- *The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.*
- *The PC board assembly with * mark is no longer available after the end of the production.*

ABBREVIATIONS:

Capacitors	CD	:	Ceramic Disk	PF	:	Plastic Film	EL	: Electrolytic
Resistors	CF	:	Carbon Film	CC	:	Carbon Composition	MF	: Metal Film
	OMF	:	Oxide Metal Film	VR	:	Variable Resistor	FR	: Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Models :40PW13G, 40PW13B

Location No.	Part No.	Description
CAPACITORS		
C101	24793220	EL, 22μF, ±20%, 10V
C102	24762221	EL, 220μF, ±20%, 10V
C105	24212102	CD, 1000pF, ±10%
C106	24797100	EL, 10μF, ±20%, 50V
C115	24232103	CD, 0.01μF, +80%, -20%
C116	24762221	EL, 220μF, ±20%, 10V
C150	24763102	EL, 1000μF, ±20%, 16V
C183	24766479	EL, 4.7μF, ±20%, 50V
C194	24232103	CD, 0.01μF, +80%, -20%
C201	24538104	PF, 0.1μF
C202	24814103	Chip, 0.01μF, +80%, -20%
C203	24538104	PF, 0.1μF
C204	24669010	EL, 1μF, ±20%, 50V
C205	24669229	EL, 2.2μF, ±20%, 50V
C206	24206220	EL, 22μF, ±20%, 50V
C212	24794100	EL, 10μF, ±20%, 16V
C214	24591334	PF, 0.33μF
C219	24781100	Chip, 10pF, ±0.5pF%, SL
C220	24781100	Chip, 10pF, ±0.5pF%, SL
C221	24781100	Chip, 10pF, ±0.5pF%, SL
C228	24814103	Chip, 0.01μF, +80%, -20%
C229	24669010	EL, 1μF, ±20%, 50V
C230	24763221	EL, 220μF, ±20%, 16V
C231	24814103	Chip, 0.01μF, +80%, -20%
C232	24669010	EL, 1μF, ±20%, 50V
C260	24085967	EL, 47μF, ±20%, 16V, Non-Polar
C261	24669101	EL, 100μF, ±20%, 50V
C262	24814103	Chip, 0.01μF, +80%, -20%
C264	24781150	Chip, 15pF, SL
C273	24206229	EL, 2.2μF, ±20%, 50V
C281	24763101	EL, 100μF, ±20%, 16V
C282	24232103	CD, 0.01μF, +80%, -20%
C283	24794100	EL, 10μF, ±20%, 16V
C284	24794100	EL, 10μF, ±20%, 16V
C295	24232103	CD, 0.01μF, +80%, -20%
C303	24214471	CD, 470pF, ±10%, 500V
C305	24617912	EL, 2.2μF, ±10%, 50V
C306	24617858	EL, 3300μF, ±20%, 35V
C307	24082270	PF, 0.033μF, 100V

Location No.	Part No.	Description
C308	24669221	EL, 220μF, ±20%, 50V
C309	24212101	CD, 100pF, ±10%
C310	24669222	EL, 2200μF, ±20%, 50V
C311	24214561	CD, 560pF, ±10%, 500V
C313	24082057	PF, 0.22μF, 100V
C314	24591103	PF, 0.01μF
C315	24797229	EL, 2.2μF, ±20%, 50V
C316	24232103	CD, 0.01μF, +80%, -20%
C318	24666222	EL, 2200μF, ±20%, 16V
C319	24591102	PF, 1000pF
C320	24669101	EL, 100μF, ±20%, 50V
C321	24591183	PF, 0.018μF
C322	24617912	EL, 2.2μF, ±10%, 50V
C323	24567474	PF, 0.47μF
C330	24591104	PF, 0.1μF
C331	24669229	EL, 2.2μF, ±20%, 50V
C344	24591103	PF, 0.01μF
C351	24667222	EL, 2200μF, ±20%, 25V
C355	24669010	EL, 1μF, ±20%, 50V
C357	24669100	EL, 10μF, ±20%, 50V
C360	24667100	EL, 10μF, ±20%, 25V
C361	24669100	EL, 10μF, ±20%, 50V
C362	24591104	PF, 0.1μF
C363	24085942	EL, 10μF, ±20%, 16V, Non-Polar
C364	24666100	EL, 10μF, ±20%, 16V
C370	24669101	EL, 100μF, ±20%, 50V
C371	24669100	EL, 10μF, ±20%, 50V
C372	24591104	PF, 0.1μF
C388	24591334	PF, 0.33μF
C403	24591223	PF, 0.022μF
C403	24828124	PF, 0.12μF, 200V
C404	24797229	EL, 2.2μF, ±20%, 50V
C413	24214821	CD, 820pF, ±10%, 500V
C415	24815392	Chip, 3900pF, ±10%
C416	24678100	EL, 10μF, ±20%, 200V
C417	24214391	CD, 390pF, ±10%, 500V
C418	24095883	PF, 0.015μF, ±3%, 630V
C419	24095803	PF, 0.062μF, 400V
C420	24666101	EL, 100μF, ±20%, 16V
C423	24095779	PF, 0.062μF, 400V

Location No.	Part No.	Description
C430	24814103	Chip, 0.01μF, +80%, -20%
C431	24763102	EL, 1000μF, ±20%, 16V
C440	24082326	PF, 1300pF, ±3%, 1500V
C443	24082348	PF, 6800pF, ±3%, 1500V
C444	24082287	PF, 5100pF, ±3%, 1800V
C445	24828473	PF, 0.047μF, 200V
C446	24679330	EL, 33μF, ±20%, 250V
C447	24667102	EL, 1000μF, ±20%, 25V
C448	24640908	EL, 33μF, ±20%, 160V
C460	24669331	EL, 330μF, ±20%, 50V
C463	24212152	CD, 1500pF, ±10%
C464	24640872	EL, 10μF, ±20%, 100V
C465	24591332	PF, 3300pF
C466	24567394	PF, 0.39μF
C467	24820153	PF, 0.015μF, 630V
C468	24567474	PF, 0.47μF
C471	24206479	EL, 4.7μF, ±20%, 50V
C475	24820103	PF, 0.01μF, 630V
C477	24092347	CD, 1500pF, ±10%, 2kV
C481	24567104	PF, 0.1μF
C482	24591152	PF, 1500pF
C483	24567224	PF, 0.22μF
C484	24567104	PF, 0.1μF
C485	24669101	EL, 100μF, ±20%, 50V
C493	24591124	PF, 0.12μF
C501	24781101	Chip, 100pF, SL
C502	24814103	Chip, 0.01μF, +80%, -20%
C503	24763221	EL, 220μF, ±20%, 16V
C504	24591222	PF, 2200pF
C505	24774120	Chip, 12pF, CH
C507	24774120	Chip, 12pF, CH
C508	24669010	EL, 1μF, ±20%, 50V
C509	24763101	EL, 100μF, ±20%, 16V
C510	24763101	EL, 100μF, ±20%, 16V
C511	24814103	Chip, 0.01μF, +80%, -20%
C512	24206228	EL, 0.22μF, ±20%, 50V
C513	24814103	Chip, 0.01μF, +80%, -20%
C514	24538104	PF, 0.1μF
C515	24538104	PF, 0.1μF
C516	24781102	Chip, 1000pF, SL
C517	24774010	Chip, 1pF, ±0.25pF, CH
C519	24774010	Chip, 1pF, ±0.25pF, CH
C520	24781102	Chip, 1000pF, SL
C521	24781102	Chip, 1000pF, SL
C524	24781122	Chip, 1200pF, SL
C525	24774181	Chip, 180pF, CH
C554	24814103	Chip, 0.01μF, +80%, -20%
C555	24669010	EL, 1μF, ±20%, 50V
C556	24669010	EL, 1μF, ±20%, 50V
C601	24590102	PF, 1000pF
C602	24590102	PF, 1000pF
C603	24669100	EL, 10μF, ±20%, 50V
C604	24669100	EL, 10μF, ±20%, 50V
C605	24667101	EL, 100μF, ±20%, 25V
C606	24667101	EL, 100μF, ±20%, 25V
C607	24567104	PF, 0.1μF
C608	24567104	PF, 0.1μF
C609	24669102	EL, 1000μF, ±20%, 50V
C610	24669102	EL, 1000μF, ±20%, 50V
C611	24667221	EL, 220μF, ±20%, 25V
C613	24666471	EL, 470μF, ±20%, 16V
C636	24666100	EL, 10μF, ±20%, 16V
C661	24436101	CD, 100pF
C665	24669229	EL, 2.2μF, ±20%, 50V

Location No.	Part No.	Description
C666	24669229	EL, 2.2μF, ±20%, 50V
C671	24669100	EL, 10μF, ±20%, 50V
C672	24232103	CD, 0.01μF, +80%, -20%
C673	24781102	Chip, 1000pF, SL
C674	24669100	EL, 10μF, ±20%, 50V
C674	24781102	Chip, 1000pF, SL
C675	24669100	EL, 10μF, ±20%, 50V
C675	24781102	Chip, 1000pF, SL
C676	24669100	EL, 10μF, ±20%, 50V
C676	24781102	Chip, 1000pF, SL
C677	24668221	EL, 220μF, ±20%, 35V
C678	24781102	Chip, 1000pF, SL
C679	24781102	Chip, 1000pF, SL
C680	24669222	EL, 2200μF, ±20%, 50V
C681	24781102	Chip, 1000pF, SL
C682	24669010	EL, 1μF, ±20%, 50V
C682	24781102	Chip, 1000pF, SL
C696	24762102	EL, 1000μF, ±20%, 10V
C701	24591471	PF, 470pF
C701	24781330	Chip, 33pF, SL
C702	24591222	PF, 2200pF
C702	24781330	Chip, 33pF, SL
C703	24591822	PF, 8200pF
C708	24591272	PF, 2700pF
C711	24206100	EL, 10μF, ±20%, 50V
C711	24591471	PF, 470pF
C712	24591222	PF, 2200pF
C713	24591822	PF, 8200pF
C714	24092293	Chip, 0.1μF, +80%, -20%, 25V
C715	24092441	Chip, 1μF, +80%, -20%, 16V
C716	24591472	PF, 4700pF
C716	24815822	Chip, 0.0082μF, ±10%
C717	24591103	PF, 0.01μF
C717	24774470	Chip, 47pF, CH
C718	24591272	PF, 2700pF
C718	24774470	Chip, 47pF, CH
C719	24667100	EL, 10μF, ±20%, 25V
C719	24794101	EL, 100μF, ±20%, 16V
C720	24092293	Chip, 0.1μF, +80%, -20%, 25V
C721	24567104	PF, 0.1μF
C721	24591471	PF, 470pF
C722	24092293	Chip, 0.1μF, +80%, -20%, 25V
C722	24591222	PF, 2200pF
C723	24591822	PF, 8200pF
C724	24092293	Chip, 0.1μF, +80%, -20%, 25V
C725	24092293	Chip, 0.1μF, +80%, -20%, 25V
C726	24092293	Chip, 0.1μF, +80%, -20%, 25V
C727	24092293	Chip, 0.1μF, +80%, -20%, 25V
C728	24591272	PF, 2700pF
C728	24763221	EL, 220μF, ±20%, 16V
C729	24092293	Chip, 0.1μF, +80%, -20%, 25V
C730	24567104	PF, 0.1μF
C731	24591471	PF, 470pF
C731	24766010	EL, 1μF, ±20%, 50V
C732	24590822	PF, 8200pF
C732	24591222	PF, 2200pF
C733	24591822	PF, 8200pF
C735	24092293	Chip, 0.1μF, +80%, -20%, 25V
C736	24794470	EL, 47μF, ±20%, 16V
C737	24591103	PF, 0.01μF
C738	24591272	PF, 2700pF
C739	24092293	Chip, 0.1μF, +80%, -20%, 25V
C740	24092293	Chip, 0.1μF, +80%, -20%, 25V
C741	24591471	PF, 470pF

Location No.	Part No.	Description
C741	24794470	EL, 47μF, ±20%, 16V
C742	24591222	PF, 2200pF
C742	24794470	EL, 47μF, ±20%, 16V
C743	24092293	Chip, 0.1μF, +80%, -20%, 25V
C743	24591822	PF, 8200pF
C744	24092293	Chip, 0.1μF, +80%, -20%, 25V
C745	24794470	EL, 47μF, ±20%, 16V
C746	24794470	EL, 47μF, ±20%, 16V
C747	24092293	Chip, 0.1μF, +80%, -20%, 25V
C747	24591103	PF, 0.01μF
C748	24092293	Chip, 0.1μF, +80%, -20%, 25V
C748	24591272	PF, 2700pF
C749	24794470	EL, 47μF, ±20%, 16V
C750	24794470	EL, 47μF, ±20%, 16V
C751	24591471	PF, 470pF
C752	24591222	PF, 2200pF
C753	24591822	PF, 8200pF
C756	24781391	Chip, 390pF, SL
C758	24591272	PF, 2700pF
C761	24590182	PF, 1800pF
C761	24666331	EL, 330μF, ±20%, 16V
C762	24590562	PF, 5600pF
C763	24774391	Chip, 390pF, CH
C765	24232103	CD, 0.01μF, +80%, -20%
C765	24590182	PF, 1800pF
C766	24590562	PF, 5600pF
C766	24669221	EL, 220μF, ±20%, 50V
C767	24774391	Chip, 390pF, CH
C769	24590182	PF, 1800pF
C770	24590562	PF, 5600pF
C771	24774391	Chip, 390pF, CH
C773	24590182	PF, 1800pF
C774	24590562	PF, 5600pF
C775	24774391	Chip, 390pF, CH
C777	24590182	PF, 1800pF
C778	24590562	PF, 5600pF
C779	24774391	Chip, 390pF, CH
C781	24590182	PF, 1800pF
C782	24590562	PF, 5600pF
C783	24774391	Chip, 390pF, CH
C795	24761221	EL, 220μF, ±20%, 6.3V
C798	24763101	EL, 100μF, ±20%, 16V
C799	24763101	EL, 100μF, ±20%, 16V
⚠ C801	24082374	PF, 0.22μF, ±20%, AC250V
⚠ C802	24092557	CD, 220pF, ±20%, AC250V
⚠ C803	24092557	CD, 220pF, ±20%, AC250V
⚠ C804	24092570	CD, 3300pF, ±20%, AC250V
⚠ C805	24082374	PF, 0.22μF, ±20%, AC250V
C807	24073058	EL, 2200μF, ±20%, 25V
C808	24617787	EL, 470μF, ±20%, 16V
C809	24567105	PF, 1μF
C810	24086935	EL, 560μF, ±20%, 400V
C811	24676478	EL, 0.47μF, ±20%, 100V
C812	24092281	CD, 4700pF, ±20%, AC250V
C813	24092281	CD, 4700pF, ±20%, AC250V
C814	24678229	EL, 2.2μF, ±20%, 200V
C815	24567474	PF, 0.47μF
C816	24617817	EL, 22μF, ±20%, 50V
C817	24567224	PF, 0.22μF
C819	24214102	CD, 1000pF, ±10%, 500V
C820	24567224	PF, 0.22μF
C821	24092480	CD, 680pF, ±10%, 2kV
C822	24092481	CD, 820pF, ±10%, 2kV
C823	24092478	CD, 470pF, ±10%, 2kV

Location No.	Part No.	Description
C824	24214103	CD, 0.01μF, ±10%, 500V
C825	24591472	PF, 4700pF
C826	24092474	CD, 220pF, ±10%, 2kV
C828	24820683	PF, 0.068μF, 630V
C829	24617820	EL, 100μF, ±20%, 50V
C830	24567105	PF, 1μF
C831	24669220	EL, 22μF, ±20%, 50V
C853	24668102	EL, 1000μF, ±20%, 35V
C855	24214471	CD, 470pF, ±10%, 500V
C856	24214471	CD, 470pF, ±10%, 500V
C857	24214471	CD, 470pF, ±10%, 500V
C858	24214471	CD, 470pF, ±10%, 500V
C859	24214471	CD, 470pF, ±10%, 500V
C860	24669471	EL, 470μF, ±20%, 50V
C861	24668332	EL, 3300μF, ±20%, 35V
C862	24668471	EL, 470μF, ±20%, 35V
C863	24668332	EL, 3300μF, ±20%, 35V
C864	24668471	EL, 470μF, ±20%, 35V
C865	24214471	CD, 470pF, ±10%, 500V
C866	24214471	CD, 470pF, ±10%, 500V
C867	24214471	CD, 470pF, ±10%, 500V
C868	24214471	CD, 470pF, ±10%, 500V
C869	24669222	EL, 2200μF, ±20%, 50V
C870	24214471	CD, 470pF, ±10%, 500V
C871	24214471	CD, 470pF, ±10%, 500V
C872	24214471	CD, 470pF, ±10%, 500V
C873	24214471	CD, 470pF, ±10%, 500V
C874	24212102	CD, 1000pF, ±10%
C875	24667472	EL, 4700μF, ±20%, 25V
C876	24086916	EL, 330μF, ±20%, 160V
C877	24092475	CD, 270pF, ±10%, 2kV
C878	24092475	CD, 270pF, ±10%, 2kV
C879	24092475	CD, 270pF, ±10%, 2kV
C880	24092475	CD, 270pF, ±10%, 2kV
C881	24567474	PF, 0.47μF
C882	24617817	EL, 22μF, ±20%, 50V
C883	24082229	PF, 0.1μF, ±10%, 250V
C884	24617816	EL, 10μF, ±20%, 50V
C885	24617813	EL, 2.2μF, ±20%, 50V
C886	24677470	EL, 47μF, ±20%, 160V
C891	24669010	EL, 1μF, ±20%, 50V
C901	24211102	CD, 1000pF, ±10%, 2kV
C902	24794100	EL, 10μF, ±20%, 16V
C903	24232103	CD, 0.01μF, +80%, -20%
C904	24436391	CD, 390pF
C905	24214102	CD, 1000pF, ±10%, 500V
C911	24211102	CD, 1000pF, ±10%, 2kV
C912	24794100	EL, 10μF, ±20%, 16V
C913	24232103	CD, 0.01μF, +80%, -20%
C914	24436561	CD, 560pF
C915	24679330	EL, 33μF, ±20%, 250V
C915A	23960136	Adhesive, TSE3843-W
C916	24794101	EL, 100μF, ±20%, 16V
C921	24211102	CD, 1000pF, ±10%, 2kV
C922	24794100	EL, 10μF, ±20%, 16V
C924	24232103	CD, 0.01μF, +80%, -20%
C926	24436471	CD, 470pF
C941	24797478	EL, 0.47μF, ±20%, 50V
C943	24667102	EL, 1000μF, ±20%, 25V
C944	24206100	EL, 10μF, ±20%, 50V
C961	24666101	EL, 100μF, ±20%, 16V
C962	24203100	EL, 10μF, ±20%, 16V
C963	24232103	CD, 0.01μF, +80%, -20%
C964	24591104	PF, 0.1μF

Location No.	Part No.	Description
C6101	24232103	CD, 0.01μF, +80%, -20%
C6102	24232103	CD, 0.01μF, +80%, -20%
C7701	24761221	EL, 220μF, ±20%, 6.3V
C7703	24232103	CD, 0.01μF, +80%, -20%
C7742	24436330	CD, 33pF
C7743	24436330	CD, 33pF
C7747	24667101	EL, 100μF, ±20%, 25V
C7748	24567104	PF, 0.1μF
C7749	24567104	PF, 0.1μF
C7750	24667101	EL, 100μF, ±20%, 25V
C7751	24667101	EL, 100μF, ±20%, 25V
C7752	24567104	PF, 0.1μF
C7753	24567104	PF, 0.1μF
C7754	24667101	EL, 100μF, ±20%, 25V
C7755	24667101	EL, 100μF, ±20%, 25V
C7756	24567104	PF, 0.1μF
C7757	24567104	PF, 0.1μF
C7758	24667101	EL, 100μF, ±20%, 25V
C7760	24667470	EL, 47μF, ±20%, 25V
C7761	24667470	EL, 47μF, ±20%, 25V
C7762	24669100	EL, 10μF, ±20%, 50V
C7763	24667470	EL, 47μF, ±20%, 25V
C7764	24598331	PF, 330pF
C7767	24667470	EL, 47μF, ±20%, 25V
C7768	24567104	PF, 0.1μF
C7769	24232103	CD, 0.01μF, +80%, -20%
C7770	24669470	EL, 47μF, ±20%, 50V
C7771	24567103	PF, 0.01μF
C7772	24667101	EL, 100μF, ±20%, 25V
C7773	24669221	EL, 220μF, ±20%, 50V
C7774	24436331	CD, 330pF
C7775	24667101	EL, 100μF, ±20%, 25V
C7776	24667470	EL, 47μF, ±20%, 25V
C7779	24669479	EL, 4.7μF, ±20%, 50V
C7780	24591102	PF, 1000pF
C8301	24666101	EL, 100μF, ±20%, 16V
C8303	24669100	EL, 10μF, ±20%, 50V
C8304	24666101	EL, 100μF, ±20%, 16V
C8306	24666470	EL, 47μF, ±20%, 16V
C8307	24591334	PF, 0.33μF
C9602	24794100	EL, 10μF, ±20%, 16V
CA14	24232103	CD, 0.01μF, +80%, -20%
CA15	24232103	CD, 0.01μF, +80%, -20%
CA19	24436101	CD, 100pF
CA24	24436101	CD, 100pF
CA41	24436101	CD, 100pF
CA42	24436101	CD, 100pF
CA43	24436101	CD, 100pF
CA68	24794100	EL, 10μF, ±20%, 16V
CA69	24232103	CD, 0.01μF, +80%, -20%
CA106	24436101	CD, 100pF
CA107	24567104	PF, 0.1μF
CA108	24590103	PF, 0.01μF
CA109	24590103	PF, 0.01μF
CA420	24794100	EL, 10μF, ±20%, 16V
CA430	24232103	CD, 0.01μF, +80%, -20%
CA440	24232103	CD, 0.01μF, +80%, -20%
CB01	24794470	EL, 47μF, ±20%, 16V
CB90	24232103	CD, 0.01μF, +80%, -20%
CC08	24815102	Chip, 0.001μF, ±10%
CC10	24781820	Chip, 82pF, SL
CC15	24212102	CD, 1000pF, ±10%
CC18	24232103	CD, 0.01μF, +80%, -20%
CC23	24814103	Chip, 0.01μF, +80%, -20%

Location No.	Part No.	Description
CC28	24232103	CD, 0.01μF, +80%, -20%
CC29	24232103	CD, 0.01μF, +80%, -20%
CC30	24567474	PF, 0.47μF
CC39	24232103	CD, 0.01μF, +80%, -20%
CC40	24781470	Chip, 47pF, SL
CC41	24781470	Chip, 47pF, SL
CC42	24781470	Chip, 47pF, SL
CC43	24436470	CD, 47pF
CC44	24436470	CD, 47pF
CC45	24774050	Chip, 5pF, ±0.25pF, CH
CC46	24774050	Chip, 5pF, ±0.25pF, CH
CC47	24232103	CD, 0.01μF, +80%, -20%
CC48	24232103	CD, 0.01μF, +80%, -20%
CF03	24567104	PF, 0.1μF
CF04	24766101	EL, 100μF, ±20%, 50V
CF05	24766101	EL, 100μF, ±20%, 50V
CF06	24774220	Chip, 22pF, CH
CF07	24774220	Chip, 22pF, CH
CF08	24567104	PF, 0.1μF
CF09	24567104	PF, 0.1μF
CF10	24206100	EL, 10μF, ±20%, 50V
CF11	24567104	PF, 0.1μF
CF12	24814103	Chip, 0.01μF, +80%, -20%
CF14	24814103	Chip, 0.01μF, +80%, -20%
CF16	24567224	PF, 0.22μF
CF18	24794101	EL, 100μF, ±20%, 16V
CF19	24814103	Chip, 0.01μF, +80%, -20%
CF20	24766010	EL, 1μF, ±20%, 50V
CQ01	24781102	Chip, 1000pF, SL
CQ02	24781820	Chip, 82pF, SL
CQ03	24781102	Chip, 1000pF, SL
CQ04	24203100	EL, 10μF, ±20%, 16V
CQ05	24591563	PF, 0.056μF
CQ07	24591203	PF, 0.02μF
CQ08	24567683	PF, 0.068μF
CQ09	24206229	EL, 2.2μF, ±20%, 50V
CQ10	24591223	PF, 0.022μF
CQ11	24206229	EL, 2.2μF, ±20%, 50V
CQ12	24781820	Chip, 82pF, SL
CQ13	24669010	EL, 1μF, ±20%, 50V
CQ14	24669010	EL, 1μF, ±20%, 50V
CQ15	24763101	EL, 100μF, ±20%, 16V
CQ16	24814103	Chip, 0.01μF, +80%, -20%
CQ17	24774150	Chip, 15pF, CH
CQ18	24781820	Chip, 82pF, SL
CQ19	24590103	PF, 0.01μF
CQ20	24567104	PF, 0.1μF
CQ21	24794470	EL, 47μF, ±20%, 16V
CQ22	24814103	Chip, 0.01μF, +80%, -20%
CQ23	24567104	PF, 0.1μF
CQ24	24567104	PF, 0.1μF
CQ25	24797100	EL, 10μF, ±20%, 50V
CQ26	24567104	PF, 0.1μF
CQ27	24567104	PF, 0.1μF
CQ28	24797478	EL, 0.47μF, ±20%, 50V
CQ29	24794101	EL, 100μF, ±20%, 16V
CQ30	24814103	Chip, 0.01μF, +80%, -20%
CQ31	24797478	EL, 0.47μF, ±20%, 50V
CQ32	24590103	PF, 0.01μF
CQ33	24567104	PF, 0.1μF
CQ34	24567104	PF, 0.1μF
CQ35	24206478	EL, 0.47μF, ±20%, 50V
CQ36	24206478	EL, 0.47μF, ±20%, 50V
CQ37	24669010	EL, 1μF, ±20%, 50V

Location No.	Part No.	Description
CQ38	24669010	EL, 1μF, ±20%, 50V
CQ39	24669010	EL, 1μF, ±20%, 50V
CQ40	24781820	Chip, 82pF, SL
CQ41	24781090	Chip, 9pF, ±0.5pF, SL
CQ42	24781090	Chip, 9pF, ±0.5pF, SL
CQ43	24781090	Chip, 9pF, ±0.5pF, SL
CQ45	24781102	Chip, 1000pF, SL
CQ46	24781102	Chip, 1000pF, SL
CQ61	24781102	Chip, 1000pF, SL
CQ62	24781470	Chip, 47pF, SL
CQ63	24781470	Chip, 47pF, SL
CR01	24206010	EL, 1μF, ±20%, 50V
CR01	24567104	PF, 0.1μF
CR02	24232103	CD, 0.01μF, +80%, -20%
CR02	24567104	PF, 0.1μF
CR03	24436101	CD, 100pF
CR03	24567104	PF, 0.1μF
CR04	24567104	PF, 0.1μF
CR05	24567104	PF, 0.1μF
CR06	24567104	PF, 0.1μF
CR07	24814103	Chip, 0.01μF, +80%, -20%
CR08	24794100	EL, 10μF, ±20%, 16V
CR09	24567104	PF, 0.1μF
CR09	24814103	Chip, 0.01μF, +80%, -20%
CR10	24794470	EL, 47μF, ±20%, 16V
CR11	24567104	PF, 0.1μF
CR12	24567104	PF, 0.1μF
CR13	24567104	PF, 0.1μF
CR14	24567104	PF, 0.1μF
CR18	24567104	PF, 0.1μF
CR19	24567104	PF, 0.1μF
CR20	24567104	PF, 0.1μF
CS01	24085944	EL, 2.2μF, ±20%, 50V, Non-Polar
CS02	24085944	EL, 2.2μF, ±20%, 50V, Non-Polar
CS03	24206229	EL, 2.2μF, ±20%, 50V
CS04	24206229	EL, 2.2μF, ±20%, 50V
CS05	24206229	EL, 2.2μF, ±20%, 50V
CS06	24206229	EL, 2.2μF, ±20%, 50V
CS07	24206229	EL, 2.2μF, ±20%, 50V
CS08	24206229	EL, 2.2μF, ±20%, 50V
CS12	24781102	Chip, 1000pF, SL
CS13	24781102	Chip, 1000pF, SL
CS14	24206100	EL, 10μF, ±20%, 50V
CS15	24206100	EL, 10μF, ±20%, 50V
CS17	24203100	EL, 10μF, ±20%, 16V
CS18	24203100	EL, 10μF, ±20%, 16V
CS19	24206478	EL, 0.47μF, ±20%, 50V
CS22	24203100	EL, 10μF, ±20%, 16V
CS23	24203100	EL, 10μF, ±20%, 16V
CS53	24781102	Chip, 1000pF, SL
CV01	24567103	PF, 0.01μF
CV02	24085970	EL, 10μF, ±20%, 16V, Non-Polar
CV03	24203100	EL, 10μF, ±20%, 16V
CV04	24203100	EL, 10μF, ±20%, 16V
CV05	24814103	Chip, 0.01μF, +80%, -20%
CV06	24203100	EL, 10μF, ±20%, 16V
CV08	24763102	EL, 1000μF, ±20%, 16V
CV10	24085970	EL, 10μF, ±20%, 16V, Non-Polar
CV11	24781331	Chip, 330pF, SL
CV12	24092178	Chip, 0.1μF, ±10%, 25V

Location No.	Part No.	Description
CV13	24814103	Chip, 0.01μF, +80%, -20%
CV14	24781102	Chip, 1000pF, SL
CV15	24781102	Chip, 1000pF, SL
CV16	24781102	Chip, 1000pF, SL
CV17	24781102	Chip, 1000pF, SL
CV18	24781102	Chip, 1000pF, SL
CV19	24781102	Chip, 1000pF, SL
CV20	24781430	Chip, 43pF, SL
CV23	24203101	EL, 100μF, ±20%, 16V
CV24	24814103	Chip, 0.01μF, +80%, -20%
CV25	24763471	EL, 470μF, ±20%, 16V
CV31	24781102	Chip, 1000pF, SL
CV34	24781102	Chip, 1000pF, SL
CV35	24814103	Chip, 0.01μF, +80%, -20%
CV37	24781102	Chip, 1000pF, SL
CV39	24203101	EL, 100μF, ±20%, 16V
CV40	24814103	Chip, 0.01μF, +80%, -20%
CV46	24212332	CD, 3300pF, ±10%
CV47	24212332	CD, 3300pF, ±10%
CV48	24212102	CD, 1000pF, ±10%
CV65	24203101	EL, 100μF, ±20%, 16V
CV66	24203101	EL, 100μF, ±20%, 16V
CV67	24763471	EL, 470μF, ±20%, 16V
CV68	24763471	EL, 470μF, ±20%, 16V
CV78	24781330	Chip, 33pF, SL
CW01	24781121	Chip, 120pF, SL
CW02	24781121	Chip, 120pF, SL
CW03	24781470	Chip, 47pF, SL
CW04	24085945	EL, 2.2μF, ±20%, 50V, Non-Polar
CW04	24591822	PF, 8200pF
CW05	24212103	CD, 0.01μF, ±10%
CW05	24781121	Chip, 120pF, SL
CW06	24781121	Chip, 120pF, SL
CW07	24206229	EL, 2.2μF, ±20%, 50V
CW07	24666470	EL, 47μF, ±20%, 16V
CW08	24781121	Chip, 120pF, SL
CW09	24781121	Chip, 120pF, SL
CW10	24206229	EL, 2.2μF, ±20%, 50V
CW11	24781330	Chip, 33pF, SL
CW12	24666470	EL, 47μF, ±20%, 16V
CW12	24781820	Chip, 82pF, SL
CW13	24781330	Chip, 33pF, SL
CW13	24790100	EL, 10μF, ±20%, 160V
CW14	24436101	CD, 100pF
CW14	24781820	Chip, 82pF, SL
CW15	24214472	CD, 4700pF, ±10%, 500V
CW15	24781330	Chip, 33pF, SL
CW16	24436101	CD, 100pF
CW16	24781820	Chip, 82pF, SL
CW17	24214472	CD, 4700pF, ±10%, 500V
CW18	24666470	EL, 47μF, ±20%, 16V
CW19	24435560	CD, 56pF, 500V
CW20	24790100	EL, 10μF, ±20%, 160V
CW21	24794470	EL, 47μF, ±20%, 16V
CW26	24212102	CD, 1000pF, ±10%
CW27	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW28	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW29	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW30	24202221	EL, 220μF, ±20%, 10V

Location No.	Part No.	Description
CW31	24092294	Chip, 0.33μF, +80%, -20%, 16V
CW32	24781331	Chip, 330pF, SL
CW33	24092294	Chip, 0.33μF, +80%, -20%, 16V
CW34	24814103	Chip, 0.01μF, +80%, -20%
CW35	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW36	24814103	Chip, 0.01μF, +80%, -20%
CW37	24814103	Chip, 0.01μF, +80%, -20%
CW38	24202101	EL, 100μF, ±20%, 10V
CW39	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW40	24203101	EL, 100μF, ±20%, 16V
CW41	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW42	24201101	EL, 100μF, 6.3V
CW43	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW44	24201101	EL, 100μF, 6.3V
CW45	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW46	24206010	EL, 1μF, ±20%, 50V
CW47	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW48	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW49	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW50	24202221	EL, 220μF, ±20%, 10V
CW51	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW52	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW53	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW54	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW55	24815472	Chip, 0.0047μF, ±10%
CW56	24781221	Chip, 220pF, SL
CW60	24092441	Chip, 1μF, +80%, -20%, 16V
CW61	24781182	Chip, 1800pF, SL
CW62	24781182	Chip, 1800pF, SL
CW68	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW70	24814103	Chip, 0.01μF, +80%, -20%
CW72	24567103	PF, 0.01μF
CW73	24774471	Chip, 470pF, CH
CW74	24814103	Chip, 0.01μF, +80%, -20%
CW75	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW80	24092441	Chip, 1μF, +80%, -20%, 16V
CW81	24092441	Chip, 1μF, +80%, -20%, 16V
CW82	24781330	Chip, 33pF, SL
CW83	24781330	Chip, 33pF, SL
CW85	24781330	Chip, 33pF, SL
CW86	24781330	Chip, 33pF, SL
CW87	24781330	Chip, 33pF, SL
CW88	24781330	Chip, 33pF, SL
CW89	24781330	Chip, 33pF, SL
CW90	24781330	Chip, 33pF, SL
CW91	24781330	Chip, 33pF, SL
CW92	24781330	Chip, 33pF, SL
CW93	24781330	Chip, 33pF, SL
CW94	24781101	Chip, 100pF, SL
CW95	24781101	Chip, 100pF, SL
CW97	24781101	Chip, 100pF, SL
CZ03	24092442	Chip, 0.47μF, +80%, -20%, 16V
CZ05	24814103	Chip, 0.01μF, +80%, -20%
CZ07	24092178	Chip, 0.1μF, ±10%, 25V
CZ09	24781220	Chip, 22pF, SL
CZ10	24781100	Chip, 10pF, ±0.5pF%, SL
CZ11	24781220	Chip, 22pF, SL
CZ12	24814103	Chip, 0.01μF, +80%, -20%
CZ13	24814103	Chip, 0.01μF, +80%, -20%
CZ14	24203100	EL, 10μF, ±20%, 16V
CZ17	24814103	Chip, 0.01μF, +80%, -20%

Location No.	Part No.	Description
CZ19	24781181	Chip, 180pF, SL
CZ20	24815103	Chip, 0.01μF, ±10%
CZ21	24781122	Chip, 1200pF, SL
CZ22	24203100	EL, 10μF, ±20%, 16V
CZ23	24814103	Chip, 0.01μF, +80%, -20%
CZ24	24814103	Chip, 0.01μF, +80%, -20%
CZ25	24203100	EL, 10μF, ±20%, 16V
CZ26	24814103	Chip, 0.01μF, +80%, -20%
CZ28	24814103	Chip, 0.01μF, +80%, -20%
CZ29	24814103	Chip, 0.01μF, +80%, -20%
CZ30	24203100	EL, 10μF, ±20%, 16V
CZ31	24092178	Chip, 0.1μF, ±10%, 25V
CZ32	24781470	Chip, 47pF, SL
CZ33	24781470	Chip, 47pF, SL
CZ34	24781470	Chip, 47pF, SL
CZ35	24781470	Chip, 47pF, SL
CZ45	24781100	Chip, 10pF, ±0.5pF%, SL

RESISTORS

R101	24382223	OMF, 22k ohm, 1W
R201	24872101	Chip, 100 ohm, 1/16W
R204	24872104	Chip, 100k ohm, 1/16W
R205	24872101	Chip, 100 ohm, 1/16W
R206	24872471	Chip, 470 ohm, 1/16W
R207	24872103	Chip, 10k ohm, 1/16W
R208	24872103	Chip, 10k ohm, 1/16W
R209	24872103	Chip, 10k ohm, 1/16W
R210	24872101	Chip, 100 ohm, 1/16W
R211	24872101	Chip, 100 ohm, 1/16W
R212	24872101	Chip, 100 ohm, 1/16W
R213	24872681	Chip, 680 ohm, 1/16W
R214	24872681	Chip, 680 ohm, 1/16W
R215	24872681	Chip, 680 ohm, 1/16W
R216	24872103	Chip, 10k ohm, 1/16W
R218	24872101	Chip, 100 ohm, 1/16W
R219	24872101	Chip, 100 ohm, 1/16W
R220	24872101	Chip, 100 ohm, 1/16W
R222	24872333	Chip, 33k ohm, 1/16W
R223	24872332	Chip, 3300 ohm, 1/16W
R229	24872272	Chip, 2700 ohm, 1/16W
R231	24000824	Chip, Jumper, 2125 type
R239	24000824	Chip, Jumper, 2125 type
R260	24872153	Chip, 15k ohm, 1/16W
R261	24872682	Chip, 6800 ohm, 1/16W
R266	24872102	Chip, 1k ohm, 1/16W
R267	24872182	Chip, 1800 ohm, 1/16W
R268	24872101	Chip, 100 ohm, 1/16W
R269	24872821	Chip, 820 ohm, 1/16W
R273	24872473	Chip, 47k ohm, 1/16W
R274	24872102	Chip, 1k ohm, 1/16W
R275	24872101	Chip, 100 ohm, 1/16W
R276	24872683	Chip, 68k ohm, 1/16W
R277	24872103	Chip, 10k ohm, 1/16W
R281	24366821	CF, 820 ohm
R282	24366102	CF, 1k ohm
R283	24366472	CF, 4700 ohm
R291	24366123	CF, 12k ohm
R292	24366103	CF, 10k ohm
R293	24366333	CF, 33k ohm
R295	24366102	CF, 1k ohm
R296	24366101	CF, 100 ohm
R297	24366102	CF, 1k ohm
R298	24366113	CF, 11k ohm
R299	24366153	CF, 15k ohm

Location No.	Part No.	Description
R301	24366102	CF, 1k ohm
R302	24366101	CF, 100 ohm
R303	24321129	MF, 1.2 ohm, 1/2W
R304	24366223	CF, 22k ohm
R305	24322828	MF, 0.82 ohm, 1W
R306	24366333	CF, 33k ohm
R307	24366224	CF, 220k ohm
R308	24382391	OMF, 390 ohm, 1W
R312	24366103	CF, 10k ohm
R313	24366153	CF, 15k ohm
R315	24366102	CF, 1k ohm
R316	24366105	CF, 1M ohm
R317	24366104	CF, 100k ohm
R318	24366101	CF, 100 ohm
R319	24366101	CF, 100 ohm
R321	24872682	Chip, 6800 ohm, 1/16W
R327	24000187	FR, 3.3 ohm, 1W
R329	24366153	CF, 15k ohm
R330	24366102	CF, 1k ohm
R331	24366183	CF, 18k ohm
R332	24366222	CF, 2200 ohm
R333	24366824	CF, 820k ohm
R334	24366823	CF, 82k ohm
R335	24366104	CF, 100k ohm
R336	24383221	OMF, 220 ohm, 2W
R341	24366622	CF, 6200 ohm
R343	24366153	CF, 15k ohm
R346	24366102	CF, 1k ohm
R351	24552101	OMF, 100 ohm, 1/2W
R352	24366222	CF, 2200 ohm
R353	24366682	CF, 6800 ohm
R354	24366222	CF, 2200 ohm
R356	24366562	CF, 5600 ohm
R357	24382114	OMF, 110k ohm, 1W
R358	24366682	CF, 6800 ohm
R359	24366103	CF, 10k ohm
R360	24366102	CF, 1k ohm
R361	24366113	CF, 11k ohm
R362	24366754	CF, 750k ohm
R363	24366103	CF, 10k ohm
R364	24366103	CF, 10k ohm
R365	24366103	CF, 10k ohm
R366	24366103	CF, 10k ohm
R367	24366473	CF, 47k ohm
R368	24366473	CF, 47k ohm
R369	24366102	CF, 1k ohm
R370	24321159	MF, 1.5 ohm, 1/2W
R371	24366682	CF, 6800 ohm
R372	24366472	CF, 4700 ohm
R373	24366152	CF, 1500 ohm
R374	24366473	CF, 47k ohm
R375	24366102	CF, 1k ohm
R376	24384221	OMF, 220 ohm, 3W
R377	24384221	OMF, 220 ohm, 3W
R378	24366102	CF, 1k ohm
R379	24366562	CF, 5600 ohm
R386	24366472	CF, 4700 ohm
R388	24366392	CF, 3900 ohm
R390	24382561	OMF, 560 ohm, 1W
R391	24382561	OMF, 560 ohm, 1W
R392	24382561	OMF, 560 ohm, 1W
R393	24366184	CF, 180k ohm
R394	24366153	CF, 15k ohm
R400	24942102	CC, 1k ohm, 1/2W

Location No.	Part No.	Description
R401	24366103	CF, 10k ohm
R401	24872391	Chip, 390 ohm, 1/16W
R402	24366333	CF, 33k ohm
R402	24872103	Chip, 10k ohm, 1/16W
R403	24366332	CF, 3300 ohm
R403	24872302	Chip, 3k ohm, 1/16W
R404	24383270	OMF, 27 ohm, 2W
R405	24382332	OMF, 3300 ohm, 1W
R407	24872103	Chip, 10k ohm, 1/16W
R408	24321209	MF, 2 ohm, 1/2W
R409	24381103	OMF, 10k ohm, 1/2W
R410	24366331	CF, 330 ohm
R411	24366471	CF, 470 ohm
R415	24553272	OMF, 2700 ohm, 1W
R416	24510562	Cement, 5600 ohm, 5W
R421	24872334	Chip, 330k ohm, 1/16W
R422	24872152	Chip, 1500 ohm, 1/16W
R423	24872152	Chip, 1500 ohm, 1/16W
R424	24546338	FR, 0.33 ohm, 1/2W
R425	24552331	OMF, 330 ohm, 1/2W
R425	24872153	Chip, 15k ohm, 1/16W
R426	24366821	CF, 820 ohm
R427	24366432	CF, 4300 ohm
R428	24366561	CF, 560 ohm
R429	24552330	OMF, 33 ohm, 1/2W
R431	24382100	OMF, 10 ohm, 1W
R432	24532560	FR, 56 ohm, 1W
R434	24366102	CF, 1k ohm
R435	24366333	CF, 33k ohm
R436	24327224	MF, 220k ohm, ±1%, 1/4W
R439	24366472	CF, 4700 ohm
R441	24383102	OMF, 1k ohm, 2W
R443	24310109	MF, 1.0 ohm, 1/2W
R444	24338398	MF, 0.39 ohm, 1W
R445	24382332	OMF, 3300 ohm, 1W
R446	24382332	OMF, 3300 ohm, 1W
R447	24382473	OMF, 47k ohm, 1W
R448	24338828	MF, 0.82 ohm, 1W
R450	24066879	VR, 1k ohm, 0.3W
R451	24376223	CF, 22k ohm, 1/2W
R452	24376223	CF, 22k ohm, 1/2W
R453	24376223	CF, 22k ohm, 1/2W
R454	24366223	CF, 22k ohm
R455	24366333	CF, 33k ohm
R460	24552332	OMF, 3300 ohm, 1/2W
R461	24366332	CF, 3300 ohm
R462	24366102	CF, 1k ohm
R462	24366912	CF, 9100 ohm
R463	24339109	MF, 1 ohm, 2W
R464	24366273	CF, 27k ohm
R465	24366114	CF, 110k ohm
R466	24366152	CF, 1500 ohm
R469	24000465	FR, 9.1 ohm, 1W
R472	24552270	OMF, 27 ohm, 1/2W
R476	24366821	CF, 820 ohm
R477	24383121	OMF, 120 ohm, 2W
R478	24376333	CF, 33k ohm, 1/2W
R479	24366101	CF, 100 ohm
R480	24553332	OMF, 3300 ohm, 1W
R481	24366473	CF, 47k ohm
R482	24366103	CF, 10k ohm
R483	24366154	CF, 150k ohm
R484	24366473	CF, 47k ohm
R485	24552271	OMF, 270 ohm, 1/2W

Location No.	Part No.	Description
R487	24366472	CF, 4700 ohm
R488	24366474	CF, 470k ohm
R489	24366332	CF, 3300 ohm
R490	24366332	CF, 3300 ohm
R492	24366102	CF, 1k ohm
R493	24552392	OMF, 3900 ohm, 1/2W
R494	24366183	CF, 18k ohm
R495	24366682	CF, 6800 ohm
R496	24382114	OMF, 110k ohm, 1W
R498	24366153	CF, 15k ohm
R499	24366824	CF, 820k ohm
R501	24872223	Chip, 22k ohm, 1/16W
R502	24872101	Chip, 100 ohm, 1/16W
R503	24872101	Chip, 100 ohm, 1/16W
R505	24872102	Chip, 1k ohm, 1/16W
R506	24872103	Chip, 10k ohm, 1/16W
R508	24872102	Chip, 1k ohm, 1/16W
R509	24872102	Chip, 1k ohm, 1/16W
R510	24872472	Chip, 4700 ohm, 1/16W
R511	24872101	Chip, 100 ohm, 1/16W
R515	24366102	CF, 1k ohm
R516	24366101	CF, 100 ohm
R516	24872101	Chip, 100 ohm, 1/16W
R517	24872101	Chip, 100 ohm, 1/16W
R518	24872472	Chip, 4700 ohm, 1/16W
R519	24872101	Chip, 100 ohm, 1/16W
R520	24872103	Chip, 10k ohm, 1/16W
R521	24872223	Chip, 22k ohm, 1/16W
R522	24872473	Chip, 47k ohm, 1/16W
R532	24000824	Chip, Jumper, 2125 type
R533	24000824	Chip, Jumper, 2125 type
R534	24000824	Chip, Jumper, 2125 type
R601	24366332	CF, 3300 ohm
R602	24366332	CF, 3300 ohm
R603	24366222	CF, 2200 ohm
R604	24366222	CF, 2200 ohm
R605	24366229	CF, 2.2 ohm
R606	24366229	CF, 2.2 ohm
R607	24366682	CF, 6800 ohm
R608	24366682	CF, 6800 ohm
R610	24366104	CF, 100k ohm
R611	24366103	CF, 10k ohm
R612	24366103	CF, 10k ohm
R613	24366224	CF, 220k ohm
R614	24366103	CF, 10k ohm
R635	24366224	CF, 220k ohm
R636	24366104	CF, 100k ohm
R661	24366103	CF, 10k ohm
R670	24552182	OMF, 1800 ohm, 1/2W
R671	24366153	CF, 15k ohm
R672	24366153	CF, 15k ohm
R673	24366563	CF, 56k ohm
R674	24366563	CF, 56k ohm
R675	24366103	CF, 10k ohm
R676	24872223	Chip, 22k ohm, 1/16W
R677	24366104	CF, 100k ohm
R677	24872223	Chip, 22k ohm, 1/16W
R678	24366103	CF, 10k ohm
R678	24872223	Chip, 22k ohm, 1/16W
R679	24366103	CF, 10k ohm
R679	24872223	Chip, 22k ohm, 1/16W
R680	24872223	Chip, 22k ohm, 1/16W
R681	24872223	Chip, 22k ohm, 1/16W
R682	24366473	CF, 47k ohm

Location No.	Part No.	Description
R683	24366223	CF, 22k ohm
R684	24366223	CF, 22k ohm
R688	24366222	CF, 2200 ohm
R688	24552391	OMF, 390 ohm, 1/2W
R690	24552391	OMF, 390 ohm, 1/2W
R690	24872681	Chip, 680 ohm, 1/16W
R691	24872681	Chip, 680 ohm, 1/16W
R692	24872681	Chip, 680 ohm, 1/16W
R693	24872681	Chip, 680 ohm, 1/16W
R701	23103832	Chip (Ferrite Bead), TEM2125M
R702	23103832	Chip (Ferrite Bead), TEM2125M
R703	24872472	Chip, 4700 ohm, 1/16W
R704	24872472	Chip, 4700 ohm, 1/16W
R705	24872472	Chip, 4700 ohm, 1/16W
R706	24872472	Chip, 4700 ohm, 1/16W
R707	24872100	Chip, 10 ohm, 1/16W
R708	24872100	Chip, 10 ohm, 1/16W
R709	24872100	Chip, 10 ohm, 1/16W
R710	24872100	Chip, 10 ohm, 1/16W
R711	24872100	Chip, 10 ohm, 1/16W
R712	24872100	Chip, 10 ohm, 1/16W
R713	24872100	Chip, 10 ohm, 1/16W
R714	24872100	Chip, 10 ohm, 1/16W
R715	24872153	Chip, 15k ohm, 1/16W
R716	24872103	Chip, 10k ohm, 1/16W
R717	24872622	Chip, 6200 ohm, 1/16W
R718	24872152	Chip, 1500 ohm, 1/16W
R720	24872103	Chip, 10k ohm, 1/16W
R721	24872223	Chip, 22k ohm, 1/16W
R722	24872222	Chip, 2200 ohm, 1/16W
R725	24872754	Chip, 750k ohm, 1/16W
R726	24872331	Chip, 330 ohm, 1/16W
R727	24871221	Chip, 220 ohm, 1/8W
R728	24872393	Chip, 39k ohm, 1/16W
R729	24872153	Chip, 15k ohm, 1/16W
R735	24872911	Chip, 910 ohm, 1/16W
R736	24872911	Chip, 910 ohm, 1/16W
R737	24872152	Chip, 1500 ohm, 1/16W
R738	24872332	Chip, 3300 ohm, 1/16W
R739	24872362	Chip, 3600 ohm, 1/16W
R740	24872911	Chip, 910 ohm, 1/16W
R741	24872911	Chip, 910 ohm, 1/16W
R742	24872152	Chip, 1500 ohm, 1/16W
R743	24872332	Chip, 3300 ohm, 1/16W
R744	24872362	Chip, 3600 ohm, 1/16W
R745	24872911	Chip, 910 ohm, 1/16W
R746	24872911	Chip, 910 ohm, 1/16W
R747	24872152	Chip, 1500 ohm, 1/16W
R748	24872332	Chip, 3300 ohm, 1/16W
R749	24872362	Chip, 3600 ohm, 1/16W
R750	24872911	Chip, 910 ohm, 1/16W
R751	24872911	Chip, 910 ohm, 1/16W
R752	24872152	Chip, 1500 ohm, 1/16W
R753	24872332	Chip, 3300 ohm, 1/16W
R754	24872362	Chip, 3600 ohm, 1/16W
R755	24872911	Chip, 910 ohm, 1/16W
R756	24872911	Chip, 910 ohm, 1/16W
R757	24872152	Chip, 1500 ohm, 1/16W
R758	24872332	Chip, 3300 ohm, 1/16W
R759	24872362	Chip, 3600 ohm, 1/16W
R760	24872911	Chip, 910 ohm, 1/16W
R761	24872911	Chip, 910 ohm, 1/16W

Location No.	Part No.	Description
R762	24872152	Chip, 1500 ohm, 1/16W
R763	24872332	Chip, 3300 ohm, 1/16W
R764	24872362	Chip, 3600 ohm, 1/16W
R778	24872101	Chip, 100 ohm, 1/16W
R779	24872101	Chip, 100 ohm, 1/16W
R780	24872101	Chip, 100 ohm, 1/16W
R781	24872101	Chip, 100 ohm, 1/16W
R782	24872101	Chip, 100 ohm, 1/16W
R783	24872101	Chip, 100 ohm, 1/16W
R786	24872472	Chip, 4700 ohm, 1/16W
R787	24872472	Chip, 4700 ohm, 1/16W
R801	24366473	CF, 47k ohm
R802	24366102	CF, 1k ohm
R803	24366683	CF, 68k ohm
R805	24366101	CF, 100 ohm
R806	24366101	CF, 100 ohm
R807	24367273	CF, 27k ohm, ±2%
R808	24552470	OMF, 47 ohm, 1/2W
R809	24321689	MF, 6.8 ohm, 1/2W
R810	24383680	OMF, 68 ohm, 2W
R811	24552121	OMF, 120 ohm, 1/2W
R812	24552390	OMF, 39 ohm, 1/2W
R814	24552821	OMF, 820 ohm, 1/2W
R816	24384223	OMF, 22k ohm, 3W
⚠ R819	24009954	Metal-Glazed Resistor, 2.2M ohm, 1/2W
R820	24007061	Cement, 1.8 ohm, ±10%, 2W
R821	24045005	Cement, 4.7 ohm, 5W
R822	24366102	CF, 1k ohm
R823	24554470	OMF, 47 ohm, 2W
R851	24545109	FR, 1 ohm, 1/4W
R852	24366272	CF, 2700 ohm
R853	24338568	MF, 0.56 ohm, 1W
R854	24553121	OMF, 120 ohm, 1W
R855	24553271	OMF, 270 ohm, 1W
R856	24366152	CF, 1500 ohm
R857	24381682	OMF, 6800 ohm, 1/2W
R858	24366102	CF, 1k ohm
R859	24382333	OMF, 33k ohm, 1W
R860	24366102	CF, 1k ohm
⚠ R861	24005015	Metal-Glazed Resistor, 8.2M ohm, 1W
R862	24366223	CF, 22k ohm
R863	24366101	CF, 100 ohm
R870	24552100	OMF, 10 ohm, 1/2W
R901	24366471	CF, 470 ohm
R903	24942102	CC, 1k ohm, 1/2W
R905	24366390	CF, 39 ohm
R906	24366621	CF, 620 ohm
R908	24366680	CF, 68 ohm
R909	24366151	CF, 150 ohm
R911	24366471	CF, 470 ohm
R913	24942102	CC, 1k ohm, 1/2W
R915	24366390	CF, 39 ohm
R916	24366621	CF, 620 ohm
R918	24366680	CF, 68 ohm
R921	24366471	CF, 470 ohm
R923	24942102	CC, 1k ohm, 1/2W
R925	24366151	CF, 150 ohm
R926	24366621	CF, 620 ohm
R928	24366101	CF, 100 ohm
R931	24555153	OMF, 15k ohm, 3W
R932	24555153	OMF, 15k ohm, 3W
R933	24000929	FR, 1.5 ohm, 1W

Location No.	Part No.	Description
R935	24366150	CF, 15 ohm
R936	24366330	CF, 33 ohm
R941	24555153	OMF, 15k ohm, 3W
R942	24555153	OMF, 15k ohm, 3W
R943	24366103	CF, 10k ohm
R944	24366150	CF, 15 ohm
R945	24366680	CF, 68 ohm
R946	24366330	CF, 33 ohm
R949	24366121	CF, 120 ohm
R951	24555153	OMF, 15k ohm, 3W
R952	24555153	OMF, 15k ohm, 3W
R953	24366390	CF, 39 ohm
R956	24366102	CF, 1k ohm
R957	24366330	CF, 33 ohm
R961	24366102	CF, 1k ohm
R962	24366361	CF, 360 ohm
R964	24366332	CF, 3300 ohm
R965	24366471	CF, 470 ohm
R966	24366821	CF, 820 ohm
R967	24366102	CF, 1k ohm
R968	24366680	CF, 68 ohm
R969	24366103	CF, 10k ohm
R970	24366222	CF, 2200 ohm
R971	24367152	CF, 1500 ohm, ±2%
R972	24367471	CF, 470 ohm, ±2%
R973	24367681	CF, 680 ohm, ±2%
R974	24367681	CF, 680 ohm, ±2%
R975	24366242	CF, 2400 ohm
R976	24367562	CF, 5600 ohm, ±2%
R977	24367472	CF, 4700 ohm, ±2%
R978	24367681	CF, 680 ohm, ±2%
R6101	24366473	CF, 47k ohm
R6102	24366103	CF, 10k ohm
R6103	24366331	CF, 330 ohm
R7001	24366470	CF, 47 ohm
R7002	24366823	CF, 82k ohm
R7003	24366472	CF, 4700 ohm
R7004	24366103	CF, 10k ohm
R7005	24366473	CF, 47k ohm
R7006	24366104	CF, 100k ohm
R7007	24366333	CF, 33k ohm
R7008	24366471	CF, 470 ohm
R7009	24366471	CF, 470 ohm
R7010	24366222	CF, 2200 ohm
R7011	24366151	CF, 150 ohm
R7012	24366151	CF, 150 ohm
R7013	24366470	CF, 47 ohm
R7014	24366471	CF, 470 ohm
R7015	24366471	CF, 470 ohm
R7016	24366101	CF, 100 ohm
R7017	24366101	CF, 100 ohm
R7018	24366101	CF, 100 ohm
R7021	24554151	OMF, 150 ohm, 2W
R7022	24323189	MF, 1.8 ohm, 2W
R7031	24366391	CF, 390 ohm
R7032	24366222	CF, 2200 ohm
R7099	24366152	CF, 1500 ohm
R7101	24366470	CF, 47 ohm
R7102	24366823	CF, 82k ohm
R7103	24366472	CF, 4700 ohm
R7104	24366103	CF, 10k ohm
R7105	24366473	CF, 47k ohm
R7106	24366104	CF, 100k ohm
R7107	24366333	CF, 33k ohm

Location No.	Part No.	Description
R7108	24366471	CF, 470 ohm
R7109	24366471	CF, 470 ohm
R7111	24366151	CF, 150 ohm
R7112	24000151	MF, 750 ohm, 1/4W
R7113	24366470	CF, 47 ohm
R7114	24366471	CF, 470 ohm
R7115	24366471	CF, 470 ohm
R7116	24366101	CF, 100 ohm
R7117	24366101	CF, 100 ohm
R7118	24366101	CF, 100 ohm
R7121	24554151	OMF, 150 ohm, 2W
R7122	24323189	MF, 1.8 ohm, 2W
R7131	24366391	CF, 390 ohm
R7132	24366222	CF, 2200 ohm
R7199	24366152	CF, 1500 ohm
R7201	24366470	CF, 47 ohm
R7202	24366823	CF, 82k ohm
R7203	24366472	CF, 4700 ohm
R7204	24366103	CF, 10k ohm
R7205	24366473	CF, 47k ohm
R7206	24366104	CF, 100k ohm
R7207	24366333	CF, 33k ohm
R7208	24366471	CF, 470 ohm
R7209	24366471	CF, 470 ohm
R7210	24366222	CF, 2200 ohm
R7211	24366151	CF, 150 ohm
R7212	24366151	CF, 150 ohm
R7213	24366470	CF, 47 ohm
R7214	24366471	CF, 470 ohm
R7215	24366471	CF, 470 ohm
R7216	24366101	CF, 100 ohm
R7217	24366101	CF, 100 ohm
R7218	24366101	CF, 100 ohm
R7221	24554151	OMF, 150 ohm, 2W
R7222	24323189	MF, 1.8 ohm, 2W
R7231	24366391	CF, 390 ohm
R7299	24366152	CF, 1500 ohm
R7301	24366470	CF, 47 ohm
R7302	24366823	CF, 82k ohm
R7303	24366472	CF, 4700 ohm
R7304	24366103	CF, 10k ohm
R7305	24366473	CF, 47k ohm
R7306	24366104	CF, 100k ohm
R7307	24366333	CF, 33k ohm
R7308	24366471	CF, 470 ohm
R7309	24366471	CF, 470 ohm
R7311	24366151	CF, 150 ohm
R7312	24366151	CF, 150 ohm
R7313	24366470	CF, 47 ohm
R7314	24366471	CF, 470 ohm
R7315	24366471	CF, 470 ohm
R7316	24366101	CF, 100 ohm
R7317	24366101	CF, 100 ohm
R7318	24366101	CF, 100 ohm
R7321	24554151	OMF, 150 ohm, 2W
R7322	24323189	MF, 1.8 ohm, 2W
R7331	24366391	CF, 390 ohm
R7399	24366152	CF, 1500 ohm
R7401	24366470	CF, 47 ohm
R7402	24366823	CF, 82k ohm
R7403	24366472	CF, 4700 ohm
R7404	24366103	CF, 10k ohm
R7405	24366473	CF, 47k ohm
R7406	24366104	CF, 100k ohm

Location No.	Part No.	Description
R7407	24366333	CF, 33k ohm
R7408	24366471	CF, 470 ohm
R7409	24366471	CF, 470 ohm
R7410	24366222	CF, 2200 ohm
R7411	24366151	CF, 150 ohm
R7412	24366151	CF, 150 ohm
R7413	24366470	CF, 47 ohm
R7414	24366471	CF, 470 ohm
R7415	24366471	CF, 470 ohm
R7416	24366101	CF, 100 ohm
R7417	24366101	CF, 100 ohm
R7418	24366101	CF, 100 ohm
R7421	24554151	OMF, 150 ohm, 2W
R7422	24323189	MF, 1.8 ohm, 2W
R7431	24366391	CF, 390 ohm
R7432	24366222	CF, 2200 ohm
R7499	24366152	CF, 1500 ohm
R7501	24366470	CF, 47 ohm
R7502	24366823	CF, 82k ohm
R7503	24366472	CF, 4700 ohm
R7504	24366103	CF, 10k ohm
R7505	24366473	CF, 47k ohm
R7506	24366104	CF, 100k ohm
R7507	24366333	CF, 33k ohm
R7508	24366471	CF, 470 ohm
R7509	24366471	CF, 470 ohm
R7511	24366151	CF, 150 ohm
R7512	24366151	CF, 150 ohm
R7513	24366470	CF, 47 ohm
R7514	24366471	CF, 470 ohm
R7515	24366471	CF, 470 ohm
R7516	24366101	CF, 100 ohm
R7517	24366101	CF, 100 ohm
R7518	24366101	CF, 100 ohm
R7521	24554151	OMF, 150 ohm, 2W
R7522	24323189	MF, 1.8 ohm, 2W
R7531	24366391	CF, 390 ohm
R7599	24366152	CF, 1500 ohm
R7601	24366222	CF, 2200 ohm
R7602	24366222	CF, 2200 ohm
R7603	24381472	OMF, 4700 ohm, 1/2W
R7604	24366104	CF, 100k ohm
R7605	24366472	CF, 4700 ohm
R7606	24366102	CF, 1k ohm
R7607	24381472	OMF, 4700 ohm, 1/2W
R7608	24366223	CF, 22k ohm
R7609	24366153	CF, 15k ohm
R7612	24366223	CF, 22k ohm
R7703	24366473	CF, 47k ohm
R7704	24366103	CF, 10k ohm
R7705	24366472	CF, 4700 ohm
R7706	24366222	CF, 2200 ohm
R7708	24366471	CF, 470 ohm
R7738	24554101	OMF, 100 ohm, 2W
R7741	24366471	CF, 470 ohm
R7742	24366222	CF, 2200 ohm
R7743	24366223	CF, 22k ohm
R7744	24366102	CF, 1k ohm
R7745	24366222	CF, 2200 ohm
R7746	24366223	CF, 22k ohm
R7747	24366222	CF, 2200 ohm
R7749	24366331	CF, 330 ohm
R7750	24323278	MF, 0.27 ohm, 2W
R7751	24366471	CF, 470 ohm

Location No.	Part No.	Description
R7752	24366101	CF, 100 ohm
R7753	24366101	CF, 100 ohm
R7754	24366101	CF, 100 ohm
R7755	24366102	CF, 1k ohm
R7757	24366223	CF, 22k ohm
R7758	24366222	CF, 2200 ohm
R7763	24366471	CF, 470 ohm
R7764	24366331	CF, 330 ohm
R7765	24323398	MF, 0.39 ohm, 2W
R7766	24366223	CF, 22k ohm
R7767	24366223	CF, 22k ohm
R7768	24366102	CF, 1k ohm
R7770	24366153	CF, 15k ohm
R7771	24366102	CF, 1k ohm
R7772	24366102	CF, 1k ohm
R7779	24366102	CF, 1k ohm
R7780	24366102	CF, 1k ohm
R7781	24366333	CF, 33k ohm
R7782	24323828	MF, 0.82 ohm, 2W
R7783	24366331	CF, 330 ohm
R7784	24366471	CF, 470 ohm
R7785	24366222	CF, 2200 ohm
R7786	24366103	CF, 10k ohm
R7787	24366104	CF, 100k ohm
R7788	24366103	CF, 10k ohm
R7789	24366471	CF, 470 ohm
R7790	24552182	OMF, 1800 ohm, 1/2W
R7791	24552681	OMF, 680 ohm, 1/2W
R7792	24366471	CF, 470 ohm
R7794	24366223	CF, 22k ohm
R8301	24366473	CF, 47k ohm
R8302	24366273	CF, 27k ohm
R9601	24366101	CF, 100 ohm
R9602	24366362	CF, 3600 ohm
R9603	24366392	CF, 3900 ohm
R9604	24366272	CF, 2700 ohm
R9605	24366682	CF, 6800 ohm
R9606	24366362	CF, 3600 ohm
R9613	24366560	CF, 56 ohm
R9614	24366560	CF, 56 ohm
R9615	24366101	CF, 100 ohm
R9616	24366102	CF, 1k ohm
RA01	24366102	CF, 1k ohm
RA02	24366102	CF, 1k ohm
RA03	24366102	CF, 1k ohm
RA06	24366102	CF, 1k ohm
RA07	24366102	CF, 1k ohm
RA08	24366102	CF, 1k ohm
RA09	24366102	CF, 1k ohm
RA10	24366102	CF, 1k ohm
RA11	24366102	CF, 1k ohm
RA13	24366102	CF, 1k ohm
RA14	24366102	CF, 1k ohm
RA15	24366103	CF, 10k ohm
RA19	24366331	CF, 330 ohm
RA20	24366102	CF, 1k ohm
RA21	24366102	CF, 1k ohm
RA22	24366102	CF, 1k ohm
RA24	24366153	CF, 15k ohm
RA31	24366103	CF, 10k ohm
RA32	24366103	CF, 10k ohm
RA36	24366102	CF, 1k ohm
RA37	24366102	CF, 1k ohm
RA53	24366101	CF, 100 ohm

Location No.	Part No.	Description
RA55	24366101	CF, 100 ohm
RA57	24366101	CF, 100 ohm
RA59	24366102	CF, 1k ohm
RA61	24366102	CF, 1k ohm
RA62	24366102	CF, 1k ohm
RA63	24366102	CF, 1k ohm
RA70	24366333	CF, 33k ohm
RA71	24366103	CF, 10k ohm
RA71	24366683	CF, 68k ohm
RA72	24366103	CF, 10k ohm
RA72	24366223	CF, 22k ohm
RA73	24366103	CF, 10k ohm
RA75	24366333	CF, 33k ohm
RA76	24366103	CF, 10k ohm
RA77	24366223	CF, 22k ohm
RA78	24366683	CF, 68k ohm
RA91	24366103	CF, 10k ohm
RA92	24366472	CF, 4700 ohm
RA93	24366103	CF, 10k ohm
RA96	24366103	CF, 10k ohm
RA97	24366472	CF, 4700 ohm
RA98	24366103	CF, 10k ohm
RA99	24366562	CF, 5600 ohm
RA104	24366682	CF, 6800 ohm
RA105	24366103	CF, 10k ohm
RA106	24366682	CF, 6800 ohm
RA107	24366472	CF, 4700 ohm
RA108	24366472	CF, 4700 ohm
RA120	24366472	CF, 4700 ohm
RA140	24366153	CF, 15k ohm
RA150	24366103	CF, 10k ohm
RA310	24366101	CF, 100 ohm
RA410	24366273	CF, 27k ohm
RB01	24366271	CF, 270 ohm
RB02	24366471	CF, 470 ohm
RB03	24366101	CF, 100 ohm
RB04	24366223	CF, 22k ohm
RB05	24366223	CF, 22k ohm
RB07	24366271	CF, 270 ohm
RB08	24366271	CF, 270 ohm
RB09	24366470	CF, 47 ohm
RB10	24366101	CF, 100 ohm
RB11	24366103	CF, 10k ohm
RB12	24366471	CF, 470 ohm
RB40	24366103	CF, 10k ohm
RB43	24366822	CF, 8200 ohm
RB44	24366103	CF, 10k ohm
RB45	24366101	CF, 100 ohm
RB81	24366122	CF, 1200 ohm
RB82	24366123	CF, 12k ohm
RB83	24366123	CF, 12k ohm
RB84	24366562	CF, 5600 ohm
RB90	24366392	CF, 3900 ohm
RB91	24366473	CF, 47k ohm
RB92	24366271	CF, 270 ohm
RB93	24366271	CF, 270 ohm
RB94	24366222	CF, 2200 ohm
RB95	24366222	CF, 2200 ohm
RB96	24366273	CF, 27k ohm
RB97	24366273	CF, 27k ohm
RB98	24366102	CF, 1k ohm
RF01	24872332	Chip, 3300 ohm, 1/16W
RF03	24872682	Chip, 6800 ohm, 1/16W
RF04	24872223	Chip, 22k ohm, 1/16W

Location No.	Part No.	Description
RF06	24872102	Chip, 1k ohm, 1/16W
RF08	23103832	Chip (Ferrite Bead), TEM2125M
RF09	23103832	Chip (Ferrite Bead), TEM2125M
RF10	23103832	Chip (Ferrite Bead), TEM2125M
RF11	24872103	Chip, 10k ohm, 1/16W
RF12	24872101	Chip, 100 ohm, 1/16W
RF13	24872101	Chip, 100 ohm, 1/16W
RF14	24872101	Chip, 100 ohm, 1/16W
RF15	24872103	Chip, 10k ohm, 1/16W
RF16	24872471	Chip, 470 ohm, 1/16W
RF20	24872472	Chip, 4700 ohm, 1/16W
RF21	24000824	Chip, Jumper, 2125 type
RF22	24872102	Chip, 1k ohm, 1/16W
RF24	24872102	Chip, 1k ohm, 1/16W
RF26	24872102	Chip, 1k ohm, 1/16W
RF27	24872103	Chip, 10k ohm, 1/16W
RF28	24872102	Chip, 1k ohm, 1/16W
RF29	24872103	Chip, 10k ohm, 1/16W
RF30	24872103	Chip, 10k ohm, 1/16W
RF38	24872153	Chip, 15k ohm, 1/16W
RF39	24872472	Chip, 4700 ohm, 1/16W
RJ02	24872101	Chip, 100 ohm, 1/16W
RQ01	24872102	Chip, 1k ohm, 1/16W
RQ03	24872102	Chip, 1k ohm, 1/16W
RQ04	24872511	Chip, 510 ohm, 1/16W
RQ05	24872471	Chip, 470 ohm, 1/16W
RQ06	24872471	Chip, 470 ohm, 1/16W
RQ07	24872103	Chip, 10k ohm, 1/16W
RQ08	24872102	Chip, 1k ohm, 1/16W
RQ09	24872102	Chip, 1k ohm, 1/16W
RQ10	24872102	Chip, 1k ohm, 1/16W
RQ11	24872561	Chip, 560 ohm, 1/16W
RQ12	24872561	Chip, 560 ohm, 1/16W
RQ13	24872203	Chip, 20k ohm, 1/16W
RQ14	24872273	Chip, 27k ohm, 1/16W
RQ20	24872563	Chip, 56k ohm, 1/16W
RR01	24366102	CF, 1k ohm
RR02	24366104	CF, 100k ohm
RR03	24366222	CF, 2200 ohm
RR04	24366101	CF, 100 ohm
RR04	24872102	Chip, 1k ohm, 1/16W
RR05	24366102	CF, 1k ohm
RR05	24872102	Chip, 1k ohm, 1/16W
RR06	24000824	Chip, Jumper, 2125 type
RR06	24366223	CF, 22k ohm
RR07	24000824	Chip, Jumper, 2125 type
RR07	24366152	CF, 1500 ohm
RR08	24366332	CF, 3300 ohm
RR09	24000824	Chip, Jumper, 2125 type
RR09	24366222	CF, 2200 ohm
RR10	24366182	CF, 1800 ohm
RR10	24872103	Chip, 10k ohm, 1/16W
RR11	24366152	CF, 1500 ohm
RR11	24872473	Chip, 47k ohm, 1/16W
RR12	24366152	CF, 1500 ohm
RR12	24872102	Chip, 1k ohm, 1/16W
RR13	24366152	CF, 1500 ohm
RR13	24872622	Chip, 6200 ohm, 1/16W
RR15	24366391	CF, 390 ohm
RR16	24366391	CF, 390 ohm
RR17	24366391	CF, 390 ohm

Location No.	Part No.	Description
RR20	24872103	Chip, 10k ohm, 1/16W
RR22	24366103	CF, 10k ohm
RR23	24366103	CF, 10k ohm
RR24	24000824	Chip, Jumper, 2125 type
RR25	24872102	Chip, 1k ohm, 1/16W
RR28	24872473	Chip, 47k ohm, 1/16W
RR29	24872473	Chip, 47k ohm, 1/16W
RR31	24366331	CF, 330 ohm
RR32	24366331	CF, 330 ohm
RR32	24872331	Chip, 330 ohm, 1/16W
RR33	24366331	CF, 330 ohm
RR33	24872331	Chip, 330 ohm, 1/16W
RR34	24366102	CF, 1k ohm
RR34	24872331	Chip, 330 ohm, 1/16W
RR35	24366392	CF, 3900 ohm
RR36	24366392	CF, 3900 ohm
RR37	24366392	CF, 3900 ohm
RR40	24366102	CF, 1k ohm
RR41	24366332	CF, 3300 ohm
RR48	24366222	CF, 2200 ohm
RR62	24366102	CF, 1k ohm
RR63	24366332	CF, 3300 ohm
RR64	24366152	CF, 1500 ohm
RR65	24366102	CF, 1k ohm
RR66	24366101	CF, 100 ohm
RR67	24366271	CF, 270 ohm
RR68	24366332	CF, 3300 ohm
RR69	24366152	CF, 1500 ohm
RR70	24366102	CF, 1k ohm
RR71	24366332	CF, 3300 ohm
RR72	24366332	CF, 3300 ohm
RR73	24366332	CF, 3300 ohm
RR81	24366271	CF, 270 ohm
RR82	24366101	CF, 100 ohm
RR83	24366271	CF, 270 ohm
RR84	24366101	CF, 100 ohm
RR85	24366102	CF, 1k ohm
RR86	24366152	CF, 1500 ohm
RR87	24366332	CF, 3300 ohm
RR88	24366101	CF, 100 ohm
RR99	24474102	CD, 1000pF, ±10%
RS01	24872681	Chip, 680 ohm, 1/16W
RS02	24872681	Chip, 680 ohm, 1/16W
RS03	24872101	Chip, 100 ohm, 1/16W
RS04	24872101	Chip, 100 ohm, 1/16W
RS05	24872472	Chip, 4700 ohm, 1/16W
RS06	24872472	Chip, 4700 ohm, 1/16W
RS07	24872472	Chip, 4700 ohm, 1/16W
RS08	24872472	Chip, 4700 ohm, 1/16W
RS09	24872472	Chip, 4700 ohm, 1/16W
RS10	24872472	Chip, 4700 ohm, 1/16W
RS13	24872101	Chip, 100 ohm, 1/16W
RS14	24872101	Chip, 100 ohm, 1/16W
RS15	24872104	Chip, 100k ohm, 1/16W
RS16	24872104	Chip, 100k ohm, 1/16W
RS17	24872223	Chip, 22k ohm, 1/16W
RS18	24872223	Chip, 22k ohm, 1/16W
RS19	24872681	Chip, 680 ohm, 1/16W
RS20	24872681	Chip, 680 ohm, 1/16W
RS21	24872222	Chip, 2200 ohm, 1/16W
RS22	24872222	Chip, 2200 ohm, 1/16W
RS23	24872101	Chip, 100 ohm, 1/16W
RS24	24872101	Chip, 100 ohm, 1/16W
RS27	24872104	Chip, 100k ohm, 1/16W

Location No.	Part No.	Description
RS28	24872104	Chip, 100k ohm, 1/16W
RS29	24872223	Chip, 22k ohm, 1/16W
RS30	24872223	Chip, 22k ohm, 1/16W
RS31	24872103	Chip, 10k ohm, 1/16W
RS32	24872104	Chip, 100k ohm, 1/16W
RS35	24872223	Chip, 22k ohm, 1/16W
RS36	24872223	Chip, 22k ohm, 1/16W
RS37	24872104	Chip, 100k ohm, 1/16W
RS38	24872104	Chip, 100k ohm, 1/16W
RS43	24872681	Chip, 680 ohm, 1/16W
RS44	24872681	Chip, 680 ohm, 1/16W
RS56	24872102	Chip, 1k ohm, 1/16W
RS57	24872223	Chip, 22k ohm, 1/16W
RS58	24872223	Chip, 22k ohm, 1/16W
RS59	24872681	Chip, 680 ohm, 1/16W
RS60	24872102	Chip, 1k ohm, 1/16W
RV01	24872101	Chip, 100 ohm, 1/16W
RV02	24872101	Chip, 100 ohm, 1/16W
RV03	24872101	Chip, 100 ohm, 1/16W
RV04	24872101	Chip, 100 ohm, 1/16W
RV05	24872101	Chip, 100 ohm, 1/16W
RV06	24872101	Chip, 100 ohm, 1/16W
RV07	24872162	Chip, 1600 ohm, 1/16W
RV08	24872162	Chip, 1600 ohm, 1/16W
RV09	24872101	Chip, 100 ohm, 1/16W
RV10	24872101	Chip, 100 ohm, 1/16W
RV12	24872681	Chip, 680 ohm, 1/16W
RV13	24872681	Chip, 680 ohm, 1/16W
RV16	24872271	Chip, 270 ohm, 1/16W
RV18	24872123	Chip, 12k ohm, 1/16W
RV19	24872101	Chip, 100 ohm, 1/16W
RV20	24872101	Chip, 100 ohm, 1/16W
RV21	24872151	Chip, 150 ohm, 1/16W
RV23	24552101	OMF, 100 ohm, 1/2W
RV25	24872101	Chip, 100 ohm, 1/16W
RV26	24366181	CF, 180 ohm
RV27	24872750	Chip, 75 ohm, 1/16W
RV28	24872683	Chip, 68k ohm, 1/16W
RV29	24872273	Chip, 27k ohm, 1/16W
RV30	24872750	Chip, 75 ohm, 1/16W
RV31	24872750	Chip, 75 ohm, 1/16W
RV32	24872750	Chip, 75 ohm, 1/16W
RV33	24872123	Chip, 12k ohm, 1/16W
RV34	24872123	Chip, 12k ohm, 1/16W
RV35	24872103	Chip, 10k ohm, 1/16W
RV36	24872101	Chip, 100 ohm, 1/16W
RV37	24872750	Chip, 75 ohm, 1/16W
RV60	24366681	CF, 680 ohm
RV60	24872102	Chip, 1k ohm, 1/16W
RV61	24366681	CF, 680 ohm
RV61	24552101	OMF, 100 ohm, 1/2W
RV62	24872101	Chip, 100 ohm, 1/16W
RV63	24552151	OMF, 150 ohm, 1/2W
RV64	24872750	Chip, 75 ohm, 1/16W
RV65	24552101	OMF, 100 ohm, 1/2W
RV66	24872101	Chip, 100 ohm, 1/16W
RV67	24552151	OMF, 150 ohm, 1/2W
RV68	24872750	Chip, 75 ohm, 1/16W
RV70	24872101	Chip, 100 ohm, 1/16W
RV71	24872472	Chip, 4700 ohm, 1/16W
RV73	24872103	Chip, 10k ohm, 1/16W
RV74	24872104	Chip, 100k ohm, 1/16W
RV78	24872100	Chip, 10 ohm, 1/16W
RV79	24872102	Chip, 1k ohm, 1/16W

Location No.	Part No.	Description
RV80	24872271	Chip, 270 ohm, 1/16W
RV81	24872750	Chip, 75 ohm, 1/16W
RV82	24872101	Chip, 100 ohm, 1/16W
RV85	24872750	Chip, 75 ohm, 1/16W
RV86	24872750	Chip, 75 ohm, 1/16W
RV87	24872750	Chip, 75 ohm, 1/16W
RV89	24872750	Chip, 75 ohm, 1/16W
RV90	24872681	Chip, 680 ohm, 1/16W
RV91	24872681	Chip, 680 ohm, 1/16W
RV92	24872100	Chip, 10 ohm, 1/16W
RV93	24872104	Chip, 100k ohm, 1/16W
RV94	24872103	Chip, 10k ohm, 1/16W
RV95	24872472	Chip, 4700 ohm, 1/16W
RV97	24872101	Chip, 100 ohm, 1/16W
RV800	24366100	CF, 10 ohm
RV801	24366222	CF, 2200 ohm
RW02	24366271	CF, 270 ohm
RW02	24872563	Chip, 56k ohm, 1/16W
RW03	24872393	Chip, 39k ohm, 1/16W
RW04	24872560	Chip, 56 ohm, 1/16W
RW05	24872102	Chip, 1k ohm, 1/16W
RW06	24872151	Chip, 150 ohm, 1/16W
RW07	24872222	Chip, 2200 ohm, 1/16W
RW08	24872821	Chip, 820 ohm, 1/16W
RW09	24366563	CF, 56k ohm
RW09	24872560	Chip, 56 ohm, 1/16W
RW10	24872152	Chip, 1500 ohm, 1/16W
RW11	24872561	Chip, 560 ohm, 1/16W
RW12	24872272	Chip, 2700 ohm, 1/16W
RW13	24366393	CF, 39k ohm
RW13	24872821	Chip, 820 ohm, 1/16W
RW14	24552121	OMF, 120 ohm, 1/2W
RW14	24872560	Chip, 56 ohm, 1/16W
RW15	24366473	CF, 47k ohm
RW15	24872152	Chip, 1500 ohm, 1/16W
RW16	24366273	CF, 27k ohm
RW16	24872561	Chip, 560 ohm, 1/16W
RW17	24366333	CF, 33k ohm
RW17	24872272	Chip, 2700 ohm, 1/16W
RW18	24366101	CF, 100 ohm
RW18	24872821	Chip, 820 ohm, 1/16W
RW19	24366100	CF, 10 ohm
RW20	24366392	CF, 3900 ohm
RW20	24872101	Chip, 100 ohm, 1/16W
RW21	24872102	Chip, 1k ohm, 1/16W
RW22	24366102	CF, 1k ohm
RW22	24872101	Chip, 100 ohm, 1/16W
RW23	24366101	CF, 100 ohm
RW23	24872821	Chip, 820 ohm, 1/16W
RW24	24366331	CF, 330 ohm
RW24	24872821	Chip, 820 ohm, 1/16W
RW25	24366182	CF, 1800 ohm
RW25	24872101	Chip, 100 ohm, 1/16W
RW26	24872101	Chip, 100 ohm, 1/16W
RW27	24872102	Chip, 1k ohm, 1/16W
RW28	24872271	Chip, 270 ohm, 1/16W
RW29	24872392	Chip, 3900 ohm, 1/16W
RW30	24552100	OMF, 10 ohm, 1/2W
RW30	24872152	Chip, 1500 ohm, 1/16W
RW31	24552331	OMF, 330 ohm, 1/2W
RW31	24872101	Chip, 100 ohm, 1/16W
RW32	24366820	CF, 82 ohm
RW32	24872101	Chip, 100 ohm, 1/16W
RW33	24366683	CF, 68k ohm

Location No.	Part No.	Description
RW33	24872102	Chip, 1k ohm, 1/16W
RW34	24366820	CF, 82 ohm
RW34	24872271	Chip, 270 ohm, 1/16W
RW35	24366683	CF, 68k ohm
RW35	24872392	Chip, 3900 ohm, 1/16W
RW36	24366330	CF, 33 ohm
RW36	24872152	Chip, 1500 ohm, 1/16W
RW37	24366152	CF, 1500 ohm
RW37	24872101	Chip, 100 ohm, 1/16W
RW38	24366102	CF, 1k ohm
RW39	24366152	CF, 1500 ohm
RW40	24366330	CF, 33 ohm
RW41	24366279	CF, 2.7 ohm
RW41	24872101	Chip, 100 ohm, 1/16W
RW42	24366279	CF, 2.7 ohm
RW42	24872101	Chip, 100 ohm, 1/16W
RW43	24554221	OMF, 220 ohm, 2W
RW43	24872182	Chip, 1800 ohm, 1/16W
RW44	24366122	CF, 1200 ohm
RW44	24872181	Chip, 180 ohm, 1/16W
RW45	24366122	CF, 1200 ohm
RW46	24872101	Chip, 100 ohm, 1/16W
RW47	24872222	Chip, 2200 ohm, 1/16W
RW60	24000824	Chip, Jumper, 2125 type
RW61	24872472	Chip, 4700 ohm, 1/16W
RW62	24872622	Chip, 6200 ohm, 1/16W
RW63	24872101	Chip, 100 ohm, 1/16W
RW64	24872101	Chip, 100 ohm, 1/16W
RW65	24872101	Chip, 100 ohm, 1/16W
RW66	24872681	Chip, 680 ohm, 1/16W
RW67	24872222	Chip, 2200 ohm, 1/16W
RW68	24872222	Chip, 2200 ohm, 1/16W
RW69	24872222	Chip, 2200 ohm, 1/16W
RW70	24872333	Chip, 33k ohm, 1/16W
RW71	24872182	Chip, 1800 ohm, 1/16W
RW72	24872182	Chip, 1800 ohm, 1/16W
RW73	24872103	Chip, 10k ohm, 1/16W
RW74	24872332	Chip, 3300 ohm, 1/16W
RW76	24872182	Chip, 1800 ohm, 1/16W
RW77	24000824	Chip, Jumper, 2125 type
RW78	24000824	Chip, Jumper, 2125 type
RW79	24000824	Chip, Jumper, 2125 type
RW80	24872331	Chip, 330 ohm, 1/16W
RW81	24872331	Chip, 330 ohm, 1/16W
RW82	24872102	Chip, 1k ohm, 1/16W
RW83	24872103	Chip, 10k ohm, 1/16W
RW84	24872102	Chip, 1k ohm, 1/16W
RW85	24000824	Chip, Jumper, 2125 type
RW89	24872102	Chip, 1k ohm, 1/16W
RW90	24000824	Chip, Jumper, 2125 type
RW91	24872103	Chip, 10k ohm, 1/16W
RW92	24872103	Chip, 10k ohm, 1/16W
RW93	24872101	Chip, 100 ohm, 1/16W
RW94	24872101	Chip, 100 ohm, 1/16W
RW95	24872101	Chip, 100 ohm, 1/16W
RW96	24872102	Chip, 1k ohm, 1/16W
RW100	24872563	Chip, 56k ohm, 1/16W
RW101	24872393	Chip, 39k ohm, 1/16W
RW102	24872563	Chip, 56k ohm, 1/16W
RW103	24872393	Chip, 39k ohm, 1/16W
RW104	24872682	Chip, 6800 ohm, 1/16W
RW105	24872392	Chip, 3900 ohm, 1/16W
RW107	24872103	Chip, 10k ohm, 1/16W
RW108	24872333	Chip, 33k ohm, 1/16W

Location No.	Part No.	Description
RW109	24872103	Chip, 10k ohm, 1/16W
RW110	24872333	Chip, 33k ohm, 1/16W
RW114	24872563	Chip, 56k ohm, 1/16W
RW116	24872222	Chip, 2200 ohm, 1/16W
RZ01	24872102	Chip, 1k ohm, 1/16W
RZ02	24872102	Chip, 1k ohm, 1/16W
RZ03	24872332	Chip, 3300 ohm, 1/16W
RZ04	24872102	Chip, 1k ohm, 1/16W
RZ05	24872221	Chip, 220 ohm, 1/16W
RZ06	24872821	Chip, 820 ohm, 1/16W
RZ07	24872101	Chip, 100 ohm, 1/16W
RZ08	24872471	Chip, 470 ohm, 1/16W
RZ09	24872101	Chip, 100 ohm, 1/16W
RZ10	24872222	Chip, 2200 ohm, 1/16W
RZ11	24872101	Chip, 100 ohm, 1/16W
RZ12	24872102	Chip, 1k ohm, 1/16W
RZ13	24872102	Chip, 1k ohm, 1/16W
RZ14	24872102	Chip, 1k ohm, 1/16W
RZ15	24872102	Chip, 1k ohm, 1/16W
RZ17	24872221	Chip, 220 ohm, 1/16W
RZ18	24872471	Chip, 470 ohm, 1/16W
RZ19	24872102	Chip, 1k ohm, 1/16W
RZ20	24872101	Chip, 100 ohm, 1/16W
RZ22	24872222	Chip, 2200 ohm, 1/16W
RZ29	24872331	Chip, 330 ohm, 1/16W
RZ30	24872331	Chip, 330 ohm, 1/16W

COILS & TRANSFORMERS

L101	23221803	Coil, Choke, TLN3040D
L200	23289479	Coil, Peaking, TRF44R7AF
L201	23289100	Coil, Peaking, TRF4100AF
L301	23103859	Coil (Ferrite Bead), TEM2011
L303	23237975	Coil, Peaking, TRF4101AC
L333	23238702	Coil, Peaking, TRF4101AJ
L400	23289101	Coil, Peaking, TRF4101AF
L441	23233977	Coil, Linearity, TLN2203AG
L441A	23960136	Adhesive, TSE3843-W
L442	23248186	Coil, Choke, TLN3346AD
L461	23248115	Coil, Choke, TLN3367D
⚠ L462	23231220	Deflection Yoke, TDY707JT(R)
⚠ L463	23231220	Deflection Yoke, TDY707JT(R)
⚠ L464	23231220	Deflection Yoke, TDY707JT(R)
L465	23103880	Coil (Ferrite Bead), TEM2011Y
L472	23102441	Magnet, MAG-1094
L473	23102441	Magnet, MAG-1094
L474	23102441	Magnet, MAG-1094
L501	23289100	Coil, Peaking, TRF4100AF
L502	23103852	Coil, Filter, TEM2028AH
L503	23289470	Coil, Peaking, TRF4470AF
L507	23103852	Coil, Filter, TEM2028AH
L510	23238718	Coil, Peaking, TRF4479AJ
L512	23103845	Coil, TEM2030AY
L513	23103845	Coil, TEM2030AY
L676	23103832	Chip (Ferrite Bead), TEM2125M
L677	23103832	Chip (Ferrite Bead), TEM2125M
L682	23103832	Chip (Ferrite Bead), TEM2125M
L683	23103832	Chip (Ferrite Bead), TEM2125M
L684	23289109	Coil, Peaking, TRF41R0AF
L685	23289109	Coil, Peaking, TRF41R0AF
L701	24366221	CF, 100 ohm

Location No.	Part No.	Description
L702	24366221	CF, 100 ohm
L707	23238562	Coil, Peaking, TRF4109AJ
L708	23238562	Coil, Peaking, TRF4109AJ
L709	23238562	Coil, Peaking, TRF4109AJ
L710	23238562	Coil, Peaking, TRF4109AJ
L711	23238562	Coil, Peaking, TRF4109AJ
L712	23238562	Coil, Peaking, TRF4109AJ
L713	23238562	Coil, Peaking, TRF4109AJ
L714	23238562	Coil, Peaking, TRF4109AJ
L719	23232878	Coil, Variable, TRF3503K
L720	23289102	Coil, Peaking, TRF4102AJ
L721	23237805	Coil, Peaking, TRF4222
L722	23289102	Coil, Peaking, TRF4102AJ
L723	23237805	Coil, Peaking, TRF4222
L724	23289102	Coil, Peaking, TRF4102AJ
L725	23237805	Coil, Peaking, TRF4222
L726	23289102	Coil, Peaking, TRF4102AJ
L727	23237805	Coil, Peaking, TRF4222
L728	23289102	Coil, Peaking, TRF4102AJ
L729	23237805	Coil, Peaking, TRF4222
L730	23289102	Coil, Peaking, TRF4102AJ
L731	23237805	Coil, Peaking, TRF4222
L737	23289560	Coil, Peaking, TRF4560AF
L738	23289560	Coil, Peaking, TRF4560AF
L739	23289560	Coil, Peaking, TRF4560AF
L740	23289560	Coil, Peaking, TRF4560AF
L742	23103866	Chip (Ferrite Bead), TEM2105T
L743	23103866	Chip (Ferrite Bead), TEM2105T
L744	23103866	Chip (Ferrite Bead), TEM2105T
L745	23103866	Chip (Ferrite Bead), TEM2105T
L746	23103866	Chip (Ferrite Bead), TEM2105T
L747	23103866	Chip (Ferrite Bead), TEM2105T
L748	23103866	Chip (Ferrite Bead), TEM2105T
L749	23103866	Chip (Ferrite Bead), TEM2105T
L801	23248213	Coil, Choke, TLN3481AH
L802	23248213	Coil, Choke, TLN3481AH
L803	23103859	Coil (Ferrite Bead), TEM2011
L804	23103859	Coil (Ferrite Bead), TEM2011
L853	23248035	Coil, Choke, TLN3278D
L854	23248073	Coil, Choke, TLN3299D
L855	23248073	Coil, Choke, TLN3299D
L856	23248073	Coil, Choke, TLN3299D
L857	23248073	Coil, Choke, TLN3299D
L858	23103859	Coil (Ferrite Bead), TEM2011
L859	23103859	Coil (Ferrite Bead), TEM2011
L860	23280022	Coil, Peaking, TRF4101AZ
L861	23103859	Coil (Ferrite Bead), TEM2011
L862	23248073	Coil, Choke, TLN3299D
L863	23103859	Coil (Ferrite Bead), TEM2011
L864	23103859	Coil (Ferrite Bead), TEM2011
L865	23103859	Coil (Ferrite Bead), TEM2011
L866	23248073	Coil, Choke, TLN3299D
L867	70211045	Coil, Choke, 0.02mH
L868	23103859	Coil (Ferrite Bead), TEM2011
L869	23103859	Coil (Ferrite Bead), TEM2011
L870	23248073	Coil, Choke, TLN3299D
L871	23248073	Coil, Choke, TLN3299D
L872	23248035	Coil, Choke, TLN3278D
L892	23238506	Coil, Peaking, TRF4229AJ
L893	23238714	Coil, Peaking, TRF4100AJ
L911	23237987	Coil, Peaking, TRF4100AC
L961	23289100	Coil, Peaking, TRF4100AF
L962	23237991	Coil, Peaking, TRF4479AC
L963	23237975	Coil, Peaking, TRF4101AC

Location No.	Part No.	Description
L6101	23103859	Coil (Ferrite Bead), TEM2011
L7701	23103859	Coil (Ferrite Bead), TEM2011
L7702	23103859	Coil (Ferrite Bead), TEM2011
L7703	23103859	Coil (Ferrite Bead), TEM2011
L7704	23103859	Coil (Ferrite Bead), TEM2011
L7705	23103859	Coil (Ferrite Bead), TEM2011
L7706	23103859	Coil (Ferrite Bead), TEM2011
LA01	23289100	Coil, Peaking, TRF4100AF
LC05	23238562	Coil, Peaking, TRF4109AJ
LC06	23103859	Coil (Ferrite Bead), TEM2011
LC26	23238562	Coil, Peaking, TRF4109AJ
LF01	23103775	Coil (Ferrite Bead), TEM2014
LF02	24366100	CF, 10 ohm
LF03	24366100	CF, 10 ohm
LF04	24366100	CF, 10 ohm
LF05	23238506	Coil, Peaking, TRF4229AJ
LF06	23238562	Coil, Peaking, TRF4109AJ
LF07	23238562	Coil, Peaking, TRF4109AJ
LF08	23238714	Coil, Peaking, TRF4100AJ
LF09	23238714	Coil, Peaking, TRF4100AJ
LF10	23238562	Coil, Peaking, TRF4109AJ
LF11	23289109	Coil, Peaking, TRF41R0AF
LF12	23289100	Coil, Peaking, TRF4100AF
LF13	23289100	Coil, Peaking, TRF4100AF
LF17	23289100	Coil, Peaking, TRF4100AF
LQ01	23238709	Coil, Peaking, TRF4270AJ
LQ02	23237991	Coil, Peaking, TRF4479AC
LQ03	23237991	Coil, Peaking, TRF4479AC
LQ04	23238718	Coil, Peaking, TRF4479AJ
LR01	23289100	Coil, Peaking, TRF4100AF
LR01	23289109	Coil, Peaking, TRF41R0AF
LR02	23289109	Coil, Peaking, TRF41R0AF
LR25	23103845	Coil, TEM2030AY
LR26	23103845	Coil, TEM2030AY
LS45	23103832	Chip (Ferrite Bead), TEM2125M
LS46	23103832	Chip (Ferrite Bead), TEM2125M
LV06	23103832	Chip (Ferrite Bead), TEM2125M
LV07	23103832	Chip (Ferrite Bead), TEM2125M
LV08	23289330	Coil, Peaking, TRF4330AF
LV09	23289100	Coil, Peaking, TRF4100AF
LV10	23289220	Coil, Peaking, TRF4220AF
LV11	23289330	Coil, Peaking, TRF4330AF
LV42	23289100	Coil, Peaking, TRF4100AF
LV43	23289100	Coil, Peaking, TRF4100AF
LV47	23238562	Coil, Peaking, TRF4109AJ
LW01	23103806	Chip (Ferrite Bead), TEM2114T
LW02	23103806	Chip (Ferrite Bead), TEM2114T
LW02	23261974	Coil, Choke, HC5-035
LW03	23103806	Chip (Ferrite Bead), TEM2114T
LW04	23103859	Coil (Ferrite Bead), TEM2011
LW04	24000824	Chip Jumper, 2125 Type
LW05	23103822	Chip (Ferrite Bead), TEM2117T
LW05	23103859	Coil (Ferrite Bead), TEM2011
LW06	23103822	Chip (Ferrite Bead), TEM2117T
LW07	23103822	Chip (Ferrite Bead), TEM2117T
LW08	23289100	Coil, Peaking, TRF4100AF
LW09	23103822	Chip (Ferrite Bead), TEM2117T
LW10	23103806	Chip (Ferrite Bead), TEM2114T
LW12	23238718	Coil, Peaking, TRF4479AJ
LW13	23238702	Coil, Peaking, TRF4101AJ

Location No.	Part No.	Description
LW14	23238702	Coil, Peaking, TRF4101AJ
LW15	23238718	Coil, Peaking, TRF4479AJ
LW16	23238718	Coil, Peaking, TRF4479AJ
LW17	23238718	Coil, Peaking, TRF4479AJ
LW41	23103806	Chip (Ferrite Bead), TEM2114T
LW42	23103806	Chip (Ferrite Bead), TEM2114T
LW80	23238562	Coil, Peaking, TRF4109AJ
LW81	23238562	Coil, Peaking, TRF4109AJ
LZ01	23238710	Coil, Peaking, TRF4220AJ
LZ02	23238714	Coil, Peaking, TRF4100AJ
LZ03	23238714	Coil, Peaking, TRF4100AJ
LZ04	23238708	Coil, Peaking, TRF4330AJ
LZ05	23238709	Coil, Peaking, TRF4270AJ
LZ08	23238707	Coil, Peaking, TRF4390AJ
LZ09	70131060	Beze Filter, ZBF253D-00
LZ10	70131060	Beze Filter, ZBF253D-00
T400	23224364	Transformer, Focus, TLN2168AH
T401	23224367	Transformer, Horiz. Drive, TLN1098AH
⚠T461	23236552	Transformer, Flyback, TFB3078BD
T461A	23192917	Anode Cap, TCCP5149
⚠T461Z	23236508	Transformer, Flyback, TFB3078ZD
T801	23211670	Line Filter, TRF3164G
⚠T803	23217432	Transformer, Power, TPW1562AZ
T804	23217358	Transformer, Choke, TPW2008AZ
⚠T862	23217433	Transformer, Converter, TPW3426AS

SEMICONDUCTORS

Q201	A6335470	Transistor, 2SC2712-Y
Q202	A6541130	Transistor, 2SA1162-Y
Q203	A6541130	Transistor, 2SA1162-Y
Q204	A6541130	Transistor, 2SA1162-Y
Q205	A6541130	Transistor, 2SA1162-Y
Q261	A6335470	Transistor, 2SC2712-Y
Q262	A6541130	Transistor, 2SA1162-Y
Q270	A6004040	Transistor, RN1404
Q271	A6004040	Transistor, RN1404
Q272	A6014040	Transistor, RN2404
Q273	A6335470	Transistor, 2SC2712-Y
Q281	23904943	IC, MM1111XS
Q282	A6534040	Transistor, 2SA1015-Y
Q291	A6330069	Transistor, 2CS2482 FA-1
Q295	A6317440	Transistor, 2SC1815-Y
Q301	23319787	IC, LA7833S
Q301B	70391355	Screw, BITTB3X8 SZN
Q302	B0385853	IC, TA1241AN
Q330	A6317440	Transistor, 2SC1815-Y
Q331	A6534040	Transistor, 2SA1015-Y
Q352	A6002030	Transistor, RN1203
Q353	A6002030	Transistor, RN1203
Q354	A6534145	Transistor, 2SA1020-Y(C)
Q360	B0350510	IC, TA75558S
Q361	23314548	Transistor, 2SC4256
Q370	A6534040	Transistor, 2SA1015-Y
Q371	A6534145	Transistor, 2SA1020-Y(C)
Q372	A6002030	Transistor, RN1203
Q402	A6330069	Transistor, 2CS2482 FA-1
Q404	A6873777	Transistor, 2SD2553

Location No.	Part No.	Description
Q404B	72471082	Screw, BRDT2W3X10 SZN
Q420	23314141	Transistor, 2SC3852
Q420B	70391356	Screw, BITTB3X10 SZN
Q421	A6317440	Transistor, 2SC1815-Y
Q430	23314707	Transistor, 2SD1944, H
Q460	23314850	Transistor, 2SA1788, E
Q460B	72471082	Screw, BRDT2W3X10 SZN
Q461	A6317440	Transistor, 2SC1815-Y
Q462	A6317440	Transistor, 2SC1815-Y
Q470	A6317440	Transistor, 2SC1815-Y
Q480	23314246	Transistor, 2SC2023 LF-4
Q483	B0345651	IC, TA7508P(J)
Q491	A6734590	Transistor, 2SC752(G)TM-Y
Q501	B0386208	IC, TA1276AN
Q502	A6335470	Transistor, 2SC2712-Y
Q503	A6541130	Transistor, 2SA1162-Y
Q504	A6335470	Transistor, 2SC2712-Y
Q518	A6335470	Transistor, 2SC2712-Y
Q601	23318413	IC, LA4282
Q611	A6534040	Transistor, 2SA1015-Y
Q612	A6534040	Transistor, 2SA1015-Y
Q622	A6317440	Transistor, 2SC1815-Y
Q671	B0350000	IC, TA75458P
Q681	A6342200	Transistor, 2CS2878-A
Q682	A6342200	Transistor, 2CS2878-A
Q701	23319808	IC, M5218AP
Q701	B0588213	IC, T7K64(Z)
Q702	A6317440	Transistor, 2SC1815-Y
Q703	23905014	IC, LC78816M
Q703	A6531140	Transistor, 2SA817-Y
Q704	23905014	IC, LC78816M
Q704	A6314440	Transistor, 2SC1627-Y
Q705	23905014	IC, LC78816M
Q705	A6314440	Transistor, 2SC1627-Y
Q706	A6531140	Transistor, 2SA817-Y
Q707	A6869040	Transistor, 2SD1407A-Y
Q707	B0379550	IC, TA8667P
Q707B	23035310	Screw, BTB3X10SZN
Q708	A6640600	Transistor, 2SB1016A-Y
Q708B	23035310	Screw, BTB3X10SZN
Q709	A6734590	Transistor, 2SC752(G)TM-Y
Q710	23314204	Transistor, 2SC2412K, Q
Q711	23319808	IC, M5218AP
Q711	23906924	IC, CAT24C16P
Q712	23906924	IC, CAT24C16P
Q712	A6317440	Transistor, 2SC1815-Y
Q713	23906924	IC, CAT24C16P
Q713	A6531140	Transistor, 2SA817-Y
Q714	23318977	IC, MC14052BFEL
Q714	A6314440	Transistor, 2SC1627-Y
Q715	23319808	IC, M5218AP
Q715	A6314440	Transistor, 2SC1627-Y
Q716	A6531140	Transistor, 2SA817-Y
Q717	23319808	IC, M5218AP
Q717	A6869040	Transistor, 2SD1407A-Y
Q717B	23035310	Screw, BTB3X10SZN
Q718	A6640600	Transistor, 2SB1016A-Y
Q718B	23035310	Screw, BTB3X10SZN
Q719	23319808	IC, M5218AP
Q722	A6317440	Transistor, 2SC1815-Y
Q723	A6531140	Transistor, 2SA817-Y
Q724	A6314440	Transistor, 2SC1627-Y
Q725	A6314440	Transistor, 2SC1627-Y
Q726	A6531140	Transistor, 2SA817-Y

Location No.	Part No.	Description
Q727	A6869040	Transistor, 2SD1407A-Y
Q727B	23035310	Screw, BTB3X10SZN
Q728	A6640600	Transistor, 2SB1016A-Y
Q728B	23035310	Screw, BTB3X10SZN
Q732	A6317440	Transistor, 2SC1815-Y
Q733	A6531140	Transistor, 2SA817-Y
Q734	A6314440	Transistor, 2SC1627-Y
Q735	A6314440	Transistor, 2SC1627-Y
Q736	A6531140	Transistor, 2SA817-Y
Q737	A6869040	Transistor, 2SD1407A-Y
Q737B	23035310	Screw, BTB3X10SZN
Q738	A6640600	Transistor, 2SB1016A-Y
Q738B	23035310	Screw, BTB3X10SZN
Q741	23319808	IC, M5218AP
Q742	A6317440	Transistor, 2SC1815-Y
Q743	A6531140	Transistor, 2SA817-Y
Q744	A6314440	Transistor, 2SC1627-Y
Q745	A6314440	Transistor, 2SC1627-Y
Q746	A6531140	Transistor, 2SA817-Y
Q747	A6869040	Transistor, 2SD1407A-Y
Q747B	23035310	Screw, BTB3X10SZN
Q748	A6640600	Transistor, 2SB1016A-Y
Q748B	23035310	Screw, BTB3X10SZN
Q749	A6314440	Transistor, 2SC1627-Y
Q750	A6314440	Transistor, 2SC1627-Y
Q751	A6531140	Transistor, 2SA817-Y
Q752	A6317440	Transistor, 2SC1815-Y
Q753	A6531140	Transistor, 2SA817-Y
Q754	23904521	IC, AN7805
Q754B	70391356	Screw, BITTB3X10 SZN
Q755	23904525	IC, AN7809
Q755B	70391356	Screw, BITTB3X10 SZN
Q756	23318841	IC, AN79M09F
Q756B	70391356	Screw, BITTB3X10 SZN
Q757	A6317440	Transistor, 2SC1815-Y
Q758	A6317440	Transistor, 2SC1815-Y
Q759	A6534040	Transistor, 2SA1015-Y
Q760	A6869040	Transistor, 2SD1407A-Y
Q760B	23035310	Screw, BTB3X10SZN
Q761	A6534040	Transistor, 2SA1015-Y
Q762	A6317440	Transistor, 2SC1815-Y
Q763	A6534145	Transistor, 2SA1020-Y(C)
Q764	B0487045	IC, TC74HC4049AP
Q765	A6640600	Transistor, 2SB1016A-Y
Q765B	23035310	Screw, BTB3X10SZN
Q766	A6317440	Transistor, 2SC1815-Y
Q767	B0470188	IC, TC4066BP(N)
Q768	A6534040	Transistor, 2SA1015-Y
Q769	A6317440	Transistor, 2SC1815-Y
Q770	A6534040	Transistor, 2SA1015-Y
Q771	A6533730	Transistor, 2SA1012-Y
Q771B	23035308	Screw, BTB3X8SZN
Q771C	23960136	Adhesive, TSE3843-W
Q772	A6534040	Transistor, 2SA1015-Y
Q773	A6317440	Transistor, 2SC1815-Y
Q774	A6317440	Transistor, 2SC1815-Y
Q775	A6531140	Transistor, 2SA817-Y
Q776	A6002020	Transistor, RN1202
Q801	23906540	IC, STR-Z4267
Q810	23906689	IC, PQ05RR11
Q810B	70391355	Screw, BITTB3X8 SZN
Q811	A6002050	Transistor, RN1205
Q812	A6317440	Transistor, 2SC1815-Y
Q821	A6002010	Transistor, RN1201

Location No.	Part No.	Description
Q831	23319941	IC, SI-3050C
Q831B	70391356	Screw, BITTB3X10 SZN
Q833	23905977	IC, PQ09RD11
Q833B	70391356	Screw, BITTB3X10 SZN
⚠ Q862	A8643108	Photo Coupler, TLP621(GR-LF
Q901	A6372621	Transistor, 2SC5360
Q902	A6317440	Transistor, 2SC1815-Y
Q911	A6372621	Transistor, 2SC5360
Q913	A6317440	Transistor, 2SC1815-Y
Q914	A6321240	Transistor, 2SC2120-Y
Q921	A6372621	Transistor, 2SC5360
Q922	A6317440	Transistor, 2SC1815-Y
Q961	A6317440	Transistor, 2SC1815-Y
Q962	A6509140	Transistor, 2SA562TM-Y
Q963	A6317440	Transistor, 2SC1815-Y
Q964	A6534040	Transistor, 2SA1015-Y
Q965	A6317440	Transistor, 2SC1815-Y
Q966	A6534040	Transistor, 2SA1015-Y
Q6101	A6317440	Transistor, 2SC1815-Y
Q9601	A6534040	Transistor, 2SA1015-Y
Q9602	A6534040	Transistor, 2SA1015-Y
Q9605	A6317440	Transistor, 2SC1815-Y
Q9606	A6534040	Transistor, 2SA1015-Y
QA01	23000786	IC, 750010-154S
QA02	23905666	IC, AT24C1610PC
QA02	23906923	IC, CAT24C08P
QA03	A6534040	Transistor, 2SA1015-Y
QA91	A6317440	Transistor, 2SC1815-Y
QA92	A6534040	Transistor, 2SA1015-Y
QB01	A6534040	Transistor, 2SA1015-Y
QB03	A6002050	Transistor, RN1205
QB03	A6534040	Transistor, 2SA1015-Y
QB04	A6534040	Transistor, 2SA1015-Y
QB81	A6342200	Transistor, 2CS2878-A
QB82	A6342200	Transistor, 2CS2878-A
QB83	A6534040	Transistor, 2SA1015-Y
QB92	A6317440	Transistor, 2SC1815-Y
QB93	A6534040	Transistor, 2SA1015-Y
QB94	A6534040	Transistor, 2SA1015-Y
QB95	A6534040	Transistor, 2SA1015-Y
QB96	A6534040	Transistor, 2SA1015-Y
QF01	23906822	IC, SDA5273-2S C
QF02	23314204	Transistor, 2SC2412K, Q
QF03	23314204	Transistor, 2SC2412K, Q
QF04	A6734590	Transistor, 2SC752(G)TM-Y
QF06	23314204	Transistor, 2SC2412K, Q
QF11	23906367	IC, PST9146NL
QQ01	B0385755	IC, TA1229N
QQ02	B0383881	IC, TA8772AN
QQ03	A6335470	Transistor, 2SC2712-Y
QQ04	A6335470	Transistor, 2SC2712-Y
QR01	23000123	IC, MB90096-192
QR01	B0386235	IC, TA1287P
QR03	23114530	Transistor, 2SA933S-Q
QR05	A6317440	Transistor, 2SC1815-Y
QR21	A6335470	Transistor, 2SC2712-Y
QR24	A6335470	Transistor, 2SC2712-Y
QR35	A6317440	Transistor, 2SC1815-Y
QR36	A6317440	Transistor, 2SC1815-Y
QR37	A6534040	Transistor, 2SA1015-Y
QR38	A6317440	Transistor, 2SC1815-Y
QR39	A6534040	Transistor, 2SA1015-Y
QR40	A6317440	Transistor, 2SC1815-Y
QR41	A6534040	Transistor, 2SA1015-Y

Location No.	Part No.	Description
QS01	A6359870	Transistor, 2SC3326-B
QS02	A6359870	Transistor, 2SC3326-B
QS03	A6335470	Transistor, 2SC2712-Y
QS04	A6335470	Transistor, 2SC2712-Y
QS05	A6359870	Transistor, 2SC3326-B
QS06	A6359870	Transistor, 2SC3326-B
QS07	A6014040	Transistor, RN2404
QS08	A6359870	Transistor, 2SC3326-B
QS09	A6359870	Transistor, 2SC3326-B
QS11	A6359870	Transistor, 2SC3326-B
QS12	A6014040	Transistor, RN2404
QV01	B0385650	IC, TA1218N
QV02	A6335470	Transistor, 2SC2712-Y
QV06	A6541130	Transistor, 2SA1162-Y
QV07	A6359870	Transistor, 2SC3326-B
QV08	A6335470	Transistor, 2SC2712-Y
QV09	23114528	Transistor, 2SC1740S, Q
QV10	A6335470	Transistor, 2SC2712-Y
QV11	A6335470	Transistor, 2SC2712-Y
QV12	23114528	Transistor, 2SC1740S, Q
QV14	23114528	Transistor, 2SC1740S, Q
QV15	A6359870	Transistor, 2SC3326-B
QV800	A6317440	Transistor, 2SC1815-Y
QW01	B0410841	IC, TC90A18AF(BH
QW02	23905013	IC, TLC29321PW
QW03	A6030640	IC, TC7S32F
QW04	A6030620	IC, TC7S04F
QW05	A6030640	IC, TC7S32F
QW06	A6030107	IC, TC7S14F
QW06	A6317440	Transistor, 2SC1815-Y
QW07	A6030685	IC, TC7S86F
QW07	A6734590	Transistor, 2SC752(G)TM-Y
QW08	B0485997	IC, TC74HC74AF
QW09	A6317440	Transistor, 2SC1815-Y
QW10	23314204	Transistor, 2SC2412K, Q
QW10	A6534040	Transistor, 2SA1015-Y
QW11	23314204	Transistor, 2SC2412K, Q
QW12	23314204	Transistor, 2SC2412K, Q
QW13	23314204	Transistor, 2SC2412K, Q
QW14	23314204	Transistor, 2SC2412K, Q
QW15	23314204	Transistor, 2SC2412K, Q
QW18	23314204	Transistor, 2SC2412K, Q
QW19	A6317440	Transistor, 2SC1815-Y
QW20	23314204	Transistor, 2SC2412K, Q
QW20	A6317440	Transistor, 2SC1815-Y
QW21	23314202	Transistor, 2SA1037K, Q
QW22	23314204	Transistor, 2SC2412K, Q
QW23	23314202	Transistor, 2SA1037K, Q
QW24	23314204	Transistor, 2SC2412K, Q
QW25	23314202	Transistor, 2SA1037K, Q
QW30	A6335470	Transistor, 2SC2712-Y
QW31	23906295	IC, μPC29M33HB
QW32	A6361770	Transistor, 2SC3437-Y
QW40	23314202	Transistor, 2SA1037K, Q
QW41	23314202	Transistor, 2SA1037K, Q
QW42	23314202	Transistor, 2SA1037K, Q
QW43	23314202	Transistor, 2SA1037K, Q
QW51	23314701	Transistor, 2SB1186A, E
QW52	23314705	Transistor, 2SD1763A, VE
QZ01	B0410895	IC, TC90A49P
QZ02	A6335470	Transistor, 2SC2712-Y
QZ03	A6541130	Transistor, 2SA1162-Y
QZ04	A6541130	Transistor, 2SA1162-Y
QZ05	A6541130	Transistor, 2SA1162-Y

Location No.	Part No.	Description
QZ06	A6541130	Transistor, 2SA1162-Y
QZ07	A6541130	Transistor, 2SA1162-Y
QZ08	A6335470	Transistor, 2SC2712-Y
D101	23316756	Diode, Zener, MTZJ33D
D201	23118041	Diode, MA111-(TX)
D301	23118479	Diode, BYD33J
D302	23118479	Diode, BYD33J
D303	23115599	Diode, 1N4148
D308	23118822	Diode, ERB12-02
D309	23118822	Diode, ERB12-02
D312	23115599	Diode, 1N4148
D316	23115599	Diode, 1N4148
D317	23115599	Diode, 1N4148
D331	23115599	Diode, 1N4148
D332	23316794	Diode, SC570ALFE2
D342	23115599	Diode, 1N4148
D351	23115599	Diode, 1N4148
D352	23115599	Diode, 1N4148
D353	23316672	Diode, Zener, MTZJ5.6B
D354	23115599	Diode, 1N4148
D360	23316677	Diode, Zener, MTZJ6.8A
D370	23316672	Diode, Zener, MTZJ5.6B
D371	23115599	Diode, 1N4148
D372	23118479	Diode, BYD33J
D401	23316687	Diode, Zener, MTZJ9.1B
D406	A7978850	Diode, S5295G
D408	23118338	Diode, RU-4AM LF-L1
D421	23118041	Diode, MA111-(TX)
D427	23316680	Diode, Zener, MTZJ7.5A
D428	23316751	Diode, Zener, MTZJ30C
D429	23316725	Diode, Zener, MTZJ15B
D430	23316568	Diode, Zener, MA8051-M, TX
D431	23316558	Diode, HSM2836C, TL
D432	23316568	Diode, Zener, MA8051-M, TX
D441	23316688	Diode, Zener, MTZJ9.1C
D443	23118338	Diode, RU-4AM LF-L1
D444	23118338	Diode, RU-4AM LF-L1
D448	23118479	Diode, BYD33J
D460	A7568480	Diode, TVR1G
D461	23316582	Diode, ERC20-06
D461C	23960136	Adhesive, TSE3843-W
D462	23115599	Diode, 1N4148
D463	23115599	Diode, 1N4148
D464	23316718	Diode, Zener, MTZJ12A
D465	23316718	Diode, Zener, MTZJ12A
D467	23118479	Diode, BYD33J
D470	23115599	Diode, 1N4148
D471	A7568460	Diode, TVR-1B
D474	23316719	Diode, Zener, MTZJ12B
D481	23316726	Diode, Zener, MTZJ15C
D482	23118479	Diode, BYD33J
D483	23316720	Diode, Zener, MTZJ12C
D484	23316668	Diode, Zener, MTZJ5.1A
D486	23115599	Diode, 1N4148
D487	23118479	Diode, BYD33J
D488	23115599	Diode, 1N4148
D489	23316681	Diode, Zener, MTZJ7.5B
D503	23115599	Diode, 1N4148
D504	23115599	Diode, 1N4148
D506	23115599	Diode, 1N4148
D599	23316687	Diode, Zener, MTZJ9.1B
D601	23115599	Diode, 1N4148
D602	23115599	Diode, 1N4148
D603	23115599	Diode, 1N4148

Location No.	Part No.	Description
D604	23115599	Diode, 1N4148
D611	23115599	Diode, 1N4148
D612	23115599	Diode, 1N4148
D613	23115599	Diode, 1N4148
D614	23115599	Diode, 1N4148
D615	23115599	Diode, 1N4148
D635	23115599	Diode, 1N4148
D671	23316739	Diode, Zener, MTZJ22C
D701	23118859	Diode, 1SS133
D702	23118859	Diode, 1SS133
D703	23118859	Diode, 1SS133
D704	23115599	Diode, 1N4148
D704	23118859	Diode, 1SS133
D705	23115599	Diode, 1N4148
D714	23115599	Diode, 1N4148
D715	23115599	Diode, 1N4148
D724	23115599	Diode, 1N4148
D725	23115599	Diode, 1N4148
D734	23115599	Diode, 1N4148
D735	23115599	Diode, 1N4148
D744	23115599	Diode, 1N4148
D745	23115599	Diode, 1N4148
D754	23115599	Diode, 1N4148
D755	23115599	Diode, 1N4148
D760	23115599	Diode, 1N4148
D761	23316666	Diode, Zener, MTZJ4.7B
D762	23316675	Diode, Zener, MTZJ6.2B
D763	23115599	Diode, 1N4148
D764	23115599	Diode, 1N4148
D767	23115599	Diode, 1N4148
D768	23316675	Diode, Zener, MTZJ6.2B
D769	23316675	Diode, Zener, MTZJ6.2B
D798	23115599	Diode, 1N4148
D799	23115599	Diode, 1N4148
D801	23316962	Diode, S1WBA20 4101
D802	23357041	Diode, LN6SB60-F05
D802B	72471082	Screw, BRDT2W3X10 SZN
D803	23316718	Diode, Zener, MTZJ12A
D804	23316718	Diode, Zener, MTZJ12A
D805	23316686	Diode, Zener, MTZJ9.1A
D806	23316747	Diode, Zener, MTZJ27C
D809	23316753	Diode, Zener, MTZJ33A
D810	23316747	Diode, Zener, MTZJ27C
D811	23118057	Diode, AG01A
D812	23316688	Diode, Zener, MTZJ9.1C
D813	23118060	Diode, AL01Z
D814	23316672	Diode, Zener, MTZJ5.6B
D816	24000656	Varistor, TNR15G471K
D817	23115599	Diode, 1N4148
D818	23115599	Diode, 1N4148
D819	23115599	Diode, 1N4148
D820	23316671	Diode, Zener, MTZJ5.6A
D821	23316718	Diode, Zener, MTZJ12A
D822	23316662	Diode, Zener, MTZJ4.3A
D853	23316813	Diode, EG1
D854	23316813	Diode, EG1
D855	23357215	Diode, D4SBS6
D855B	70391355	Screw, BITTB3X8 SZN
D856	23357216	Diode, D4SBL20U
D856B	70391355	Screw, BITTB3X8 SZN
D857	23115532	Diode, ERB12-01E
D858	23115599	Diode, 1N4148
D859	23357214	Diode, D4SBS4
D859B	70391355	Screw, BITTB3X8 SZN

Location No.	Part No.	Description
D860	23357217	Diode, D4SBL40
D860B	70391355	Screw, BITTB3X8 SZN
D862	23115599	Diode, 1N4148
D863	23316553	Diode, 1SS145
D891	23115599	Diode, 1N4148
D892	23316745	Diode, Zener, MTZJ27A
D893	23316672	Diode, Zener, MTZJ5.6B
D901	23115599	Diode, 1N4148
D902	23115599	Diode, 1N4148
D903	23115599	Diode, 1N4148
D911	23115599	Diode, 1N4148
D912	23115599	Diode, 1N4148
D913	23115599	Diode, 1N4148
D914	23115599	Diode, 1N4148
D915	23115599	Diode, 1N4148
D921	23115599	Diode, 1N4148
D922	23115599	Diode, 1N4148
D924	23115599	Diode, 1N4148
D925	23115599	Diode, 1N4148
D926	23115599	Diode, 1N4148
D965	23115599	Diode, 1N4148
D966	23115599	Diode, 1N4148
D7701	23115599	Diode, 1N4148
D7702	23316766	Diode, RU2YX, LF-C1
D7703	23115599	Diode, 1N4148
D7705	23115599	Diode, 1N4148
D7706	23115599	Diode, 1N4148
D7707	23115599	Diode, 1N4148
D7708	23115599	Diode, 1N4148
D7709	23316675	Diode, Zener, MTZJ6.2B
D7710	23316716	Diode, Zener, MTZJ11B
D7711	23316716	Diode, Zener, MTZJ11B
D7717	23316675	Diode, Zener, MTZJ6.2B
D7718	23316675	Diode, Zener, MTZJ6.2B
D7719	23316675	Diode, Zener, MTZJ6.2B
D7720	23316675	Diode, Zener, MTZJ6.2B
D7721	23316675	Diode, Zener, MTZJ6.2B
D7722	23316675	Diode, Zener, MTZJ6.2B
D7725	23115599	Diode, 1N4148
D8301	23115532	Diode, ERB12-01E
D8303	23115532	Diode, ERB12-01E
DA01	23115599	Diode, 1N4148
DA43	23115599	Diode, 1N4148
DA44	23115599	Diode, 1N4148
DA45	23115599	Diode, 1N4148
DA46	23115599	Diode, 1N4148
DA420	23115599	Diode, 1N4148
DB01	23358564	Diode (LED), SLR-56VC3FPQ
DB02	23358563	Diode (LED), SLR-56MC3FPQ
DB03	23358563	Diode (LED), SLR-56MC3FPQ
DB04	23358562	Diode (LED), SLR-56DC3FPQ
DF01	23316654	Diode, Zener, MTZJ3.0A
DF02	23115599	Diode, 1N4148
DR01	23115599	Diode, 1N4148
DR02	23115599	Diode, 1N4148
DR02	23316557	Diode, HSM221C, TL
DR03	23115599	Diode, 1N4148
DR03	23118351	Diode, Zener, RD4.7M-T1BB2
DR61	23115599	Diode, 1N4148
DR62	23115599	Diode, 1N4148
DR63	23115599	Diode, 1N4148
DR65	23115599	Diode, 1N4148
DV01	23118296	Diode, Zener, RD9.1M-T1BB2
DV02	23118296	Diode, Zener, RD9.1M-T1BB2

Location No.	Part No.	Description
DV03	23118296	Diode, Zener, RD9.1M-T1BB2
DV04	23118296	Diode, Zener, RD9.1M-T1BB2
DV05	23118296	Diode, Zener, RD9.1M-T1BB2
DV06	23118296	Diode, Zener, RD9.1M-T1BB2
DV07	23118296	Diode, Zener, RD9.1M-T1BB2
DV10	23316557	Diode, HSM221C, TL
DV11	23316557	Diode, HSM221C, TL
DV12	23118296	Diode, Zener, RD9.1M-T1BB2
DV14	23118296	Diode, Zener, RD9.1M-T1BB2
DV21	23316557	Diode, HSM221C, TL
DW04	23115599	Diode, 1N4148
DW05	23115599	Diode, 1N4148
DW21	23115599	Diode, 1N4148

MISCELLANEOUS

B224	23035412	Screw, BTB 4X12 SZN
B230	23037312	Screw, BTBW 3X12 SZN
B241	23035412	Screw, BTB 4X12 SZN
B330	23037312	Screw, BTBW 3X12 SZN
BB11A	23903022	Socket, 8P
BB11B	23903022	Socket, 8P
BB11C	23368627	Plug, 8P
BB12A	23903022	Socket, 8P
BB12B	23903022	Socket, 8P
BB12C	23368627	Plug, 8P
BB21A	23903022	Socket, 8P
BB21B	23903022	Socket, 8P
BB21C	23368627	Plug, 8P
BB22A	23903022	Socket, 8P
BB22B	23903022	Socket, 8P
BB22C	23368627	Plug, 8P
E921	23964147	Coolant EG/G TCP
E951	23964147	Coolant EG/G TCP
E981	23964147	Coolant EG/G TCP
⚠F801	23144507	Fuse, 3.15A, 250V
F801A	23165433	Holder, Fuse
F801B	23165433	Holder, Fuse
⚠F860	23144869	Fuse, 2.5A, 250V
F860A	23165433	Holder, Fuse
F860B	23165433	Holder, Fuse
⚠F870	23144867	Fuse, 4.0A, 250V
F870A	23165433	Holder, Fuse
F870B	23165433	Holder, Fuse
G005	23115599	Diode, 1N4148
G023	24327180	MF, 18 ohm, ±1%, 1/4W
G510	23289479	Coil, Peaking, TRF44R7AF
G527	24567104	PF, 0.1μF
G528	24567104	PF, 0.1μF
G529	24567104	PF, 0.1μF
G602	23238714	Coil, Peaking, TRF4100AJ
G603	23238714	Coil, Peaking, TRF4100AJ
GC06	23261959	Coil, Choke, TRF9240
GJ02	24000824	Chip Jumper, 2125Type
GJ03	24000824	Chip Jumper, 2125Type
GJ04	24000824	Chip Jumper, 2125Type
GJ05	24000824	Chip Jumper, 2125Type
GJ06	24000824	Chip Jumper, 2125Type
GJ08	24000824	Chip Jumper, 2125Type
GJ08	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ26	24000824	Chip Jumper, 2125Type
GJ27	24000824	Chip Jumper, 2125Type
GJ28	24000824	Chip Jumper, 2125Type
GJ61	24000824	Chip Jumper, 2125Type
GJ62	24000824	Chip Jumper, 2125Type
GJ78	24000824	Chip Jumper, 2125Type
GJ79	24000824	Chip Jumper, 2125Type
GJ80	24000824	Chip Jumper, 2125Type
GJ81	24000824	Chip Jumper, 2125Type
GS01	24000824	Chip Jumper, 2125Type
GV05	23103832	Chip (Ferrite Bead), TEM2125M
GV07	24000824	Chip Jumper, 2125Type
GV08	24000824	Chip Jumper, 2125Type
GV11	24000824	Chip Jumper, 2125Type
GV13	24872681	Chip, 680 ohm, 1/16W
GV14	24000824	Chip Jumper, 2125Type
GV15	24000824	Chip Jumper, 2125Type
GV17	24000824	Chip Jumper, 2125Type
GV38	24000824	Chip Jumper, 2125Type
GV39	24000824	Chip Jumper, 2125Type
GV40	24000824	Chip Jumper, 2125Type
GV41	24872102	Chip, 1k ohm, 1/16W
GV97	24872101	Chip, 100 ohm, 1/16W
H002	23148745	Module, MPSN11C, NICAM/IGR A-PRO A
KB01	23904946	Remote Sensor, RPM-676CBR-S
P507	23902655	Socket, B-B, 15P
P661	23365444	Jack, Earphone
P701	23368520	Plug, B-B, 20P
P702	23368520	Plug, B-B, 20P
P708	23902863	Socket, 20P
P709	23902863	Socket, 20P
P713	23164787	Plug, 7P
P714	23164787	Plug, 7P
P715	23164787	Plug, 7P
P720	23164786	Plug, 6P
⚠P801	23372052	Power Cord 40PW13G
⚠P801	23372012	Power Cord 40PW13B
PF01A	23367724	Plug, B-B,15P
PH01	23902604	Socket, 21P
PH02	23902604	Socket, 21P
PH03	23902604	Socket, 21P
PU01	23368634	Plug, 25P
PU01A	23903025	Socket, 25P
PU02	23368634	Plug, 25P
PU02A	23903025	Socket, 25P
PV10A	23902863	Socket, 20P
PV10B	23368520	Plug, B-B, 20P
PV11A	23902863	Socket, 20P
PV11B	23368520	Plug, B-B, 20P
PW01	23368130	Plug, 10P
PW02	23368130	Plug, 10P
PW06	23902213	Socket, B-B, 10P
PW07	23902213	Socket, B-B, 10P
S602	23145412	Switch, Slide, 2C2P
S801	23145434	Switch, Power, 2C2P
SA01	23145226	Switch, Push, 1C1P
SA02	23145226	Switch, Push, 1C1P
SA03	23145226	Switch, Push, 1C1P
SA04	23145226	Switch, Push, 1C1P
SA06	23145226	Switch, Push, 1C1P
SA07	23145226	Switch, Push, 1C1P
SR80	23146574	Relay, DLS5D1-O(M) 0.15W
⚠SR81	23146572	Relay, DC5V, DG5D1-O(M)-2

Location No.	Part No.	Description
⚠V901A	23903148	Socket, CRT
⚠V902A	23902019	Socket, CRT, 9P
⚠V903A	23902019	Socket, CRT, 9P
W661	23351131	Speaker, SPK-1390, 120X120mm, 16 ohm
W662	23351131	Speaker, SPK-1390, 120X120mm, 16 ohm
X401	23153721	Ceramic Resonator, 503kHz, TCR1023
X501	23153961	Crystal, 3.58MHz
X503	23153979	Crystal, 4.43MHz
XA01	23153497	Crystal, 16.0 MHz
XF01	23153421	Crystal, 20.48MHz
XQ01	23153969	Crystal, 4.00MHz
XV01	23107519	Ceramic Video Trap, 4.43MHz, TCF1066
Z410	23110842	Focus Pack, TPA6031
Z410A	23505177	Focus Cable
⚠Z450	24082996	CR Block, TPA5007BH
Z450A	23504953	Anode Cable
Z470	23110845	Focus Pack, TPA6032BH
Z702	23103823	Coil, TEM2027D
Z703	23103823	Coil, TEM2027D
Z704	23103823	Coil, TEM2027D
Z705	23103823	Coil, TEM2027D
Z706	23103823	Coil, TEM2027D
Z707	23103823	Coil, TEM2027D
Z711	23103823	Coil, TEM2027D
Z712	23103823	Coil, TEM2027D
⚠Z801	23905010	IC, HIC1019
⚠Z853	23144608	Protector, PRF40005PRT, DC60V, 4.0A
⚠Z854	23144608	Protector, PRF40005PRT, DC60V, 4.0A
⚠Z856	23144605	Protector, PRF20005PRT, DC60V, 2.0A

PC BOARD ASSEMBLIES

＊U901A	23784697	CRT-D R Board, PB8764D-1 (40PW03B)
＊U901B	23784698	CRT-D G Board, PB8764D-2 (40PW03B)
＊U901C	23784699	CRT-D B Board, PB8764D-3 (40PW03B)
＊U901D	23784701	SVM Board, PB8764D-4 (40PW03B)
＊U902A	23784622	Signal Board, PB9402A (40PW03G)
＊U902A	23784700	Signal Board, PB9402A (40PW03B)
＊U903	23784625	ED-WAC Board, PB8892B
＊U904	23784623	DEF Board, PB9403A
＊U905	23784626	VCD Board, PB8768G
＊U906A	23784631	TEXT Board, PB9411A
＊U907	23784628	D-CONVER Board, PB9405A
＊U908	23784624	Power Board, PB9404A
＊U909	23785664	Conver Board, PB9836A
＊U910	23784627	BACK-T Board, PB8774C
＊U911A	23784629	FRONT Board, PB9406A-1
＊U911B	23784630	RMT Board, PB9406A-3
＊U911C	23784643	LED Board, PB9406A-2

Location No.	Part No.	Description
PICTURE TUBE		
⚠V901R	23004868	Protector Coupling R
⚠V902G	23004869	Protector Coupling G
⚠V903B	23004870	Protector Coupling B
⚠V911R	23588477	Projection Tube CRT R
⚠V912B	23588479	Projection Tube CRT B
⚠V912G	23588478	Projection Tube CRT G
TUNER		
H001	23321344	Tuner, EGA22LWX1
ACCESSORIES		
K902	23306366	Remote Hand Unit, CT-90043
AT03	23588265	Battery Cover
Y101E	23565210	Owner's Manual, English, 40PW13G
Y101E	23565195	Owner's Manual, English, 40PW13B
Y101F	23565211	Owner's Manual, French, 40PW13G
Y101G	23565212	Owner's Manual, German, 40PW13G
Y101I	23565213	Owner's Manual, Itarian, 40PW13G
Y101P	23565215	Owner's Manual, Portuguese, 40PW13G
Y101S	23565214	Owner's Manual, Spanish, 40PW13G

CABINET PARTS

A101	23411327	Light Box
A102	23527078	Speaker Grille R
A103	23527079	Speaker Grille L
A125	23560038	Label
A201	23540506	Bezel
A202	23450349	Control Panel
A213	23427945	Door
A214	70368125	Push Catch for Door
A223	23445478	Button, Power
A268	23450351	Front Panel
⚠A420	23540150	Back Cover
A421	23411197	Cabinet, Rear Plate
A424	23411329	Back Board
A501	23035412	Screw, BTB4X12SZN
A505	72471068	Screw, BIDT2 4X12BZ
A508	72471068	Screw, BIDT2 4X12BZ
A529	23037312	Screw, BTBW3X12SZN
A543	72471068	Screw, BIDT2 4X12BZ
A547	23035010	Screw, PBI 4X16
A701	23525571	Case
A703	23935998	Packing, Top
A710	23935999	Packing, Bottom
A726	23974753	Polypropylene Band
A727	23974753	Polypropylene Band
K101	23430512	Delta, DELTA67-A/B
K102	23430512	Delta, DELTA67-A/B
K103	23430512	Delta, DELTA67-A/B
K501	23430821	Lenti Sheet, SCREEN40KK-L
K502	23430790	Fresnel Sheet, SCREEN40KKUF
K601	23430752	Millor, MIRROR40KEB

PC BOARDS TOP VIEW

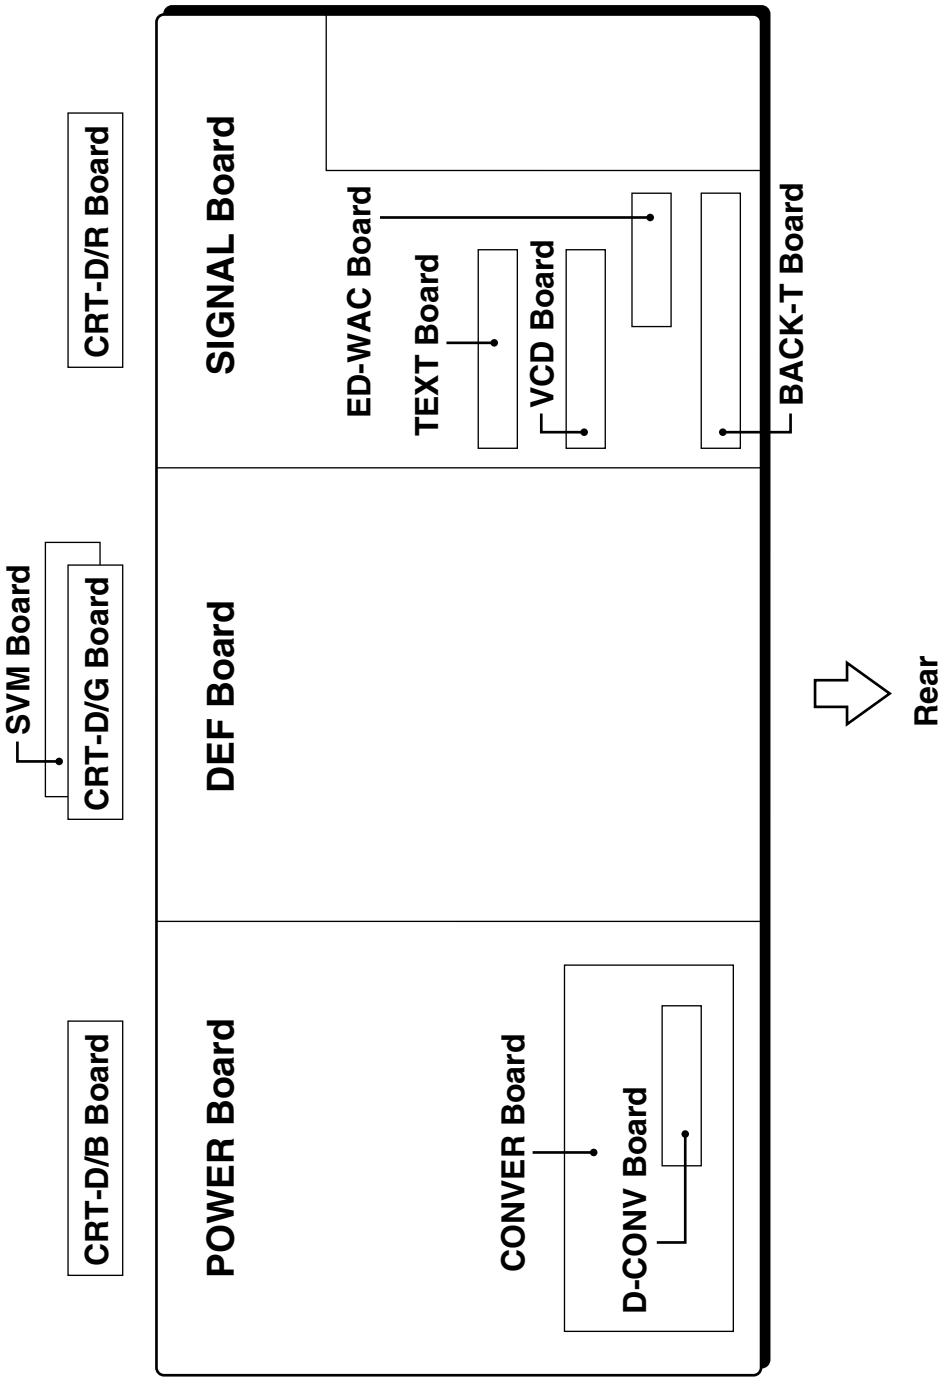

SIGNAL BOARD PB9402

BOTTOM (FOIL) SIDE

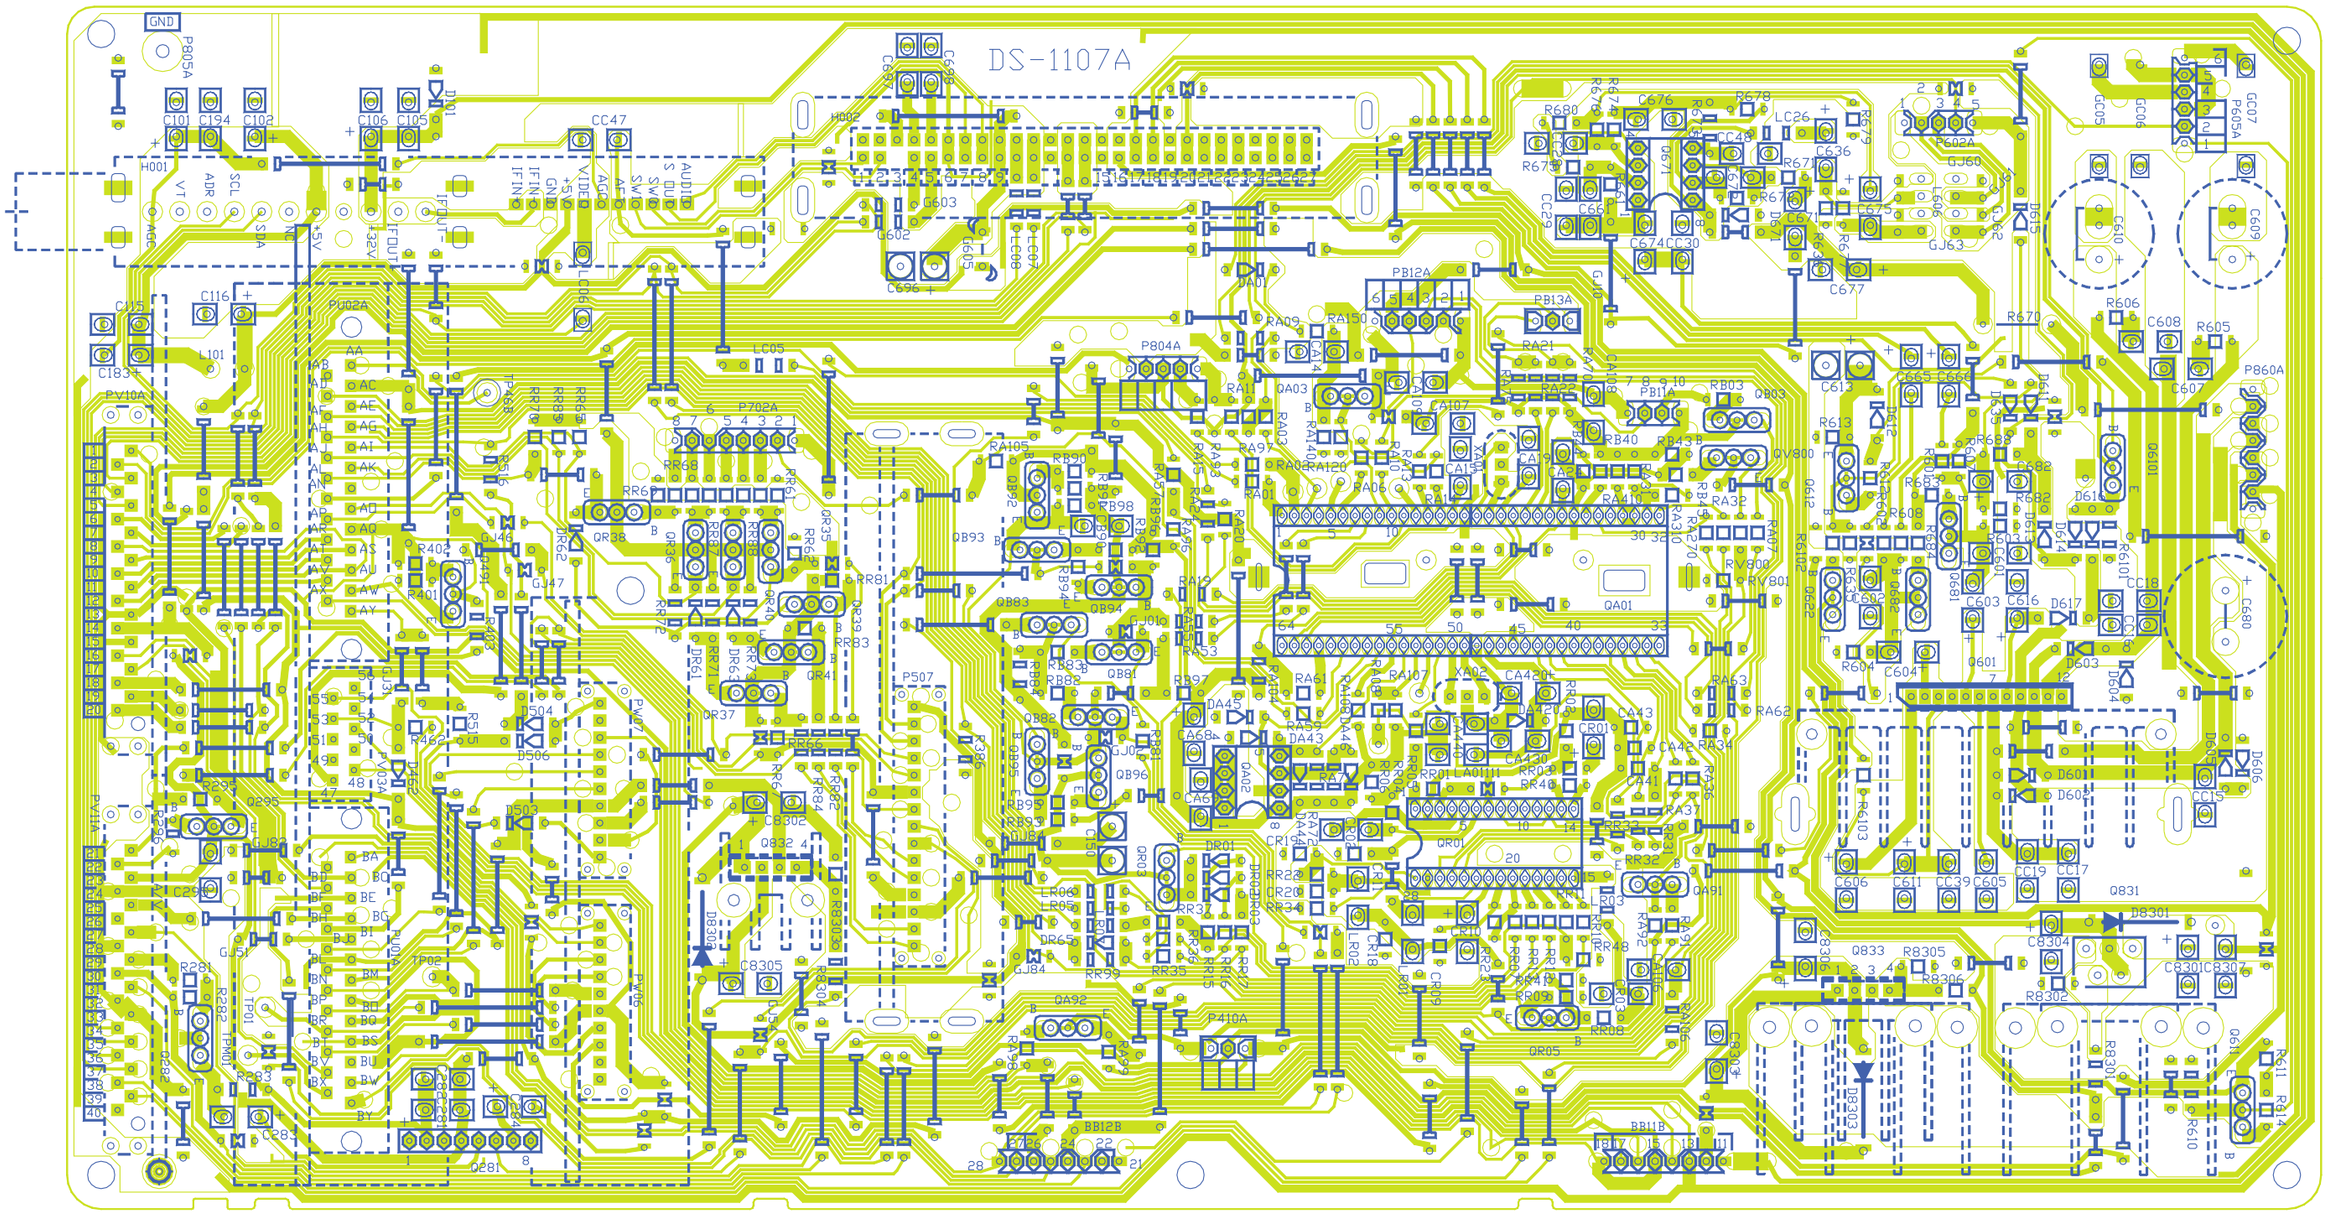

DEF BOARD PB9403A

BOTTOM (FOIL) SIDE

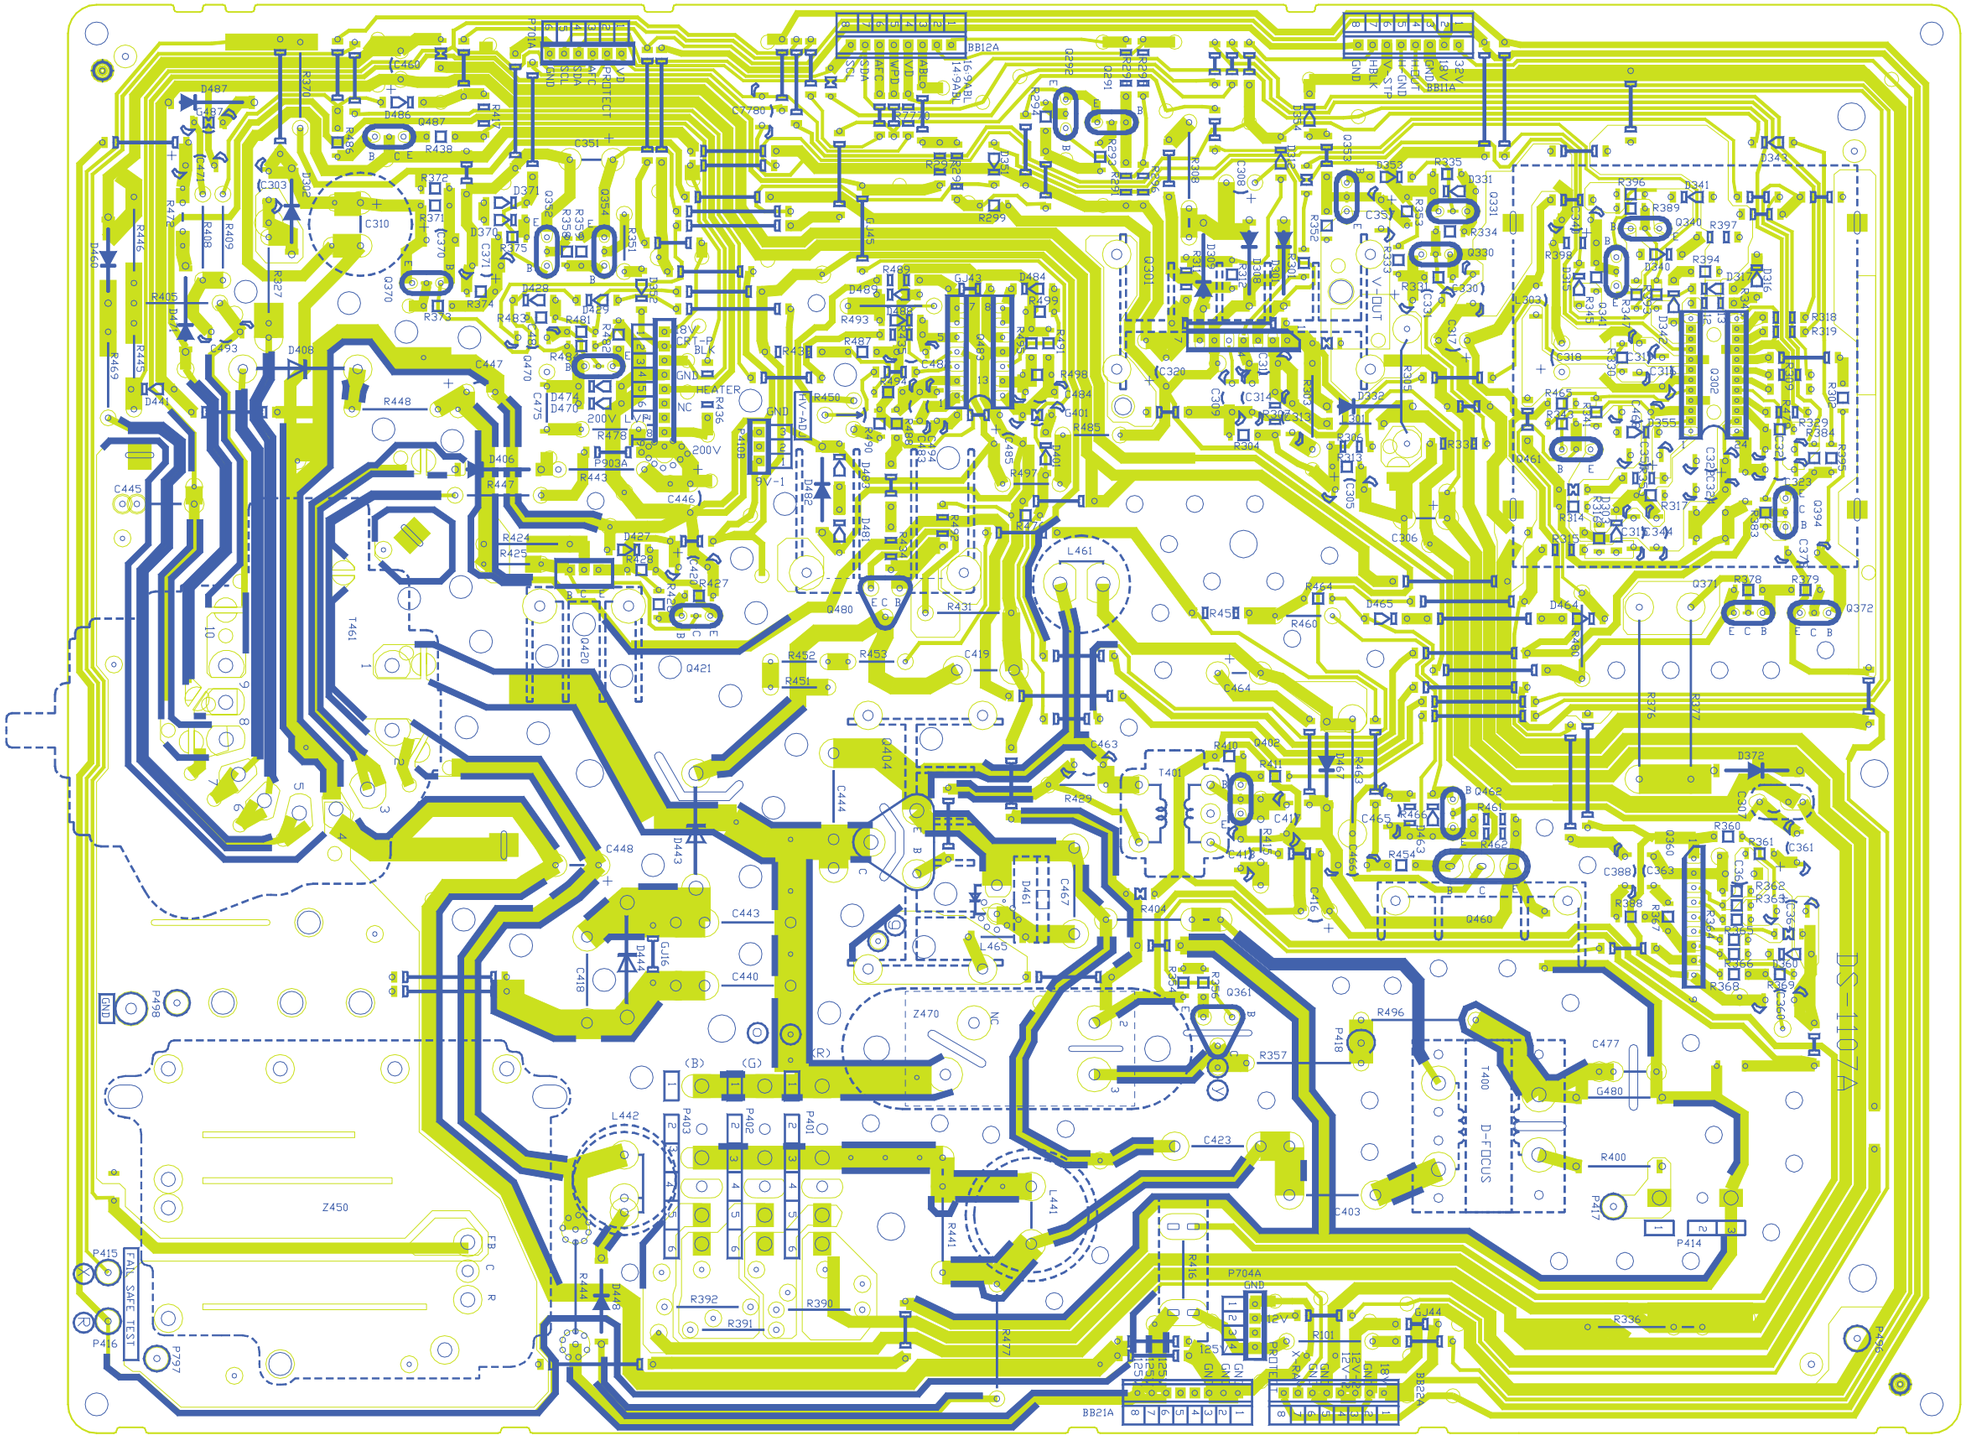

POWER BOARD PB9404A

BOTTOM (FOIL) SIDE

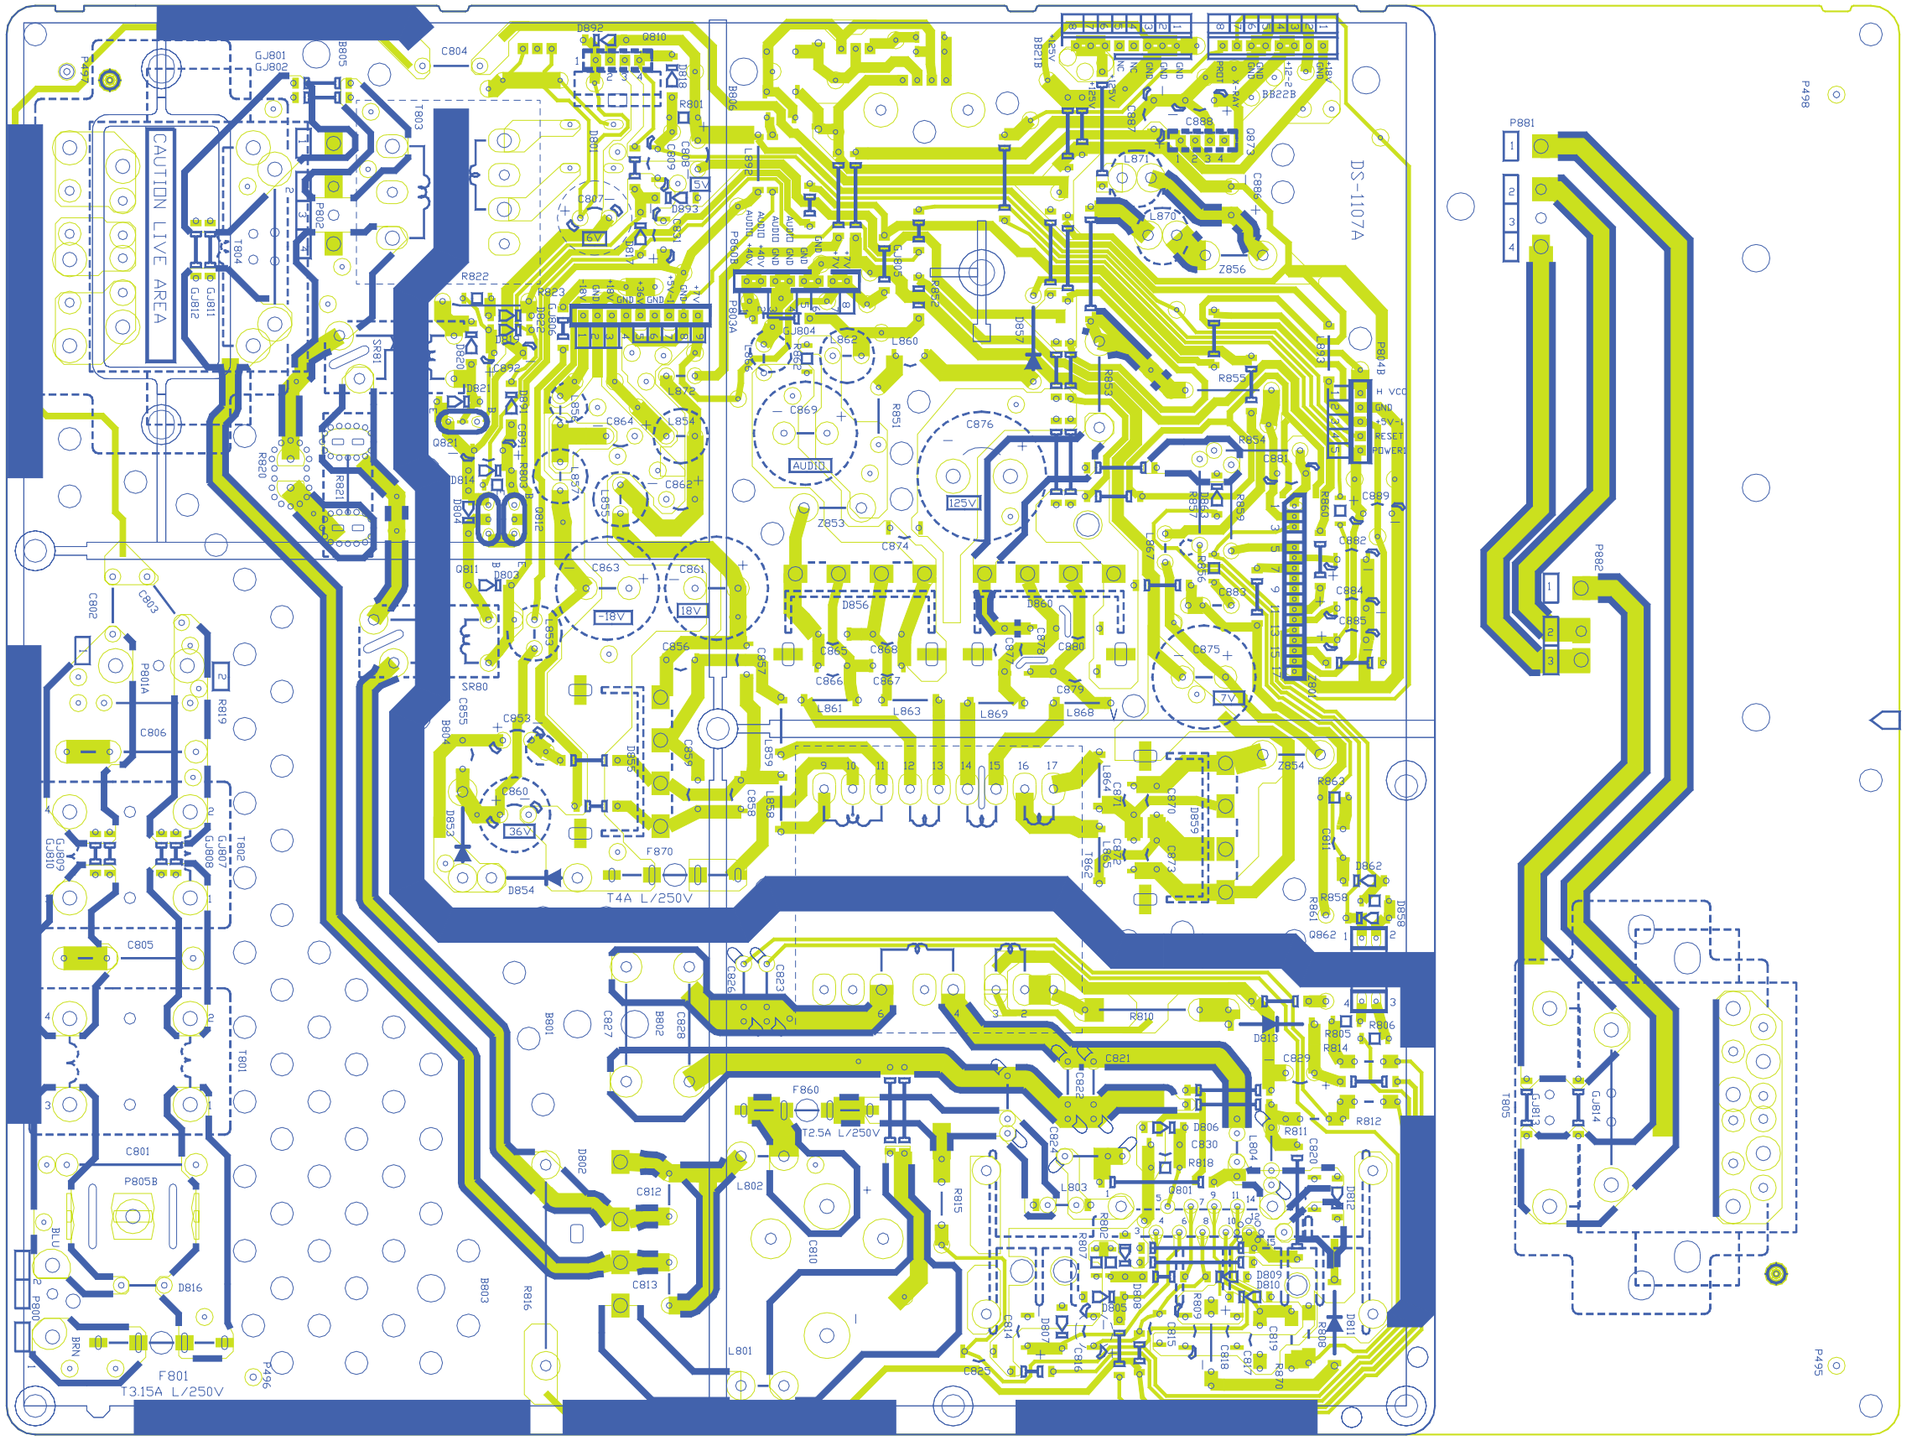

BACK/T BOARD PB8774C

BOTTOM (FOIL) SIDE

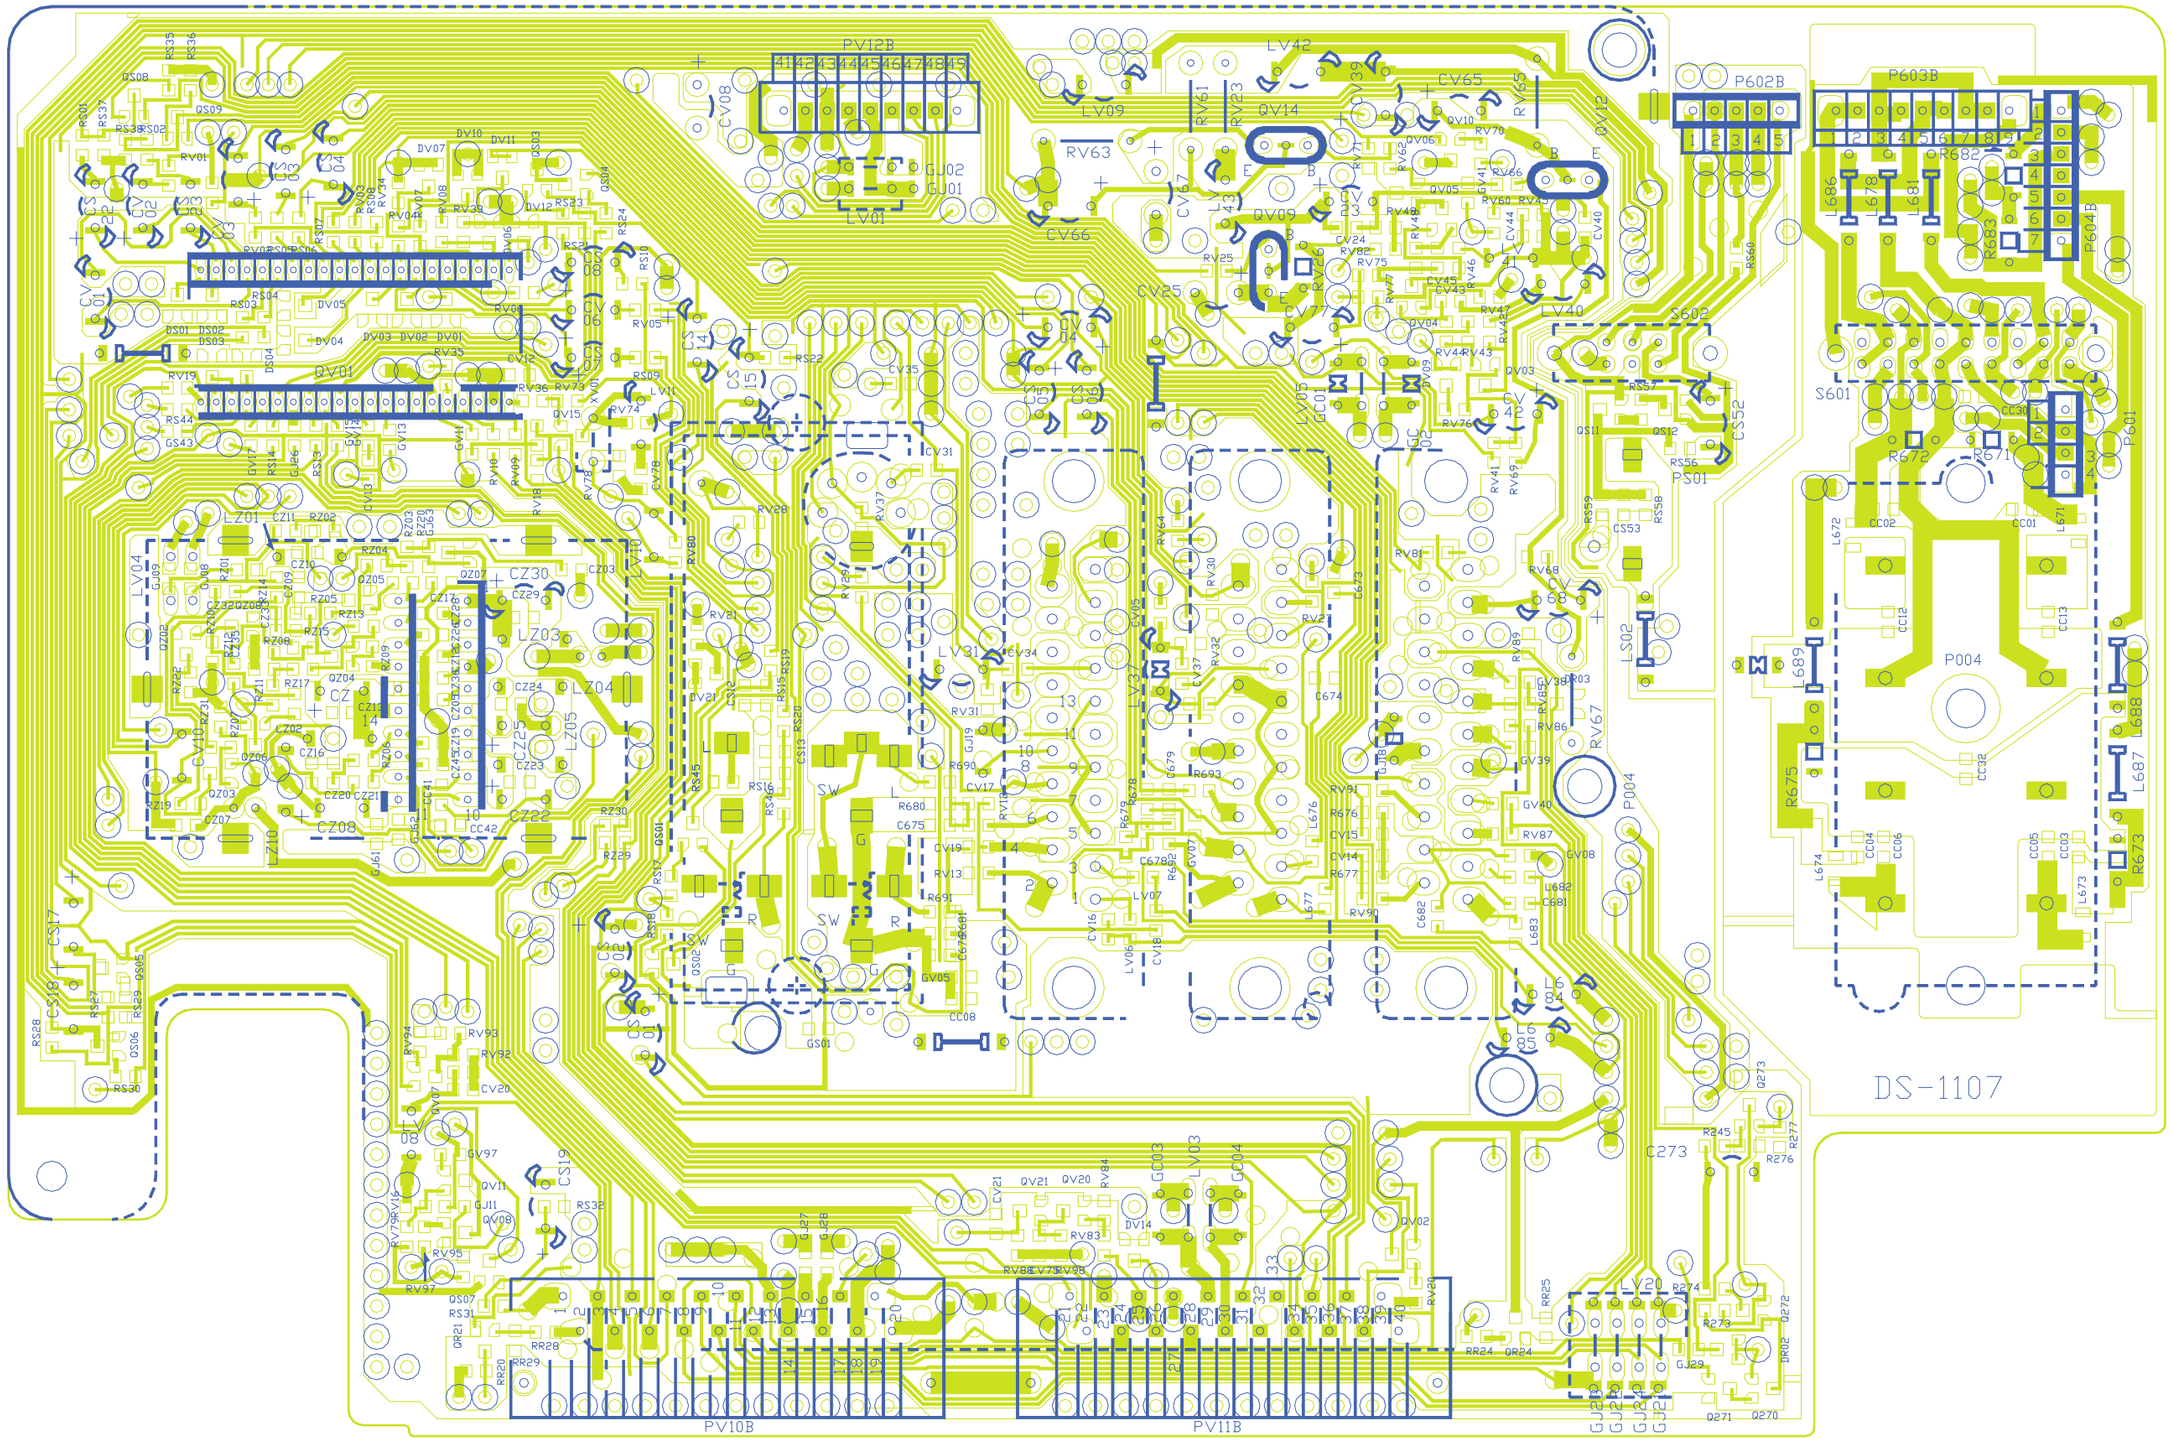

R-DRIVE BOARD PB8764D-1

BOTTOM (FOIL) SIDE

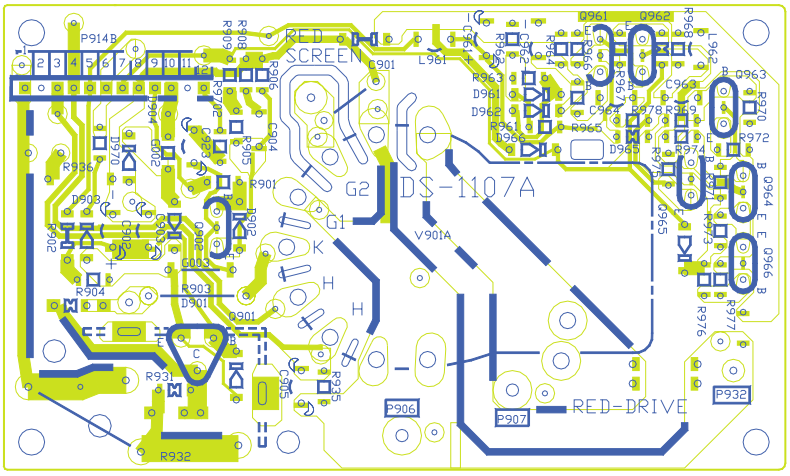

G-DRIVE BOARD PB8764D-2

BOTTOM (FOIL) SIDE

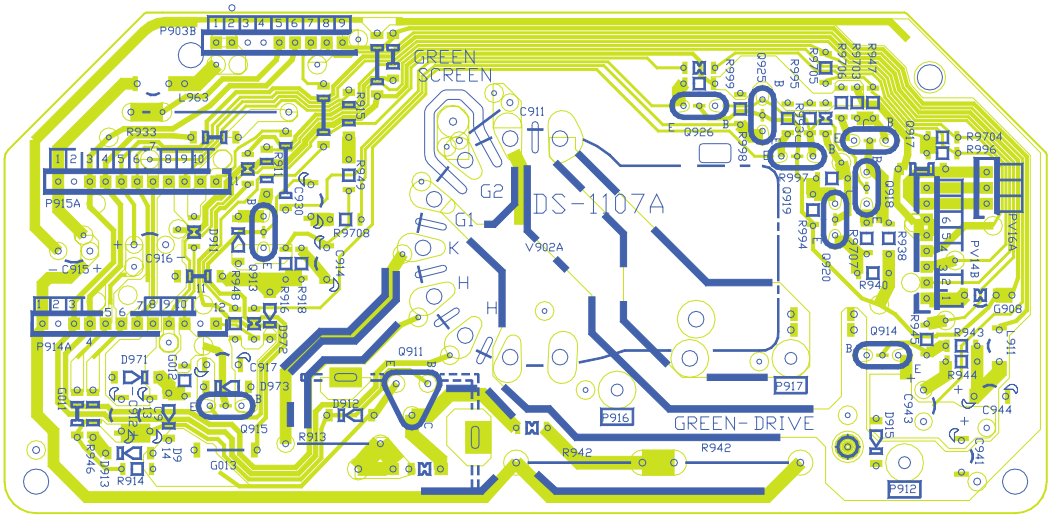

B-DRIVE BOARD PB8764D-3

BOTTOM (FOIL) SIDE

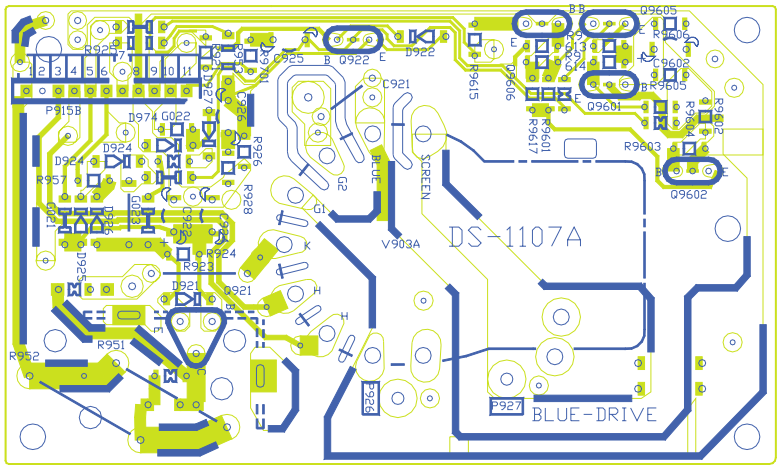

CRT/D-BLU BOARD PB9586ZA-3

BOTTOM (FOIL) SIDE

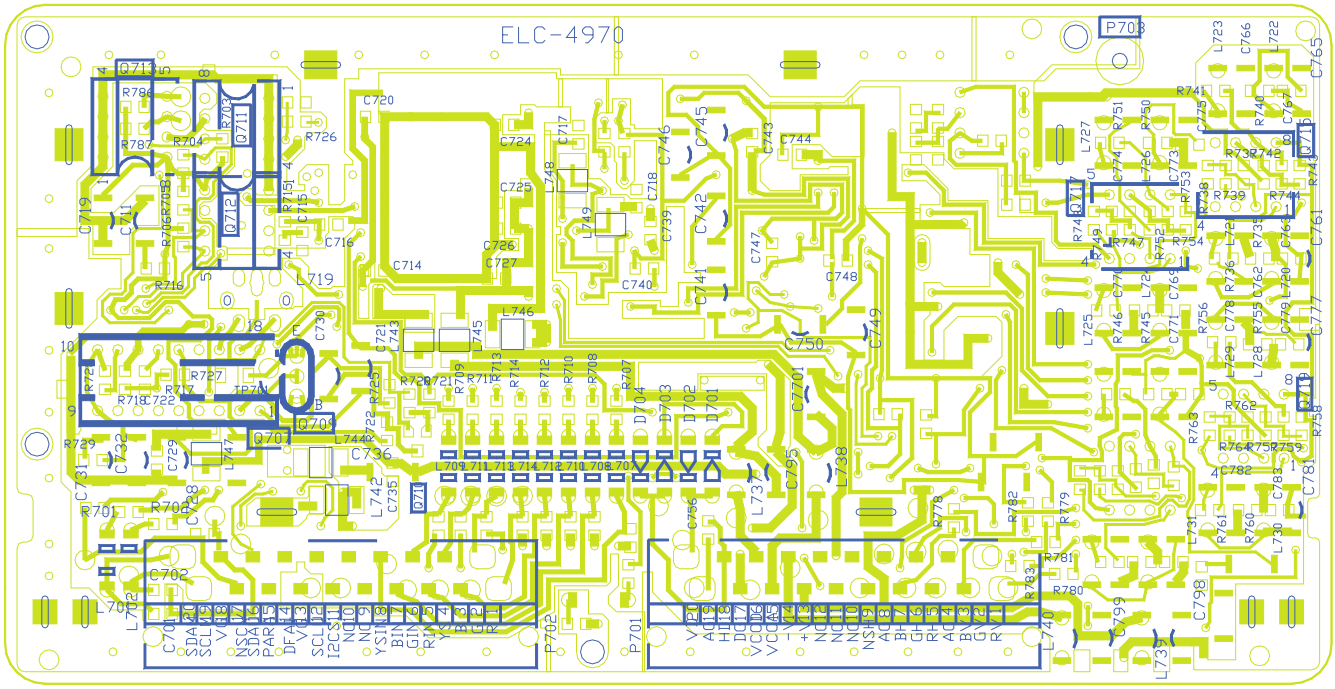

ED WACK BOARD PB8892B

BOTTOM (FOIL) SIDE

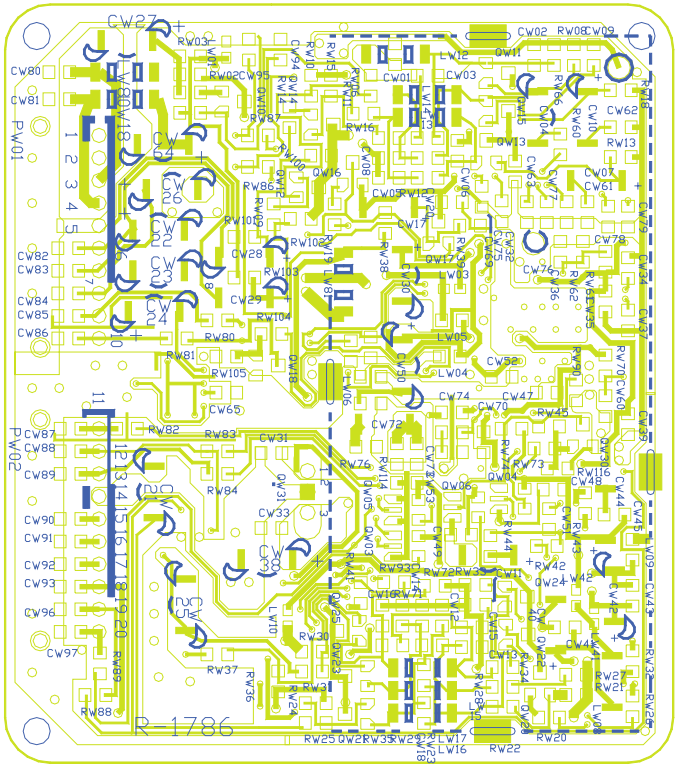

SVM BOARD PB8764D-4

BOTTOM (FOIL) SIDE

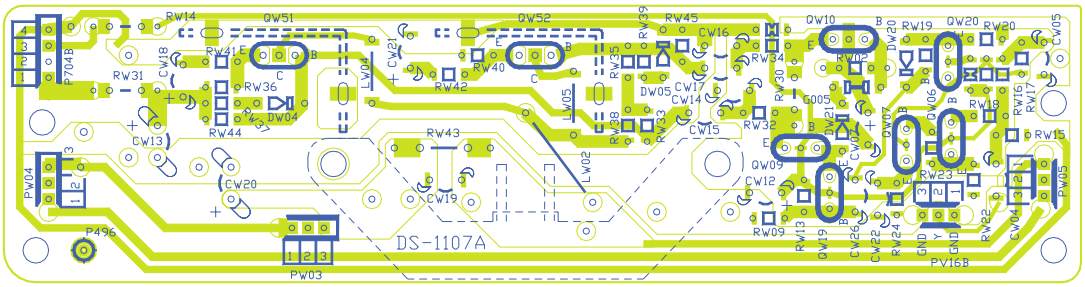

FRONT BOARD PB9406A-1

BOTTOM (FOIL) SIDE

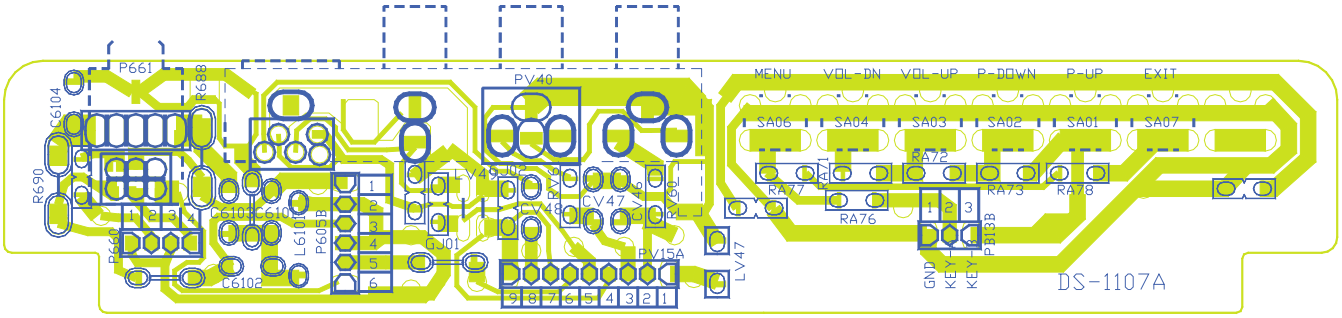

FRONT BOARD PB9406A-1

BOTTOM (FOIL) SIDE

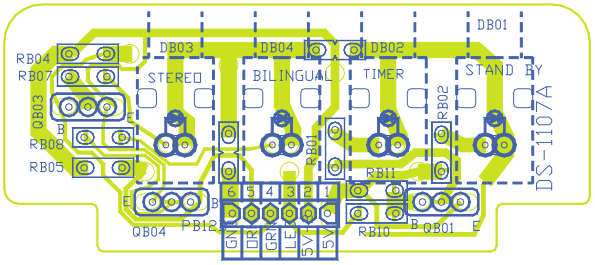

FRONT BOARD PB9406A-1

BOTTOM (FOIL) SIDE

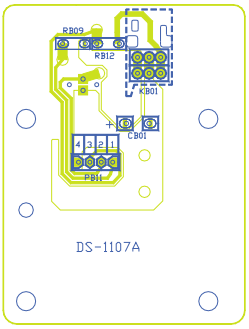

TEXT BOARD PB9411A

BOTTOM (FOIL) SIDE

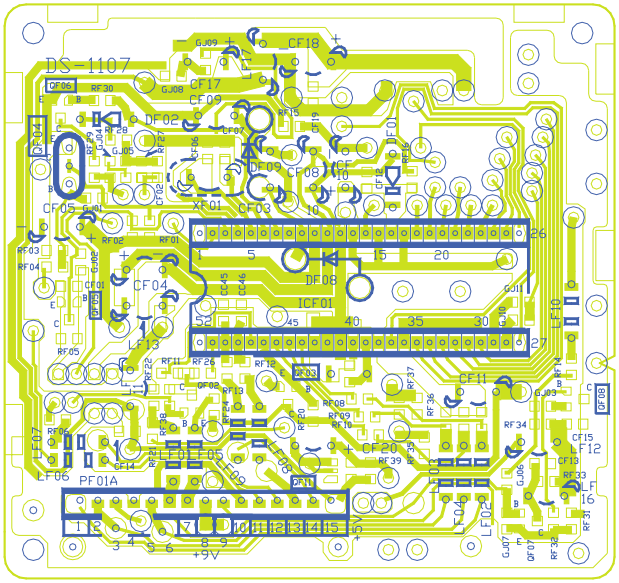

CONVER BOARD PB9836A

BOTTOM (FOIL) SIDE

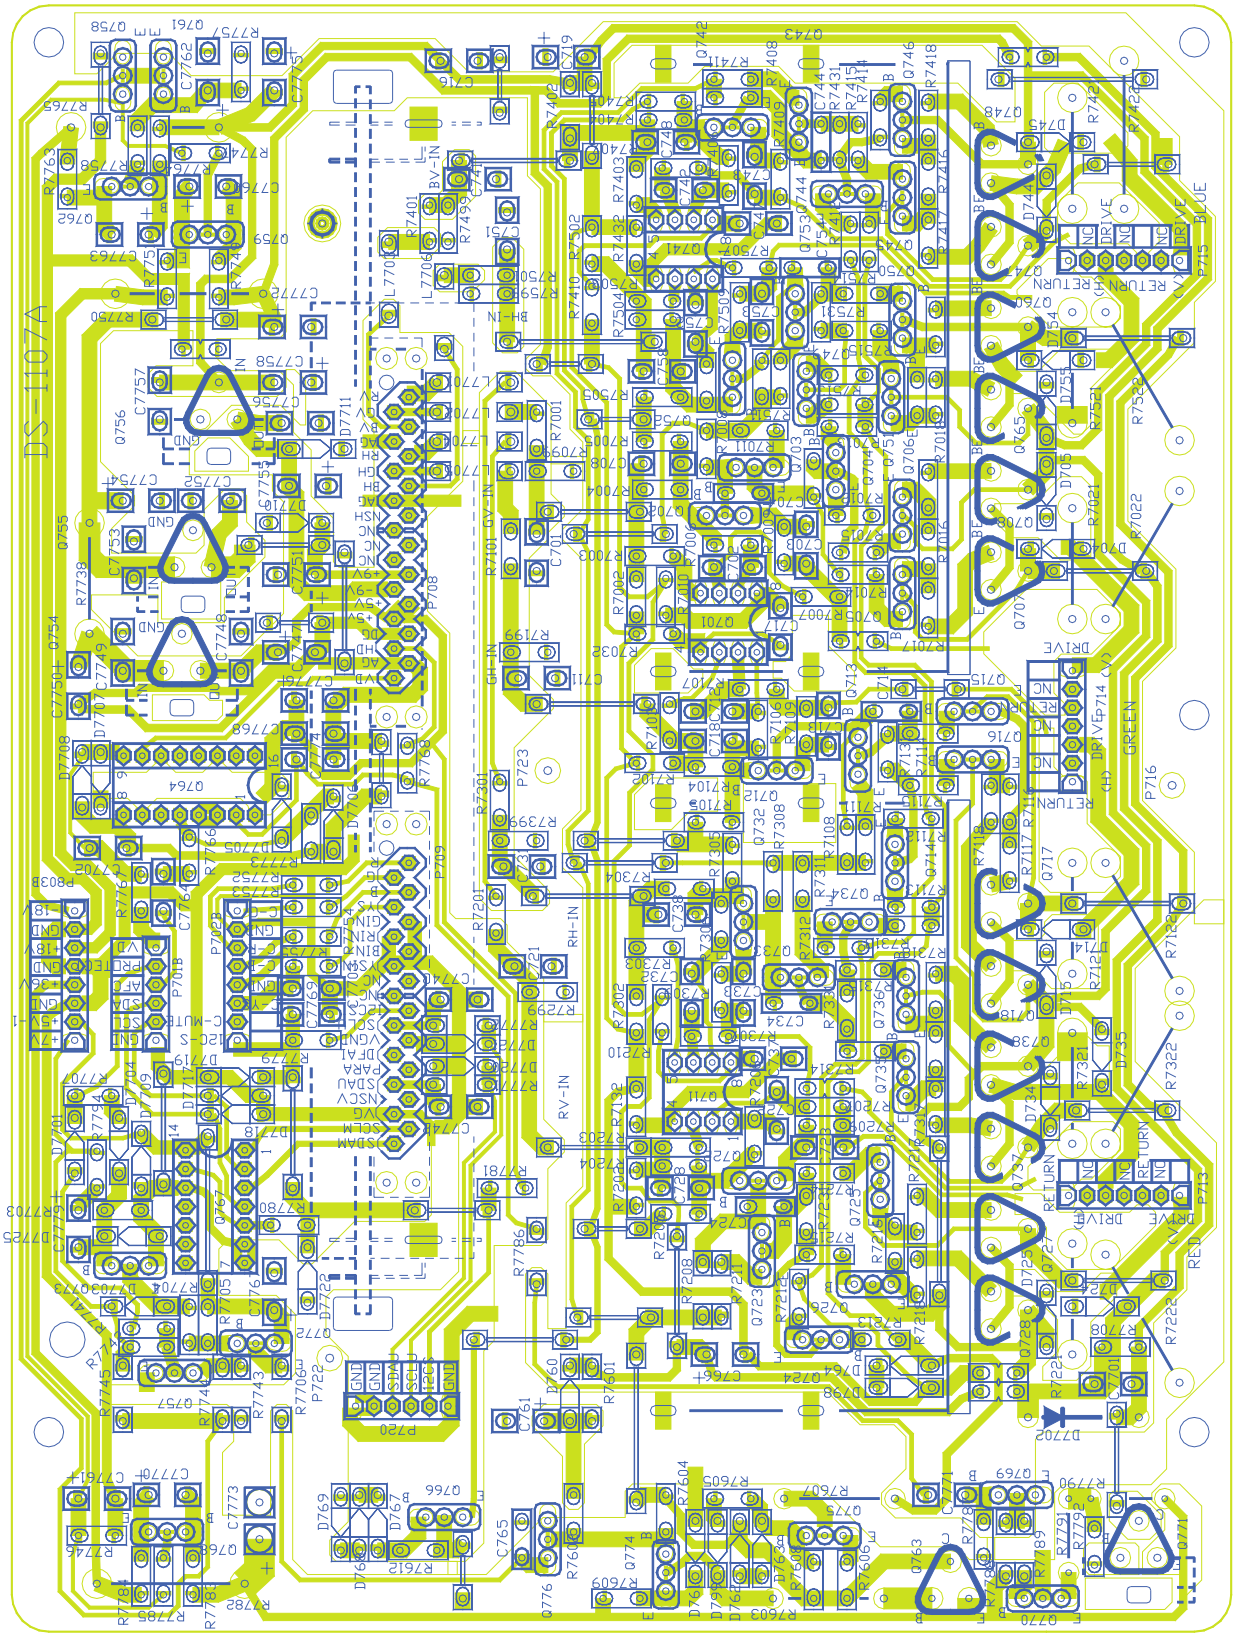

VCD BOARD PB8768G

BOTTOM (FOIL) SIDE

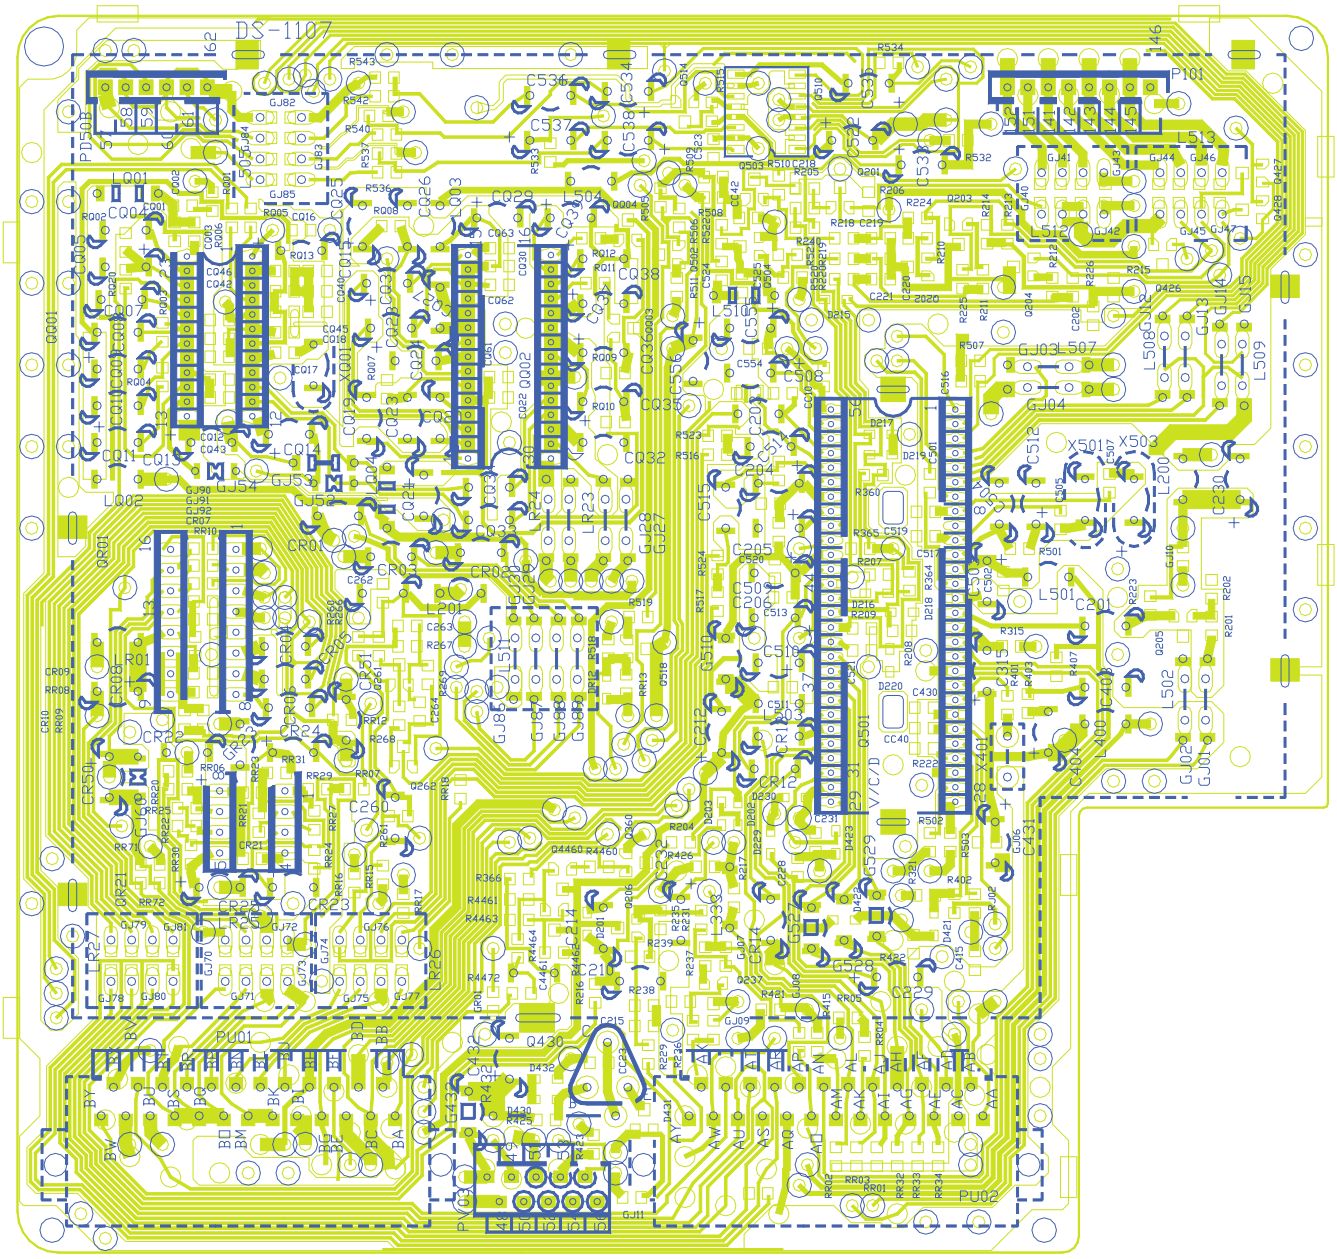

TERMINAL VIEW OF TRANSISTORS

① 2SD2253
(old)
2SC5243



② 2SC3852
2SD1763A
2SC1569
2SC4544
2SA1788
2SA1306
2SA1186A



③ 2SC752GTM
2SC2482
2SC2655
2SC4721P



④ 2SC752
2SA562TM
2SA1015
2SC1815
2SC2878
2SC1740S
2SC2120
2SA9335



⑤ 2SA1788



⑥ RN2203
RN2201
RN2004
RN1203
RN1204
RN2204
RN1205
RN1202
RN1201



⑦ 2SD1554
2SD2253
2SD1556
2SC5143
2SD2553



⑧ ON4409



MEMO

MEMO

MEMO

SPECIFICATIONS (Representative : 40PW13G)

Rated voltage		AC 230 V, 50/60 Hz
Power consumption (at AC 220 V, 50 Hz)		150 W
Dimensions (Width × Height × Depth)		963.2 mm × 1119.7 mm × 466 mm
Mass		51.0 kg
Screen size		Type 40
Television system (Aerial input)	Channel coverage	**System** **Channel** **VHF** **UHF** **CATV** PAL B/G CCIR 2 – 12 21 – 69 X ~ Z+2, S1 ~ S41 PAL I UK — 21 – 69 — SECAM L CCIR * 21 – 69 * VHF : B-C ; 1-6, B-Q, 71-86 SECAM D/K OIRT 1 – 12 21 – 69 X1 ~ X19
	Special RF signal	**Colour system** **Sound system** 4.43NTSC 5.5/6.0/6.5 MHz PAL 60Hz 5.5/6.0/6.5 MHz
Colour system		PAL/SECAM/4.43NTSC/3.58NTSC
Sound output		14 W + 14 W
Accessories		• Remote control unit × 1 • Battery (R03, AAA) × 2

* Please refer to owner's manual in detail.

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN

MECHANICAL DISASSEMBLY

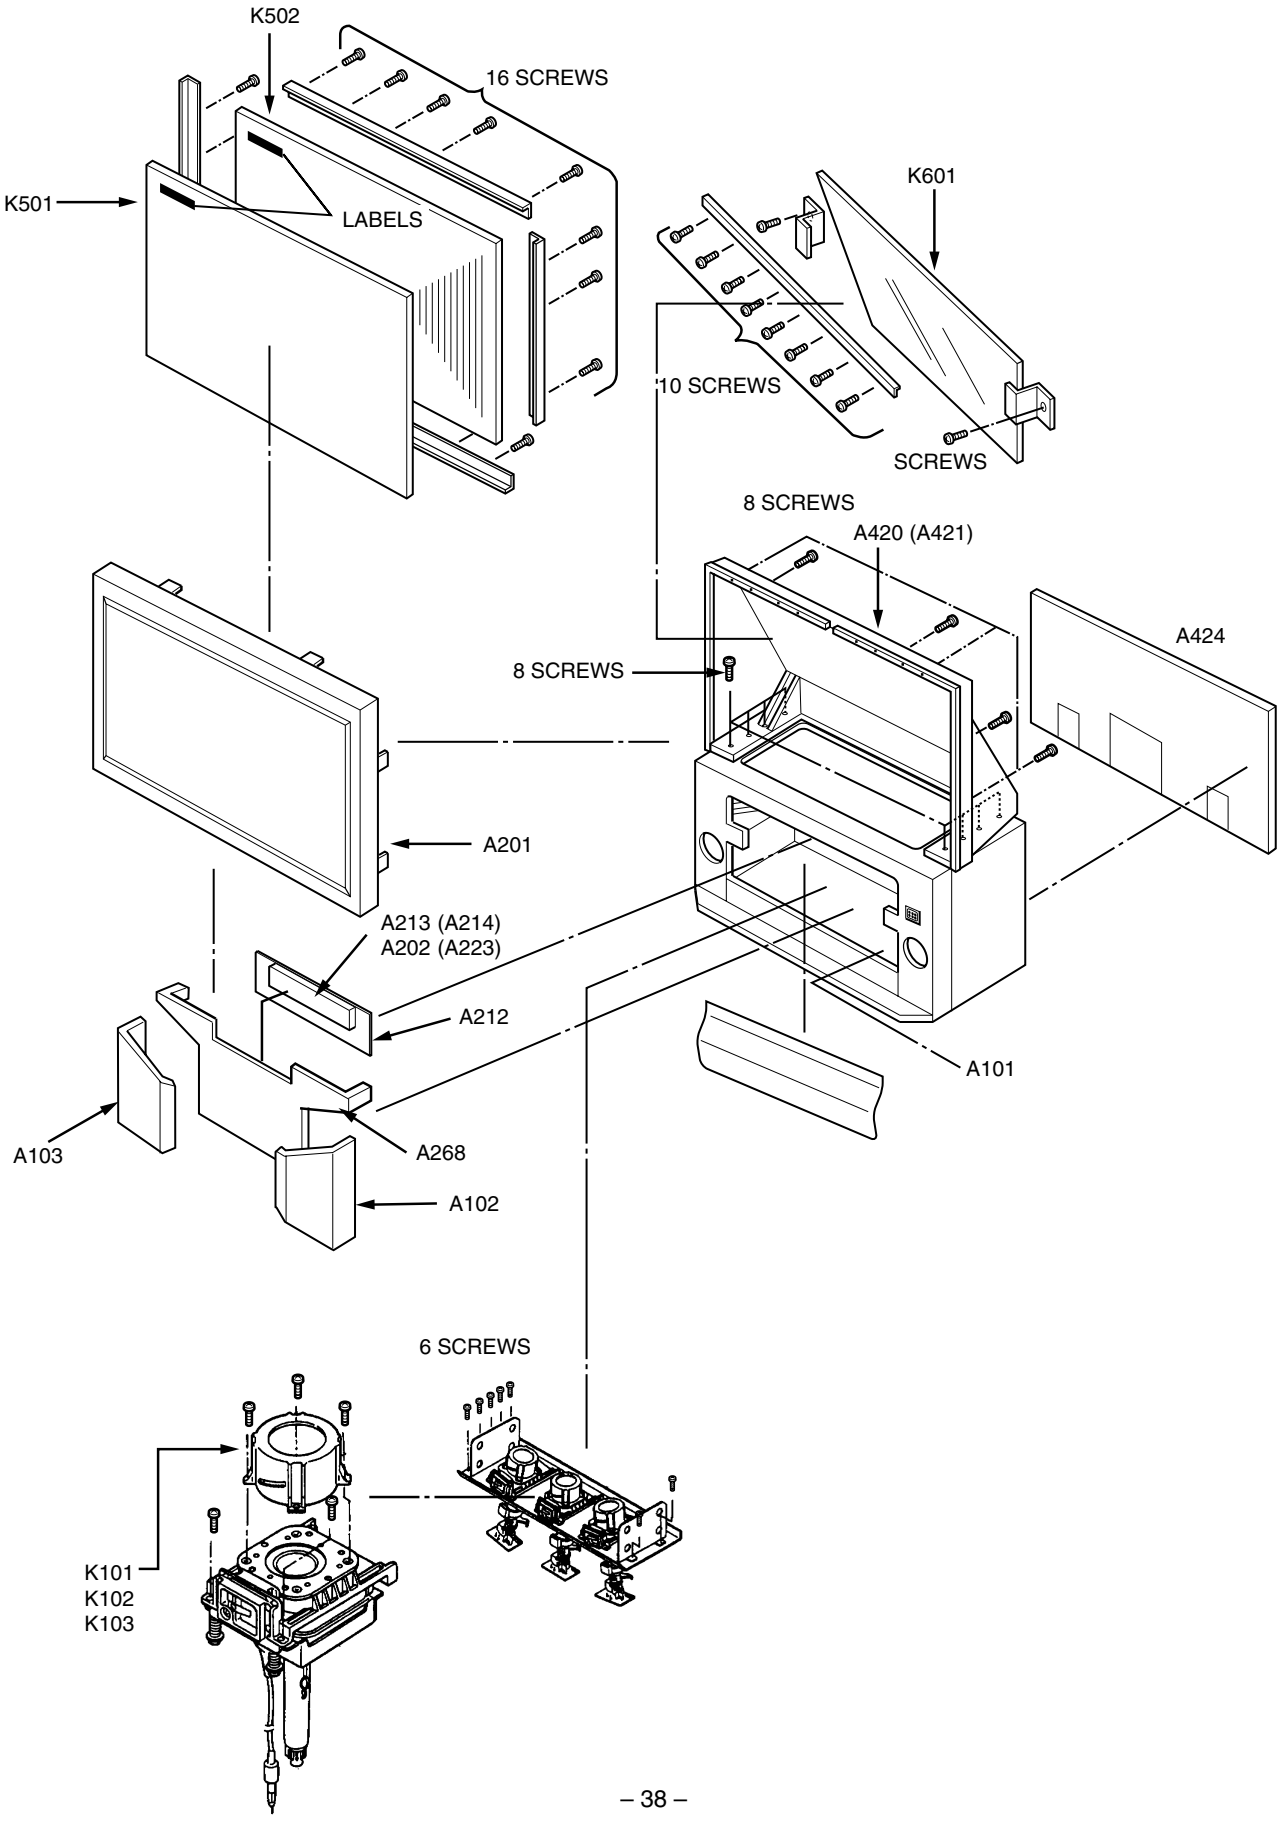

CHASSIS AND CABINET REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

NOTICE:
- *The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.*
- *The PC board assembly with * mark is no longer available after the end of the production.*

ABBREVIATIONS:

Capacitors	CD	:	Ceramic Disk	PF	:	Plastic Film	EL	: Electrolytic
Resistors	CF	:	Carbon Film	CC	:	Carbon Composition	MF	: Metal Film
	OMF	:	Oxide Metal Film	VR	:	Variable Resistor	FR	: Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Models :40PW13G, 40PW13B

Location No.	Part No.	Description
CAPACITORS		
C101	24793220	EL, 22μF, ±20%, 10V
C102	24762221	EL, 220μF, ±20%, 10V
C105	24212102	CD, 1000pF, ±10%
C106	24797100	EL, 10μF, ±20%, 50V
C115	24232103	CD, 0.01μF, +80%, -20%
C116	24762221	EL, 220μF, ±20%, 10V
C150	24763102	EL, 1000μF, ±20%, 16V
C183	24766479	EL, 4.7μF, ±20%, 50V
C194	24232103	CD, 0.01μF, +80%, -20%
C201	24538104	PF, 0.1μF
C202	24814103	Chip, 0.01μF, +80%, -20%
C203	24538104	PF, 0.1μF
C204	24669010	EL, 1μF, ±20%, 50V
C205	24669229	EL, 2.2μF, ±20%, 50V
C206	24206220	EL, 22μF, ±20%, 50V
C212	24794100	EL, 10μF, ±20%, 16V
C214	24591334	PF, 0.33μF
C219	24781100	Chip, 10pF, ±0.5pF%, SL
C220	24781100	Chip, 10pF, ±0.5pF%, SL
C221	24781100	Chip, 10pF, ±0.5pF%, SL
C228	24814103	Chip, 0.01μF, +80%, -20%
C229	24669010	EL, 1μF, ±20%, 50V
C230	24763221	EL, 220μF, ±20%, 16V
C231	24814103	Chip, 0.01μF, +80%, -20%
C232	24669010	EL, 1μF, ±20%, 50V
C260	24085967	EL, 47μF, ±20%, 16V, Non-Polar
C261	24669101	EL, 100μF, ±20%, 50V
C262	24814103	Chip, 0.01μF, +80%, -20%
C264	24781150	Chip, 15pF, SL
C273	24206229	EL, 2.2μF, ±20%, 50V
C281	24763101	EL, 100μF, ±20%, 16V
C282	24232103	CD, 0.01μF, +80%, -20%
C283	24794100	EL, 10μF, ±20%, 16V
C284	24794100	EL, 10μF, ±20%, 16V
C295	24232103	CD, 0.01μF, +80%, -20%
C303	24214471	CD, 470pF, ±10%, 500V
C305	24617912	EL, 2.2μF, ±10%, 50V
C306	24617858	EL, 3300μF, ±20%, 35V
C307	24082270	PF, 0.033μF, 100V

Location No.	Part No.	Description
C308	24669221	EL, 220μF, ±20%, 50V
C309	24212101	CD, 100pF, ±10%
C310	24669222	EL, 2200μF, ±20%, 50V
C311	24214561	CD, 560pF, ±10%, 500V
C313	24082057	PF, 0.22μF, 100V
C314	24591103	PF, 0.01μF
C315	24797229	EL, 2.2μF, ±20%, 50V
C316	24232103	CD, 0.01μF, +80%, -20%
C318	24666222	EL, 2200μF, ±20%, 16V
C319	24591102	PF, 1000pF
C320	24669101	EL, 100μF, ±20%, 50V
C321	24591183	PF, 0.018μF
C322	24617912	EL, 2.2μF, ±10%, 50V
C323	24567474	PF, 0.47μF
C330	24591104	PF, 0.1μF
C331	24669229	EL, 2.2μF, ±20%, 50V
C344	24591103	PF, 0.01μF
C351	24667222	EL, 2200μF, ±20%, 25V
C355	24669010	EL, 1μF, ±20%, 50V
C357	24669100	EL, 10μF, ±20%, 50V
C360	24667100	EL, 10μF, ±20%, 25V
C361	24669100	EL, 10μF, ±20%, 50V
C362	24591104	PF, 0.1μF
C363	24085942	EL, 10μF, ±20%, 16V, Non-Polar
C364	24666100	EL, 10μF, ±20%, 16V
C370	24669101	EL, 100μF, ±20%, 50V
C371	24669100	EL, 10μF, ±20%, 50V
C372	24591104	PF, 0.1μF
C388	24591334	PF, 0.33μF
C403	24591223	PF, 0.022μF
C403	24828124	PF, 0.12μF, 200V
C404	24797229	EL, 2.2μF, ±20%, 50V
C413	24214821	CD, 820pF, ±10%, 500V
C415	24815392	Chip, 3900pF, ±10%
C416	24678100	EL, 10μF, ±20%, 200V
C417	24214391	CD, 390pF, ±10%, 500V
C418	24095883	PF, 0.015μF, ±3%, 630V
C419	24095803	PF, 0.062μF, 400V
C420	24666101	EL, 100μF, ±20%, 16V
C423	24095779	PF, 0.062μF, 400V

Location No.	Part No.	Description
C430	24814103	Chip, 0.01μF, +80%, -20%
C431	24763102	EL, 1000μF, ±20%, 16V
C440	24082326	PF, 1300pF, ±3%, 1500V
C443	24082348	PF, 6800pF, ±3%, 1500V
C444	24082287	PF, 5100pF, ±3%, 1800V
C445	24828473	PF, 0.047μF, 200V
C446	24679330	EL, 33μF, ±20%, 250V
C447	24667102	EL, 1000μF, ±20%, 25V
C448	24640908	EL, 33μF, ±20%, 160V
C460	24669331	EL, 330μF, ±20%, 50V
C463	24212152	CD, 1500pF, ±10%
C464	24640872	EL, 10μF, ±20%, 100V
C465	24591332	PF, 3300pF
C466	24567394	PF, 0.39μF
C467	24820153	PF, 0.015μF, 630V
C468	24567474	PF, 0.47μF
C471	24206479	EL, 4.7μF, ±20%, 50V
C475	24820103	PF, 0.01μF, 630V
C477	24092347	CD, 1500pF, ±10%, 2kV
C481	24567104	PF, 0.1μF
C482	24591152	PF, 1500pF
C483	24567224	PF, 0.22μF
C484	24567104	PF, 0.1μF
C485	24669101	EL, 100μF, ±20%, 50V
C493	24591124	PF, 0.12μF
C501	24781101	Chip, 100pF, SL
C502	24814103	Chip, 0.01μF, +80%, -20%
C503	24763221	EL, 220μF, ±20%, 16V
C504	24591222	PF, 2200pF
C505	24774120	Chip, 12pF, CH
C507	24774120	Chip, 12pF, CH
C508	24669010	EL, 1μF, ±20%, 50V
C509	24763101	EL, 100μF, ±20%, 16V
C510	24763101	EL, 100μF, ±20%, 16V
C511	24814103	Chip, 0.01μF, +80%, -20%
C512	24206228	EL, 0.22μF, ±20%, 50V
C513	24814103	Chip, 0.01μF, +80%, -20%
C514	24538104	PF, 0.1μF
C515	24538104	PF, 0.1μF
C516	24781102	Chip, 1000pF, SL
C517	24774010	Chip, 1pF, ±0.25pF, CH
C519	24774010	Chip, 1pF, ±0.25pF, CH
C520	24781102	Chip, 1000pF, SL
C521	24781102	Chip, 1000pF, SL
C524	24781122	Chip, 1200pF, SL
C525	24774181	Chip, 180pF, CH
C554	24814103	Chip, 0.01μF, +80%, -20%
C555	24669010	EL, 1μF, ±20%, 50V
C556	24669010	EL, 1μF, ±20%, 50V
C601	24590102	PF, 1000pF
C602	24590102	PF, 1000pF
C603	24669100	EL, 10μF, ±20%, 50V
C604	24669100	EL, 10μF, ±20%, 50V
C605	24667101	EL, 100μF, ±20%, 25V
C606	24667101	EL, 100μF, ±20%, 25V
C607	24567104	PF, 0.1μF
C608	24567104	PF, 0.1μF
C609	24669102	EL, 1000μF, ±20%, 50V
C610	24669102	EL, 1000μF, ±20%, 50V
C611	24667221	EL, 220μF, ±20%, 25V
C613	24666471	EL, 470μF, ±20%, 16V
C636	24666100	EL, 10μF, ±20%, 16V
C661	24436101	CD, 100pF
C665	24669229	EL, 2.2μF, ±20%, 50V

Location No.	Part No.	Description
C666	24669229	EL, 2.2μF, ±20%, 50V
C671	24669100	EL, 10μF, ±20%, 50V
C672	24232103	CD, 0.01μF, +80%, -20%
C673	24781102	Chip, 1000pF, SL
C674	24669100	EL, 10μF, ±20%, 50V
C674	24781102	Chip, 1000pF, SL
C675	24669100	EL, 10μF, ±20%, 50V
C675	24781102	Chip, 1000pF, SL
C676	24669100	EL, 10μF, ±20%, 50V
C676	24781102	Chip, 1000pF, SL
C677	24668221	EL, 220μF, ±20%, 35V
C678	24781102	Chip, 1000pF, SL
C679	24781102	Chip, 1000pF, SL
C680	24669222	EL, 2200μF, ±20%, 50V
C681	24781102	Chip, 1000pF, SL
C682	24669010	EL, 1μF, ±20%, 50V
C682	24781102	Chip, 1000pF, SL
C696	24762102	EL, 1000μF, ±20%, 10V
C701	24591471	PF, 470pF
C701	24781330	Chip, 33pF, SL
C702	24591222	PF, 2200pF
C702	24781330	Chip, 33pF, SL
C703	24591822	PF, 8200pF
C708	24591272	PF, 2700pF
C711	24206100	EL, 10μF, ±20%, 50V
C711	24591471	PF, 470pF
C712	24591222	PF, 2200pF
C713	24591822	PF, 8200pF
C714	24092293	Chip, 0.1μF, +80%, -20%, 25V
C715	24092441	Chip, 1μF, +80%, -20%, 16V
C716	24591472	PF, 4700pF
C716	24815822	Chip, 0.0082μF, ±10%
C717	24591103	PF, 0.01μF
C717	24774470	Chip, 47pF, CH
C718	24591272	PF, 2700pF
C718	24774470	Chip, 47pF, CH
C719	24667100	EL, 10μF, ±20%, 25V
C719	24794101	EL, 100μF, ±20%, 16V
C720	24092293	Chip, 0.1μF, +80%, -20%, 25V
C721	24567104	PF, 0.1μF
C721	24591471	PF, 470pF
C722	24092293	Chip, 0.1μF, +80%, -20%, 25V
C722	24591222	PF, 2200pF
C723	24591822	PF, 8200pF
C724	24092293	Chip, 0.1μF, +80%, -20%, 25V
C725	24092293	Chip, 0.1μF, +80%, -20%, 25V
C726	24092293	Chip, 0.1μF, +80%, -20%, 25V
C727	24092293	Chip, 0.1μF, +80%, -20%, 25V
C728	24591272	PF, 2700pF
C728	24763221	EL, 220μF, ±20%, 16V
C729	24092293	Chip, 0.1μF, +80%, -20%, 25V
C730	24567104	PF, 0.1μF
C731	24591471	PF, 470pF
C731	24766010	EL, 1μF, ±20%, 50V
C732	24590822	PF, 8200pF
C732	24591222	PF, 2200pF
C733	24591822	PF, 8200pF
C735	24092293	Chip, 0.1μF, +80%, -20%, 25V
C736	24794470	EL, 47μF, ±20%, 16V
C737	24591103	PF, 0.01μF
C738	24591272	PF, 2700pF
C739	24092293	Chip, 0.1μF, +80%, -20%, 25V
C740	24092293	Chip, 0.1μF, +80%, -20%, 25V
C741	24591471	PF, 470pF

Location No.	Part No.	Description
C741	24794470	EL, 47μF, ±20%, 16V
C742	24591222	PF, 2200pF
C742	24794470	EL, 47μF, ±20%, 16V
C743	24092293	Chip, 0.1μF, +80%, -20%, 25V
C743	24591822	PF, 8200pF
C744	24092293	Chip, 0.1μF, +80%, -20%, 25V
C745	24794470	EL, 47μF, ±20%, 16V
C746	24794470	EL, 47μF, ±20%, 16V
C747	24092293	Chip, 0.1μF, +80%, -20%, 25V
C747	24591103	PF, 0.01μF
C748	24092293	Chip, 0.1μF, +80%, -20%, 25V
C748	24591272	PF, 2700pF
C749	24794470	EL, 47μF, ±20%, 16V
C750	24794470	EL, 47μF, ±20%, 16V
C751	24591471	PF, 470pF
C752	24591222	PF, 2200pF
C753	24591822	PF, 8200pF
C756	24781391	Chip, 390pF, SL
C758	24591272	PF, 2700pF
C761	24590182	PF, 1800pF
C761	24666331	EL, 330μF, ±20%, 16V
C762	24590562	PF, 5600pF
C763	24774391	Chip, 390pF, CH
C765	24232103	CD, 0.01μF, +80%, -20%
C765	24590182	PF, 1800pF
C766	24590562	PF, 5600pF
C766	24669221	EL, 220μF, ±20%, 50V
C767	24774391	Chip, 390pF, CH
C769	24590182	PF, 1800pF
C770	24590562	PF, 5600pF
C771	24774391	Chip, 390pF, CH
C773	24590182	PF, 1800pF
C774	24590562	PF, 5600pF
C775	24774391	Chip, 390pF, CH
C777	24590182	PF, 1800pF
C778	24590562	PF, 5600pF
C779	24774391	Chip, 390pF, CH
C781	24590182	PF, 1800pF
C782	24590562	PF, 5600pF
C783	24774391	Chip, 390pF, CH
C795	24761221	EL, 220μF, ±20%, 6.3V
C798	24763101	EL, 100μF, ±20%, 16V
C799	24763101	EL, 100μF, ±20%, 16V
⚠ C801	24082374	PF, 0.22μF, ±20%, AC250V
⚠ C802	24092557	CD, 220pF, ±20%, AC250V
⚠ C803	24092557	CD, 220pF, ±20%, AC250V
⚠ C804	24092570	CD, 3300pF, ±20%, AC250V
⚠ C805	24082374	PF, 0.22μF, ±20%, AC250V
C807	24073058	EL, 2200μF, ±20%, 25V
C808	24617787	EL, 470μF, ±20%, 16V
C809	24567105	PF, 1μF
C810	24086935	EL, 560μF, ±20%, 400V
C811	24676478	EL, 0.47μF, ±20%, 100V
C812	24092281	CD, 4700pF, ±20%, AC250V
C813	24092281	CD, 4700pF, ±20%, AC250V
C814	24678229	EL, 2.2μF, ±20%, 200V
C815	24567474	PF, 0.47μF
C816	24617817	EL, 22μF, ±20%, 50V
C817	24567224	PF, 0.22μF
C819	24214102	CD, 1000pF, ±10%, 500V
C820	24567224	PF, 0.22μF
C821	24092480	CD, 680pF, ±10%, 2kV
C822	24092481	CD, 820pF, ±10%, 2kV
C823	24092478	CD, 470pF, ±10%, 2kV

Location No.	Part No.	Description
C824	24214103	CD, 0.01μF, ±10%, 500V
C825	24591472	PF, 4700pF
C826	24092474	CD, 220pF, ±10%, 2kV
C828	24820683	PF, 0.068μF, 630V
C829	24617820	EL, 100μF, ±20%, 50V
C830	24567105	PF, 1μF
C831	24669220	EL, 22μF, ±20%, 50V
C853	24668102	EL, 1000μF, ±20%, 35V
C855	24214471	CD, 470pF, ±10%, 500V
C856	24214471	CD, 470pF, ±10%, 500V
C857	24214471	CD, 470pF, ±10%, 500V
C858	24214471	CD, 470pF, ±10%, 500V
C859	24214471	CD, 470pF, ±10%, 500V
C860	24669471	EL, 470μF, ±20%, 50V
C861	24668332	EL, 3300μF, ±20%, 35V
C862	24668471	EL, 470μF, ±20%, 35V
C863	24668332	EL, 3300μF, ±20%, 35V
C864	24668471	EL, 470μF, ±20%, 35V
C865	24214471	CD, 470pF, ±10%, 500V
C866	24214471	CD, 470pF, ±10%, 500V
C867	24214471	CD, 470pF, ±10%, 500V
C868	24214471	CD, 470pF, ±10%, 500V
C869	24669222	EL, 2200μF, ±20%, 50V
C870	24214471	CD, 470pF, ±10%, 500V
C871	24214471	CD, 470pF, ±10%, 500V
C872	24214471	CD, 470pF, ±10%, 500V
C873	24214471	CD, 470pF, ±10%, 500V
C874	24212102	CD, 1000pF, ±10%
C875	24667472	EL, 4700μF, ±20%, 25V
C876	24086916	EL, 330μF, ±20%, 160V
C877	24092475	CD, 270pF, ±10%, 2kV
C878	24092475	CD, 270pF, ±10%, 2kV
C879	24092475	CD, 270pF, ±10%, 2kV
C880	24092475	CD, 270pF, ±10%, 2kV
C881	24567474	PF, 0.47μF
C882	24617817	EL, 22μF, ±20%, 50V
C883	24082229	PF, 0.1μF, ±10%, 250V
C884	24617816	EL, 10μF, ±20%, 50V
C885	24617813	EL, 2.2μF, ±20%, 50V
C886	24677470	EL, 47μF, ±20%, 160V
C891	24669010	EL, 1μF, ±20%, 50V
C901	24211102	CD, 1000pF, ±10%, 2kV
C902	24794100	EL, 10μF, ±20%, 16V
C903	24232103	CD, 0.01μF, +80%, -20%
C904	24436391	CD, 390pF
C905	24214102	CD, 1000pF, ±10%, 500V
C911	24211102	CD, 1000pF, ±10%, 2kV
C912	24794100	EL, 10μF, ±20%, 16V
C913	24232103	CD, 0.01μF, +80%, -20%
C914	24436561	CD, 560pF
C915	24679330	EL, 33μF, ±20%, 250V
C915A	23960136	Adhesive, TSE3843-W
C916	24794101	EL, 100μF, ±20%, 16V
C921	24211102	CD, 1000pF, ±10%, 2kV
C922	24794100	EL, 10μF, ±20%, 16V
C924	24232103	CD, 0.01μF, +80%, -20%
C926	24436471	CD, 470pF
C941	24797478	EL, 0.47μF, ±20%, 50V
C943	24667102	EL, 1000μF, ±20%, 25V
C944	24206100	EL, 10μF, ±20%, 50V
C961	24666101	EL, 100μF, ±20%, 16V
C962	24203100	EL, 10μF, ±20%, 16V
C963	24232103	CD, 0.01μF, +80%, -20%
C964	24591104	PF, 0.1μF

Location No.	Part No.	Description
C6101	24232103	CD, 0.01μF, +80%, -20%
C6102	24232103	CD, 0.01μF, +80%, -20%
C7701	24761221	EL, 220μF, ±20%, 6.3V
C7703	24232103	CD, 0.01μF, +80%, -20%
C7742	24436330	CD, 33pF
C7743	24436330	CD, 33pF
C7747	24667101	EL, 100μF, ±20%, 25V
C7748	24567104	PF, 0.1μF
C7749	24567104	PF, 0.1μF
C7750	24667101	EL, 100μF, ±20%, 25V
C7751	24667101	EL, 100μF, ±20%, 25V
C7752	24567104	PF, 0.1μF
C7753	24567104	PF, 0.1μF
C7754	24667101	EL, 100μF, ±20%, 25V
C7755	24667101	EL, 100μF, ±20%, 25V
C7756	24567104	PF, 0.1μF
C7757	24567104	PF, 0.1μF
C7758	24667101	EL, 100μF, ±20%, 25V
C7760	24667470	EL, 47μF, ±20%, 25V
C7761	24667470	EL, 47μF, ±20%, 25V
C7762	24669100	EL, 10μF, ±20%, 50V
C7763	24667470	EL, 47μF, ±20%, 25V
C7764	24598331	PF, 330pF
C7767	24667470	EL, 47μF, ±20%, 25V
C7768	24567104	PF, 0.1μF
C7769	24232103	CD, 0.01μF, +80%, -20%
C7770	24669470	EL, 47μF, ±20%, 50V
C7771	24567103	PF, 0.01μF
C7772	24667101	EL, 100μF, ±20%, 25V
C7773	24669221	EL, 220μF, ±20%, 50V
C7774	24436331	CD, 330pF
C7775	24667101	EL, 100μF, ±20%, 25V
C7776	24667470	EL, 47μF, ±20%, 25V
C7779	24669479	EL, 4.7μF, ±20%, 50V
C7780	24591102	PF, 1000pF
C8301	24666101	EL, 100μF, ±20%, 16V
C8303	24669100	EL, 10μF, ±20%, 50V
C8304	24666101	EL, 100μF, ±20%, 16V
C8306	24666470	EL, 47μF, ±20%, 16V
C8307	24591334	PF, 0.33μF
C9602	24794100	EL, 10μF, ±20%, 16V
CA14	24232103	CD, 0.01μF, +80%, -20%
CA15	24232103	CD, 0.01μF, +80%, -20%
CA19	24436101	CD, 100pF
CA24	24436101	CD, 100pF
CA41	24436101	CD, 100pF
CA42	24436101	CD, 100pF
CA43	24436101	CD, 100pF
CA68	24794100	EL, 10μF, ±20%, 16V
CA69	24232103	CD, 0.01μF, +80%, -20%
CA106	24436101	CD, 100pF
CA107	24567104	PF, 0.1μF
CA108	24590103	PF, 0.01μF
CA109	24590103	PF, 0.01μF
CA420	24794100	EL, 10μF, ±20%, 16V
CA430	24232103	CD, 0.01μF, +80%, -20%
CA440	24232103	CD, 0.01μF, +80%, -20%
CB01	24794470	EL, 47μF, ±20%, 16V
CB90	24232103	CD, 0.01μF, +80%, -20%
CC08	24815102	Chip, 0.001μF, ±10%
CC10	24781820	Chip, 82pF, SL
CC15	24212102	CD, 1000pF, ±10%
CC18	24232103	CD, 0.01μF, +80%, -20%
CC23	24814103	Chip, 0.01μF, +80%, -20%

Location No.	Part No.	Description
CC28	24232103	CD, 0.01μF, +80%, -20%
CC29	24232103	CD, 0.01μF, +80%, -20%
CC30	24567474	PF, 0.47μF
CC39	24232103	CD, 0.01μF, +80%, -20%
CC40	24781470	Chip, 47pF, SL
CC41	24781470	Chip, 47pF, SL
CC42	24781470	Chip, 47pF, SL
CC43	24436470	CD, 47pF
CC44	24436470	CD, 47pF
CC45	24774050	Chip, 5pF, ±0.25pF, CH
CC46	24774050	Chip, 5pF, ±0.25pF, CH
CC47	24232103	CD, 0.01μF, +80%, -20%
CC48	24232103	CD, 0.01μF, +80%, -20%
CF03	24567104	PF, 0.1μF
CF04	24766101	EL, 100μF, ±20%, 50V
CF05	24766101	EL, 100μF, ±20%, 50V
CF06	24774220	Chip, 22pF, CH
CF07	24774220	Chip, 22pF, CH
CF08	24567104	PF, 0.1μF
CF09	24567104	PF, 0.1μF
CF10	24206100	EL, 10μF, ±20%, 50V
CF11	24567104	PF, 0.1μF
CF12	24814103	Chip, 0.01μF, +80%, -20%
CF14	24814103	Chip, 0.01μF, +80%, -20%
CF16	24567224	PF, 0.22μF
CF18	24794101	EL, 100μF, ±20%, 16V
CF19	24814103	Chip, 0.01μF, +80%, -20%
CF20	24766010	EL, 1μF, ±20%, 50V
CQ01	24781102	Chip, 1000pF, SL
CQ02	24781820	Chip, 82pF, SL
CQ03	24781102	Chip, 1000pF, SL
CQ04	24203100	EL, 10μF, ±20%, 16V
CQ05	24591563	PF, 0.056μF
CQ07	24591203	PF, 0.02μF
CQ08	24567683	PF, 0.068μF
CQ09	24206229	EL, 2.2μF, ±20%, 50V
CQ10	24591223	PF, 0.022μF
CQ11	24206229	EL, 2.2μF, ±20%, 50V
CQ12	24781820	Chip, 82pF, SL
CQ13	24669010	EL, 1μF, ±20%, 50V
CQ14	24669010	EL, 1μF, ±20%, 50V
CQ15	24763101	EL, 100μF, ±20%, 16V
CQ16	24814103	Chip, 0.01μF, +80%, -20%
CQ17	24774150	Chip, 15pF, CH
CQ18	24781820	Chip, 82pF, SL
CQ19	24590103	PF, 0.01μF
CQ20	24567104	PF, 0.1μF
CQ21	24794470	EL, 47μF, ±20%, 16V
CQ22	24814103	Chip, 0.01μF, +80%, -20%
CQ23	24567104	PF, 0.1μF
CQ24	24567104	PF, 0.1μF
CQ25	24797100	EL, 10μF, ±20%, 50V
CQ26	24567104	PF, 0.1μF
CQ27	24567104	PF, 0.1μF
CQ28	24797478	EL, 0.47μF, ±20%, 50V
CQ29	24794101	EL, 100μF, ±20%, 16V
CQ30	24814103	Chip, 0.01μF, +80%, -20%
CQ31	24797478	EL, 0.47μF, ±20%, 50V
CQ32	24590103	PF, 0.01μF
CQ33	24567104	PF, 0.1μF
CQ34	24567104	PF, 0.1μF
CQ35	24206478	EL, 0.47μF, ±20%, 50V
CQ36	24206478	EL, 0.47μF, ±20%, 50V
CQ37	24669010	EL, 1μF, ±20%, 50V

Location No.	Part No.	Description
CQ38	24669010	EL, 1μF, ±20%, 50V
CQ39	24669010	EL, 1μF, ±20%, 50V
CQ40	24781820	Chip, 82pF, SL
CQ41	24781090	Chip, 9pF, ±0.5pF, SL
CQ42	24781090	Chip, 9pF, ±0.5pF, SL
CQ43	24781090	Chip, 9pF, ±0.5pF, SL
CQ45	24781102	Chip, 1000pF, SL
CQ46	24781102	Chip, 1000pF, SL
CQ61	24781102	Chip, 1000pF, SL
CQ62	24781470	Chip, 47pF, SL
CQ63	24781470	Chip, 47pF, SL
CR01	24206010	EL, 1μF, ±20%, 50V
CR01	24567104	PF, 0.1μF
CR02	24232103	CD, 0.01μF, +80%, -20%
CR02	24567104	PF, 0.1μF
CR03	24436101	CD, 100pF
CR03	24567104	PF, 0.1μF
CR04	24567104	PF, 0.1μF
CR05	24567104	PF, 0.1μF
CR06	24567104	PF, 0.1μF
CR07	24814103	Chip, 0.01μF, +80%, -20%
CR08	24794100	EL, 10μF, ±20%, 16V
CR09	24567104	PF, 0.1μF
CR09	24814103	Chip, 0.01μF, +80%, -20%
CR10	24794470	EL, 47μF, ±20%, 16V
CR11	24567104	PF, 0.1μF
CR12	24567104	PF, 0.1μF
CR13	24567104	PF, 0.1μF
CR14	24567104	PF, 0.1μF
CR18	24567104	PF, 0.1μF
CR19	24567104	PF, 0.1μF
CR20	24567104	PF, 0.1μF
CS01	24085944	EL, 2.2μF, ±20%, 50V, Non-Polar
CS02	24085944	EL, 2.2μF, ±20%, 50V, Non-Polar
CS03	24206229	EL, 2.2μF, ±20%, 50V
CS04	24206229	EL, 2.2μF, ±20%, 50V
CS05	24206229	EL, 2.2μF, ±20%, 50V
CS06	24206229	EL, 2.2μF, ±20%, 50V
CS07	24206229	EL, 2.2μF, ±20%, 50V
CS08	24206229	EL, 2.2μF, ±20%, 50V
CS12	24781102	Chip, 1000pF, SL
CS13	24781102	Chip, 1000pF, SL
CS14	24206100	EL, 10μF, ±20%, 50V
CS15	24206100	EL, 10μF, ±20%, 50V
CS17	24203100	EL, 10μF, ±20%, 16V
CS18	24203100	EL, 10μF, ±20%, 16V
CS19	24206478	EL, 0.47μF, ±20%, 50V
CS22	24203100	EL, 10μF, ±20%, 16V
CS23	24203100	EL, 10μF, ±20%, 16V
CS53	24781102	Chip, 1000pF, SL
CV01	24567103	PF, 0.01μF
CV02	24085970	EL, 10μF, ±20%, 16V, Non-Polar
CV03	24203100	EL, 10μF, ±20%, 16V
CV04	24203100	EL, 10μF, ±20%, 16V
CV05	24814103	Chip, 0.01μF, +80%, -20%
CV06	24203100	EL, 10μF, ±20%, 16V
CV08	24763102	EL, 1000μF, ±20%, 16V
CV10	24085970	EL, 10μF, ±20%, 16V, Non-Polar
CV11	24781331	Chip, 330pF, SL
CV12	24092178	Chip, 0.1μF, ±10%, 25V

Location No.	Part No.	Description
CV13	24814103	Chip, 0.01μF, +80%, -20%
CV14	24781102	Chip, 1000pF, SL
CV15	24781102	Chip, 1000pF, SL
CV16	24781102	Chip, 1000pF, SL
CV17	24781102	Chip, 1000pF, SL
CV18	24781102	Chip, 1000pF, SL
CV19	24781102	Chip, 1000pF, SL
CV20	24781430	Chip, 43pF, SL
CV23	24203101	EL, 100μF, ±20%, 16V
CV24	24814103	Chip, 0.01μF, +80%, -20%
CV25	24763471	EL, 470μF, ±20%, 16V
CV31	24781102	Chip, 1000pF, SL
CV34	24781102	Chip, 1000pF, SL
CV35	24814103	Chip, 0.01μF, +80%, -20%
CV37	24781102	Chip, 1000pF, SL
CV39	24203101	EL, 100μF, ±20%, 16V
CV40	24814103	Chip, 0.01μF, +80%, -20%
CV46	24212332	CD, 3300pF, ±10%
CV47	24212332	CD, 3300pF, ±10%
CV48	24212102	CD, 1000pF, ±10%
CV65	24203101	EL, 100μF, ±20%, 16V
CV66	24203101	EL, 100μF, ±20%, 16V
CV67	24763471	EL, 470μF, ±20%, 16V
CV68	24763471	EL, 470μF, ±20%, 16V
CV78	24781330	Chip, 33pF, SL
CW01	24781121	Chip, 120pF, SL
CW02	24781121	Chip, 120pF, SL
CW03	24781470	Chip, 47pF, SL
CW04	24085945	EL, 2.2μF, ±20%, 50V, Non-Polar
CW04	24591822	PF, 8200pF
CW05	24212103	CD, 0.01μF, ±10%
CW05	24781121	Chip, 120pF, SL
CW06	24781121	Chip, 120pF, SL
CW07	24206229	EL, 2.2μF, ±20%, 50V
CW07	24666470	EL, 47μF, ±20%, 16V
CW08	24781121	Chip, 120pF, SL
CW09	24781121	Chip, 120pF, SL
CW10	24206229	EL, 2.2μF, ±20%, 50V
CW11	24781330	Chip, 33pF, SL
CW12	24666470	EL, 47μF, ±20%, 16V
CW12	24781820	Chip, 82pF, SL
CW13	24781330	Chip, 33pF, SL
CW13	24790100	EL, 10μF, ±20%, 160V
CW14	24436101	CD, 100pF
CW14	24781820	Chip, 82pF, SL
CW15	24214472	CD, 4700pF, ±10%, 500V
CW15	24781330	Chip, 33pF, SL
CW16	24436101	CD, 100pF
CW16	24781820	Chip, 82pF, SL
CW17	24214472	CD, 4700pF, ±10%, 500V
CW18	24666470	EL, 47μF, ±20%, 16V
CW19	24435560	CD, 56pF, 500V
CW20	24790100	EL, 10μF, ±20%, 160V
CW21	24794470	EL, 47μF, ±20%, 16V
CW26	24212102	CD, 1000pF, ±10%
CW27	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW28	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW29	24085986	EL, 10μF, ±20%, 10V, Non-Polar
CW30	24202221	EL, 220μF, ±20%, 10V

Location No.	Part No.	Description
CW31	24092294	Chip, 0.33μF, +80%, -20%, 16V
CW32	24781331	Chip, 330pF, SL
CW33	24092294	Chip, 0.33μF, +80%, -20%, 16V
CW34	24814103	Chip, 0.01μF, +80%, -20%
CW35	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW36	24814103	Chip, 0.01μF, +80%, -20%
CW37	24814103	Chip, 0.01μF, +80%, -20%
CW38	24202101	EL, 100μF, ±20%, 10V
CW39	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW40	24203101	EL, 100μF, ±20%, 16V
CW41	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW42	24201101	EL, 100μF, 6.3V
CW43	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW44	24201101	EL, 100μF, 6.3V
CW45	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW46	24206010	EL, 1μF, ±20%, 50V
CW47	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW48	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW49	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW50	24202221	EL, 220μF, ±20%, 10V
CW51	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW52	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW53	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW54	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW55	24815472	Chip, 0.0047μF, ±10%
CW56	24781221	Chip, 220pF, SL
CW60	24092441	Chip, 1μF, +80%, -20%, 16V
CW61	24781182	Chip, 1800pF, SL
CW62	24781182	Chip, 1800pF, SL
CW68	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW70	24814103	Chip, 0.01μF, +80%, -20%
CW72	24567103	PF, 0.01μF
CW73	24774471	Chip, 470pF, CH
CW74	24814103	Chip, 0.01μF, +80%, -20%
CW75	24092293	Chip, 0.1μF, +80%, -20%, 25V
CW80	24092441	Chip, 1μF, +80%, -20%, 16V
CW81	24092441	Chip, 1μF, +80%, -20%, 16V
CW82	24781330	Chip, 33pF, SL
CW83	24781330	Chip, 33pF, SL
CW85	24781330	Chip, 33pF, SL
CW86	24781330	Chip, 33pF, SL
CW87	24781330	Chip, 33pF, SL
CW88	24781330	Chip, 33pF, SL
CW89	24781330	Chip, 33pF, SL
CW90	24781330	Chip, 33pF, SL
CW91	24781330	Chip, 33pF, SL
CW92	24781330	Chip, 33pF, SL
CW93	24781330	Chip, 33pF, SL
CW94	24781101	Chip, 100pF, SL
CW95	24781101	Chip, 100pF, SL
CW97	24781101	Chip, 100pF, SL
CZ03	24092442	Chip, 0.47μF, +80%, -20%, 16V
CZ05	24814103	Chip, 0.01μF, +80%, -20%
CZ07	24092178	Chip, 0.1μF, ±10%, 25V
CZ09	24781220	Chip, 22pF, SL
CZ10	24781100	Chip, 10pF, ±0.5pF%, SL
CZ11	24781220	Chip, 22pF, SL
CZ12	24814103	Chip, 0.01μF, +80%, -20%
CZ13	24814103	Chip, 0.01μF, +80%, -20%
CZ14	24203100	EL, 10μF, ±20%, 16V
CZ17	24814103	Chip, 0.01μF, +80%, -20%

Location No.	Part No.	Description
CZ19	24781181	Chip, 180pF, SL
CZ20	24815103	Chip, 0.01μF, ±10%
CZ21	24781122	Chip, 1200pF, SL
CZ22	24203100	EL, 10μF, ±20%, 16V
CZ23	24814103	Chip, 0.01μF, +80%, -20%
CZ24	24814103	Chip, 0.01μF, +80%, -20%
CZ25	24203100	EL, 10μF, ±20%, 16V
CZ26	24814103	Chip, 0.01μF, +80%, -20%
CZ28	24814103	Chip, 0.01μF, +80%, -20%
CZ29	24814103	Chip, 0.01μF, +80%, -20%
CZ30	24203100	EL, 10μF, ±20%, 16V
CZ31	24092178	Chip, 0.1μF, ±10%, 25V
CZ32	24781470	Chip, 47pF, SL
CZ33	24781470	Chip, 47pF, SL
CZ34	24781470	Chip, 47pF, SL
CZ35	24781470	Chip, 47pF, SL
CZ45	24781100	Chip, 10pF, ±0.5pF%, SL

RESISTORS

R101	24382223	OMF, 22k ohm, 1W
R201	24872101	Chip, 100 ohm, 1/16W
R204	24872104	Chip, 100k ohm, 1/16W
R205	24872101	Chip, 100 ohm, 1/16W
R206	24872471	Chip, 470 ohm, 1/16W
R207	24872103	Chip, 10k ohm, 1/16W
R208	24872103	Chip, 10k ohm, 1/16W
R209	24872103	Chip, 10k ohm, 1/16W
R210	24872101	Chip, 100 ohm, 1/16W
R211	24872101	Chip, 100 ohm, 1/16W
R212	24872101	Chip, 100 ohm, 1/16W
R213	24872681	Chip, 680 ohm, 1/16W
R214	24872681	Chip, 680 ohm, 1/16W
R215	24872681	Chip, 680 ohm, 1/16W
R216	24872103	Chip, 10k ohm, 1/16W
R218	24872101	Chip, 100 ohm, 1/16W
R219	24872101	Chip, 100 ohm, 1/16W
R220	24872101	Chip, 100 ohm, 1/16W
R222	24872333	Chip, 33k ohm, 1/16W
R223	24872332	Chip, 3300 ohm, 1/16W
R229	24872272	Chip, 2700 ohm, 1/16W
R231	24000824	Chip, Jumper, 2125 type
R239	24000824	Chip, Jumper, 2125 type
R260	24872153	Chip, 15k ohm, 1/16W
R261	24872682	Chip, 6800 ohm, 1/16W
R266	24872102	Chip, 1k ohm, 1/16W
R267	24872182	Chip, 1800 ohm, 1/16W
R268	24872101	Chip, 100 ohm, 1/16W
R269	24872821	Chip, 820 ohm, 1/16W
R273	24872473	Chip, 47k ohm, 1/16W
R274	24872102	Chip, 1k ohm, 1/16W
R275	24872101	Chip, 100 ohm, 1/16W
R276	24872683	Chip, 68k ohm, 1/16W
R277	24872103	Chip, 10k ohm, 1/16W
R281	24366821	CF, 820 ohm
R282	24366102	CF, 1k ohm
R283	24366472	CF, 4700 ohm
R291	24366123	CF, 12k ohm
R292	24366103	CF, 10k ohm
R293	24366333	CF, 33k ohm
R295	24366102	CF, 1k ohm
R296	24366101	CF, 100 ohm
R297	24366102	CF, 1k ohm
R298	24366113	CF, 11k ohm
R299	24366153	CF, 15k ohm

Location No.	Part No.	Description
R301	24366102	CF, 1k ohm
R302	24366101	CF, 100 ohm
R303	24321129	MF, 1.2 ohm, 1/2W
R304	24366223	CF, 22k ohm
R305	24322828	MF, 0.82 ohm, 1W
R306	24366333	CF, 33k ohm
R307	24366224	CF, 220k ohm
R308	24382391	OMF, 390 ohm, 1W
R312	24366103	CF, 10k ohm
R313	24366153	CF, 15k ohm
R315	24366102	CF, 1k ohm
R316	24366105	CF, 1M ohm
R317	24366104	CF, 100k ohm
R318	24366101	CF, 100 ohm
R319	24366101	CF, 100 ohm
R321	24872682	Chip, 6800 ohm, 1/16W
R327	24000187	FR, 3.3 ohm, 1W
R329	24366153	CF, 15k ohm
R330	24366102	CF, 1k ohm
R331	24366183	CF, 18k ohm
R332	24366222	CF, 2200 ohm
R333	24366824	CF, 820k ohm
R334	24366823	CF, 82k ohm
R335	24366104	CF, 100k ohm
R336	24383221	OMF, 220 ohm, 2W
R341	24366622	CF, 6200 ohm
R343	24366153	CF, 15k ohm
R346	24366102	CF, 1k ohm
R351	24552101	OMF, 100 ohm, 1/2W
R352	24366222	CF, 2200 ohm
R353	24366682	CF, 6800 ohm
R354	24366222	CF, 2200 ohm
R356	24366562	CF, 5600 ohm
R357	24382114	OMF, 110k ohm, 1W
R358	24366682	CF, 6800 ohm
R359	24366103	CF, 10k ohm
R360	24366102	CF, 1k ohm
R361	24366113	CF, 11k ohm
R362	24366754	CF, 750k ohm
R363	24366103	CF, 10k ohm
R364	24366103	CF, 10k ohm
R365	24366103	CF, 10k ohm
R366	24366103	CF, 10k ohm
R367	24366473	CF, 47k ohm
R368	24366473	CF, 47k ohm
R369	24366102	CF, 1k ohm
R370	24321159	MF, 1.5 ohm, 1/2W
R371	24366682	CF, 6800 ohm
R372	24366472	CF, 4700 ohm
R373	24366152	CF, 1500 ohm
R374	24366473	CF, 47k ohm
R375	24366102	CF, 1k ohm
R376	24384221	OMF, 220 ohm, 3W
R377	24384221	OMF, 220 ohm, 3W
R378	24366102	CF, 1k ohm
R379	24366562	CF, 5600 ohm
R386	24366472	CF, 4700 ohm
R388	24366392	CF, 3900 ohm
R390	24382561	OMF, 560 ohm, 1W
R391	24382561	OMF, 560 ohm, 1W
R392	24382561	OMF, 560 ohm, 1W
R393	24366184	CF, 180k ohm
R394	24366153	CF, 15k ohm
R400	24942102	CC, 1k ohm, 1/2W

Location No.	Part No.	Description
R401	24366103	CF, 10k ohm
R401	24872391	Chip, 390 ohm, 1/16W
R402	24366333	CF, 33k ohm
R402	24872103	Chip, 10k ohm, 1/16W
R403	24366332	CF, 3300 ohm
R403	24872302	Chip, 3k ohm, 1/16W
R404	24383270	OMF, 27 ohm, 2W
R405	24382332	OMF, 3300 ohm, 1W
R407	24872103	Chip, 10k ohm, 1/16W
R408	24321209	MF, 2 ohm, 1/2W
R409	24381103	OMF, 10k ohm, 1/2W
R410	24366331	CF, 330 ohm
R411	24366471	CF, 470 ohm
R415	24553272	OMF, 2700 ohm, 1W
R416	24510562	Cement, 5600 ohm, 5W
R421	24872334	Chip, 330k ohm, 1/16W
R422	24872152	Chip, 1500 ohm, 1/16W
R423	24872152	Chip, 1500 ohm, 1/16W
R424	24546338	FR, 0.33 ohm, 1/2W
R425	24552331	OMF, 330 ohm, 1/2W
R425	24872153	Chip, 15k ohm, 1/16W
R426	24366821	CF, 820 ohm
R427	24366432	CF, 4300 ohm
R428	24366561	CF, 560 ohm
R429	24552330	OMF, 33 ohm, 1/2W
R431	24382100	OMF, 10 ohm, 1W
R432	24532560	FR, 56 ohm, 1W
R434	24366102	CF, 1k ohm
R435	24366333	CF, 33k ohm
R436	24327224	MF, 220k ohm, ±1%, 1/4W
R439	24366472	CF, 4700 ohm
R441	24383102	OMF, 1k ohm, 2W
R443	24310109	MF, 1.0 ohm, 1/2W
R444	24338398	MF, 0.39 ohm, 1W
R445	24382332	OMF, 3300 ohm, 1W
R446	24382332	OMF, 3300 ohm, 1W
R447	24382473	OMF, 47k ohm, 1W
R448	24338828	MF, 0.82 ohm, 1W
R450	24066879	VR, 1k ohm, 0.3W
R451	24376223	CF, 22k ohm, 1/2W
R452	24376223	CF, 22k ohm, 1/2W
R453	24376223	CF, 22k ohm, 1/2W
R454	24366223	CF, 22k ohm
R455	24366333	CF, 33k ohm
R460	24552332	OMF, 3300 ohm, 1/2W
R461	24366332	CF, 3300 ohm
R462	24366102	CF, 1k ohm
R462	24366912	CF, 9100 ohm
R463	24339109	MF, 1 ohm, 2W
R464	24366273	CF, 27k ohm
R465	24366114	CF, 110k ohm
R466	24366152	CF, 1500 ohm
R469	24000465	FR, 9.1 ohm, 1W
R472	24552270	OMF, 27 ohm, 1/2W
R476	24366821	CF, 820 ohm
R477	24383121	OMF, 120 ohm, 2W
R478	24376333	CF, 33k ohm, 1/2W
R479	24366101	CF, 100 ohm
R480	24553332	OMF, 3300 ohm, 1W
R481	24366473	CF, 47k ohm
R482	24366103	CF, 10k ohm
R483	24366154	CF, 150k ohm
R484	24366473	CF, 47k ohm
R485	24552271	OMF, 270 ohm, 1/2W

Location No.	Part No.	Description
R487	24366472	CF, 4700 ohm
R488	24366474	CF, 470k ohm
R489	24366332	CF, 3300 ohm
R490	24366332	CF, 3300 ohm
R492	24366102	CF, 1k ohm
R493	24552392	OMF, 3900 ohm, 1/2W
R494	24366183	CF, 18k ohm
R495	24366682	CF, 6800 ohm
R496	24382114	OMF, 110k ohm, 1W
R498	24366153	CF, 15k ohm
R499	24366824	CF, 820k ohm
R501	24872223	Chip, 22k ohm, 1/16W
R502	24872101	Chip, 100 ohm, 1/16W
R503	24872101	Chip, 100 ohm, 1/16W
R505	24872102	Chip, 1k ohm, 1/16W
R506	24872103	Chip, 10k ohm, 1/16W
R508	24872102	Chip, 1k ohm, 1/16W
R509	24872102	Chip, 1k ohm, 1/16W
R510	24872472	Chip, 4700 ohm, 1/16W
R511	24872101	Chip, 100 ohm, 1/16W
R515	24366102	CF, 1k ohm
R516	24366101	CF, 100 ohm
R516	24872101	Chip, 100 ohm, 1/16W
R517	24872101	Chip, 100 ohm, 1/16W
R518	24872472	Chip, 4700 ohm, 1/16W
R519	24872101	Chip, 100 ohm, 1/16W
R520	24872103	Chip, 10k ohm, 1/16W
R521	24872223	Chip, 22k ohm, 1/16W
R522	24872473	Chip, 47k ohm, 1/16W
R532	24000824	Chip, Jumper, 2125 type
R533	24000824	Chip, Jumper, 2125 type
R534	24000824	Chip, Jumper, 2125 type
R601	24366332	CF, 3300 ohm
R602	24366332	CF, 3300 ohm
R603	24366222	CF, 2200 ohm
R604	24366222	CF, 2200 ohm
R605	24366229	CF, 2.2 ohm
R606	24366229	CF, 2.2 ohm
R607	24366682	CF, 6800 ohm
R608	24366682	CF, 6800 ohm
R610	24366104	CF, 100k ohm
R611	24366103	CF, 10k ohm
R612	24366103	CF, 10k ohm
R613	24366224	CF, 220k ohm
R614	24366103	CF, 10k ohm
R635	24366224	CF, 220k ohm
R636	24366104	CF, 100k ohm
R661	24366103	CF, 10k ohm
R670	24552182	OMF, 1800 ohm, 1/2W
R671	24366153	CF, 15k ohm
R672	24366153	CF, 15k ohm
R673	24366563	CF, 56k ohm
R674	24366563	CF, 56k ohm
R675	24366103	CF, 10k ohm
R676	24872223	Chip, 22k ohm, 1/16W
R677	24366104	CF, 100k ohm
R677	24872223	Chip, 22k ohm, 1/16W
R678	24366103	CF, 10k ohm
R678	24872223	Chip, 22k ohm, 1/16W
R679	24366103	CF, 10k ohm
R679	24872223	Chip, 22k ohm, 1/16W
R680	24872223	Chip, 22k ohm, 1/16W
R681	24872223	Chip, 22k ohm, 1/16W
R682	24366473	CF, 47k ohm

Location No.	Part No.	Description
R683	24366223	CF, 22k ohm
R684	24366223	CF, 22k ohm
R688	24366222	CF, 2200 ohm
R688	24552391	OMF, 390 ohm, 1/2W
R690	24552391	OMF, 390 ohm, 1/2W
R690	24872681	Chip, 680 ohm, 1/16W
R691	24872681	Chip, 680 ohm, 1/16W
R692	24872681	Chip, 680 ohm, 1/16W
R693	24872681	Chip, 680 ohm, 1/16W
R701	23103832	Chip (Ferrite Bead), TEM2125M
R702	23103832	Chip (Ferrite Bead), TEM2125M
R703	24872472	Chip, 4700 ohm, 1/16W
R704	24872472	Chip, 4700 ohm, 1/16W
R705	24872472	Chip, 4700 ohm, 1/16W
R706	24872472	Chip, 4700 ohm, 1/16W
R707	24872100	Chip, 10 ohm, 1/16W
R708	24872100	Chip, 10 ohm, 1/16W
R709	24872100	Chip, 10 ohm, 1/16W
R710	24872100	Chip, 10 ohm, 1/16W
R711	24872100	Chip, 10 ohm, 1/16W
R712	24872100	Chip, 10 ohm, 1/16W
R713	24872100	Chip, 10 ohm, 1/16W
R714	24872100	Chip, 10 ohm, 1/16W
R715	24872153	Chip, 15k ohm, 1/16W
R716	24872103	Chip, 10k ohm, 1/16W
R717	24872622	Chip, 6200 ohm, 1/16W
R718	24872152	Chip, 1500 ohm, 1/16W
R720	24872103	Chip, 10k ohm, 1/16W
R721	24872223	Chip, 22k ohm, 1/16W
R722	24872222	Chip, 2200 ohm, 1/16W
R725	24872754	Chip, 750k ohm, 1/16W
R726	24872331	Chip, 330 ohm, 1/16W
R727	24871221	Chip, 220 ohm, 1/8W
R728	24872393	Chip, 39k ohm, 1/16W
R729	24872153	Chip, 15k ohm, 1/16W
R735	24872911	Chip, 910 ohm, 1/16W
R736	24872911	Chip, 910 ohm, 1/16W
R737	24872152	Chip, 1500 ohm, 1/16W
R738	24872332	Chip, 3300 ohm, 1/16W
R739	24872362	Chip, 3600 ohm, 1/16W
R740	24872911	Chip, 910 ohm, 1/16W
R741	24872911	Chip, 910 ohm, 1/16W
R742	24872152	Chip, 1500 ohm, 1/16W
R743	24872332	Chip, 3300 ohm, 1/16W
R744	24872362	Chip, 3600 ohm, 1/16W
R745	24872911	Chip, 910 ohm, 1/16W
R746	24872911	Chip, 910 ohm, 1/16W
R747	24872152	Chip, 1500 ohm, 1/16W
R748	24872332	Chip, 3300 ohm, 1/16W
R749	24872362	Chip, 3600 ohm, 1/16W
R750	24872911	Chip, 910 ohm, 1/16W
R751	24872911	Chip, 910 ohm, 1/16W
R752	24872152	Chip, 1500 ohm, 1/16W
R753	24872332	Chip, 3300 ohm, 1/16W
R754	24872362	Chip, 3600 ohm, 1/16W
R755	24872911	Chip, 910 ohm, 1/16W
R756	24872911	Chip, 910 ohm, 1/16W
R757	24872152	Chip, 1500 ohm, 1/16W
R758	24872332	Chip, 3300 ohm, 1/16W
R759	24872362	Chip, 3600 ohm, 1/16W
R760	24872911	Chip, 910 ohm, 1/16W
R761	24872911	Chip, 910 ohm, 1/16W

Location No.	Part No.	Description
R762	24872152	Chip, 1500 ohm, 1/16W
R763	24872332	Chip, 3300 ohm, 1/16W
R764	24872362	Chip, 3600 ohm, 1/16W
R778	24872101	Chip, 100 ohm, 1/16W
R779	24872101	Chip, 100 ohm, 1/16W
R780	24872101	Chip, 100 ohm, 1/16W
R781	24872101	Chip, 100 ohm, 1/16W
R782	24872101	Chip, 100 ohm, 1/16W
R783	24872101	Chip, 100 ohm, 1/16W
R786	24872472	Chip, 4700 ohm, 1/16W
R787	24872472	Chip, 4700 ohm, 1/16W
R801	24366473	CF, 47k ohm
R802	24366102	CF, 1k ohm
R803	24366683	CF, 68k ohm
R805	24366101	CF, 100 ohm
R806	24366101	CF, 100 ohm
R807	24367273	CF, 27k ohm, ±2%
R808	24552470	OMF, 47 ohm, 1/2W
R809	24321689	MF, 6.8 ohm, 1/2W
R810	24383680	OMF, 68 ohm, 2W
R811	24552121	OMF, 120 ohm, 1/2W
R812	24552390	OMF, 39 ohm, 1/2W
R814	24552821	OMF, 820 ohm, 1/2W
R816	24384223	OMF, 22k ohm, 3W
⚠ R819	24009954	Metal-Glazed Resistor, 2.2M ohm, 1/2W
R820	24007061	Cement, 1.8 ohm, ±10%, 2W
R821	24045005	Cement, 4.7 ohm, 5W
R822	24366102	CF, 1k ohm
R823	24554470	OMF, 47 ohm, 2W
R851	24545109	FR, 1 ohm, 1/4W
R852	24366272	CF, 2700 ohm
R853	24338568	MF, 0.56 ohm, 1W
R854	24553121	OMF, 120 ohm, 1W
R855	24553271	OMF, 270 ohm, 1W
R856	24366152	CF, 1500 ohm
R857	24381682	OMF, 6800 ohm, 1/2W
R858	24366102	CF, 1k ohm
R859	24382333	OMF, 33k ohm, 1W
R860	24366102	CF, 1k ohm
⚠ R861	24005015	Metal-Glazed Resistor, 8.2M ohm, 1W
R862	24366223	CF, 22k ohm
R863	24366101	CF, 100 ohm
R870	24552100	OMF, 10 ohm, 1/2W
R901	24366471	CF, 470 ohm
R903	24942102	CC, 1k ohm, 1/2W
R905	24366390	CF, 39 ohm
R906	24366621	CF, 620 ohm
R908	24366680	CF, 68 ohm
R909	24366151	CF, 150 ohm
R911	24366471	CF, 470 ohm
R913	24942102	CC, 1k ohm, 1/2W
R915	24366390	CF, 39 ohm
R916	24366621	CF, 620 ohm
R918	24366680	CF, 68 ohm
R921	24366471	CF, 470 ohm
R923	24942102	CC, 1k ohm, 1/2W
R925	24366151	CF, 150 ohm
R926	24366621	CF, 620 ohm
R928	24366101	CF, 100 ohm
R931	24555153	OMF, 15k ohm, 3W
R932	24555153	OMF, 15k ohm, 3W
R933	24000929	FR, 1.5 ohm, 1W

Location No.	Part No.	Description
R935	24366150	CF, 15 ohm
R936	24366330	CF, 33 ohm
R941	24555153	OMF, 15k ohm, 3W
R942	24555153	OMF, 15k ohm, 3W
R943	24366103	CF, 10k ohm
R944	24366150	CF, 15 ohm
R945	24366680	CF, 68 ohm
R946	24366330	CF, 33 ohm
R949	24366121	CF, 120 ohm
R951	24555153	OMF, 15k ohm, 3W
R952	24555153	OMF, 15k ohm, 3W
R953	24366390	CF, 39 ohm
R956	24366102	CF, 1k ohm
R957	24366330	CF, 33 ohm
R961	24366102	CF, 1k ohm
R962	24366361	CF, 360 ohm
R964	24366332	CF, 3300 ohm
R965	24366471	CF, 470 ohm
R966	24366821	CF, 820 ohm
R967	24366102	CF, 1k ohm
R968	24366680	CF, 68 ohm
R969	24366103	CF, 10k ohm
R970	24366222	CF, 2200 ohm
R971	24367152	CF, 1500 ohm, ±2%
R972	24367471	CF, 470 ohm, ±2%
R973	24367681	CF, 680 ohm, ±2%
R974	24367681	CF, 680 ohm, ±2%
R975	24366242	CF, 2400 ohm
R976	24367562	CF, 5600 ohm, ±2%
R977	24367472	CF, 4700 ohm, ±2%
R978	24367681	CF, 680 ohm, ±2%
R6101	24366473	CF, 47k ohm
R6102	24366103	CF, 10k ohm
R6103	24366331	CF, 330 ohm
R7001	24366470	CF, 47 ohm
R7002	24366823	CF, 82k ohm
R7003	24366472	CF, 4700 ohm
R7004	24366103	CF, 10k ohm
R7005	24366473	CF, 47k ohm
R7006	24366104	CF, 100k ohm
R7007	24366333	CF, 33k ohm
R7008	24366471	CF, 470 ohm
R7009	24366471	CF, 470 ohm
R7010	24366222	CF, 2200 ohm
R7011	24366151	CF, 150 ohm
R7012	24366151	CF, 150 ohm
R7013	24366470	CF, 47 ohm
R7014	24366471	CF, 470 ohm
R7015	24366471	CF, 470 ohm
R7016	24366101	CF, 100 ohm
R7017	24366101	CF, 100 ohm
R7018	24366101	CF, 100 ohm
R7021	24554151	OMF, 150 ohm, 2W
R7022	24323189	MF, 1.8 ohm, 2W
R7031	24366391	CF, 390 ohm
R7032	24366222	CF, 2200 ohm
R7099	24366152	CF, 1500 ohm
R7101	24366470	CF, 47 ohm
R7102	24366823	CF, 82k ohm
R7103	24366472	CF, 4700 ohm
R7104	24366103	CF, 10k ohm
R7105	24366473	CF, 47k ohm
R7106	24366104	CF, 100k ohm
R7107	24366333	CF, 33k ohm

Location No.	Part No.	Description
R7108	24366471	CF, 470 ohm
R7109	24366471	CF, 470 ohm
R7111	24366151	CF, 150 ohm
R7112	24000151	MF, 750 ohm, 1/4W
R7113	24366470	CF, 47 ohm
R7114	24366471	CF, 470 ohm
R7115	24366471	CF, 470 ohm
R7116	24366101	CF, 100 ohm
R7117	24366101	CF, 100 ohm
R7118	24366101	CF, 100 ohm
R7121	24554151	OMF, 150 ohm, 2W
R7122	24323189	MF, 1.8 ohm, 2W
R7131	24366391	CF, 390 ohm
R7132	24366222	CF, 2200 ohm
R7199	24366152	CF, 1500 ohm
R7201	24366470	CF, 47 ohm
R7202	24366823	CF, 82k ohm
R7203	24366472	CF, 4700 ohm
R7204	24366103	CF, 10k ohm
R7205	24366473	CF, 47k ohm
R7206	24366104	CF, 100k ohm
R7207	24366333	CF, 33k ohm
R7208	24366471	CF, 470 ohm
R7209	24366471	CF, 470 ohm
R7210	24366222	CF, 2200 ohm
R7211	24366151	CF, 150 ohm
R7212	24366151	CF, 150 ohm
R7213	24366470	CF, 47 ohm
R7214	24366471	CF, 470 ohm
R7215	24366471	CF, 470 ohm
R7216	24366101	CF, 100 ohm
R7217	24366101	CF, 100 ohm
R7218	24366101	CF, 100 ohm
R7221	24554151	OMF, 150 ohm, 2W
R7222	24323189	MF, 1.8 ohm, 2W
R7231	24366391	CF, 390 ohm
R7299	24366152	CF, 1500 ohm
R7301	24366470	CF, 47 ohm
R7302	24366823	CF, 82k ohm
R7303	24366472	CF, 4700 ohm
R7304	24366103	CF, 10k ohm
R7305	24366473	CF, 47k ohm
R7306	24366104	CF, 100k ohm
R7307	24366333	CF, 33k ohm
R7308	24366471	CF, 470 ohm
R7309	24366471	CF, 470 ohm
R7311	24366151	CF, 150 ohm
R7312	24366151	CF, 150 ohm
R7313	24366470	CF, 47 ohm
R7314	24366471	CF, 470 ohm
R7315	24366471	CF, 470 ohm
R7316	24366101	CF, 100 ohm
R7317	24366101	CF, 100 ohm
R7318	24366101	CF, 100 ohm
R7321	24554151	OMF, 150 ohm, 2W
R7322	24323189	MF, 1.8 ohm, 2W
R7331	24366391	CF, 390 ohm
R7399	24366152	CF, 1500 ohm
R7401	24366470	CF, 47 ohm
R7402	24366823	CF, 82k ohm
R7403	24366472	CF, 4700 ohm
R7404	24366103	CF, 10k ohm
R7405	24366473	CF, 47k ohm
R7406	24366104	CF, 100k ohm

Location No.	Part No.	Description
R7407	24366333	CF, 33k ohm
R7408	24366471	CF, 470 ohm
R7409	24366471	CF, 470 ohm
R7410	24366222	CF, 2200 ohm
R7411	24366151	CF, 150 ohm
R7412	24366151	CF, 150 ohm
R7413	24366470	CF, 47 ohm
R7414	24366471	CF, 470 ohm
R7415	24366471	CF, 470 ohm
R7416	24366101	CF, 100 ohm
R7417	24366101	CF, 100 ohm
R7418	24366101	CF, 100 ohm
R7421	24554151	OMF, 150 ohm, 2W
R7422	24323189	MF, 1.8 ohm, 2W
R7431	24366391	CF, 390 ohm
R7432	24366222	CF, 2200 ohm
R7499	24366152	CF, 1500 ohm
R7501	24366470	CF, 47 ohm
R7502	24366823	CF, 82k ohm
R7503	24366472	CF, 4700 ohm
R7504	24366103	CF, 10k ohm
R7505	24366473	CF, 47k ohm
R7506	24366104	CF, 100k ohm
R7507	24366333	CF, 33k ohm
R7508	24366471	CF, 470 ohm
R7509	24366471	CF, 470 ohm
R7511	24366151	CF, 150 ohm
R7512	24366151	CF, 150 ohm
R7513	24366470	CF, 47 ohm
R7514	24366471	CF, 470 ohm
R7515	24366471	CF, 470 ohm
R7516	24366101	CF, 100 ohm
R7517	24366101	CF, 100 ohm
R7518	24366101	CF, 100 ohm
R7521	24554151	OMF, 150 ohm, 2W
R7522	24323189	MF, 1.8 ohm, 2W
R7531	24366391	CF, 390 ohm
R7599	24366152	CF, 1500 ohm
R7601	24366222	CF, 2200 ohm
R7602	24366222	CF, 2200 ohm
R7603	24381472	OMF, 4700 ohm, 1/2W
R7604	24366104	CF, 100k ohm
R7605	24366472	CF, 4700 ohm
R7606	24366102	CF, 1k ohm
R7607	24381472	OMF, 4700 ohm, 1/2W
R7608	24366223	CF, 22k ohm
R7609	24366153	CF, 15k ohm
R7612	24366223	CF, 22k ohm
R7703	24366473	CF, 47k ohm
R7704	24366103	CF, 10k ohm
R7705	24366472	CF, 4700 ohm
R7706	24366222	CF, 2200 ohm
R7708	24366471	CF, 470 ohm
R7738	24554101	OMF, 100 ohm, 2W
R7741	24366471	CF, 470 ohm
R7742	24366222	CF, 2200 ohm
R7743	24366223	CF, 22k ohm
R7744	24366102	CF, 1k ohm
R7745	24366222	CF, 2200 ohm
R7746	24366223	CF, 22k ohm
R7747	24366222	CF, 2200 ohm
R7749	24366331	CF, 330 ohm
R7750	24323278	MF, 0.27 ohm, 2W
R7751	24366471	CF, 470 ohm

Location No.	Part No.	Description
R7752	24366101	CF, 100 ohm
R7753	24366101	CF, 100 ohm
R7754	24366101	CF, 100 ohm
R7755	24366102	CF, 1k ohm
R7757	24366223	CF, 22k ohm
R7758	24366222	CF, 2200 ohm
R7763	24366471	CF, 470 ohm
R7764	24366331	CF, 330 ohm
R7765	24323398	MF, 0.39 ohm, 2W
R7766	24366223	CF, 22k ohm
R7767	24366223	CF, 22k ohm
R7768	24366102	CF, 1k ohm
R7770	24366153	CF, 15k ohm
R7771	24366102	CF, 1k ohm
R7772	24366102	CF, 1k ohm
R7779	24366102	CF, 1k ohm
R7780	24366102	CF, 1k ohm
R7781	24366333	CF, 33k ohm
R7782	24323828	MF, 0.82 ohm, 2W
R7783	24366331	CF, 330 ohm
R7784	24366471	CF, 470 ohm
R7785	24366222	CF, 2200 ohm
R7786	24366103	CF, 10k ohm
R7787	24366104	CF, 100k ohm
R7788	24366103	CF, 10k ohm
R7789	24366471	CF, 470 ohm
R7790	24552182	OMF, 1800 ohm, 1/2W
R7791	24552681	OMF, 680 ohm, 1/2W
R7792	24366471	CF, 470 ohm
R7794	24366223	CF, 22k ohm
R8301	24366473	CF, 47k ohm
R8302	24366273	CF, 27k ohm
R9601	24366101	CF, 100 ohm
R9602	24366362	CF, 3600 ohm
R9603	24366392	CF, 3900 ohm
R9604	24366272	CF, 2700 ohm
R9605	24366682	CF, 6800 ohm
R9606	24366362	CF, 3600 ohm
R9613	24366560	CF, 56 ohm
R9614	24366560	CF, 56 ohm
R9615	24366101	CF, 100 ohm
R9616	24366102	CF, 1k ohm
RA01	24366102	CF, 1k ohm
RA02	24366102	CF, 1k ohm
RA03	24366102	CF, 1k ohm
RA06	24366102	CF, 1k ohm
RA07	24366102	CF, 1k ohm
RA08	24366102	CF, 1k ohm
RA09	24366102	CF, 1k ohm
RA10	24366102	CF, 1k ohm
RA11	24366102	CF, 1k ohm
RA13	24366102	CF, 1k ohm
RA14	24366102	CF, 1k ohm
RA15	24366103	CF, 10k ohm
RA19	24366331	CF, 330 ohm
RA20	24366102	CF, 1k ohm
RA21	24366102	CF, 1k ohm
RA22	24366102	CF, 1k ohm
RA24	24366153	CF, 15k ohm
RA31	24366103	CF, 10k ohm
RA32	24366103	CF, 10k ohm
RA36	24366102	CF, 1k ohm
RA37	24366102	CF, 1k ohm
RA53	24366101	CF, 100 ohm

Location No.	Part No.	Description
RA55	24366101	CF, 100 ohm
RA57	24366101	CF, 100 ohm
RA59	24366102	CF, 1k ohm
RA61	24366102	CF, 1k ohm
RA62	24366102	CF, 1k ohm
RA63	24366102	CF, 1k ohm
RA70	24366333	CF, 33k ohm
RA71	24366103	CF, 10k ohm
RA71	24366683	CF, 68k ohm
RA72	24366103	CF, 10k ohm
RA72	24366223	CF, 22k ohm
RA73	24366103	CF, 10k ohm
RA75	24366333	CF, 33k ohm
RA76	24366103	CF, 10k ohm
RA77	24366223	CF, 22k ohm
RA78	24366683	CF, 68k ohm
RA91	24366103	CF, 10k ohm
RA92	24366472	CF, 4700 ohm
RA93	24366103	CF, 10k ohm
RA96	24366103	CF, 10k ohm
RA97	24366472	CF, 4700 ohm
RA98	24366103	CF, 10k ohm
RA99	24366562	CF, 5600 ohm
RA104	24366682	CF, 6800 ohm
RA105	24366103	CF, 10k ohm
RA106	24366682	CF, 6800 ohm
RA107	24366472	CF, 4700 ohm
RA108	24366472	CF, 4700 ohm
RA120	24366472	CF, 4700 ohm
RA140	24366153	CF, 15k ohm
RA150	24366103	CF, 10k ohm
RA310	24366101	CF, 100 ohm
RA410	24366273	CF, 27k ohm
RB01	24366271	CF, 270 ohm
RB02	24366471	CF, 470 ohm
RB03	24366101	CF, 100 ohm
RB04	24366223	CF, 22k ohm
RB05	24366223	CF, 22k ohm
RB07	24366271	CF, 270 ohm
RB08	24366271	CF, 270 ohm
RB09	24366470	CF, 47 ohm
RB10	24366101	CF, 100 ohm
RB11	24366103	CF, 10k ohm
RB12	24366471	CF, 470 ohm
RB40	24366103	CF, 10k ohm
RB43	24366822	CF, 8200 ohm
RB44	24366103	CF, 10k ohm
RB45	24366101	CF, 100 ohm
RB81	24366122	CF, 1200 ohm
RB82	24366123	CF, 12k ohm
RB83	24366123	CF, 12k ohm
RB84	24366562	CF, 5600 ohm
RB90	24366392	CF, 3900 ohm
RB91	24366473	CF, 47k ohm
RB92	24366271	CF, 270 ohm
RB93	24366271	CF, 270 ohm
RB94	24366222	CF, 2200 ohm
RB95	24366222	CF, 2200 ohm
RB96	24366273	CF, 27k ohm
RB97	24366273	CF, 27k ohm
RB98	24366102	CF, 1k ohm
RF01	24872332	Chip, 3300 ohm, 1/16W
RF03	24872682	Chip, 6800 ohm, 1/16W
RF04	24872223	Chip, 22k ohm, 1/16W

Location No.	Part No.	Description
RF06	24872102	Chip, 1k ohm, 1/16W
RF08	23103832	Chip (Ferrite Bead), TEM2125M
RF09	23103832	Chip (Ferrite Bead), TEM2125M
RF10	23103832	Chip (Ferrite Bead), TEM2125M
RF11	24872103	Chip, 10k ohm, 1/16W
RF12	24872101	Chip, 100 ohm, 1/16W
RF13	24872101	Chip, 100 ohm, 1/16W
RF14	24872101	Chip, 100 ohm, 1/16W
RF15	24872103	Chip, 10k ohm, 1/16W
RF16	24872471	Chip, 470 ohm, 1/16W
RF20	24872472	Chip, 4700 ohm, 1/16W
RF21	24000824	Chip, Jumper, 2125 type
RF22	24872102	Chip, 1k ohm, 1/16W
RF24	24872102	Chip, 1k ohm, 1/16W
RF26	24872102	Chip, 1k ohm, 1/16W
RF27	24872103	Chip, 10k ohm, 1/16W
RF28	24872102	Chip, 1k ohm, 1/16W
RF29	24872103	Chip, 10k ohm, 1/16W
RF30	24872103	Chip, 10k ohm, 1/16W
RF38	24872153	Chip, 15k ohm, 1/16W
RF39	24872472	Chip, 4700 ohm, 1/16W
RJ02	24872101	Chip, 100 ohm, 1/16W
RQ01	24872102	Chip, 1k ohm, 1/16W
RQ03	24872102	Chip, 1k ohm, 1/16W
RQ04	24872511	Chip, 510 ohm, 1/16W
RQ05	24872471	Chip, 470 ohm, 1/16W
RQ06	24872471	Chip, 470 ohm, 1/16W
RQ07	24872103	Chip, 10k ohm, 1/16W
RQ08	24872102	Chip, 1k ohm, 1/16W
RQ09	24872102	Chip, 1k ohm, 1/16W
RQ10	24872102	Chip, 1k ohm, 1/16W
RQ11	24872561	Chip, 560 ohm, 1/16W
RQ12	24872561	Chip, 560 ohm, 1/16W
RQ13	24872203	Chip, 20k ohm, 1/16W
RQ14	24872273	Chip, 27k ohm, 1/16W
RQ20	24872563	Chip, 56k ohm, 1/16W
RR01	24366102	CF, 1k ohm
RR02	24366104	CF, 100k ohm
RR03	24366222	CF, 2200 ohm
RR04	24366101	CF, 100 ohm
RR04	24872102	Chip, 1k ohm, 1/16W
RR05	24366102	CF, 1k ohm
RR05	24872102	Chip, 1k ohm, 1/16W
RR06	24000824	Chip, Jumper, 2125 type
RR06	24366223	CF, 22k ohm
RR07	24000824	Chip, Jumper, 2125 type
RR07	24366152	CF, 1500 ohm
RR08	24366332	CF, 3300 ohm
RR09	24000824	Chip, Jumper, 2125 type
RR09	24366222	CF, 2200 ohm
RR10	24366182	CF, 1800 ohm
RR10	24872103	Chip, 10k ohm, 1/16W
RR11	24366152	CF, 1500 ohm
RR11	24872473	Chip, 47k ohm, 1/16W
RR12	24366152	CF, 1500 ohm
RR12	24872102	Chip, 1k ohm, 1/16W
RR13	24366152	CF, 1500 ohm
RR13	24872622	Chip, 6200 ohm, 1/16W
RR15	24366391	CF, 390 ohm
RR16	24366391	CF, 390 ohm
RR17	24366391	CF, 390 ohm

Location No.	Part No.	Description
RR20	24872103	Chip, 10k ohm, 1/16W
RR22	24366103	CF, 10k ohm
RR23	24366103	CF, 10k ohm
RR24	24000824	Chip, Jumper, 2125 type
RR25	24872102	Chip, 1k ohm, 1/16W
RR28	24872473	Chip, 47k ohm, 1/16W
RR29	24872473	Chip, 47k ohm, 1/16W
RR31	24366331	CF, 330 ohm
RR32	24366331	CF, 330 ohm
RR32	24872331	Chip, 330 ohm, 1/16W
RR33	24366331	CF, 330 ohm
RR33	24872331	Chip, 330 ohm, 1/16W
RR34	24366102	CF, 1k ohm
RR34	24872331	Chip, 330 ohm, 1/16W
RR35	24366392	CF, 3900 ohm
RR36	24366392	CF, 3900 ohm
RR37	24366392	CF, 3900 ohm
RR40	24366102	CF, 1k ohm
RR41	24366332	CF, 3300 ohm
RR48	24366222	CF, 2200 ohm
RR62	24366102	CF, 1k ohm
RR63	24366332	CF, 3300 ohm
RR64	24366152	CF, 1500 ohm
RR65	24366102	CF, 1k ohm
RR66	24366101	CF, 100 ohm
RR67	24366271	CF, 270 ohm
RR68	24366332	CF, 3300 ohm
RR69	24366152	CF, 1500 ohm
RR70	24366102	CF, 1k ohm
RR71	24366332	CF, 3300 ohm
RR72	24366332	CF, 3300 ohm
RR73	24366332	CF, 3300 ohm
RR81	24366271	CF, 270 ohm
RR82	24366101	CF, 100 ohm
RR83	24366271	CF, 270 ohm
RR84	24366101	CF, 100 ohm
RR85	24366102	CF, 1k ohm
RR86	24366152	CF, 1500 ohm
RR87	24366332	CF, 3300 ohm
RR88	24366101	CF, 100 ohm
RR99	24474102	CD, 1000pF, ±10%
RS01	24872681	Chip, 680 ohm, 1/16W
RS02	24872681	Chip, 680 ohm, 1/16W
RS03	24872101	Chip, 100 ohm, 1/16W
RS04	24872101	Chip, 100 ohm, 1/16W
RS05	24872472	Chip, 4700 ohm, 1/16W
RS06	24872472	Chip, 4700 ohm, 1/16W
RS07	24872472	Chip, 4700 ohm, 1/16W
RS08	24872472	Chip, 4700 ohm, 1/16W
RS09	24872472	Chip, 4700 ohm, 1/16W
RS10	24872472	Chip, 4700 ohm, 1/16W
RS13	24872101	Chip, 100 ohm, 1/16W
RS14	24872101	Chip, 100 ohm, 1/16W
RS15	24872104	Chip, 100k ohm, 1/16W
RS16	24872104	Chip, 100k ohm, 1/16W
RS17	24872223	Chip, 22k ohm, 1/16W
RS18	24872223	Chip, 22k ohm, 1/16W
RS19	24872681	Chip, 680 ohm, 1/16W
RS20	24872681	Chip, 680 ohm, 1/16W
RS21	24872222	Chip, 2200 ohm, 1/16W
RS22	24872222	Chip, 2200 ohm, 1/16W
RS23	24872101	Chip, 100 ohm, 1/16W
RS24	24872101	Chip, 100 ohm, 1/16W
RS27	24872104	Chip, 100k ohm, 1/16W

Location No.	Part No.	Description
RS28	24872104	Chip, 100k ohm, 1/16W
RS29	24872223	Chip, 22k ohm, 1/16W
RS30	24872223	Chip, 22k ohm, 1/16W
RS31	24872103	Chip, 10k ohm, 1/16W
RS32	24872104	Chip, 100k ohm, 1/16W
RS35	24872223	Chip, 22k ohm, 1/16W
RS36	24872223	Chip, 22k ohm, 1/16W
RS37	24872104	Chip, 100k ohm, 1/16W
RS38	24872104	Chip, 100k ohm, 1/16W
RS43	24872681	Chip, 680 ohm, 1/16W
RS44	24872681	Chip, 680 ohm, 1/16W
RS56	24872102	Chip, 1k ohm, 1/16W
RS57	24872223	Chip, 22k ohm, 1/16W
RS58	24872223	Chip, 22k ohm, 1/16W
RS59	24872681	Chip, 680 ohm, 1/16W
RS60	24872102	Chip, 1k ohm, 1/16W
RV01	24872101	Chip, 100 ohm, 1/16W
RV02	24872101	Chip, 100 ohm, 1/16W
RV03	24872101	Chip, 100 ohm, 1/16W
RV04	24872101	Chip, 100 ohm, 1/16W
RV05	24872101	Chip, 100 ohm, 1/16W
RV06	24872101	Chip, 100 ohm, 1/16W
RV07	24872162	Chip, 1600 ohm, 1/16W
RV08	24872162	Chip, 1600 ohm, 1/16W
RV09	24872101	Chip, 100 ohm, 1/16W
RV10	24872101	Chip, 100 ohm, 1/16W
RV12	24872681	Chip, 680 ohm, 1/16W
RV13	24872681	Chip, 680 ohm, 1/16W
RV16	24872271	Chip, 270 ohm, 1/16W
RV18	24872123	Chip, 12k ohm, 1/16W
RV19	24872101	Chip, 100 ohm, 1/16W
RV20	24872101	Chip, 100 ohm, 1/16W
RV21	24872151	Chip, 150 ohm, 1/16W
RV23	24552101	OMF, 100 ohm, 1/2W
RV25	24872101	Chip, 100 ohm, 1/16W
RV26	24366181	CF, 180 ohm
RV27	24872750	Chip, 75 ohm, 1/16W
RV28	24872683	Chip, 68k ohm, 1/16W
RV29	24872273	Chip, 27k ohm, 1/16W
RV30	24872750	Chip, 75 ohm, 1/16W
RV31	24872750	Chip, 75 ohm, 1/16W
RV32	24872750	Chip, 75 ohm, 1/16W
RV33	24872123	Chip, 12k ohm, 1/16W
RV34	24872123	Chip, 12k ohm, 1/16W
RV35	24872103	Chip, 10k ohm, 1/16W
RV36	24872101	Chip, 100 ohm, 1/16W
RV37	24872750	Chip, 75 ohm, 1/16W
RV60	24366681	CF, 680 ohm
RV60	24872102	Chip, 1k ohm, 1/16W
RV61	24366681	CF, 680 ohm
RV61	24552101	OMF, 100 ohm, 1/2W
RV62	24872101	Chip, 100 ohm, 1/16W
RV63	24552151	OMF, 150 ohm, 1/2W
RV64	24872750	Chip, 75 ohm, 1/16W
RV65	24552101	OMF, 100 ohm, 1/2W
RV66	24872101	Chip, 100 ohm, 1/16W
RV67	24552151	OMF, 150 ohm, 1/2W
RV68	24872750	Chip, 75 ohm, 1/16W
RV70	24872101	Chip, 100 ohm, 1/16W
RV71	24872472	Chip, 4700 ohm, 1/16W
RV73	24872103	Chip, 10k ohm, 1/16W
RV74	24872104	Chip, 100k ohm, 1/16W
RV78	24872100	Chip, 10 ohm, 1/16W
RV79	24872102	Chip, 1k ohm, 1/16W

Location No.	Part No.	Description
RV80	24872271	Chip, 270 ohm, 1/16W
RV81	24872750	Chip, 75 ohm, 1/16W
RV82	24872101	Chip, 100 ohm, 1/16W
RV85	24872750	Chip, 75 ohm, 1/16W
RV86	24872750	Chip, 75 ohm, 1/16W
RV87	24872750	Chip, 75 ohm, 1/16W
RV89	24872750	Chip, 75 ohm, 1/16W
RV90	24872681	Chip, 680 ohm, 1/16W
RV91	24872681	Chip, 680 ohm, 1/16W
RV92	24872100	Chip, 10 ohm, 1/16W
RV93	24872104	Chip, 100k ohm, 1/16W
RV94	24872103	Chip, 10k ohm, 1/16W
RV95	24872472	Chip, 4700 ohm, 1/16W
RV97	24872101	Chip, 100 ohm, 1/16W
RV800	24366100	CF, 10 ohm
RV801	24366222	CF, 2200 ohm
RW02	24366271	CF, 270 ohm
RW02	24872563	Chip, 56k ohm, 1/16W
RW03	24872393	Chip, 39k ohm, 1/16W
RW04	24872560	Chip, 56 ohm, 1/16W
RW05	24872102	Chip, 1k ohm, 1/16W
RW06	24872151	Chip, 150 ohm, 1/16W
RW07	24872222	Chip, 2200 ohm, 1/16W
RW08	24872821	Chip, 820 ohm, 1/16W
RW09	24366563	CF, 56k ohm
RW09	24872560	Chip, 56 ohm, 1/16W
RW10	24872152	Chip, 1500 ohm, 1/16W
RW11	24872561	Chip, 560 ohm, 1/16W
RW12	24872272	Chip, 2700 ohm, 1/16W
RW13	24366393	CF, 39k ohm
RW13	24872821	Chip, 820 ohm, 1/16W
RW14	24552121	OMF, 120 ohm, 1/2W
RW14	24872560	Chip, 56 ohm, 1/16W
RW15	24366473	CF, 47k ohm
RW15	24872152	Chip, 1500 ohm, 1/16W
RW16	24366273	CF, 27k ohm
RW16	24872561	Chip, 560 ohm, 1/16W
RW17	24366333	CF, 33k ohm
RW17	24872272	Chip, 2700 ohm, 1/16W
RW18	24366101	CF, 100 ohm
RW18	24872821	Chip, 820 ohm, 1/16W
RW19	24366100	CF, 10 ohm
RW20	24366392	CF, 3900 ohm
RW20	24872101	Chip, 100 ohm, 1/16W
RW21	24872102	Chip, 1k ohm, 1/16W
RW22	24366102	CF, 1k ohm
RW22	24872101	Chip, 100 ohm, 1/16W
RW23	24366101	CF, 100 ohm
RW23	24872821	Chip, 820 ohm, 1/16W
RW24	24366331	CF, 330 ohm
RW24	24872821	Chip, 820 ohm, 1/16W
RW25	24366182	CF, 1800 ohm
RW25	24872101	Chip, 100 ohm, 1/16W
RW26	24872101	Chip, 100 ohm, 1/16W
RW27	24872102	Chip, 1k ohm, 1/16W
RW28	24872271	Chip, 270 ohm, 1/16W
RW29	24872392	Chip, 3900 ohm, 1/16W
RW30	24552100	OMF, 10 ohm, 1/2W
RW30	24872152	Chip, 1500 ohm, 1/16W
RW31	24552331	OMF, 330 ohm, 1/2W
RW31	24872101	Chip, 100 ohm, 1/16W
RW32	24366820	CF, 82 ohm
RW32	24872101	Chip, 100 ohm, 1/16W
RW33	24366683	CF, 68k ohm

Location No.	Part No.	Description
RW33	24872102	Chip, 1k ohm, 1/16W
RW34	24366820	CF, 82 ohm
RW34	24872271	Chip, 270 ohm, 1/16W
RW35	24366683	CF, 68k ohm
RW35	24872392	Chip, 3900 ohm, 1/16W
RW36	24366330	CF, 33 ohm
RW36	24872152	Chip, 1500 ohm, 1/16W
RW37	24366152	CF, 1500 ohm
RW37	24872101	Chip, 100 ohm, 1/16W
RW38	24366102	CF, 1k ohm
RW39	24366152	CF, 1500 ohm
RW40	24366330	CF, 33 ohm
RW41	24366279	CF, 2.7 ohm
RW41	24872101	Chip, 100 ohm, 1/16W
RW42	24366279	CF, 2.7 ohm
RW42	24872101	Chip, 100 ohm, 1/16W
RW43	24554221	OMF, 220 ohm, 2W
RW43	24872182	Chip, 1800 ohm, 1/16W
RW44	24366122	CF, 1200 ohm
RW44	24872181	Chip, 180 ohm, 1/16W
RW45	24366122	CF, 1200 ohm
RW46	24872101	Chip, 100 ohm, 1/16W
RW47	24872222	Chip, 2200 ohm, 1/16W
RW60	24000824	Chip, Jumper, 2125 type
RW61	24872472	Chip, 4700 ohm, 1/16W
RW62	24872622	Chip, 6200 ohm, 1/16W
RW63	24872101	Chip, 100 ohm, 1/16W
RW64	24872101	Chip, 100 ohm, 1/16W
RW65	24872101	Chip, 100 ohm, 1/16W
RW66	24872681	Chip, 680 ohm, 1/16W
RW67	24872222	Chip, 2200 ohm, 1/16W
RW68	24872222	Chip, 2200 ohm, 1/16W
RW69	24872222	Chip, 2200 ohm, 1/16W
RW70	24872333	Chip, 33k ohm, 1/16W
RW71	24872182	Chip, 1800 ohm, 1/16W
RW72	24872182	Chip, 1800 ohm, 1/16W
RW73	24872103	Chip, 10k ohm, 1/16W
RW74	24872332	Chip, 3300 ohm, 1/16W
RW76	24872182	Chip, 1800 ohm, 1/16W
RW77	24000824	Chip, Jumper, 2125 type
RW78	24000824	Chip, Jumper, 2125 type
RW79	24000824	Chip, Jumper, 2125 type
RW80	24872331	Chip, 330 ohm, 1/16W
RW81	24872331	Chip, 330 ohm, 1/16W
RW82	24872102	Chip, 1k ohm, 1/16W
RW83	24872103	Chip, 10k ohm, 1/16W
RW84	24872102	Chip, 1k ohm, 1/16W
RW85	24000824	Chip, Jumper, 2125 type
RW89	24872102	Chip, 1k ohm, 1/16W
RW90	24000824	Chip, Jumper, 2125 type
RW91	24872103	Chip, 10k ohm, 1/16W
RW92	24872103	Chip, 10k ohm, 1/16W
RW93	24872101	Chip, 100 ohm, 1/16W
RW94	24872101	Chip, 100 ohm, 1/16W
RW95	24872101	Chip, 100 ohm, 1/16W
RW96	24872102	Chip, 1k ohm, 1/16W
RW100	24872563	Chip, 56k ohm, 1/16W
RW101	24872393	Chip, 39k ohm, 1/16W
RW102	24872563	Chip, 56k ohm, 1/16W
RW103	24872393	Chip, 39k ohm, 1/16W
RW104	24872682	Chip, 6800 ohm, 1/16W
RW105	24872392	Chip, 3900 ohm, 1/16W
RW107	24872103	Chip, 10k ohm, 1/16W
RW108	24872333	Chip, 33k ohm, 1/16W

Location No.	Part No.	Description
RW109	24872103	Chip, 10k ohm, 1/16W
RW110	24872333	Chip, 33k ohm, 1/16W
RW114	24872563	Chip, 56k ohm, 1/16W
RW116	24872222	Chip, 2200 ohm, 1/16W
RZ01	24872102	Chip, 1k ohm, 1/16W
RZ02	24872102	Chip, 1k ohm, 1/16W
RZ03	24872332	Chip, 3300 ohm, 1/16W
RZ04	24872102	Chip, 1k ohm, 1/16W
RZ05	24872221	Chip, 220 ohm, 1/16W
RZ06	24872821	Chip, 820 ohm, 1/16W
RZ07	24872101	Chip, 100 ohm, 1/16W
RZ08	24872471	Chip, 470 ohm, 1/16W
RZ09	24872101	Chip, 100 ohm, 1/16W
RZ10	24872222	Chip, 2200 ohm, 1/16W
RZ11	24872101	Chip, 100 ohm, 1/16W
RZ12	24872102	Chip, 1k ohm, 1/16W
RZ13	24872102	Chip, 1k ohm, 1/16W
RZ14	24872102	Chip, 1k ohm, 1/16W
RZ15	24872102	Chip, 1k ohm, 1/16W
RZ17	24872221	Chip, 220 ohm, 1/16W
RZ18	24872471	Chip, 470 ohm, 1/16W
RZ19	24872102	Chip, 1k ohm, 1/16W
RZ20	24872101	Chip, 100 ohm, 1/16W
RZ22	24872222	Chip, 2200 ohm, 1/16W
RZ29	24872331	Chip, 330 ohm, 1/16W
RZ30	24872331	Chip, 330 ohm, 1/16W

COILS & TRANSFORMERS

L101	23221803	Coil, Choke, TLN3040D
L200	23289479	Coil, Peaking, TRF44R7AF
L201	23289100	Coil, Peaking, TRF4100AF
L301	23103859	Coil (Ferrite Bead), TEM2011
L303	23237975	Coil, Peaking, TRF4101AC
L333	23238702	Coil, Peaking, TRF4101AJ
L400	23289101	Coil, Peaking, TRF4101AF
L441	23233977	Coil, Linearity, TLN2203AG
L441A	23960136	Adhesive, TSE3843-W
L442	23248186	Coil, Choke, TLN3346AD
L461	23248115	Coil, Choke, TLN3367D
⚠ L462	23231220	Deflection Yoke, TDY707JT(R)
⚠ L463	23231220	Deflection Yoke, TDY707JT(R)
⚠ L464	23231220	Deflection Yoke, TDY707JT(R)
L465	23103880	Coil (Ferrite Bead), TEM2011Y
L472	23102441	Magnet, MAG-1094
L473	23102441	Magnet, MAG-1094
L474	23102441	Magnet, MAG-1094
L501	23289100	Coil, Peaking, TRF4100AF
L502	23103852	Coil, Filter, TEM2028AH
L503	23289470	Coil, Peaking, TRF4470AF
L507	23103852	Coil, Filter, TEM2028AH
L510	23238718	Coil, Peaking, TRF4479AJ
L512	23103845	Coil, TEM2030AY
L513	23103845	Coil, TEM2030AY
L676	23103832	Chip (Ferrite Bead), TEM2125M
L677	23103832	Chip (Ferrite Bead), TEM2125M
L682	23103832	Chip (Ferrite Bead), TEM2125M
L683	23103832	Chip (Ferrite Bead), TEM2125M
L684	23289109	Coil, Peaking, TRF41R0AF
L685	23289109	Coil, Peaking, TRF41R0AF
L701	24366221	CF, 100 ohm

Location No.	Part No.	Description
L702	24366221	CF, 100 ohm
L707	23238562	Coil, Peaking, TRF4109AJ
L708	23238562	Coil, Peaking, TRF4109AJ
L709	23238562	Coil, Peaking, TRF4109AJ
L710	23238562	Coil, Peaking, TRF4109AJ
L711	23238562	Coil, Peaking, TRF4109AJ
L712	23238562	Coil, Peaking, TRF4109AJ
L713	23238562	Coil, Peaking, TRF4109AJ
L714	23238562	Coil, Peaking, TRF4109AJ
L719	23232878	Coil, Variable, TRF3503K
L720	23289102	Coil, Peaking, TRF4102AJ
L721	23237805	Coil, Peaking, TRF4222
L722	23289102	Coil, Peaking, TRF4102AJ
L723	23237805	Coil, Peaking, TRF4222
L724	23289102	Coil, Peaking, TRF4102AJ
L725	23237805	Coil, Peaking, TRF4222
L726	23289102	Coil, Peaking, TRF4102AJ
L727	23237805	Coil, Peaking, TRF4222
L728	23289102	Coil, Peaking, TRF4102AJ
L729	23237805	Coil, Peaking, TRF4222
L730	23289102	Coil, Peaking, TRF4102AJ
L731	23237805	Coil, Peaking, TRF4222
L737	23289560	Coil, Peaking, TRF4560AF
L738	23289560	Coil, Peaking, TRF4560AF
L739	23289560	Coil, Peaking, TRF4560AF
L740	23289560	Coil, Peaking, TRF4560AF
L742	23103866	Chip (Ferrite Bead), TEM2105T
L743	23103866	Chip (Ferrite Bead), TEM2105T
L744	23103866	Chip (Ferrite Bead), TEM2105T
L745	23103866	Chip (Ferrite Bead), TEM2105T
L746	23103866	Chip (Ferrite Bead), TEM2105T
L747	23103866	Chip (Ferrite Bead), TEM2105T
L748	23103866	Chip (Ferrite Bead), TEM2105T
L749	23103866	Chip (Ferrite Bead), TEM2105T
L801	23248213	Coil, Choke, TLN3481AH
L802	23248213	Coil, Choke, TLN3481AH
L803	23103859	Coil (Ferrite Bead), TEM2011
L804	23103859	Coil (Ferrite Bead), TEM2011
L853	23248035	Coil, Choke, TLN3278D
L854	23248073	Coil, Choke, TLN3299D
L855	23248073	Coil, Choke, TLN3299D
L856	23248073	Coil, Choke, TLN3299D
L857	23248073	Coil, Choke, TLN3299D
L858	23103859	Coil (Ferrite Bead), TEM2011
L859	23103859	Coil (Ferrite Bead), TEM2011
L860	23280022	Coil, Peaking, TRF4101AZ
L861	23103859	Coil (Ferrite Bead), TEM2011
L862	23248073	Coil, Choke, TLN3299D
L863	23103859	Coil (Ferrite Bead), TEM2011
L864	23103859	Coil (Ferrite Bead), TEM2011
L865	23103859	Coil (Ferrite Bead), TEM2011
L866	23248073	Coil, Choke, TLN3299D
L867	70211045	Coil, Choke, 0.02mH
L868	23103859	Coil (Ferrite Bead), TEM2011
L869	23103859	Coil (Ferrite Bead), TEM2011
L870	23248073	Coil, Choke, TLN3299D
L871	23248073	Coil, Choke, TLN3299D
L872	23248035	Coil, Choke, TLN3278D
L892	23238506	Coil, Peaking, TRF4229AJ
L893	23238714	Coil, Peaking, TRF4100AJ
L911	23237987	Coil, Peaking, TRF4100AC
L961	23289100	Coil, Peaking, TRF4100AF
L962	23237991	Coil, Peaking, TRF4479AC
L963	23237975	Coil, Peaking, TRF4101AC

Location No.	Part No.	Description
L6101	23103859	Coil (Ferrite Bead), TEM2011
L7701	23103859	Coil (Ferrite Bead), TEM2011
L7702	23103859	Coil (Ferrite Bead), TEM2011
L7703	23103859	Coil (Ferrite Bead), TEM2011
L7704	23103859	Coil (Ferrite Bead), TEM2011
L7705	23103859	Coil (Ferrite Bead), TEM2011
L7706	23103859	Coil (Ferrite Bead), TEM2011
LA01	23289100	Coil, Peaking, TRF4100AF
LC05	23238562	Coil, Peaking, TRF4109AJ
LC06	23103859	Coil (Ferrite Bead), TEM2011
LC26	23238562	Coil, Peaking, TRF4109AJ
LF01	23103775	Coil (Ferrite Bead), TEM2014
LF02	24366100	CF, 10 ohm
LF03	24366100	CF, 10 ohm
LF04	24366100	CF, 10 ohm
LF05	23238506	Coil, Peaking, TRF4229AJ
LF06	23238562	Coil, Peaking, TRF4109AJ
LF07	23238562	Coil, Peaking, TRF4109AJ
LF08	23238714	Coil, Peaking, TRF4100AJ
LF09	23238714	Coil, Peaking, TRF4100AJ
LF10	23238562	Coil, Peaking, TRF4109AJ
LF11	23289109	Coil, Peaking, TRF41R0AF
LF12	23289100	Coil, Peaking, TRF4100AF
LF13	23289100	Coil, Peaking, TRF4100AF
LF17	23289100	Coil, Peaking, TRF4100AF
LQ01	23238709	Coil, Peaking, TRF4270AJ
LQ02	23237991	Coil, Peaking, TRF4479AC
LQ03	23237991	Coil, Peaking, TRF4479AC
LQ04	23238718	Coil, Peaking, TRF4479AJ
LR01	23289100	Coil, Peaking, TRF4100AF
LR01	23289109	Coil, Peaking, TRF41R0AF
LR02	23289109	Coil, Peaking, TRF41R0AF
LR25	23103845	Coil, TEM2030AY
LR26	23103845	Coil, TEM2030AY
LS45	23103832	Chip (Ferrite Bead), TEM2125M
LS46	23103832	Chip (Ferrite Bead), TEM2125M
LV06	23103832	Chip (Ferrite Bead), TEM2125M
LV07	23103832	Chip (Ferrite Bead), TEM2125M
LV08	23289330	Coil, Peaking, TRF4330AF
LV09	23289100	Coil, Peaking, TRF4100AF
LV10	23289220	Coil, Peaking, TRF4220AF
LV11	23289330	Coil, Peaking, TRF4330AF
LV42	23289100	Coil, Peaking, TRF4100AF
LV43	23289100	Coil, Peaking, TRF4100AF
LV47	23238562	Coil, Peaking, TRF4109AJ
LW01	23103806	Chip (Ferrite Bead), TEM2114T
LW02	23103806	Chip (Ferrite Bead), TEM2114T
LW02	23261974	Coil, Choke, HC5-035
LW03	23103806	Chip (Ferrite Bead), TEM2114T
LW04	23103859	Coil (Ferrite Bead), TEM2011
LW04	24000824	Chip Jumper, 2125 Type
LW05	23103822	Chip (Ferrite Bead), TEM2117T
LW05	23103859	Coil (Ferrite Bead), TEM2011
LW06	23103822	Chip (Ferrite Bead), TEM2117T
LW07	23103822	Chip (Ferrite Bead), TEM2117T
LW08	23289100	Coil, Peaking, TRF4100AF
LW09	23103822	Chip (Ferrite Bead), TEM2117T
LW10	23103806	Chip (Ferrite Bead), TEM2114T
LW12	23238718	Coil, Peaking, TRF4479AJ
LW13	23238702	Coil, Peaking, TRF4101AJ

Location No.	Part No.	Description
LW14	23238702	Coil, Peaking, TRF4101AJ
LW15	23238718	Coil, Peaking, TRF4479AJ
LW16	23238718	Coil, Peaking, TRF4479AJ
LW17	23238718	Coil, Peaking, TRF4479AJ
LW41	23103806	Chip (Ferrite Bead), TEM2114T
LW42	23103806	Chip (Ferrite Bead), TEM2114T
LW80	23238562	Coil, Peaking, TRF4109AJ
LW81	23238562	Coil, Peaking, TRF4109AJ
LZ01	23238710	Coil, Peaking, TRF4220AJ
LZ02	23238714	Coil, Peaking, TRF4100AJ
LZ03	23238714	Coil, Peaking, TRF4100AJ
LZ04	23238708	Coil, Peaking, TRF4330AJ
LZ05	23238709	Coil, Peaking, TRF4270AJ
LZ08	23238707	Coil, Peaking, TRF4390AJ
LZ09	70131060	Beze Filter, ZBF253D-00
LZ10	70131060	Beze Filter, ZBF253D-00
T400	23224364	Transformer, Focus, TLN2168AH
T401	23224367	Transformer, Horiz. Drive, TLN1098AH
⚠T461	23236552	Transformer, Flyback, TFB3078BD
T461A	23192917	Anode Cap, TCCP5149
⚠T461Z	23236508	Transformer, Flyback, TFB3078ZD
T801	23211670	Line Filter, TRF3164G
⚠T803	23217432	Transformer, Power, TPW1562AZ
T804	23217358	Transformer, Choke, TPW2008AZ
⚠T862	23217433	Transformer, Converter, TPW3426AS

SEMICONDUCTORS

Q201	A6335470	Transistor, 2SC2712-Y
Q202	A6541130	Transistor, 2SA1162-Y
Q203	A6541130	Transistor, 2SA1162-Y
Q204	A6541130	Transistor, 2SA1162-Y
Q205	A6541130	Transistor, 2SA1162-Y
Q261	A6335470	Transistor, 2SC2712-Y
Q262	A6541130	Transistor, 2SA1162-Y
Q270	A6004040	Transistor, RN1404
Q271	A6004040	Transistor, RN1404
Q272	A6014040	Transistor, RN2404
Q273	A6335470	Transistor, 2SC2712-Y
Q281	23904943	IC, MM1111XS
Q282	A6534040	Transistor, 2SA1015-Y
Q291	A6330069	Transistor, 2CS2482 FA-1
Q295	A6317440	Transistor, 2SC1815-Y
Q301	23319787	IC, LA7833S
Q301B	70391355	Screw, BITTB3X8 SZN
Q302	B0385853	IC, TA1241AN
Q330	A6317440	Transistor, 2SC1815-Y
Q331	A6534040	Transistor, 2SA1015-Y
Q352	A6002030	Transistor, RN1203
Q353	A6002030	Transistor, RN1203
Q354	A6534145	Transistor, 2SA1020-Y(C)
Q360	B0350510	IC, TA75558S
Q361	23314548	Transistor, 2SC4256
Q370	A6534040	Transistor, 2SA1015-Y
Q371	A6534145	Transistor, 2SA1020-Y(C)
Q372	A6002030	Transistor, RN1203
Q402	A6330069	Transistor, 2CS2482 FA-1
Q404	A6873777	Transistor, 2SD2553

Location No.	Part No.	Description
Q404B	72471082	Screw, BRDT2W3X10 SZN
Q420	23314141	Transistor, 2SC3852
Q420B	70391356	Screw, BITTB3X10 SZN
Q421	A6317440	Transistor, 2SC1815-Y
Q430	23314707	Transistor, 2SD1944, H
Q460	23314850	Transistor, 2SA1788, E
Q460B	72471082	Screw, BRDT2W3X10 SZN
Q461	A6317440	Transistor, 2SC1815-Y
Q462	A6317440	Transistor, 2SC1815-Y
Q470	A6317440	Transistor, 2SC1815-Y
Q480	23314246	Transistor, 2SC2023 LF-4
Q483	B0345651	IC, TA7508P(J)
Q491	A6734590	Transistor, 2SC752(G)TM-Y
Q501	B0386208	IC, TA1276AN
Q502	A6335470	Transistor, 2SC2712-Y
Q503	A6541130	Transistor, 2SA1162-Y
Q504	A6335470	Transistor, 2SC2712-Y
Q518	A6335470	Transistor, 2SC2712-Y
Q601	23318413	IC, LA4282
Q611	A6534040	Transistor, 2SA1015-Y
Q612	A6534040	Transistor, 2SA1015-Y
Q622	A6317440	Transistor, 2SC1815-Y
Q671	B0350000	IC, TA75458P
Q681	A6342200	Transistor, 2CS2878-A
Q682	A6342200	Transistor, 2CS2878-A
Q701	23319808	IC, M5218AP
Q701	B0588213	IC, T7K64(Z)
Q702	A6317440	Transistor, 2SC1815-Y
Q703	23905014	IC, LC78816M
Q703	A6531140	Transistor, 2SA817-Y
Q704	23905014	IC, LC78816M
Q704	A6314440	Transistor, 2SC1627-Y
Q705	23905014	IC, LC78816M
Q705	A6314440	Transistor, 2SC1627-Y
Q706	A6531140	Transistor, 2SA817-Y
Q707	A6869040	Transistor, 2SD1407A-Y
Q707	B0379550	IC, TA8667P
Q707B	23035310	Screw, BTB3X10SZN
Q708	A6640600	Transistor, 2SB1016A-Y
Q708B	23035310	Screw, BTB3X10SZN
Q709	A6734590	Transistor, 2SC752(G)TM-Y
Q710	23314204	Transistor, 2SC2412K, Q
Q711	23319808	IC, M5218AP
Q711	23906924	IC, CAT24C16P
Q712	23906924	IC, CAT24C16P
Q712	A6317440	Transistor, 2SC1815-Y
Q713	23906924	IC, CAT24C16P
Q713	A6531140	Transistor, 2SA817-Y
Q714	23318977	IC, MC14052BFEL
Q714	A6314440	Transistor, 2SC1627-Y
Q715	23319808	IC, M5218AP
Q715	A6314440	Transistor, 2SC1627-Y
Q716	A6531140	Transistor, 2SA817-Y
Q717	23319808	IC, M5218AP
Q717	A6869040	Transistor, 2SD1407A-Y
Q717B	23035310	Screw, BTB3X10SZN
Q718	A6640600	Transistor, 2SB1016A-Y
Q718B	23035310	Screw, BTB3X10SZN
Q719	23319808	IC, M5218AP
Q722	A6317440	Transistor, 2SC1815-Y
Q723	A6531140	Transistor, 2SA817-Y
Q724	A6314440	Transistor, 2SC1627-Y
Q725	A6314440	Transistor, 2SC1627-Y
Q726	A6531140	Transistor, 2SA817-Y

Location No.	Part No.	Description
Q727	A6869040	Transistor, 2SD1407A-Y
Q727B	23035310	Screw, BTB3X10SZN
Q728	A6640600	Transistor, 2SB1016A-Y
Q728B	23035310	Screw, BTB3X10SZN
Q732	A6317440	Transistor, 2SC1815-Y
Q733	A6531140	Transistor, 2SA817-Y
Q734	A6314440	Transistor, 2SC1627-Y
Q735	A6314440	Transistor, 2SC1627-Y
Q736	A6531140	Transistor, 2SA817-Y
Q737	A6869040	Transistor, 2SD1407A-Y
Q737B	23035310	Screw, BTB3X10SZN
Q738	A6640600	Transistor, 2SB1016A-Y
Q738B	23035310	Screw, BTB3X10SZN
Q741	23319808	IC, M5218AP
Q742	A6317440	Transistor, 2SC1815-Y
Q743	A6531140	Transistor, 2SA817-Y
Q744	A6314440	Transistor, 2SC1627-Y
Q745	A6314440	Transistor, 2SC1627-Y
Q746	A6531140	Transistor, 2SA817-Y
Q747	A6869040	Transistor, 2SD1407A-Y
Q747B	23035310	Screw, BTB3X10SZN
Q748	A6640600	Transistor, 2SB1016A-Y
Q748B	23035310	Screw, BTB3X10SZN
Q749	A6314440	Transistor, 2SC1627-Y
Q750	A6314440	Transistor, 2SC1627-Y
Q751	A6531140	Transistor, 2SA817-Y
Q752	A6317440	Transistor, 2SC1815-Y
Q753	A6531140	Transistor, 2SA817-Y
Q754	23904521	IC, AN7805
Q754B	70391356	Screw, BITTB3X10 SZN
Q755	23904525	IC, AN7809
Q755B	70391356	Screw, BITTB3X10 SZN
Q756	23318841	IC, AN79M09F
Q756B	70391356	Screw, BITTB3X10 SZN
Q757	A6317440	Transistor, 2SC1815-Y
Q758	A6317440	Transistor, 2SC1815-Y
Q759	A6534040	Transistor, 2SA1015-Y
Q760	A6869040	Transistor, 2SD1407A-Y
Q760B	23035310	Screw, BTB3X10SZN
Q761	A6534040	Transistor, 2SA1015-Y
Q762	A6317440	Transistor, 2SC1815-Y
Q763	A6534145	Transistor, 2SA1020-Y(C)
Q764	B0487045	IC, TC74HC4049AP
Q765	A6640600	Transistor, 2SB1016A-Y
Q765B	23035310	Screw, BTB3X10SZN
Q766	A6317440	Transistor, 2SC1815-Y
Q767	B0470188	IC, TC4066BP(N)
Q768	A6534040	Transistor, 2SA1015-Y
Q769	A6317440	Transistor, 2SC1815-Y
Q770	A6534040	Transistor, 2SA1015-Y
Q771	A6533730	Transistor, 2SA1012-Y
Q771B	23035308	Screw, BTB3X8SZN
Q771C	23960136	Adhesive, TSE3843-W
Q772	A6534040	Transistor, 2SA1015-Y
Q773	A6317440	Transistor, 2SC1815-Y
Q774	A6317440	Transistor, 2SC1815-Y
Q775	A6531140	Transistor, 2SA817-Y
Q776	A6002020	Transistor, RN1202
Q801	23906540	IC, STR-Z4267
Q810	23906689	IC, PQ05RR11
Q810B	70391355	Screw, BITTB3X8 SZN
Q811	A6002050	Transistor, RN1205
Q812	A6317440	Transistor, 2SC1815-Y
Q821	A6002010	Transistor, RN1201

Location No.	Part No.	Description
Q831	23319941	IC, SI-3050C
Q831B	70391356	Screw, BITTB3X10 SZN
Q833	23905977	IC, PQ09RD11
Q833B	70391356	Screw, BITTB3X10 SZN
⚠ Q862	A8643108	Photo Coupler, TLP621(GR-LF
Q901	A6372621	Transistor, 2SC5360
Q902	A6317440	Transistor, 2SC1815-Y
Q911	A6372621	Transistor, 2SC5360
Q913	A6317440	Transistor, 2SC1815-Y
Q914	A6321240	Transistor, 2SC2120-Y
Q921	A6372621	Transistor, 2SC5360
Q922	A6317440	Transistor, 2SC1815-Y
Q961	A6317440	Transistor, 2SC1815-Y
Q962	A6509140	Transistor, 2SA562TM-Y
Q963	A6317440	Transistor, 2SC1815-Y
Q964	A6534040	Transistor, 2SA1015-Y
Q965	A6317440	Transistor, 2SC1815-Y
Q966	A6534040	Transistor, 2SA1015-Y
Q6101	A6317440	Transistor, 2SC1815-Y
Q9601	A6534040	Transistor, 2SA1015-Y
Q9602	A6534040	Transistor, 2SA1015-Y
Q9605	A6317440	Transistor, 2SC1815-Y
Q9606	A6534040	Transistor, 2SA1015-Y
QA01	23000786	IC, 750010-154S
QA02	23905666	IC, AT24C1610PC
QA02	23906923	IC, CAT24C08P
QA03	A6534040	Transistor, 2SA1015-Y
QA91	A6317440	Transistor, 2SC1815-Y
QA92	A6534040	Transistor, 2SA1015-Y
QB01	A6534040	Transistor, 2SA1015-Y
QB03	A6002050	Transistor, RN1205
QB03	A6534040	Transistor, 2SA1015-Y
QB04	A6534040	Transistor, 2SA1015-Y
QB81	A6342200	Transistor, 2CS2878-A
QB82	A6342200	Transistor, 2CS2878-A
QB83	A6534040	Transistor, 2SA1015-Y
QB92	A6317440	Transistor, 2SC1815-Y
QB93	A6534040	Transistor, 2SA1015-Y
QB94	A6534040	Transistor, 2SA1015-Y
QB95	A6534040	Transistor, 2SA1015-Y
QB96	A6534040	Transistor, 2SA1015-Y
QF01	23906822	IC, SDA5273-2S C
QF02	23314204	Transistor, 2SC2412K, Q
QF03	23314204	Transistor, 2SC2412K, Q
QF04	A6734590	Transistor, 2SC752(G)TM-Y
QF06	23314204	Transistor, 2SC2412K, Q
QF11	23906367	IC, PST9146NL
QQ01	B0385755	IC, TA1229N
QQ02	B0383881	IC, TA8772AN
QQ03	A6335470	Transistor, 2SC2712-Y
QQ04	A6335470	Transistor, 2SC2712-Y
QR01	23000123	IC, MB90096-192
QR01	B0386235	IC, TA1287P
QR03	23114530	Transistor, 2SA933S-Q
QR05	A6317440	Transistor, 2SC1815-Y
QR21	A6335470	Transistor, 2SC2712-Y
QR24	A6335470	Transistor, 2SC2712-Y
QR35	A6317440	Transistor, 2SC1815-Y
QR36	A6317440	Transistor, 2SC1815-Y
QR37	A6534040	Transistor, 2SA1015-Y
QR38	A6317440	Transistor, 2SC1815-Y
QR39	A6534040	Transistor, 2SA1015-Y
QR40	A6317440	Transistor, 2SC1815-Y
QR41	A6534040	Transistor, 2SA1015-Y

Location No.	Part No.	Description
QS01	A6359870	Transistor, 2SC3326-B
QS02	A6359870	Transistor, 2SC3326-B
QS03	A6335470	Transistor, 2SC2712-Y
QS04	A6335470	Transistor, 2SC2712-Y
QS05	A6359870	Transistor, 2SC3326-B
QS06	A6359870	Transistor, 2SC3326-B
QS07	A6014040	Transistor, RN2404
QS08	A6359870	Transistor, 2SC3326-B
QS09	A6359870	Transistor, 2SC3326-B
QS11	A6359870	Transistor, 2SC3326-B
QS12	A6014040	Transistor, RN2404
QV01	B0385650	IC, TA1218N
QV02	A6335470	Transistor, 2SC2712-Y
QV06	A6541130	Transistor, 2SA1162-Y
QV07	A6359870	Transistor, 2SC3326-B
QV08	A6335470	Transistor, 2SC2712-Y
QV09	23114528	Transistor, 2SC1740S, Q
QV10	A6335470	Transistor, 2SC2712-Y
QV11	A6335470	Transistor, 2SC2712-Y
QV12	23114528	Transistor, 2SC1740S, Q
QV14	23114528	Transistor, 2SC1740S, Q
QV15	A6359870	Transistor, 2SC3326-B
QV800	A6317440	Transistor, 2SC1815-Y
QW01	B0410841	IC, TC90A18AF(BH
QW02	23905013	IC, TLC29321PW
QW03	A6030640	IC, TC7S32F
QW04	A6030620	IC, TC7S04F
QW05	A6030640	IC, TC7S32F
QW06	A6030107	IC, TC7S14F
QW06	A6317440	Transistor, 2SC1815-Y
QW07	A6030685	IC, TC7S86F
QW07	A6734590	Transistor, 2SC752(G)TM-Y
QW08	B0485997	IC, TC74HC74AF
QW09	A6317440	Transistor, 2SC1815-Y
QW10	23314204	Transistor, 2SC2412K, Q
QW10	A6534040	Transistor, 2SA1015-Y
QW11	23314204	Transistor, 2SC2412K, Q
QW12	23314204	Transistor, 2SC2412K, Q
QW13	23314204	Transistor, 2SC2412K, Q
QW14	23314204	Transistor, 2SC2412K, Q
QW15	23314204	Transistor, 2SC2412K, Q
QW18	23314204	Transistor, 2SC2412K, Q
QW19	A6317440	Transistor, 2SC1815-Y
QW20	23314204	Transistor, 2SC2412K, Q
QW20	A6317440	Transistor, 2SC1815-Y
QW21	23314202	Transistor, 2SA1037K, Q
QW22	23314204	Transistor, 2SC2412K, Q
QW23	23314202	Transistor, 2SA1037K, Q
QW24	23314204	Transistor, 2SC2412K, Q
QW25	23314202	Transistor, 2SA1037K, Q
QW30	A6335470	Transistor, 2SC2712-Y
QW31	23906295	IC, μPC29M33HB
QW32	A6361770	Transistor, 2SC3437-Y
QW40	23314202	Transistor, 2SA1037K, Q
QW41	23314202	Transistor, 2SA1037K, Q
QW42	23314202	Transistor, 2SA1037K, Q
QW43	23314202	Transistor, 2SA1037K, Q
QW51	23314701	Transistor, 2SB1186A, E
QW52	23314705	Transistor, 2SD1763A, VE
QZ01	B0410895	IC, TC90A49P
QZ02	A6335470	Transistor, 2SC2712-Y
QZ03	A6541130	Transistor, 2SA1162-Y
QZ04	A6541130	Transistor, 2SA1162-Y
QZ05	A6541130	Transistor, 2SA1162-Y

Location No.	Part No.	Description
QZ06	A6541130	Transistor, 2SA1162-Y
QZ07	A6541130	Transistor, 2SA1162-Y
QZ08	A6335470	Transistor, 2SC2712-Y
D101	23316756	Diode, Zener, MTZJ33D
D201	23118041	Diode, MA111-(TX)
D301	23118479	Diode, BYD33J
D302	23118479	Diode, BYD33J
D303	23115599	Diode, 1N4148
D308	23118822	Diode, ERB12-02
D309	23118822	Diode, ERB12-02
D312	23115599	Diode, 1N4148
D316	23115599	Diode, 1N4148
D317	23115599	Diode, 1N4148
D331	23115599	Diode, 1N4148
D332	23316794	Diode, SC570ALFE2
D342	23115599	Diode, 1N4148
D351	23115599	Diode, 1N4148
D352	23115599	Diode, 1N4148
D353	23316672	Diode, Zener, MTZJ5.6B
D354	23115599	Diode, 1N4148
D360	23316677	Diode, Zener, MTZJ6.8A
D370	23316672	Diode, Zener, MTZJ5.6B
D371	23115599	Diode, 1N4148
D372	23118479	Diode, BYD33J
D401	23316687	Diode, Zener, MTZJ9.1B
D406	A7978850	Diode, S5295G
D408	23118338	Diode, RU-4AM LF-L1
D421	23118041	Diode, MA111-(TX)
D427	23316680	Diode, Zener, MTZJ7.5A
D428	23316751	Diode, Zener, MTZJ30C
D429	23316725	Diode, Zener, MTZJ15B
D430	23316568	Diode, Zener, MA8051-M, TX
D431	23316558	Diode, HSM2836C, TL
D432	23316568	Diode, Zener, MA8051-M, TX
D441	23316688	Diode, Zener, MTZJ9.1C
D443	23118338	Diode, RU-4AM LF-L1
D444	23118338	Diode, RU-4AM LF-L1
D448	23118479	Diode, BYD33J
D460	A7568480	Diode, TVR1G
D461	23316582	Diode, ERC20-06
D461C	23960136	Adhesive, TSE3843-W
D462	23115599	Diode, 1N4148
D463	23115599	Diode, 1N4148
D464	23316718	Diode, Zener, MTZJ12A
D465	23316718	Diode, Zener, MTZJ12A
D467	23118479	Diode, BYD33J
D470	23115599	Diode, 1N4148
D471	A7568460	Diode, TVR-1B
D474	23316719	Diode, Zener, MTZJ12B
D481	23316726	Diode, Zener, MTZJ15C
D482	23118479	Diode, BYD33J
D483	23316720	Diode, Zener, MTZJ12C
D484	23316668	Diode, Zener, MTZJ5.1A
D486	23115599	Diode, 1N4148
D487	23118479	Diode, BYD33J
D488	23115599	Diode, 1N4148
D489	23316681	Diode, Zener, MTZJ7.5B
D503	23115599	Diode, 1N4148
D504	23115599	Diode, 1N4148
D506	23115599	Diode, 1N4148
D599	23316687	Diode, Zener, MTZJ9.1B
D601	23115599	Diode, 1N4148
D602	23115599	Diode, 1N4148
D603	23115599	Diode, 1N4148

Location No.	Part No.	Description
D604	23115599	Diode, 1N4148
D611	23115599	Diode, 1N4148
D612	23115599	Diode, 1N4148
D613	23115599	Diode, 1N4148
D614	23115599	Diode, 1N4148
D615	23115599	Diode, 1N4148
D635	23115599	Diode, 1N4148
D671	23316739	Diode, Zener, MTZJ22C
D701	23118859	Diode, 1SS133
D702	23118859	Diode, 1SS133
D703	23118859	Diode, 1SS133
D704	23115599	Diode, 1N4148
D704	23118859	Diode, 1SS133
D705	23115599	Diode, 1N4148
D714	23115599	Diode, 1N4148
D715	23115599	Diode, 1N4148
D724	23115599	Diode, 1N4148
D725	23115599	Diode, 1N4148
D734	23115599	Diode, 1N4148
D735	23115599	Diode, 1N4148
D744	23115599	Diode, 1N4148
D745	23115599	Diode, 1N4148
D754	23115599	Diode, 1N4148
D755	23115599	Diode, 1N4148
D760	23115599	Diode, 1N4148
D761	23316666	Diode, Zener, MTZJ4.7B
D762	23316675	Diode, Zener, MTZJ6.2B
D763	23115599	Diode, 1N4148
D764	23115599	Diode, 1N4148
D767	23115599	Diode, 1N4148
D768	23316675	Diode, Zener, MTZJ6.2B
D769	23316675	Diode, Zener, MTZJ6.2B
D798	23115599	Diode, 1N4148
D799	23115599	Diode, 1N4148
D801	23316962	Diode, S1WBA20 4101
D802	23357041	Diode, LN6SB60-F05
D802B	72471082	Screw, BRDT2W3X10 SZN
D803	23316718	Diode, Zener, MTZJ12A
D804	23316718	Diode, Zener, MTZJ12A
D805	23316686	Diode, Zener, MTZJ9.1A
D806	23316747	Diode, Zener, MTZJ27C
D809	23316753	Diode, Zener, MTZJ33A
D810	23316747	Diode, Zener, MTZJ27C
D811	23118057	Diode, AG01A
D812	23316688	Diode, Zener, MTZJ9.1C
D813	23118060	Diode, AL01Z
D814	23316672	Diode, Zener, MTZJ5.6B
D816	24000656	Varistor, TNR15G471K
D817	23115599	Diode, 1N4148
D818	23115599	Diode, 1N4148
D819	23115599	Diode, 1N4148
D820	23316671	Diode, Zener, MTZJ5.6A
D821	23316718	Diode, Zener, MTZJ12A
D822	23316662	Diode, Zener, MTZJ4.3A
D853	23316813	Diode, EG1
D854	23316813	Diode, EG1
D855	23357215	Diode, D4SBS6
D855B	70391355	Screw, BITTB3X8 SZN
D856	23357216	Diode, D4SBL20U
D856B	70391355	Screw, BITTB3X8 SZN
D857	23115532	Diode, ERB12-01E
D858	23115599	Diode, 1N4148
D859	23357214	Diode, D4SBS4
D859B	70391355	Screw, BITTB3X8 SZN

Location No.	Part No.	Description
D860	23357217	Diode, D4SBL40
D860B	70391355	Screw, BITTB3X8 SZN
D862	23115599	Diode, 1N4148
D863	23316553	Diode, 1SS145
D891	23115599	Diode, 1N4148
D892	23316745	Diode, Zener, MTZJ27A
D893	23316672	Diode, Zener, MTZJ5.6B
D901	23115599	Diode, 1N4148
D902	23115599	Diode, 1N4148
D903	23115599	Diode, 1N4148
D911	23115599	Diode, 1N4148
D912	23115599	Diode, 1N4148
D913	23115599	Diode, 1N4148
D914	23115599	Diode, 1N4148
D915	23115599	Diode, 1N4148
D921	23115599	Diode, 1N4148
D922	23115599	Diode, 1N4148
D924	23115599	Diode, 1N4148
D925	23115599	Diode, 1N4148
D926	23115599	Diode, 1N4148
D965	23115599	Diode, 1N4148
D966	23115599	Diode, 1N4148
D7701	23115599	Diode, 1N4148
D7702	23316766	Diode, RU2YX, LF-C1
D7703	23115599	Diode, 1N4148
D7705	23115599	Diode, 1N4148
D7706	23115599	Diode, 1N4148
D7707	23115599	Diode, 1N4148
D7708	23115599	Diode, 1N4148
D7709	23316675	Diode, Zener, MTZJ6.2B
D7710	23316716	Diode, Zener, MTZJ11B
D7711	23316716	Diode, Zener, MTZJ11B
D7717	23316675	Diode, Zener, MTZJ6.2B
D7718	23316675	Diode, Zener, MTZJ6.2B
D7719	23316675	Diode, Zener, MTZJ6.2B
D7720	23316675	Diode, Zener, MTZJ6.2B
D7721	23316675	Diode, Zener, MTZJ6.2B
D7722	23316675	Diode, Zener, MTZJ6.2B
D7725	23115599	Diode, 1N4148
D8301	23115532	Diode, ERB12-01E
D8303	23115532	Diode, ERB12-01E
DA01	23115599	Diode, 1N4148
DA43	23115599	Diode, 1N4148
DA44	23115599	Diode, 1N4148
DA45	23115599	Diode, 1N4148
DA46	23115599	Diode, 1N4148
DA420	23115599	Diode, 1N4148
DB01	23358564	Diode (LED), SLR-56VC3FPQ
DB02	23358563	Diode (LED), SLR-56MC3FPQ
DB03	23358563	Diode (LED), SLR-56MC3FPQ
DB04	23358562	Diode (LED), SLR-56DC3FPQ
DF01	23316654	Diode, Zener, MTZJ3.0A
DF02	23115599	Diode, 1N4148
DR01	23115599	Diode, 1N4148
DR02	23115599	Diode, 1N4148
DR02	23316557	Diode, HSM221C, TL
DR03	23115599	Diode, 1N4148
DR03	23118351	Diode, Zener, RD4.7M-T1BB2
DR61	23115599	Diode, 1N4148
DR62	23115599	Diode, 1N4148
DR63	23115599	Diode, 1N4148
DR65	23115599	Diode, 1N4148
DV01	23118296	Diode, Zener, RD9.1M-T1BB2
DV02	23118296	Diode, Zener, RD9.1M-T1BB2

Location No.	Part No.	Description
DV03	23118296	Diode, Zener, RD9.1M-T1BB2
DV04	23118296	Diode, Zener, RD9.1M-T1BB2
DV05	23118296	Diode, Zener, RD9.1M-T1BB2
DV06	23118296	Diode, Zener, RD9.1M-T1BB2
DV07	23118296	Diode, Zener, RD9.1M-T1BB2
DV10	23316557	Diode, HSM221C, TL
DV11	23316557	Diode, HSM221C, TL
DV12	23118296	Diode, Zener, RD9.1M-T1BB2
DV14	23118296	Diode, Zener, RD9.1M-T1BB2
DV21	23316557	Diode, HSM221C, TL
DW04	23115599	Diode, 1N4148
DW05	23115599	Diode, 1N4148
DW21	23115599	Diode, 1N4148

MISCELLANEOUS

B224	23035412	Screw, BTB 4X12 SZN
B230	23037312	Screw, BTBW 3X12 SZN
B241	23035412	Screw, BTB 4X12 SZN
B330	23037312	Screw, BTBW 3X12 SZN
BB11A	23903022	Socket, 8P
BB11B	23903022	Socket, 8P
BB11C	23368627	Plug, 8P
BB12A	23903022	Socket, 8P
BB12B	23903022	Socket, 8P
BB12C	23368627	Plug, 8P
BB21A	23903022	Socket, 8P
BB21B	23903022	Socket, 8P
BB21C	23368627	Plug, 8P
BB22A	23903022	Socket, 8P
BB22B	23903022	Socket, 8P
BB22C	23368627	Plug, 8P
E921	23964147	Coolant EG/G TCP
E951	23964147	Coolant EG/G TCP
E981	23964147	Coolant EG/G TCP
⚠F801	23144507	Fuse, 3.15A, 250V
F801A	23165433	Holder, Fuse
F801B	23165433	Holder, Fuse
⚠F860	23144869	Fuse, 2.5A, 250V
F860A	23165433	Holder, Fuse
F860B	23165433	Holder, Fuse
⚠F870	23144867	Fuse, 4.0A, 250V
F870A	23165433	Holder, Fuse
F870B	23165433	Holder, Fuse
G005	23115599	Diode, 1N4148
G023	24327180	MF, 18 ohm, ±1%, 1/4W
G510	23289479	Coil, Peaking, TRF44R7AF
G527	24567104	PF, 0.1μF
G528	24567104	PF, 0.1μF
G529	24567104	PF, 0.1μF
G602	23238714	Coil, Peaking, TRF4100AJ
G603	23238714	Coil, Peaking, TRF4100AJ
GC06	23261959	Coil, Choke, TRF9240
GJ02	24000824	Chip Jumper, 2125Type
GJ03	24000824	Chip Jumper, 2125Type
GJ04	24000824	Chip Jumper, 2125Type
GJ05	24000824	Chip Jumper, 2125Type
GJ06	24000824	Chip Jumper, 2125Type
GJ08	24000824	Chip Jumper, 2125Type
GJ08	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ09	24000824	Chip Jumper, 2125Type
GJ26	24000824	Chip Jumper, 2125Type
GJ27	24000824	Chip Jumper, 2125Type
GJ28	24000824	Chip Jumper, 2125Type
GJ61	24000824	Chip Jumper, 2125Type
GJ62	24000824	Chip Jumper, 2125Type
GJ78	24000824	Chip Jumper, 2125Type
GJ79	24000824	Chip Jumper, 2125Type
GJ80	24000824	Chip Jumper, 2125Type
GJ81	24000824	Chip Jumper, 2125Type
GS01	24000824	Chip Jumper, 2125Type
GV05	23103832	Chip (Ferrite Bead), TEM2125M
GV07	24000824	Chip Jumper, 2125Type
GV08	24000824	Chip Jumper, 2125Type
GV11	24000824	Chip Jumper, 2125Type
GV13	24872681	Chip, 680 ohm, 1/16W
GV14	24000824	Chip Jumper, 2125Type
GV15	24000824	Chip Jumper, 2125Type
GV17	24000824	Chip Jumper, 2125Type
GV38	24000824	Chip Jumper, 2125Type
GV39	24000824	Chip Jumper, 2125Type
GV40	24000824	Chip Jumper, 2125Type
GV41	24872102	Chip, 1k ohm, 1/16W
GV97	24872101	Chip, 100 ohm, 1/16W
H002	23148745	Module, MPSN11C, NICAM/IGR A-PRO A
KB01	23904946	Remote Sensor, RPM-676CBR-S
P507	23902655	Socket, B-B, 15P
P661	23365444	Jack, Earphone
P701	23368520	Plug, B-B, 20P
P702	23368520	Plug, B-B, 20P
P708	23902863	Socket, 20P
P709	23902863	Socket, 20P
P713	23164787	Plug, 7P
P714	23164787	Plug, 7P
P715	23164787	Plug, 7P
P720	23164786	Plug, 6P
⚠P801	23372052	Power Cord 40PW13G
⚠P801	23372012	Power Cord 40PW13B
PF01A	23367724	Plug, B-B,15P
PH01	23902604	Socket, 21P
PH02	23902604	Socket, 21P
PH03	23902604	Socket, 21P
PU01	23368634	Plug, 25P
PU01A	23903025	Socket, 25P
PU02	23368634	Plug, 25P
PU02A	23903025	Socket, 25P
PV10A	23902863	Socket, 20P
PV10B	23368520	Plug, B-B, 20P
PV11A	23902863	Socket, 20P
PV11B	23368520	Plug, B-B, 20P
PW01	23368130	Plug, 10P
PW02	23368130	Plug, 10P
PW06	23902213	Socket, B-B, 10P
PW07	23902213	Socket, B-B, 10P
S602	23145412	Switch, Slide, 2C2P
S801	23145434	Switch, Power, 2C2P
SA01	23145226	Switch, Push, 1C1P
SA02	23145226	Switch, Push, 1C1P
SA03	23145226	Switch, Push, 1C1P
SA04	23145226	Switch, Push, 1C1P
SA06	23145226	Switch, Push, 1C1P
SA07	23145226	Switch, Push, 1C1P
SR80	23146574	Relay, DLS5D1-O(M) 0.15W
⚠SR81	23146572	Relay, DC5V, DG5D1-O(M)-2

Location No.	Part No.	Description
⚠V901A	23903148	Socket, CRT
⚠V902A	23902019	Socket, CRT, 9P
⚠V903A	23902019	Socket, CRT, 9P
W661	23351131	Speaker, SPK-1390, 120X120mm, 16 ohm
W662	23351131	Speaker, SPK-1390, 120X120mm, 16 ohm
X401	23153721	Ceramic Resonator, 503kHz, TCR1023
X501	23153961	Crystal, 3.58MHz
X503	23153979	Crystal, 4.43MHz
XA01	23153497	Crystal, 16.0 MHz
XF01	23153421	Crystal, 20.48MHz
XQ01	23153969	Crystal, 4.00MHz
XV01	23107519	Ceramic Video Trap, 4.43MHz, TCF1066
Z410	23110842	Focus Pack, TPA6031
Z410A	23505177	Focus Cable
⚠Z450	24082996	CR Block, TPA5007BH
Z450A	23504953	Anode Cable
Z470	23110845	Focus Pack, TPA6032BH
Z702	23103823	Coil, TEM2027D
Z703	23103823	Coil, TEM2027D
Z704	23103823	Coil, TEM2027D
Z705	23103823	Coil, TEM2027D
Z706	23103823	Coil, TEM2027D
Z707	23103823	Coil, TEM2027D
Z711	23103823	Coil, TEM2027D
Z712	23103823	Coil, TEM2027D
⚠Z801	23905010	IC, HIC1019
⚠Z853	23144608	Protector, PRF40005PRT, DC60V, 4.0A
⚠Z854	23144608	Protector, PRF40005PRT, DC60V, 4.0A
⚠Z856	23144605	Protector, PRF20005PRT, DC60V, 2.0A

PC BOARD ASSEMBLIES

＊U901A	23784697	CRT-D R Board, PB8764D-1 (40PW03B)
＊U901B	23784698	CRT-D G Board, PB8764D-2 (40PW03B)
＊U901C	23784699	CRT-D B Board, PB8764D-3 (40PW03B)
＊U901D	23784701	SVM Board, PB8764D-4 (40PW03B)
＊U902A	23784622	Signal Board, PB9402A (40PW03G)
＊U902A	23784700	Signal Board, PB9402A (40PW03B)
＊U903	23784625	ED-WAC Board, PB8892B
＊U904	23784623	DEF Board, PB9403A
＊U905	23784626	VCD Board, PB8768G
＊U906A	23784631	TEXT Board, PB9411A
＊U907	23784628	D-CONVER Board, PB9405A
＊U908	23784624	Power Board, PB9404A
＊U909	23785664	Conver Board, PB9836A
＊U910	23784627	BACK-T Board, PB8774C
＊U911A	23784629	FRONT Board, PB9406A-1
＊U911B	23784630	RMT Board, PB9406A-3
＊U911C	23784643	LED Board, PB9406A-2

Location No.	Part No.	Description
PICTURE TUBE		
⚠V901R	23004868	Protector Coupling R
⚠V902G	23004869	Protector Coupling G
⚠V903B	23004870	Protector Coupling B
⚠V911R	23588477	Projection Tube CRT R
⚠V912B	23588479	Projection Tube CRT B
⚠V912G	23588478	Projection Tube CRT G
TUNER		
H001	23321344	Tuner, EGA22LWX1
ACCESSORIES		
K902	23306366	Remote Hand Unit, CT-90043
AT03	23588265	Battery Cover
Y101E	23565210	Owner's Manual, English, 40PW13G
Y101E	23565195	Owner's Manual, English, 40PW13B
Y101F	23565211	Owner's Manual, French, 40PW13G
Y101G	23565212	Owner's Manual, German, 40PW13G
Y101I	23565213	Owner's Manual, Itarian, 40PW13G
Y101P	23565215	Owner's Manual, Portuguese, 40PW13G
Y101S	23565214	Owner's Manual, Spanish, 40PW13G

CABINET PARTS

A101	23411327	Light Box
A102	23527078	Speaker Grille R
A103	23527079	Speaker Grille L
A125	23560038	Label
A201	23540506	Bezel
A202	23450349	Control Panel
A213	23427945	Door
A214	70368125	Push Catch for Door
A223	23445478	Button, Power
A268	23450351	Front Panel
⚠A420	23540150	Back Cover
A421	23411197	Cabinet, Rear Plate
A424	23411329	Back Board
A501	23035412	Screw, BTB4X12SZN
A505	72471068	Screw, BIDT2 4X12BZ
A508	72471068	Screw, BIDT2 4X12BZ
A529	23037312	Screw, BTBW3X12SZN
A543	72471068	Screw, BIDT2 4X12BZ
A547	23035010	Screw, PBI 4X16
A701	23525571	Case
A703	23935998	Packing, Top
A710	23935999	Packing, Bottom
A726	23974753	Polypropylene Band
A727	23974753	Polypropylene Band
K101	23430512	Delta, DELTA67-A/B
K102	23430512	Delta, DELTA67-A/B
K103	23430512	Delta, DELTA67-A/B
K501	23430821	Lenti Sheet, SCREEN40KK-L
K502	23430790	Fresnel Sheet, SCREEN40KKUF
K601	23430752	Millor, MIRROR40KEB

SCHEMATIC DIAGRAM

MODEL : 40PW13G / 40PW13B

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON THE MANUAL FOR THIS MODEL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on the MANUAL for this model. Do not degrade the safety of the receiver through improper servicing.

NOTE:

1. RESISTOR Resistance is shown in ohm [K = 1.000, M = 1.000.000]. All resistors are 1/6W and 5% tolerance carbon resistor, unless otherwise noted as the following marks.
   1/2R = Metal or Metal oxide of 1/2 watt 1/2S = Carbon compsistion of 1/2 watt
   1RF = Fuse resistor of 1 watt 10W = Cement of 10 watt
   K = ±10% G = ±2% F = ±1%
2. CAPACITOR Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF, and the values more than 1 in pF.
   All capacitors are ceramic 50V, unless otherwise noted as the following marks.
   Electolytic capacitor Mylar capacitor
3. The parts indicated with " ⚠ " have special characteristics, and should be replaced with identical parts only.
4. Voltages read with DIGITAL MULTI-METER from point indicated to chassing ground, using a color bar signal with all controls at normal, line voltage 220 volts.
5. Waveforms are taken receiving color bar signal with enough sensitivity.
6. Voltage reading shown are nominal values and may vary ±20% except H.V.

SCHEMATIC DIAGRAM MODEL : 40PW13G / 40PW13B

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON THE MANUAL FOR THIS MODEL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on the MANUAL for this model. Do not degrade the safety of the receiver through improper servicing.

NOTE:

1. RESISTOR Resistance is shown in ohm [K = 1.000, M = 1.000.000]. All resistors are 1/6W and 5% tolerance carbon resistor, unless otherwise noted as the following marks.
   1/2R = Metal or Metal oxide of 1/2 watt 1/2S = Carbon compsistion of 1/2 watt
   1RF = Fuse resistor of 1 watt 10W = Cement of 10 watt
   K = ±10% G = ±2% F = ±1%
2. CAPACITOR Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF, and the values more than 1 in pF.
   All capacitors are ceramic 50V, unless otherwise noted as the following marks.
   Electolytic capacitor Mylar capacitor
3. The parts indicated with " ⚠ " have special characteristics, and should be replaced with identical parts only.
4. Voltages read with DIGITAL MULTI-METER from point indicated to chassing ground, using a color bar signal with all controls at normal, line voltage 220 volts.
5. Waveforms are taken receiving color bar signal with enough sensitivity.
6. Voltage reading shown are nominal values and may vary ±20% except H.V.

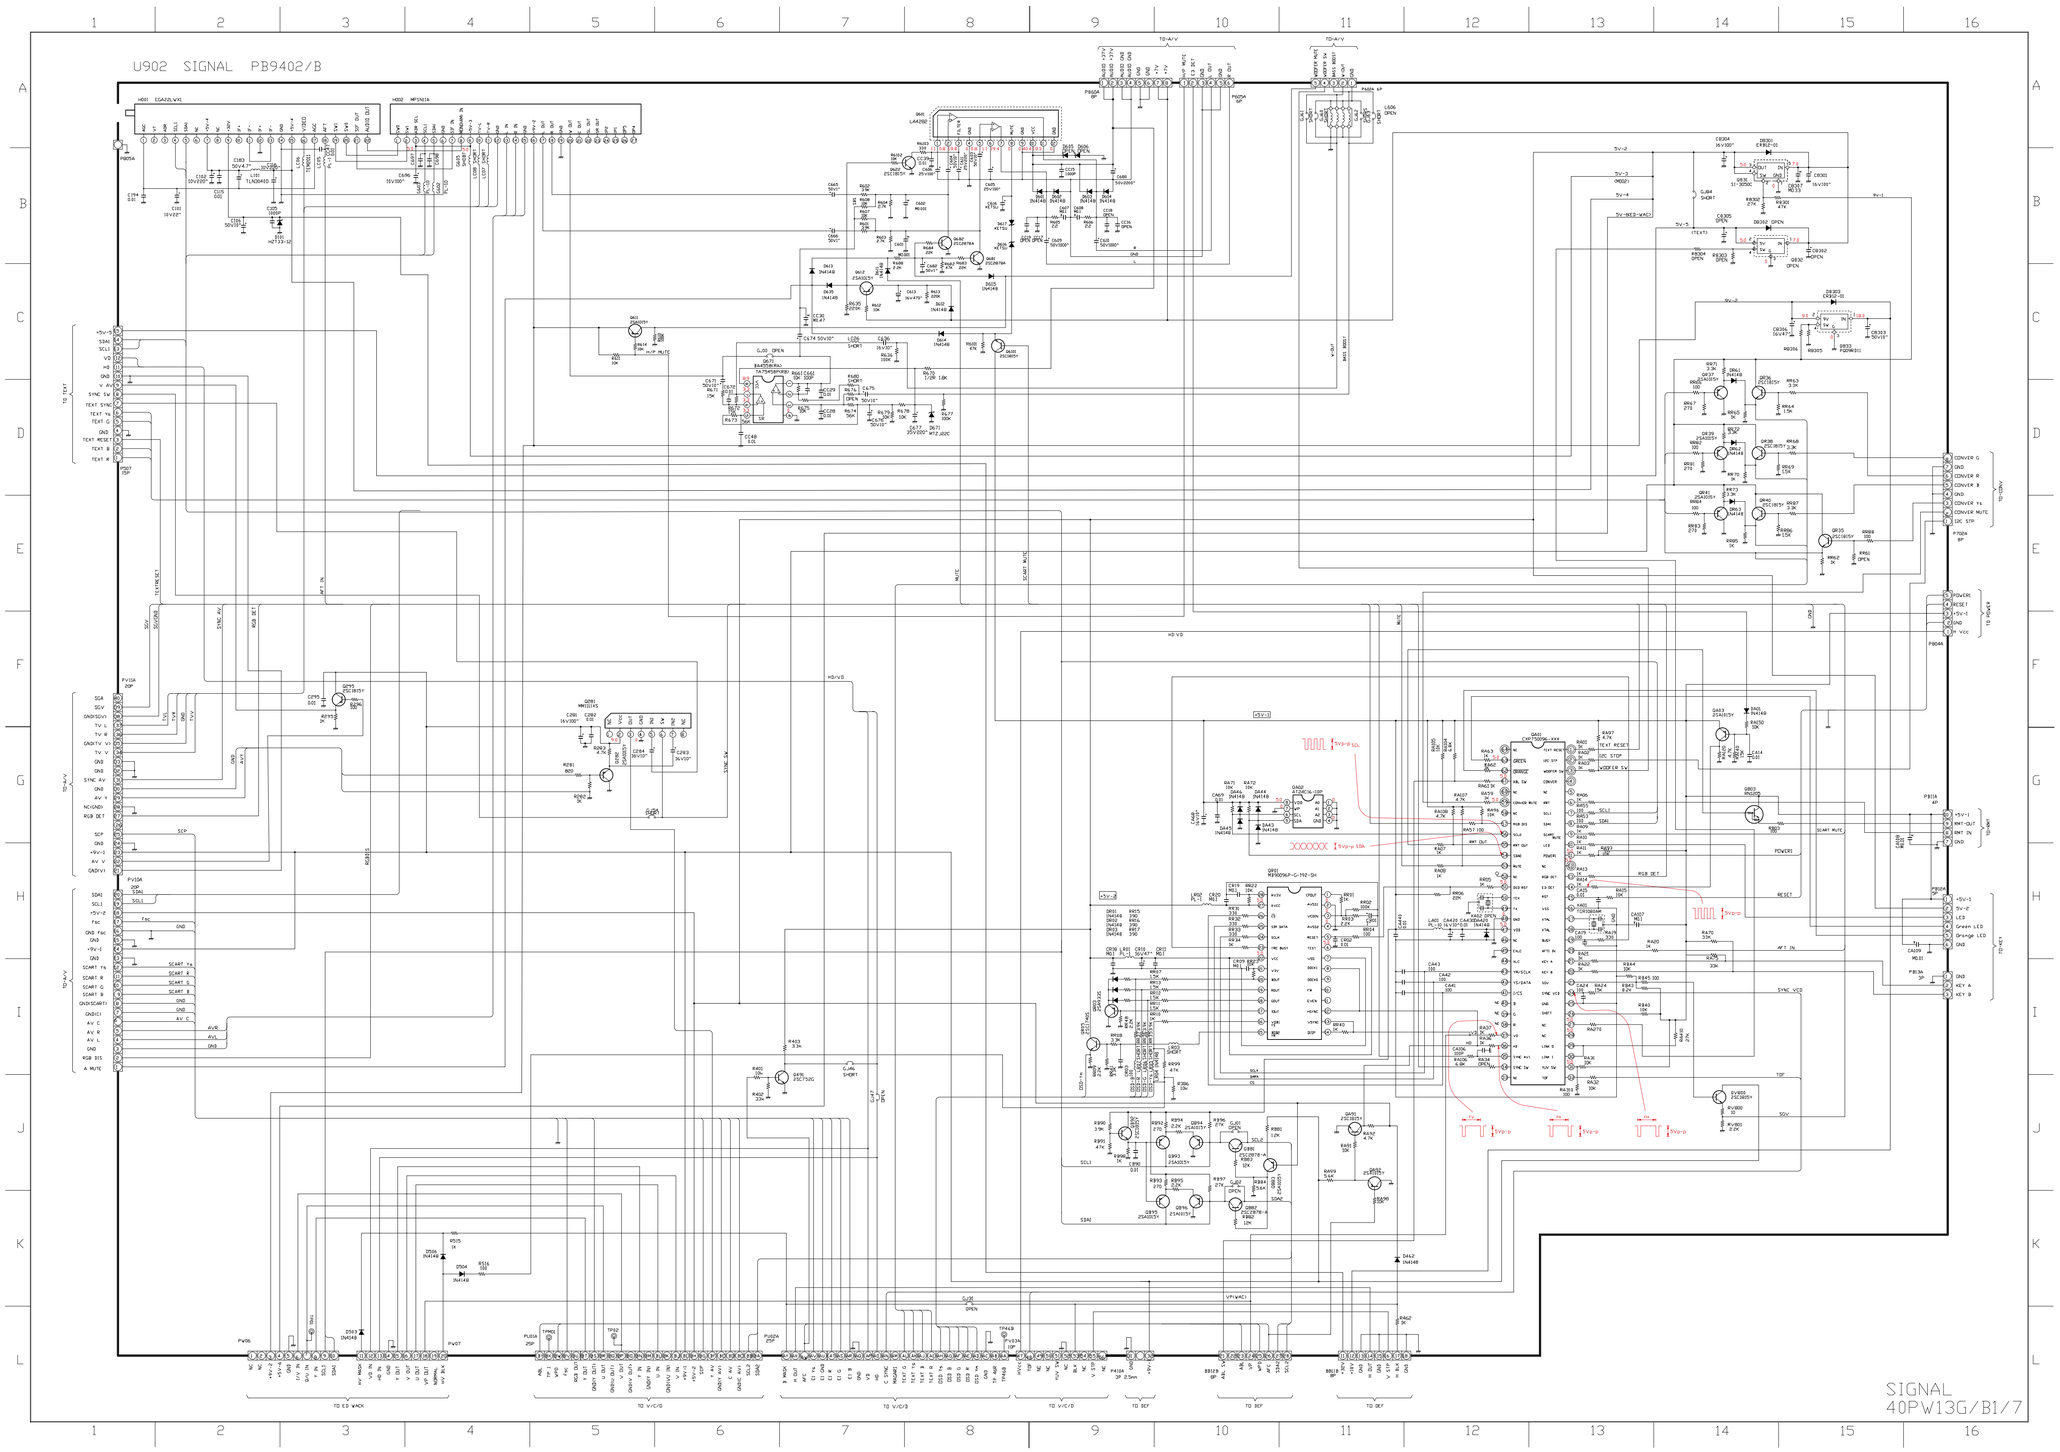

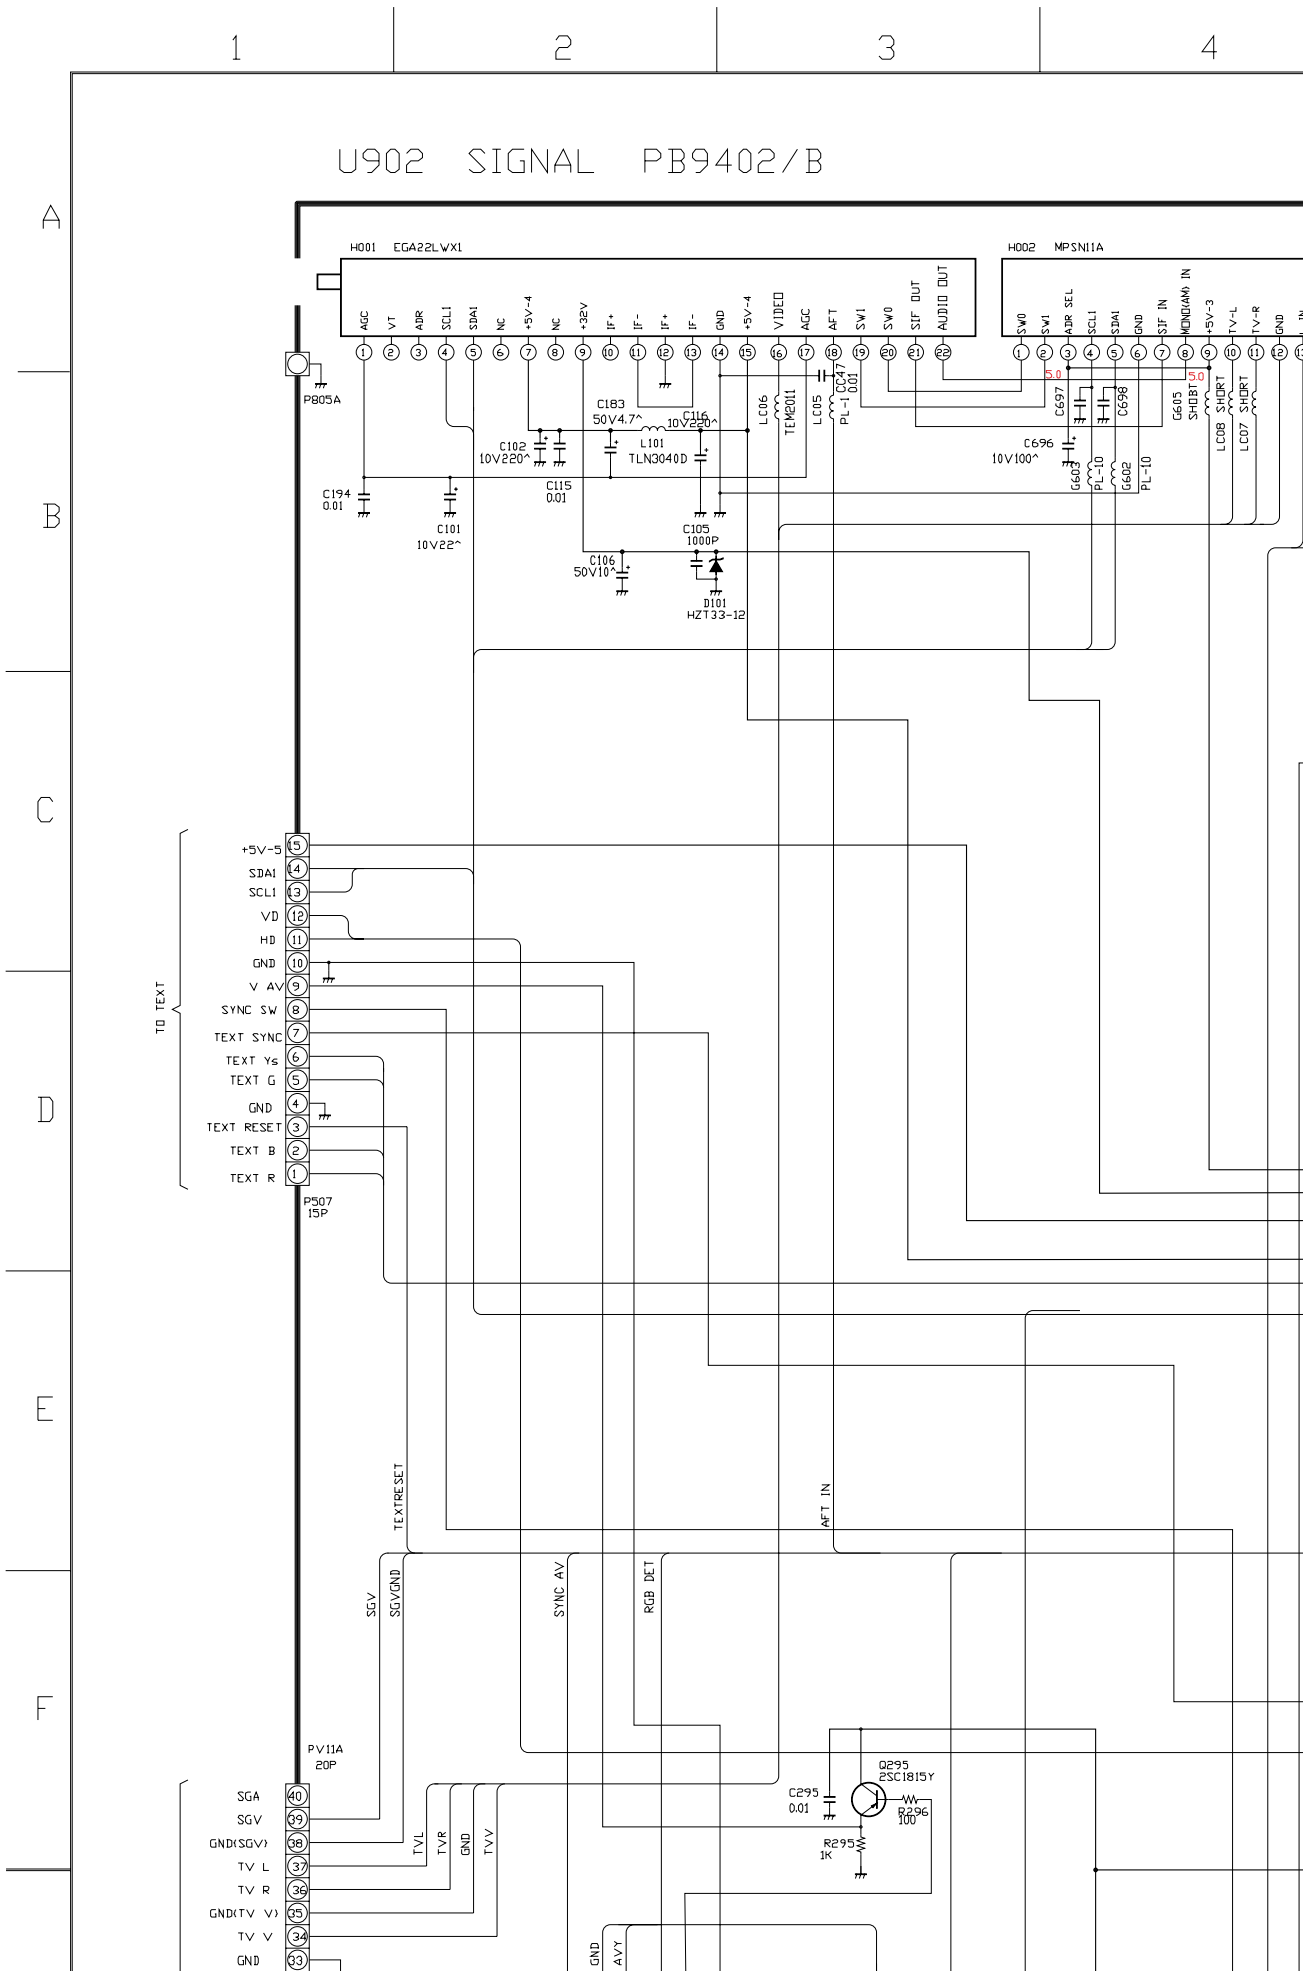
U902 SIGNAL PB9402/B
H001 EGA22LWX1
H002 MPSN11A
AGC
VT
ADR
SCL1
SDA1
NC
+5V-4
+32V
IF+
IF-
VIDEO
AFT
SW1
SW0
SIF OUT
AUDIO OUT
SIF IN
+5V-3
TV-L
TV-R
P805A
C183
50V4.7^
C116
10V220^
C102
10V220^
L101
TLN3040D
C194
0.01
C101
10V22^
C115
0.01
C105
1000P
C106
50V10^
D101
HZT33-12
C697
C696
10V100^
C698
G605
SHORT
L108
L107
G603
G602
PL-10
L106
TEM2011
L105
CC47
0.001
TO TEXT
+5V-5
SDA1
SCL1
VD
HD
GND
V AV
SYNC SW
TEXT SYNC
TEXT Ys
TEXT G
TEXT RESET
TEXT B
TEXT R
P507
15P
TEXTRESET
AFT IN
SGV
SGVGND
SYNC AV
RGB DET
PV11A
20P
SGA
SGV
GND(SGV)
TV L
TV R
GND(TV V)
TV V
TVL
TVR
TVV
Q295
2SC1815Y
C295
0.01
R296
100
R295
1K

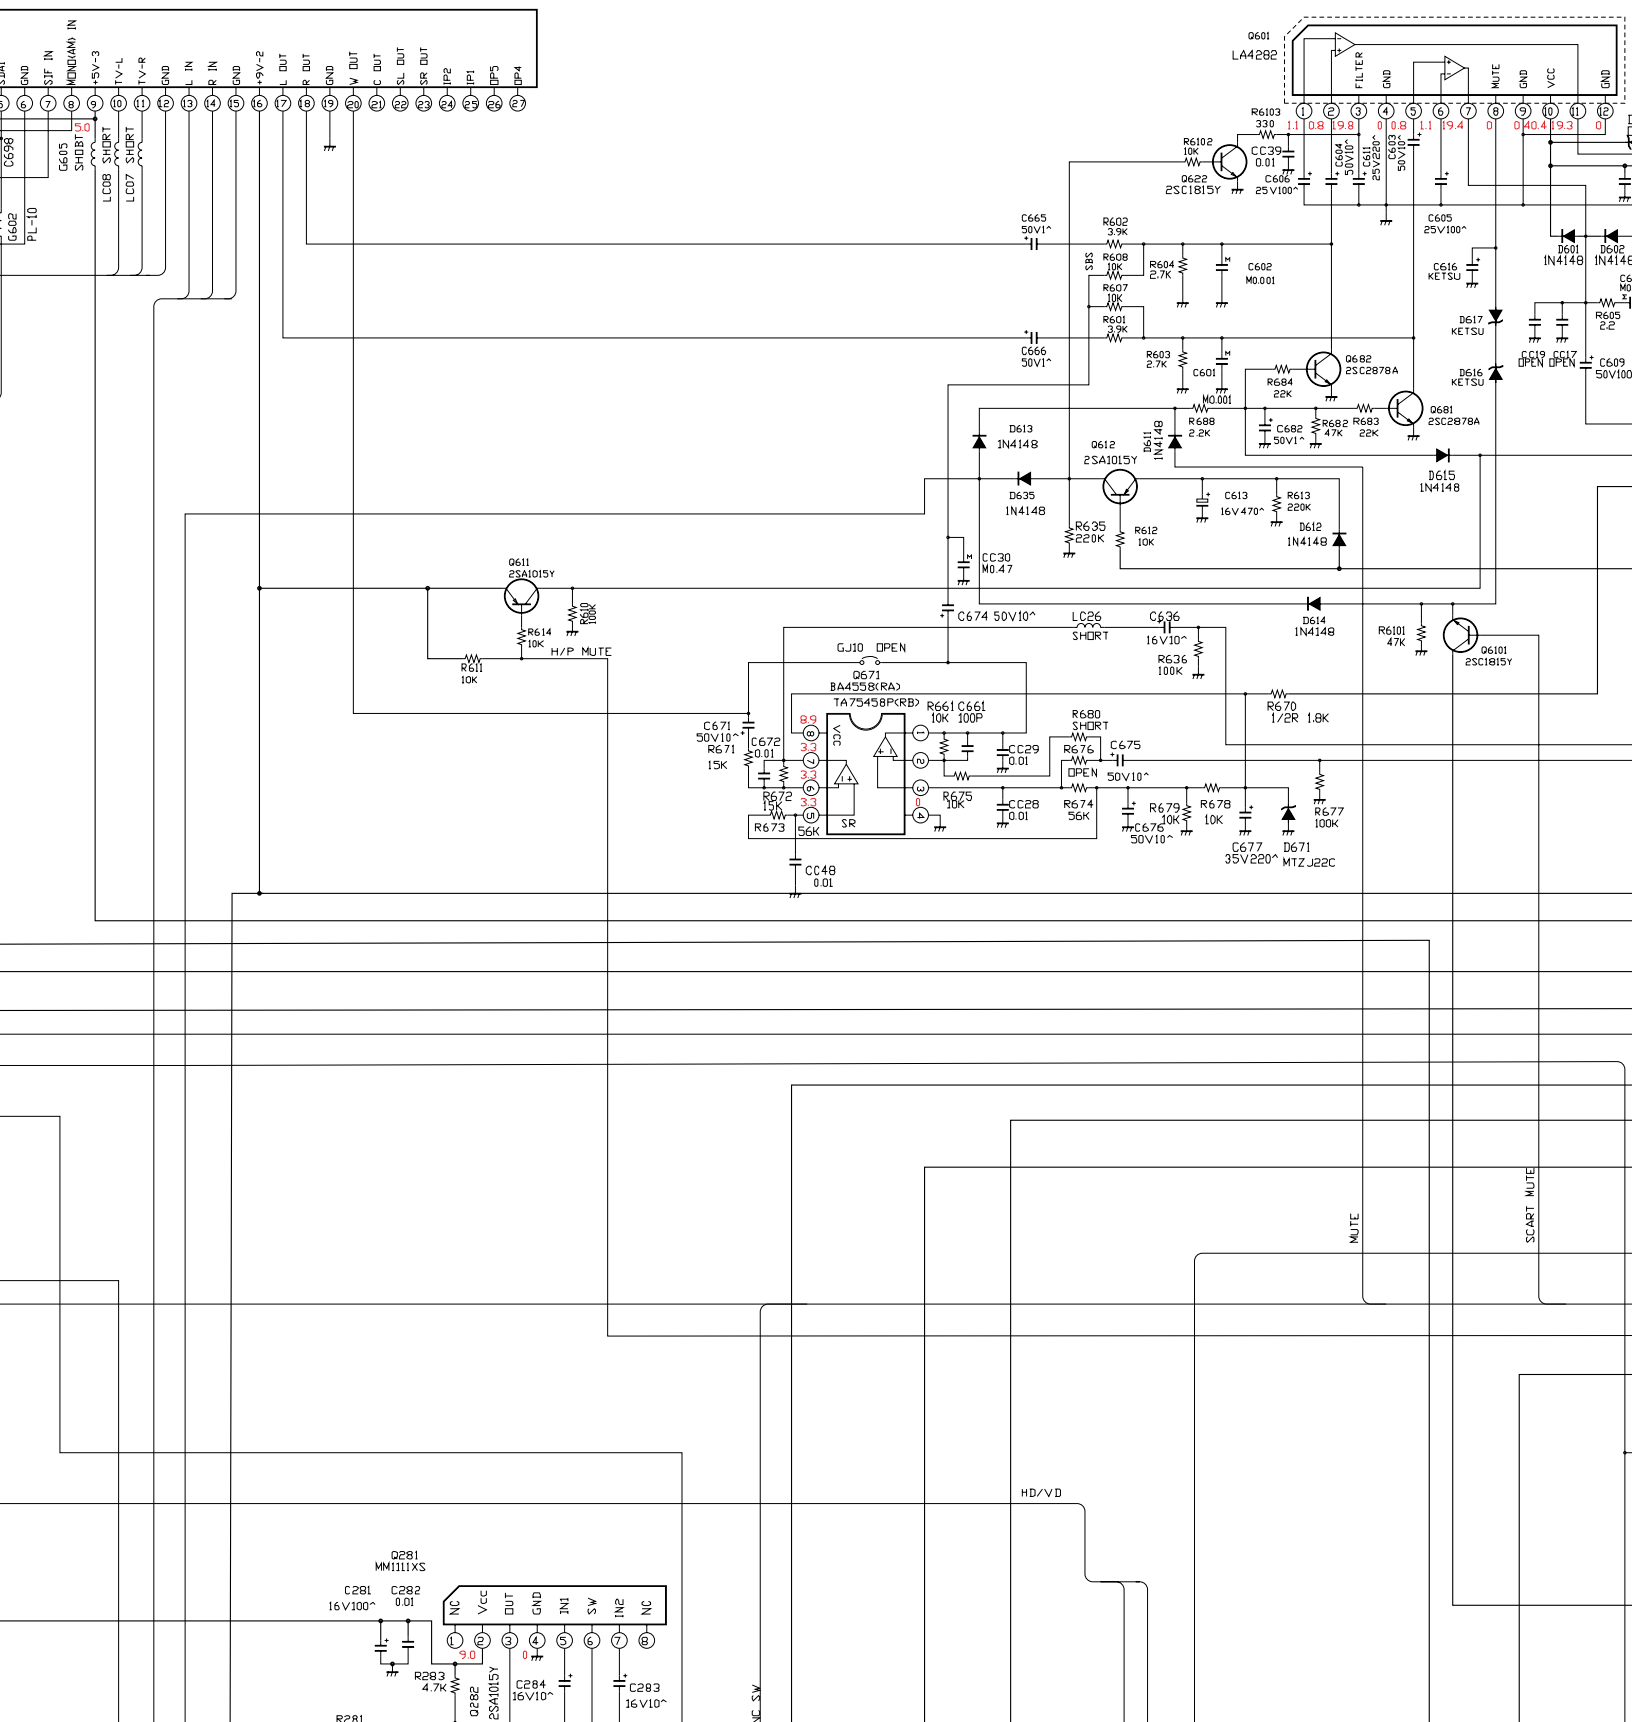
Q601
LA4282
FILTER
GND
MUTE
GND
VCC
GND
R6103
330
CC39
0.01
Q622
2SC1815Y
R6102
10K
C606
25V100^
C605
25V100^
C604
50V10^
C611
25V220^
C603
50V10^
C665
50V1^
R602
3.9K
R608
10K
R607
10K
R601
3.9K
R604
2.7K
C602
M0.001
C666
50V1^
R603
2.7K
C601
M0.001
R688
2.2K
Q682
2SC2878A
R684
22K
Q681
2SC2878A
C682
50V1^
R682
47K
R683
22K
D613
1N4148
D612
2SA1015Y
D611
1N4148
D635
1N4148
R635
220K
R612
10K
C613
16V470^
R613
220K
D612
1N4148
D615
1N4148
D614
1N4148
CC30
M0.47
C674 50V10^
LC26
SHORT
C636
16V10^
R636
100K
R6101
47K
Q6101
2SC1815Y
D601
1N4148
D602
1N4148
D616
KETSU
D617
KETSU
C616
KETSU
C619
OPEN
C617
OPEN
C609
50V100
R605
2.2
Q611
2SA1015Y
R614
10K
R610
100K
R611
10K
H/P MUTE
GJ10 OPEN
Q671
BA4558(RA)
TA75458P(RB)
R661
10K
C661
100P
CC29
0.01
R675
10K
CC28
0.01
C671
50V10^
R671
15K
C672
0.01
R672
15K
R673
56K
CC48
0.01
SR
R680
SHORT
R676
OPEN
C675
50V10^
R674
56K
C676
50V10^
R679
10K
R678
10K
C677
35V220^
D671
MTZJ22C
R677
100K
R670
1/2R 1.8K
MUTE
SCART MUTE
HD/VD
Q281
MM1111XS
C281
16V100^
C282
0.01
NC
Vcc
OUT
GND
IN1
SW
IN2
NC
R283
4.7K
Q282
2SA1015Y
C284
16V10^
C283
16V10^
R281
SW
GND
SIF IN
MONO(AM) IN
+5V-3
TV-L
TV-R
GND
L IN
R IN
GND
+9V-2
L OUT
R OUT
GND
W OUT
C OUT
SL OUT
SR OUT
IP2
IP1
DP5
DP4
C698
C602
PL-10
C605
SHORT
LC08
SHORT
LC07
SHORT

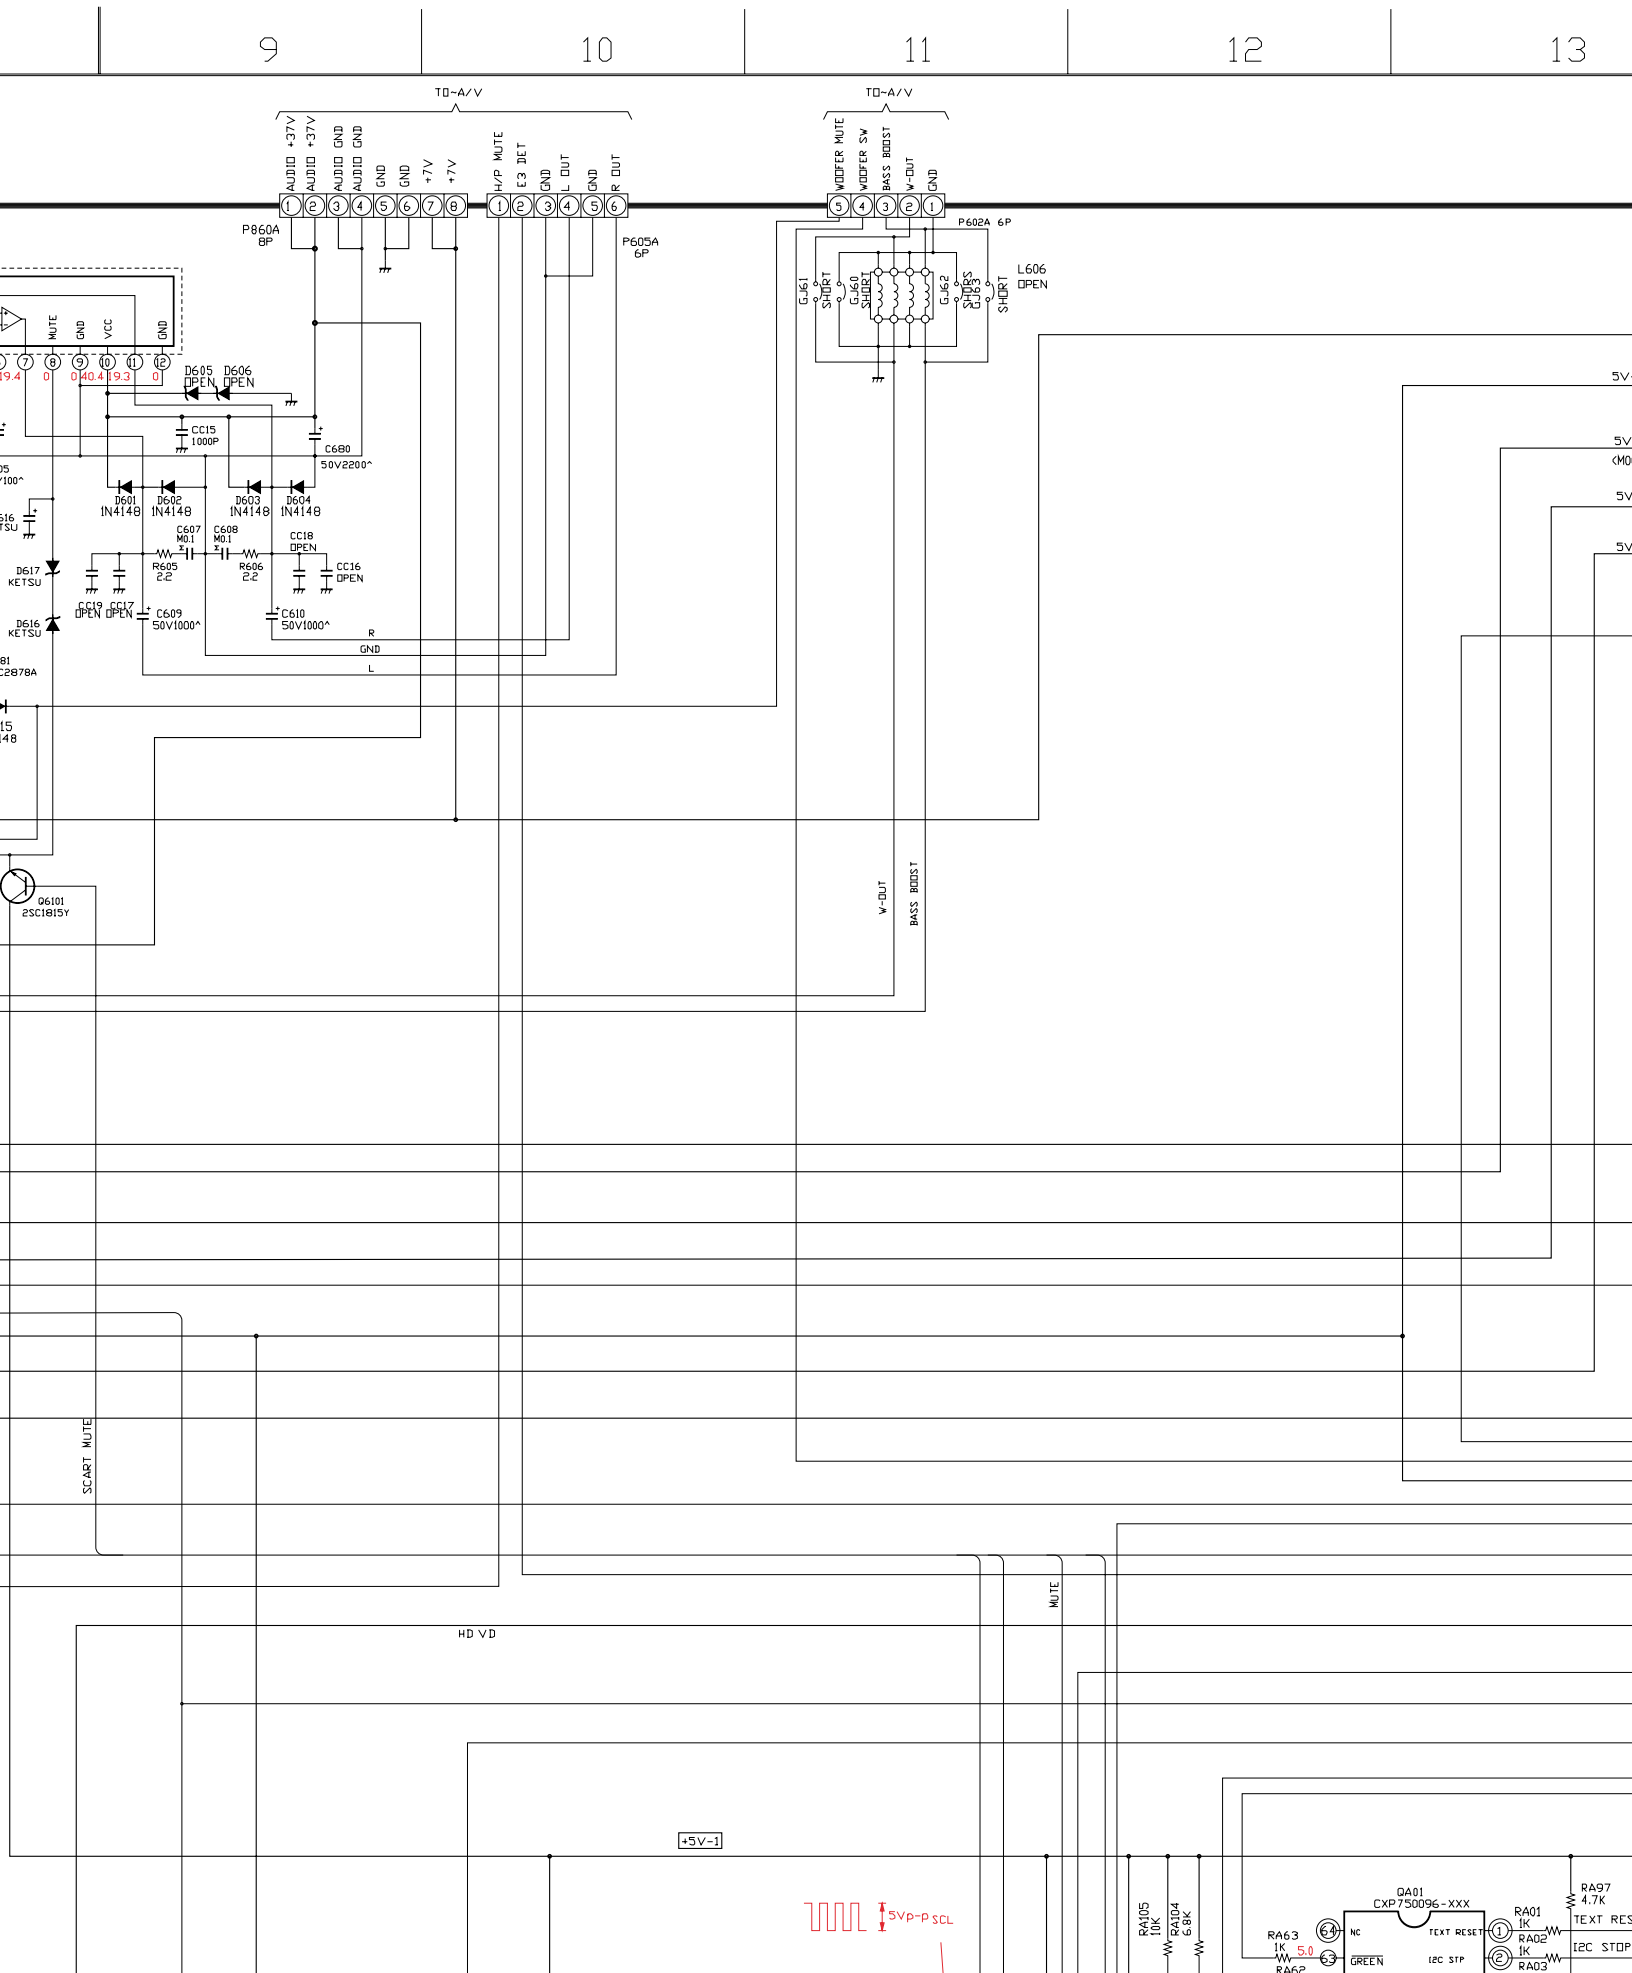
9
10
11
12
13
TO~A/V
AUDIO +37V
AUDIO +37V
AUDIO GND
AUDIO GND
GND
GND
+7V
+7V
H/P MUTE
E3 DET
GND
L OUT
GND
R OUT
P860A 8P
P605A 6P
TO~A/V
WOOFER MUTE
WOOFER SW
BASS BOOST
W-OUT
GND
P602A 6P
L606 OPEN
GJ61 SHORT
L60 SHORT
GJ62 SHORT
D605 OPEN
D606 OPEN
CC15 1000P
C680 50V2200^
D601 1N4148
D602 1N4148
D603 1N4148
D604 1N4148
C607 M0.1
C608 M0.1
CC18 OPEN
R605 2.2
R606 2.2
CC16 OPEN
D617 KETSU
D616 KETSU
CC19 OPEN
CC17 OPEN
C609 50V1000^
C610 50V1000^
R
GND
L
Q6101 2SC1815Y
W-OUT
BASS BOOST
SCART MUTE
MUTE
HD VD
+5V-1
5Vp-p SCL
RA105 10K
RA104 6.8K
QA01 CXP750096-XXX
RA63 1K
RA62
RA01 1K
RA02 1K
RA03
RA97 4.7K
TEXT RESET
I2C STP
NC
GREEN

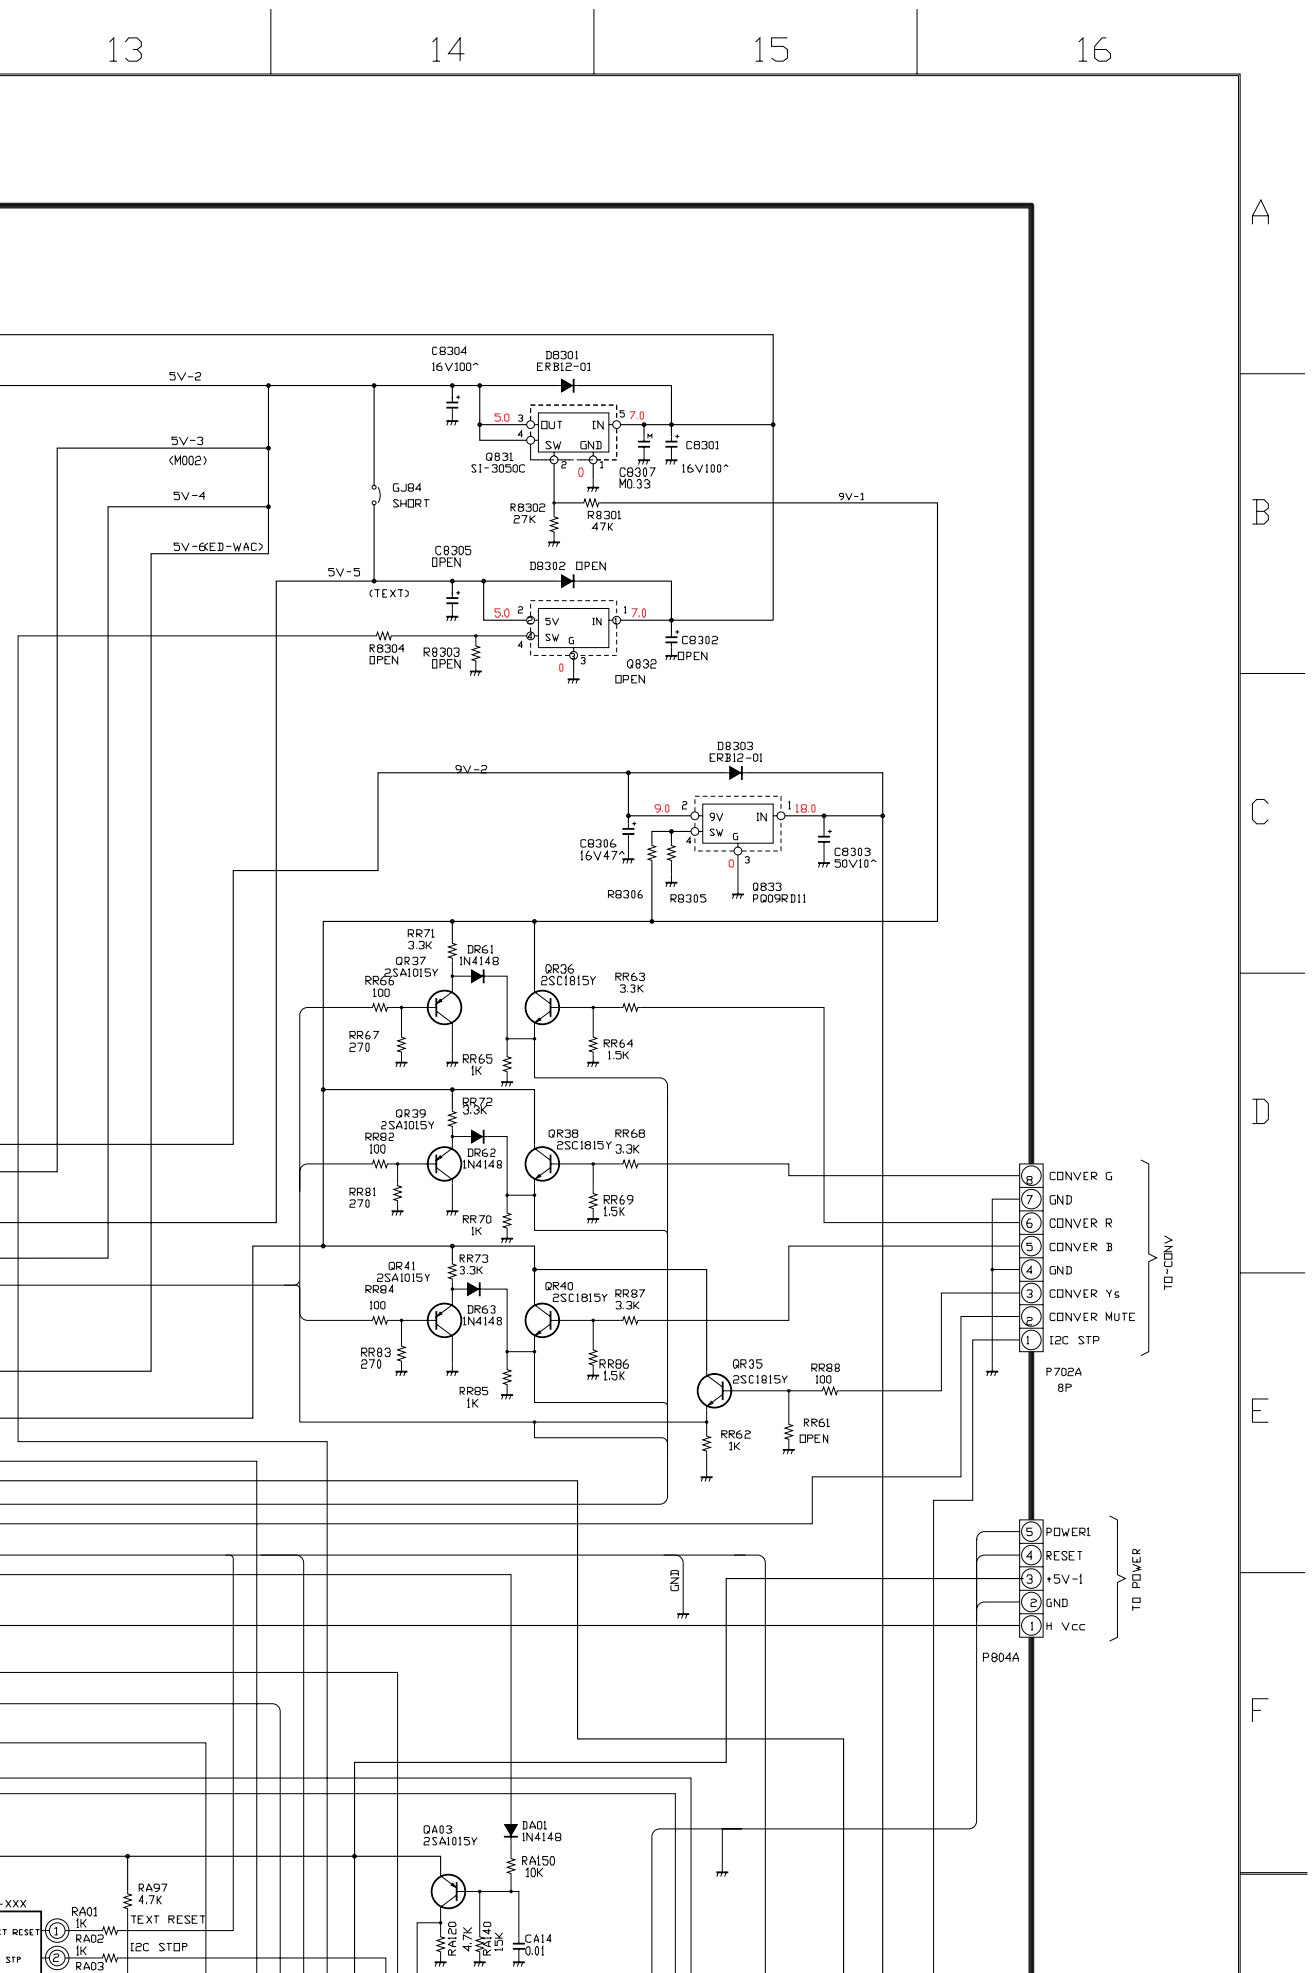
13
14
15
16
A
B
C
D
E
F
5V-2
5V-3
(M002)
5V-4
5V-6(ED-WAC)
5V-5
(TEXT)
GJ84
SHORT
C8304
16V100^
D8301
ERB12-01
Q831
S1-3050C
C8307
M0.33
C8301
16V100^
R8302
27K
R8301
47K
9V-1
C8305
OPEN
D8302 OPEN
R8304
OPEN
R8303
OPEN
Q832
OPEN
C8302
OPEN
D8303
ERB12-01
9V-2
C8306
16V47^
R8306
R8305
Q833
PQ09RD11
C8303
50V10^
RR71
3.3K
DR61
1N4148
QR37
2SA1015Y
RR66
100
RR67
270
RR65
1K
QR36
2SC1815Y
RR63
3.3K
RR64
1.5K
RR72
3.3K
QR39
2SA1015Y
RR82
100
RR81
270
DR62
1N4148
RR70
1K
QR38
2SC1815Y
RR68
3.3K
RR69
1.5K
RR73
3.3K
QR41
2SA1015Y
RR84
100
RR83
270
DR63
1N4148
RR85
1K
QR40
2SC1815Y
RR87
3.3K
RR86
1.5K
QR35
2SC1815Y
RR88
100
RR62
1K
RR61
OPEN
CONVER G
GND
CONVER R
CONVER B
GND
CONVER Ys
CONVER MUTE
I2C STP
TO-CONV
P702A
8P
POWER1
RESET
+5V-1
GND
H Vcc
TO POWER
P804A
GND
QA03
2SA1015Y
DA01
1N4148
RA150
10K
RA97
4.7K
TEXT RESET
RA01
1K
RA02
1K
I2C STOP
RA03
RA20
4.7K
RA140
15K
CA14
0.01

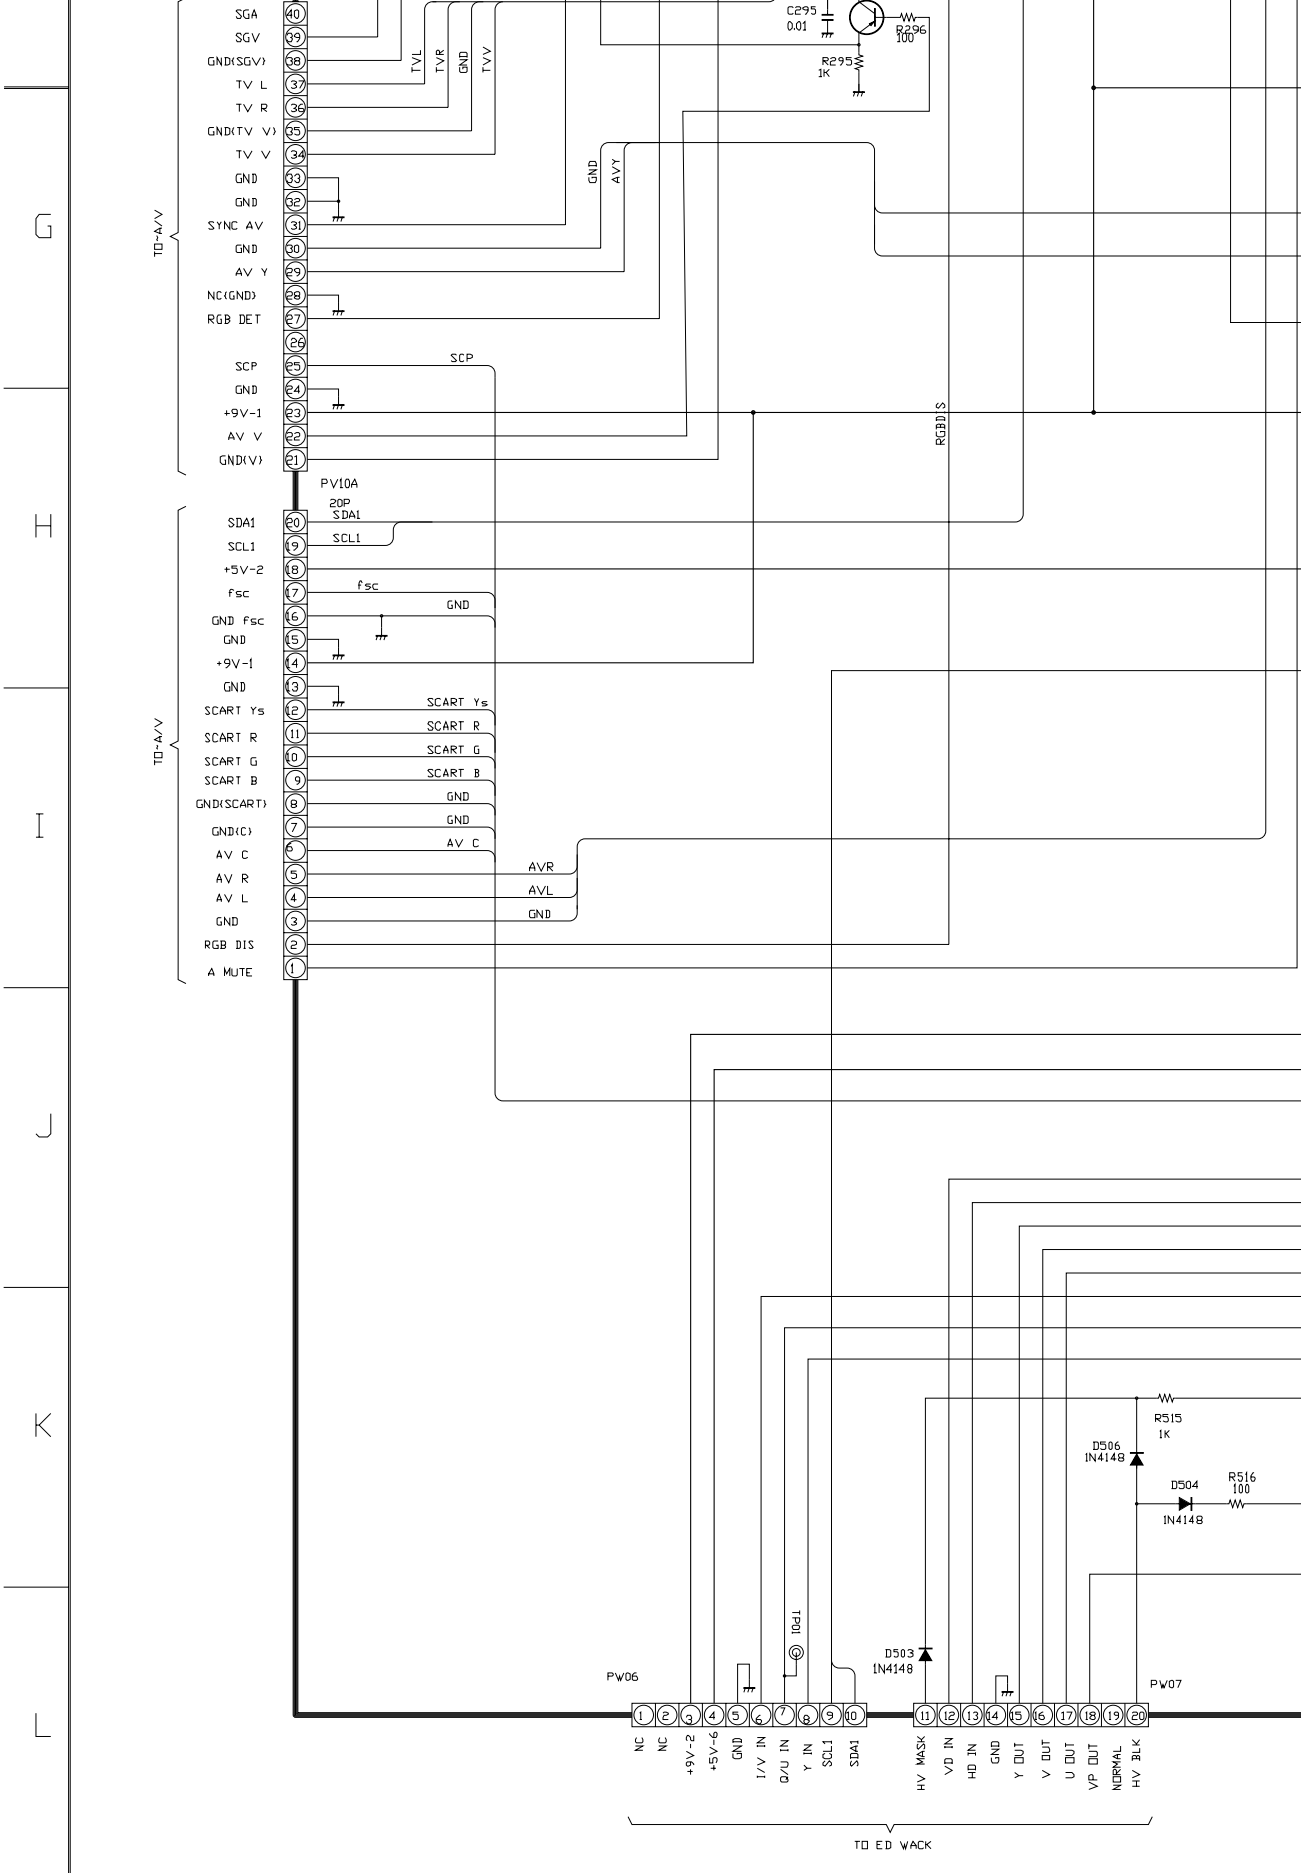
SGA
SGV
GND(SGV)
TV L
TV R
GND(TV V)
TV V
GND
GND
SYNC AV
GND
AV Y
NC(GND)
RGB DET
SCP
GND
+9V-1
AV V
GND(V)
TO-A/V
PV10A
20P
SDA1
SCL1
+5V-2
fsc
GND fsc
GND
+9V-1
GND
SCART Ys
SCART R
SCART G
SCART B
GND(SCART)
GND(C)
AV C
AV R
AV L
GND
RGB DIS
A MUTE
TO-A/V
TVL
TVR
GND
TVV
GND
AVY
SCP
fsc
GND
SCART Ys
SCART R
SCART G
SCART B
GND
GND
AV C
AVR
AVL
GND
RGB/S
C295
0.01
R296
100
R295
1K
R515
1K
D506
IN4148
D504
IN4148
R516
100
D503
IN4148
TP01
PW06
PW07
NC
NC
+9V-2
+5V-6
GND
I/V IN
Q/U IN
Y IN
SCL1
SDA1
HV MASK
VD IN
HD IN
GND
Y OUT
V OUT
U OUT
VP OUT
NORMAL
HV BLK
TO ED WACK

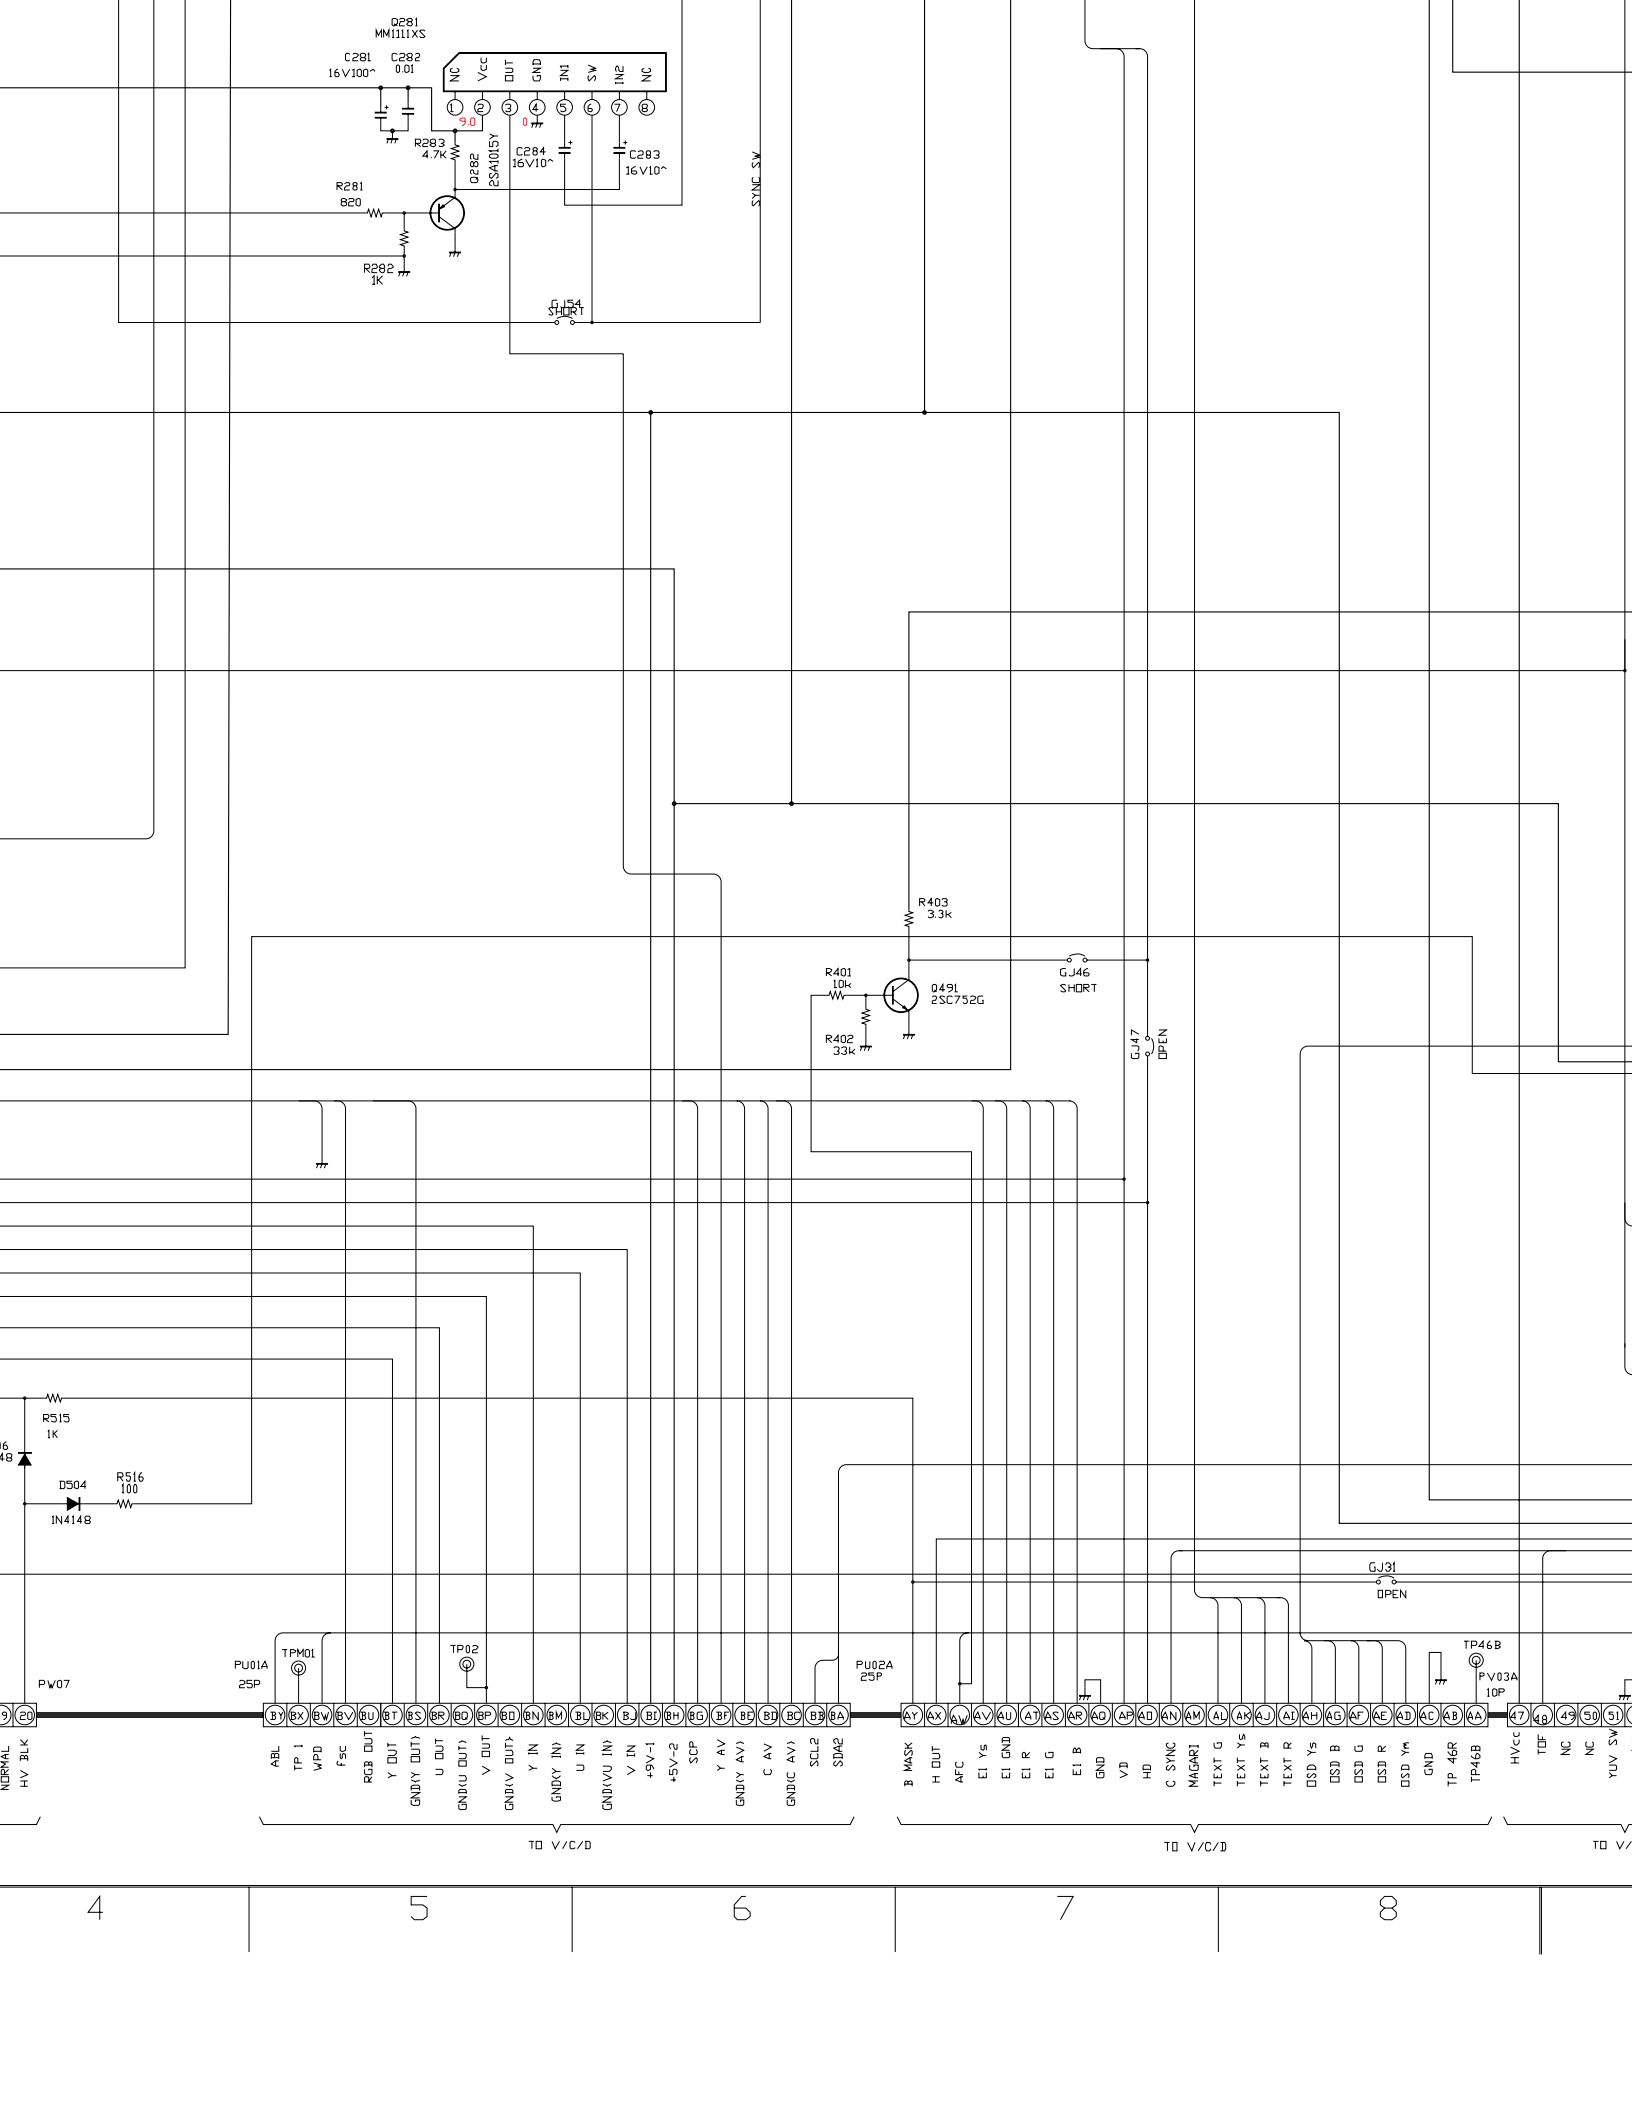
Q281
MM1111XS
C281
16V100^
C282
0.01
NC
Vcc
OUT
GND
IN1
SW
IN2
NC
R283
4.7K
Q282
2SA1015Y
C284
16V10^
C283
16V10^
R281
820
R282
1K
SYNC SW
GJ54
SHORT
R403
3.3k
R401
10k
Q491
2SC752G
R402
33k
GJ46
SHORT
GJ47
OPEN
R515
1K
D504
1N4148
R516
100
GJ31
OPEN
PW07
PU01A
25P
TPM01
TP02
PU02A
25P
TP46B
PV03A
10P
ABL
TP 1
WPD
fsc
RGB OUT
Y OUT
GND(Y OUT)
U OUT
GND(U OUT)
V OUT
GND(V OUT)
Y IN
GND(Y IN)
U IN
GND(U IN)
V IN
+9V-1
+5V-2
SCP
Y AV
GND(Y AV)
C AV
GND(C AV)
SCL2
SDA2
B MASK
H OUT
AFC
E1 Ys
E1 GND
E1 R
E1 G
E1 B
GND
VD
HD
C SYNC
MAGARI
TEXT G
TEXT Ys
TEXT B
TEXT R
DSD Ys
DSD B
DSD G
DSD R
DSD Ym
GND
TP 46R
TP46B
HVcc
TDF
NC
NC
YUV SW
TO V/C/D
TO V/C/D
TO V/
4
5
6
7
8

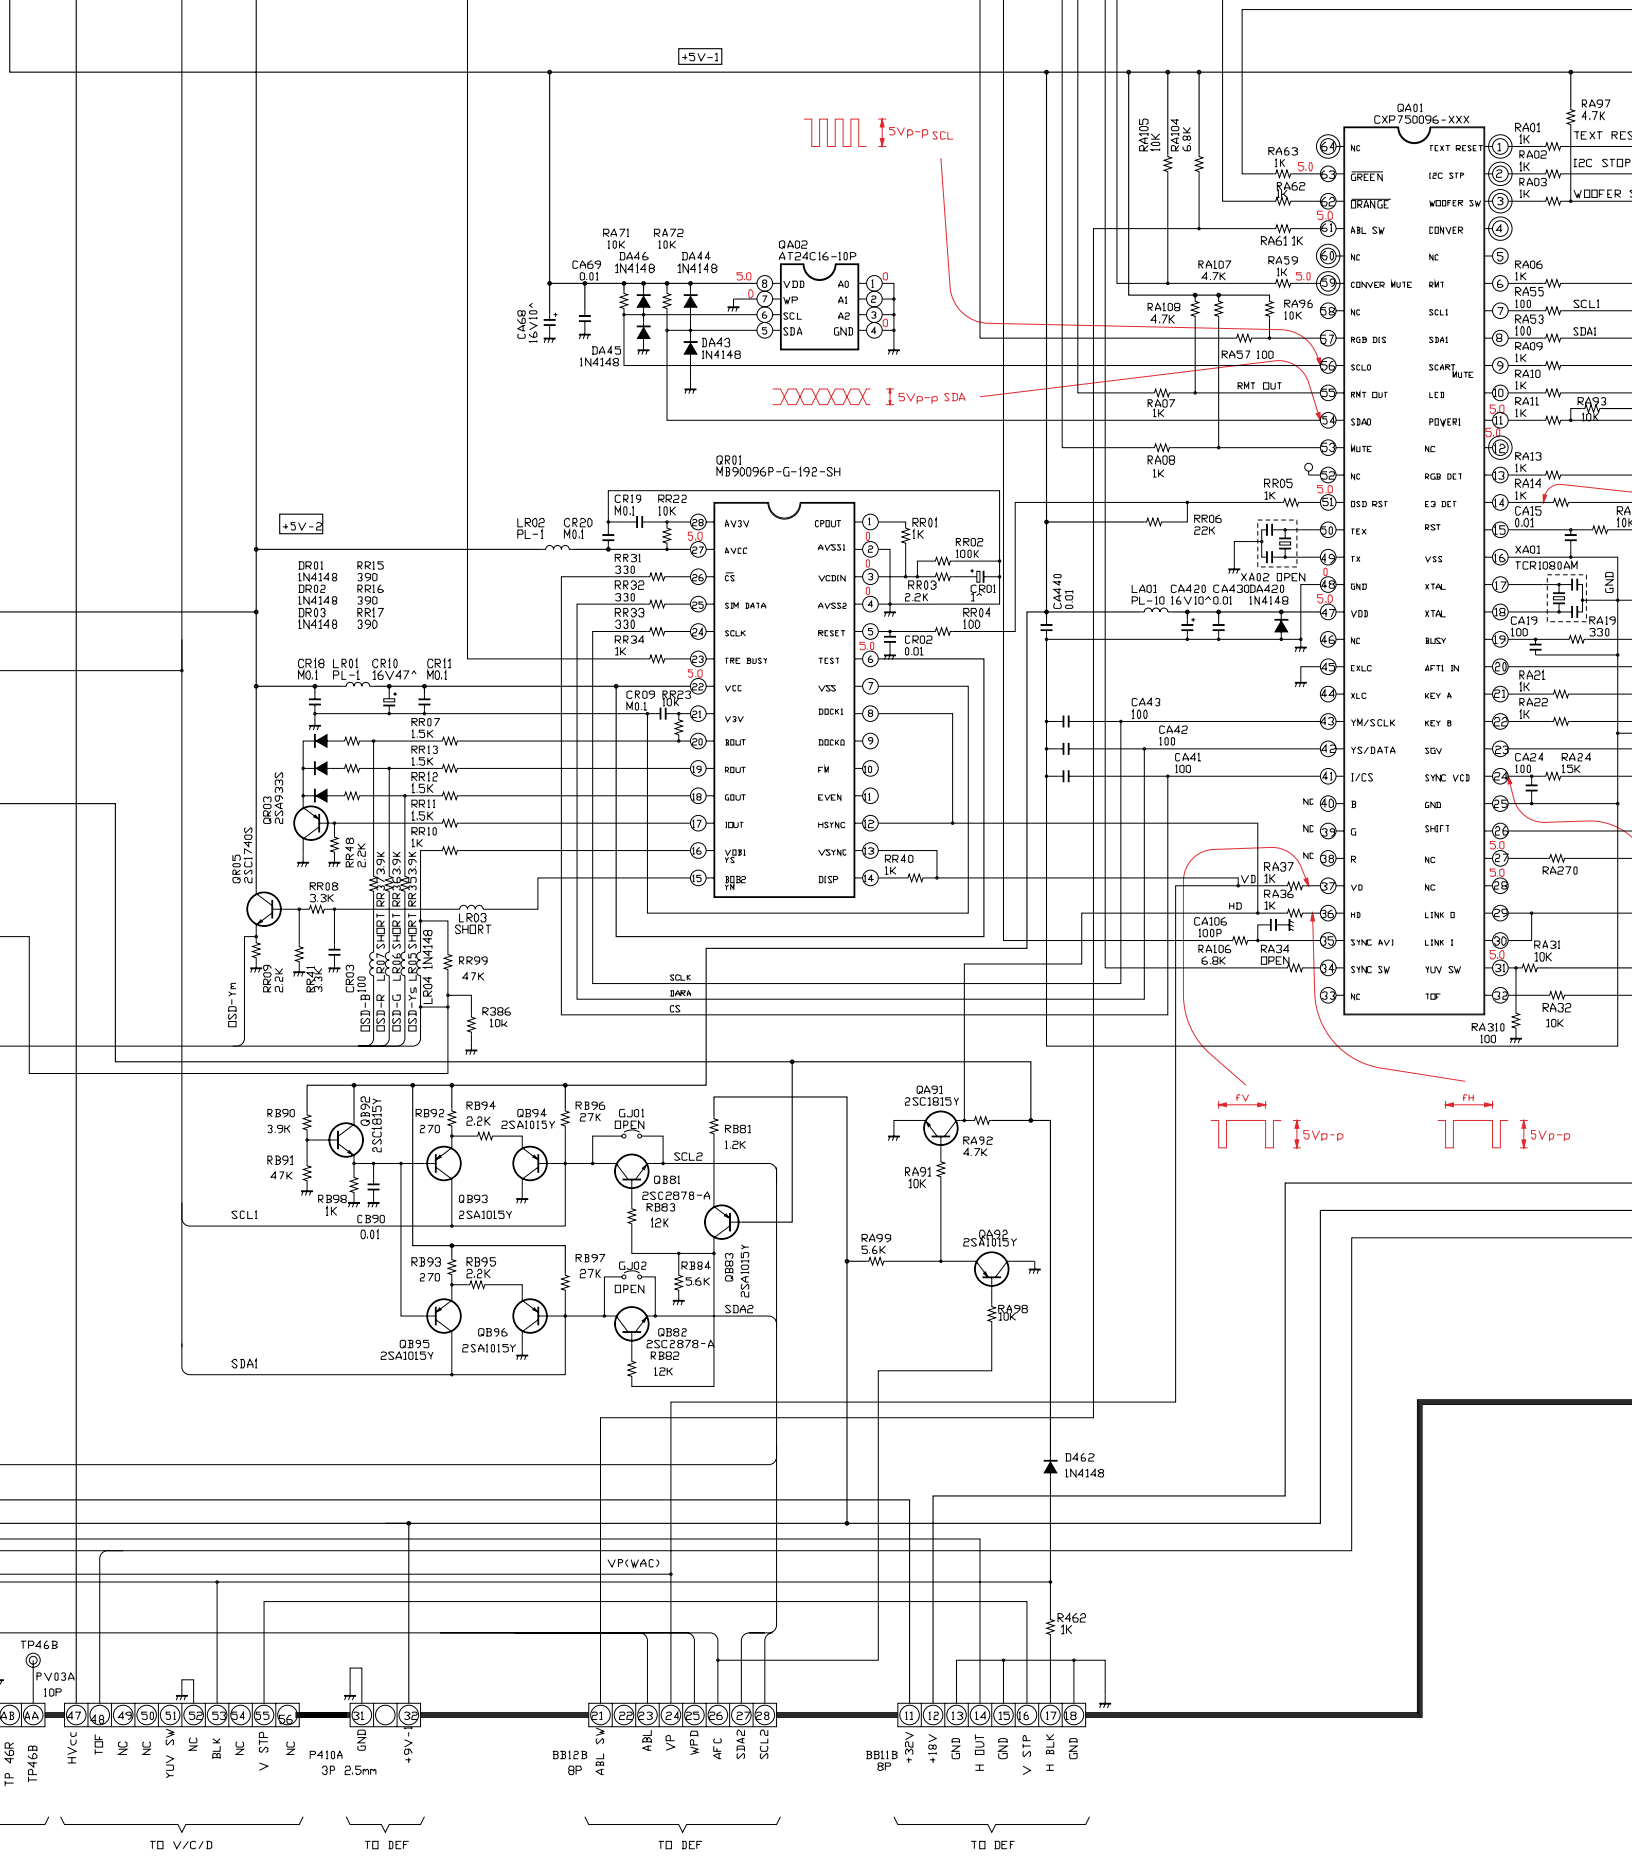
+5V-1
+5V-2
5Vp-p SCL
5Vp-p SDA
QA01
CXP750096-XXX
QA02
AT24C16-10P
QR01
MB90096P-G-192-SH
TCR1080AM
XA02 OPEN
FV
FH
5Vp-p
VP(WAC)
SCL1
SDA1
SCL2
SDA2
SCLK
DATA
CS
TP46B
P410A
3P 2.5mm
BB12B
8P
BB11B
8P
TO V/C/D
TO DEF
TO DEF
TO DEF

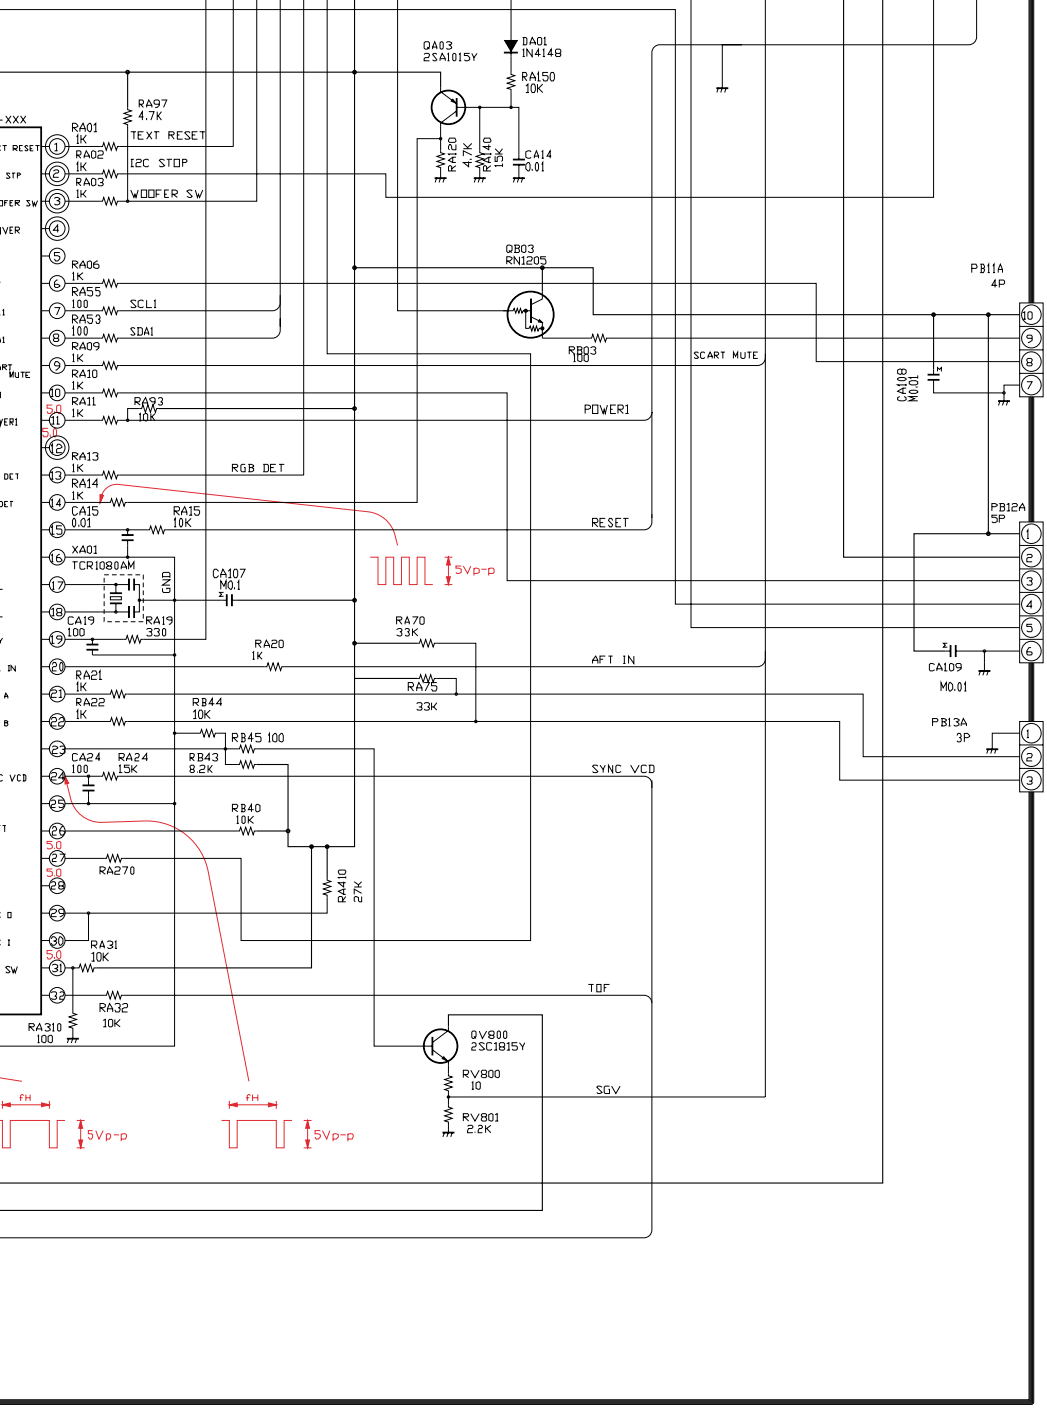

SIGNAL
40PW13G/B1/7

U904 DEF PB9403A

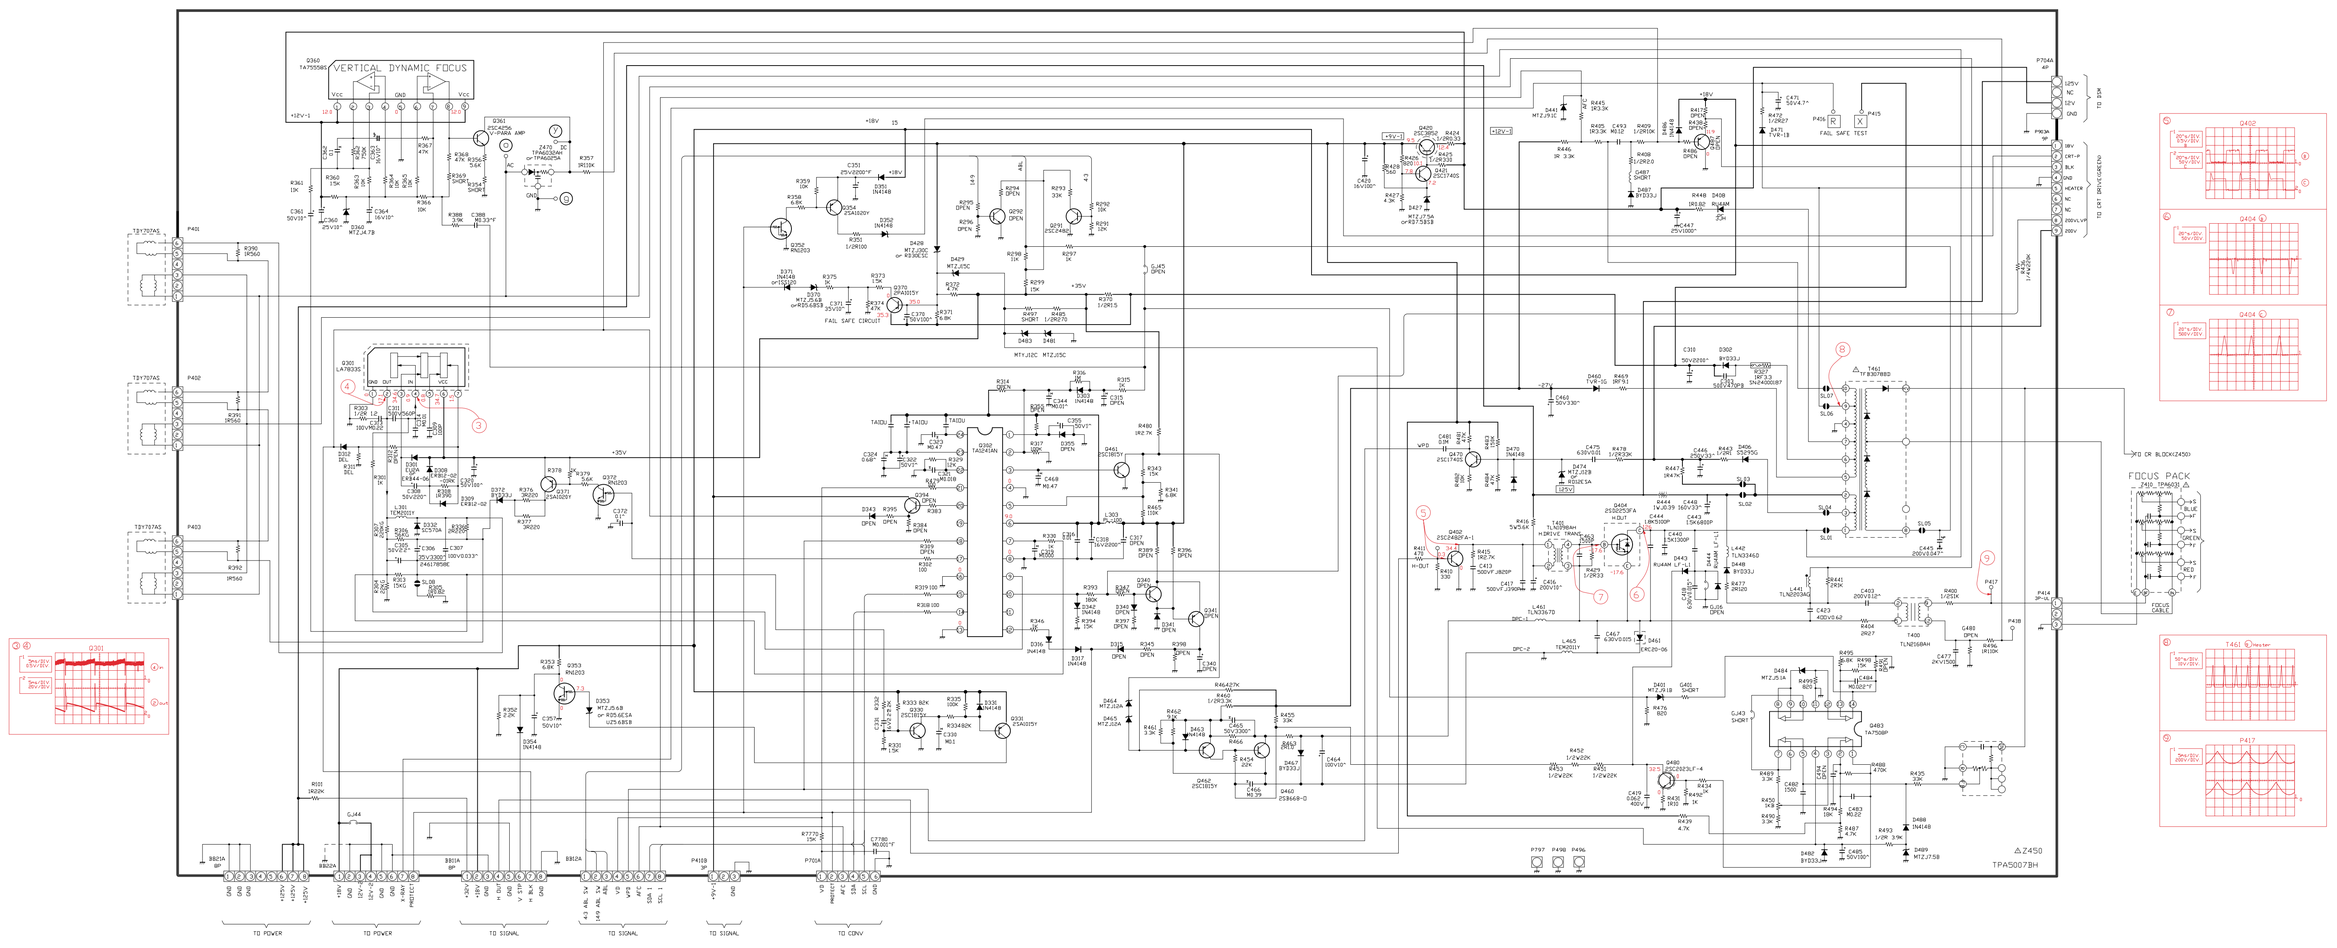
VERTICAL DYNAMIC FOCUS
Q360 tA755985
Q361 2SC4706 Y-PAIRA AMP
Z470 3K TPA6030M4 or TPA6035A
T3Y707AS
P431
P452
P403
Q301 LA7833S
Q302 TA8434N
Q303 TA8316N
Q304 2SC4706
Q305 2SA1837
Q306 2SC4706
Q307 2SA1837
Q308 2SA1837
Q309 2SA1837
Q310 2SA1837
Q311 2SA1837
Q312 2SA1837
Q313 2SA1837
Q314 2SA1837
Q315 2SA1837
Q316 2SA1837
Q317 2SA1837
Q318 2SA1837
Q319 2SA1837
Q320 2SA1837
Q321 2SA1837
Q322 2SA1837
Q323 2SA1837
Q324 2SA1837
Q325 2SA1837
Q326 2SA1837
Q327 2SA1837
Q328 2SA1837
Q329 2SA1837
Q330 2SA1837
Q331 2SA1837
Q332 2SA1837
Q333 2SA1837
Q334 2SA1837
Q335 2SA1837
Q336 2SA1837
Q337 2SA1837
Q338 2SA1837
Q339 2SA1837
Q340 2SA1837
Q341 2SA1837
Q342 2SA1837
Q343 2SA1837
Q344 2SA1837
Q345 2SA1837
Q346 2SA1837
Q347 2SA1837
Q348 2SA1837
Q349 2SA1837
Q350 2SA1837
Q351 2SA1837
Q352 2SA1837
Q353 2SA1837
Q354 2SA1837
Q355 2SA1837
Q356 2SA1837
Q357 2SA1837
Q358 2SA1837
Q359 2SA1837
Q360 2SA1837
Q361 2SA1837
Q362 2SA1837
Q363 2SA1837
Q364 2SA1837
Q365 2SA1837
Q366 2SA1837
Q367 2SA1837
Q368 2SA1837
Q369 2SA1837
Q370 2SA1837
Q371 2SA1837
Q372 2SA1837
Q373 2SA1837
Q374 2SA1837
Q375 2SA1837
Q376 2SA1837
Q377 2SA1837
Q378 2SA1837
Q379 2SA1837
Q380 2SA1837
Q381 2SA1837
Q382 2SA1837
Q383 2SA1837
Q384 2SA1837
Q385 2SA1837
Q386 2SA1837
Q387 2SA1837
Q388 2SA1837
Q389 2SA1837
Q390 2SA1837
Q391 2SA1837
Q392 2SA1837
Q393 2SA1837
Q394 2SA1837
Q395 2SA1837
Q396 2SA1837
Q397 2SA1837
Q398 2SA1837
Q399 2SA1837
Q400 2SA1837
Q401 2SA1837
Q402 2SA1837
Q403 2SA1837
Q404 2SA1837
Q405 2SA1837
Q406 2SA1837
Q407 2SA1837
Q408 2SA1837
Q409 2SA1837
Q410 2SA1837
Q411 2SA1837
Q412 2SA1837
Q413 2SA1837
Q414 2SA1837
Q415 2SA1837
Q416 2SA1837
Q417 2SA1837
Q418 2SA1837
Q419 2SA1837
Q420 2SC3952
Q421 2SC3740S
Q422 2SC2482FA-1
Q423 2SC2482FA-1
Q424 2SC3952
Q425 2SC3952
Q426 2SC3952
Q427 2SC3952
Q428 2SC3952
Q429 2SC3952
Q430 2SC3952
Q431 2SC3952
Q432 2SC3952
Q433 2SC3952
Q434 2SD2059FA
Q435 TLN3986H
Q436 2SC3952
Q437 2SC3952
Q438 2SC3952
Q439 2SC3952
Q440 2SC3952
Q441 2SC3952
Q442 2SC3952
Q443 2SC3952
Q444 2SC3952
Q445 2SC3952
Q446 2SC3952
Q447 2SC3952
Q448 2SC3952
Q449 2SC3952
Q450 2SC3952
Q451 2SC3952
Q452 2SC3952
Q453 2SC3952
Q454 2SC3952
Q455 2SC3952
Q456 2SC3952
Q457 2SC3952
Q458 2SC3952
Q459 2SC3952
Q460 2SC3952
Q461 2SC3952
Q462 2SC3952
Q463 2SC3952
Q464 2SC3952
Q465 2SC3952
Q466 2SC3952
Q467 2SC3952
Q468 2SC3952
Q469 2SC3952
Q470 2SC3952
Q471 2SC3952
Q472 2SC3952
Q473 2SC3952
Q474 2SC3952
Q475 2SC3952
Q476 2SC3952
Q477 2SC3952
Q478 2SC3952
Q479 2SC3952
Q480 2SC2482FA-1
Q481 2SC3952
Q482 2SC3952
Q483 2SC3952
Q484 2SC3952
Q485 2SC3952
Q486 2SC3952
Q487 2SC3952
Q488 2SC3952
Q489 2SC3952
Q490 2SC3952
Q491 2SC3952
Q492 2SC3952
Q493 2SC3952
Q494 2SC3952
Q495 2SC3952
Q496 2SC3952
Q497 2SC3952
Q498 2SC3952
Q499 2SC3952
Q500 2SC3952

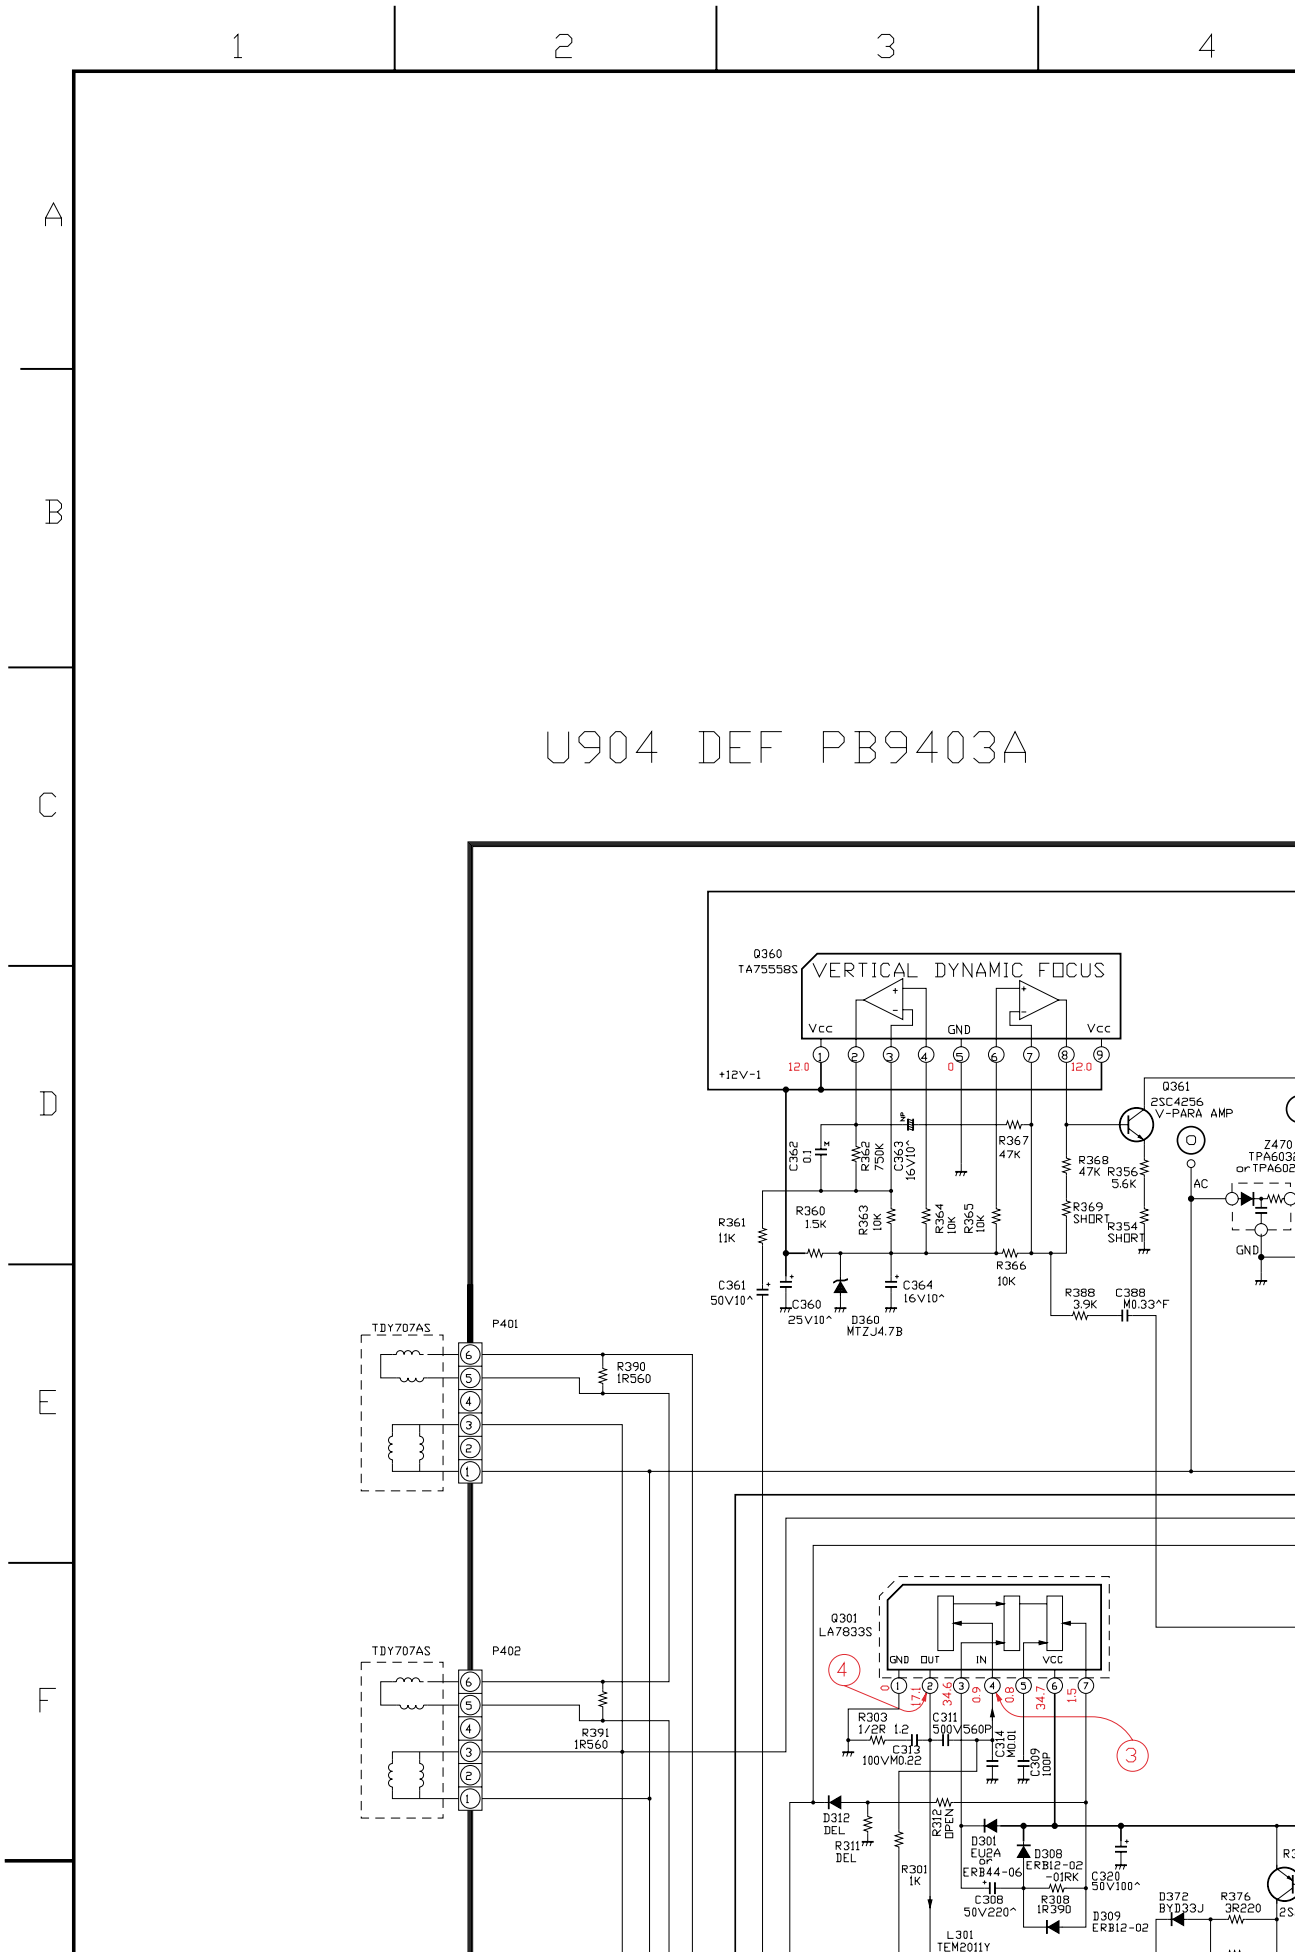
1
2
3
4
A
B
C
D
E
F
U904 DEF PB9403A
Q360
TA75558S
VERTICAL DYNAMIC FOCUS
Vcc
GND
Vcc
+12V-1
12.0
0
12.0
Q361
2SC4256
V-PARA AMP
AC
GND
R367
47K
R368
47K
R356
5.6K
R369
SHORT
R354
SHORT
R366
10K
R360
1.5K
R361
11K
R362
750K
R363
10K
R364
10K
R365
10K
C362
0.1
C363
16V10^
C361
50V10^
C360
25V10^
C364
16V10^
D360
MTZJ4.7B
R388
3.9K
C388
M0.33^F
TDY707AS
P401
R390
1R560
TDY707AS
P402
R391
1R560
Q301
LA7833S
GND
OUT
IN
VCC
R303
1/2R 1.2
C313
100VM0.22
C311
500V560P
C314
M0.01
C309
100P
D312
DEL
R311
DEL
R312
OPEN
R301
1K
D301
EU2A
D308
ERB12-02
-01RK
ERB44-06
C308
50V220^
R308
1R390
C320
50V100^
D309
ERB12-02
L301
TEM2011Y
D372
BYD33J
R376
3R220

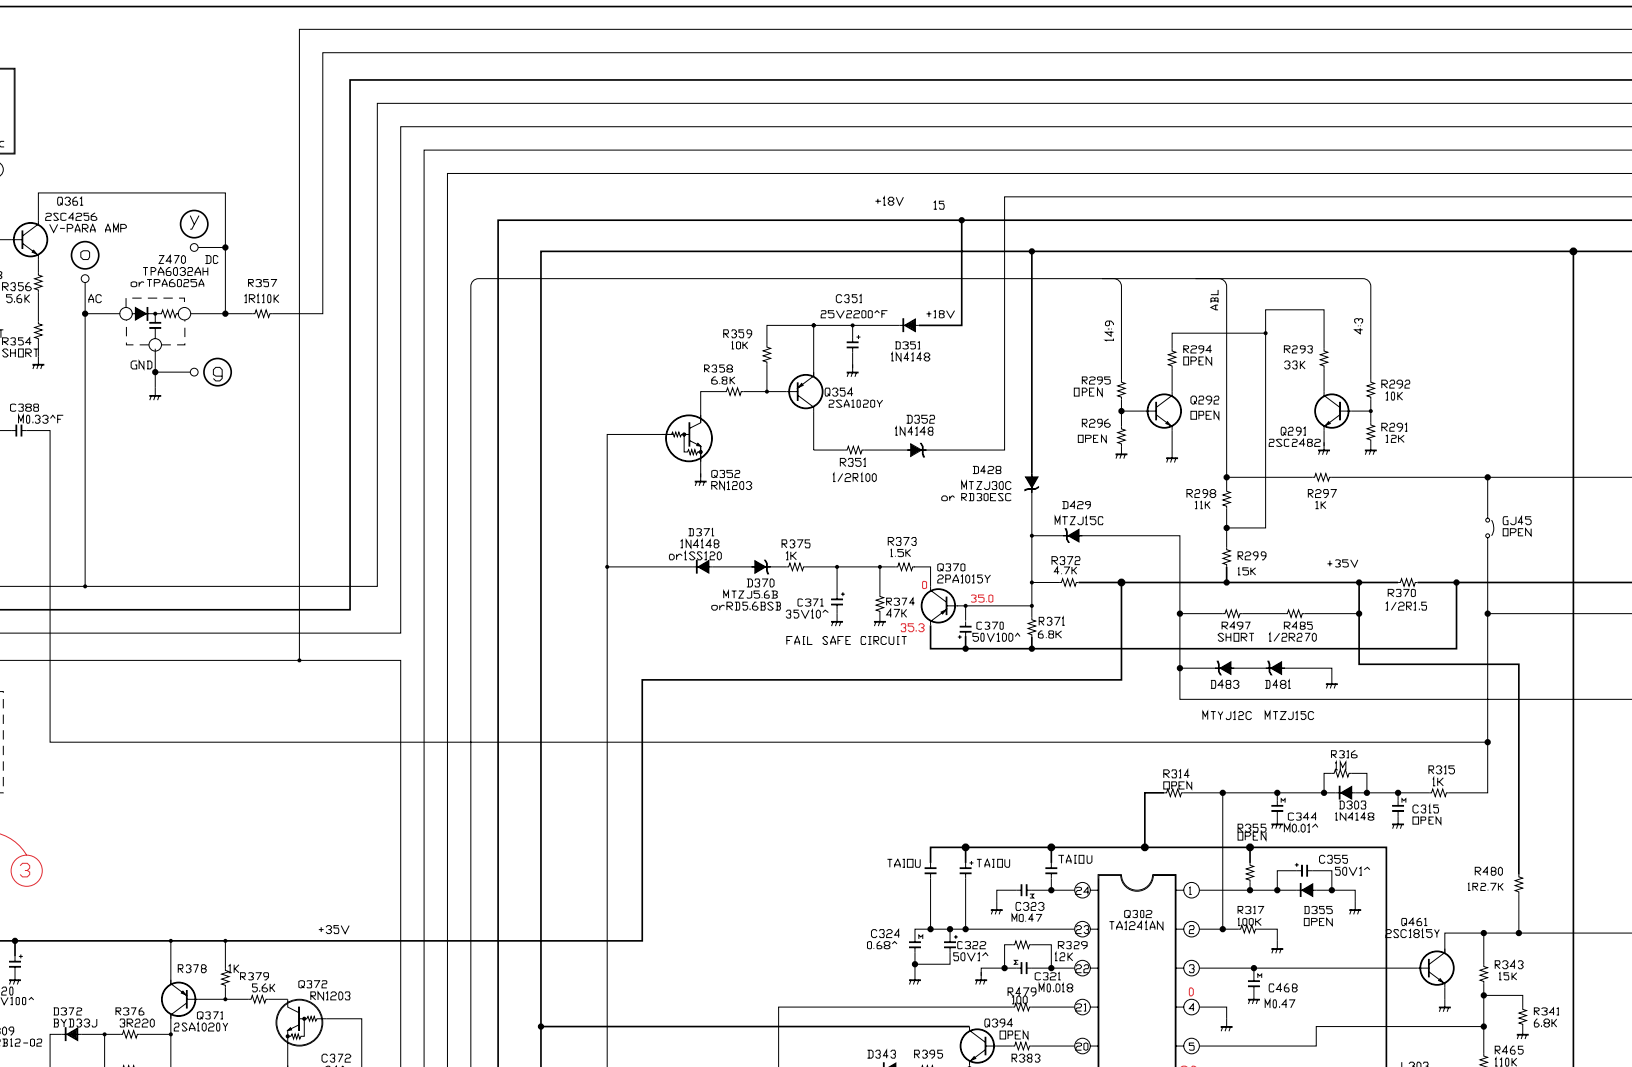
Q361
2SC4256
V-PARA AMP
Z470 DC
TPA6032AH
or TPA6025A
AC
GND
R357
1R110K
R356
5.6K
R354
SHORT
C388
M0.33^F
+18V
15
C351
25V2200^F
+18V
R359
10K
D351
1N4148
R358
6.8K
Q354
2SA1020Y
D352
1N4148
R351
1/2R100
Q352
RN1203
D428
MTZJ30C
or RD30ESC
14:9
ABL
4:3
R295
OPEN
R294
OPEN
R293
33K
R292
10K
Q292
OPEN
Q291
2SC2482
R296
OPEN
R291
12K
R298
11K
R297
1K
D429
MTZJ15C
GJ45
OPEN
D371
1N4148
or1SS120
R375
1K
R373
1.5K
Q370
2PA1015Y
R372
4.7K
R299
15K
+35V
D370
MTZJ5.6B
orRD5.6BSB
C371
35V10^
R374
47K
35.0
35.3
C370
50V100^
R371
6.8K
R370
1/2R1.5
R497
SHORT
R485
1/2R270
FAIL SAFE CIRCUIT
D483
D481
MTYJ12C MTZJ15C
R316
1M
R314
OPEN
R315
1K
D303
1N4148
C344
M0.01^
C315
OPEN
R355
OPEN
TA1□U
TA1□U
TA1□U
C355
50V1^
R480
1R2.7K
C323
M0.47
Q302
TA1241AN
C324
0.68^
C322
50V1^
R329
1.2K
R317
100K
D355
OPEN
Q461
2SC1815Y
C321
M0.018
R479
1M
C468
M0.47
R343
15K
Q394
OPEN
R383
R341
6.8K
D343
R395
R465
110K
+35V
R378
1K
R379
5.6K
Q372
RN1203
Q371
2SA1020Y
D372
BYD33J
R376
3R220
C372
R20
V100^
09
B12-02
3

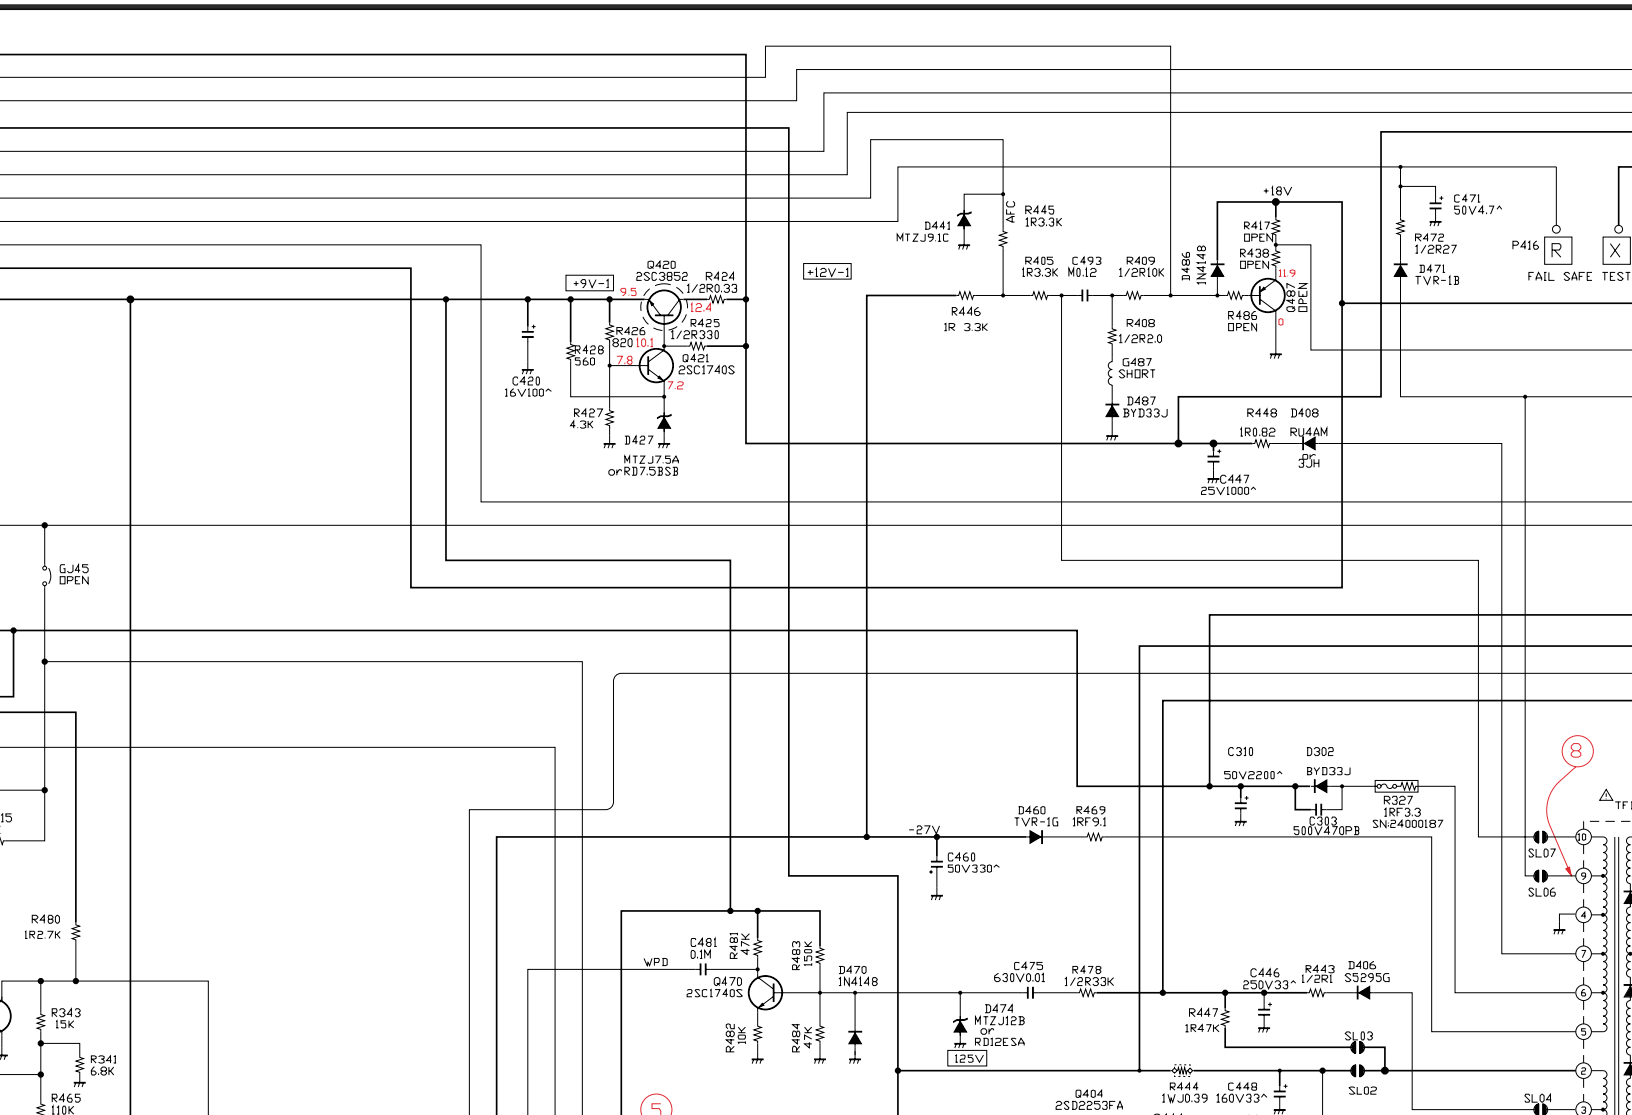
+9V-1
Q420 2SC3852
R424 1/2R0.33
R425 1/2R330
R426 820
R428 560
Q421 2SC1740S
C420 16V100^
R427 4.3K
D427 MTZJ7.5A or RD7.5BSB
+12V-1
D441 MTZJ9.1C
AFC
R445 1R3.3K
R405 1R3.3K
C493 M0.12
R409 1/2R10K
R446 1R 3.3K
R408 1/2R2.0
G487 SHORT
D487 BYD33J
D486 1N4148
+18V
R417 OPEN
R438 OPEN
Q487 OPEN
R486 OPEN
C471 50V4.7^
R472 1/2R27
D471 TVR-1B
P416
R
X
FAIL SAFE
TEST
R448 1R0.82
D408 RU4AM
C447 25V1000^
GJ45 OPEN
R480 1R2.7K
R343 15K
R341 6.8K
R465 110K
C481 0.1M
R481 47K
R483 150K
WPD
Q470 2SC1740S
R462 10K
R484 47K
D470 1N4148
-27V
D460 TVR-1G
R469 1RF9.1
C460 50V330^
C475 630V0.01
R478 1/2R33K
D474 MTZJ12B or RD12ESA
125V
C310 50V2200^
D302 BYD33J
C303 500V470PB
R327 1RF3.3 SN:24000187
C446 250V33^
R443 1/2R1
D406 S5295G
R447 1R47K
SL03
SL02
SL07
SL06
SL04
R444 1WJ0.39
C448 160V33^
Q404 2SD2253FA
5
8

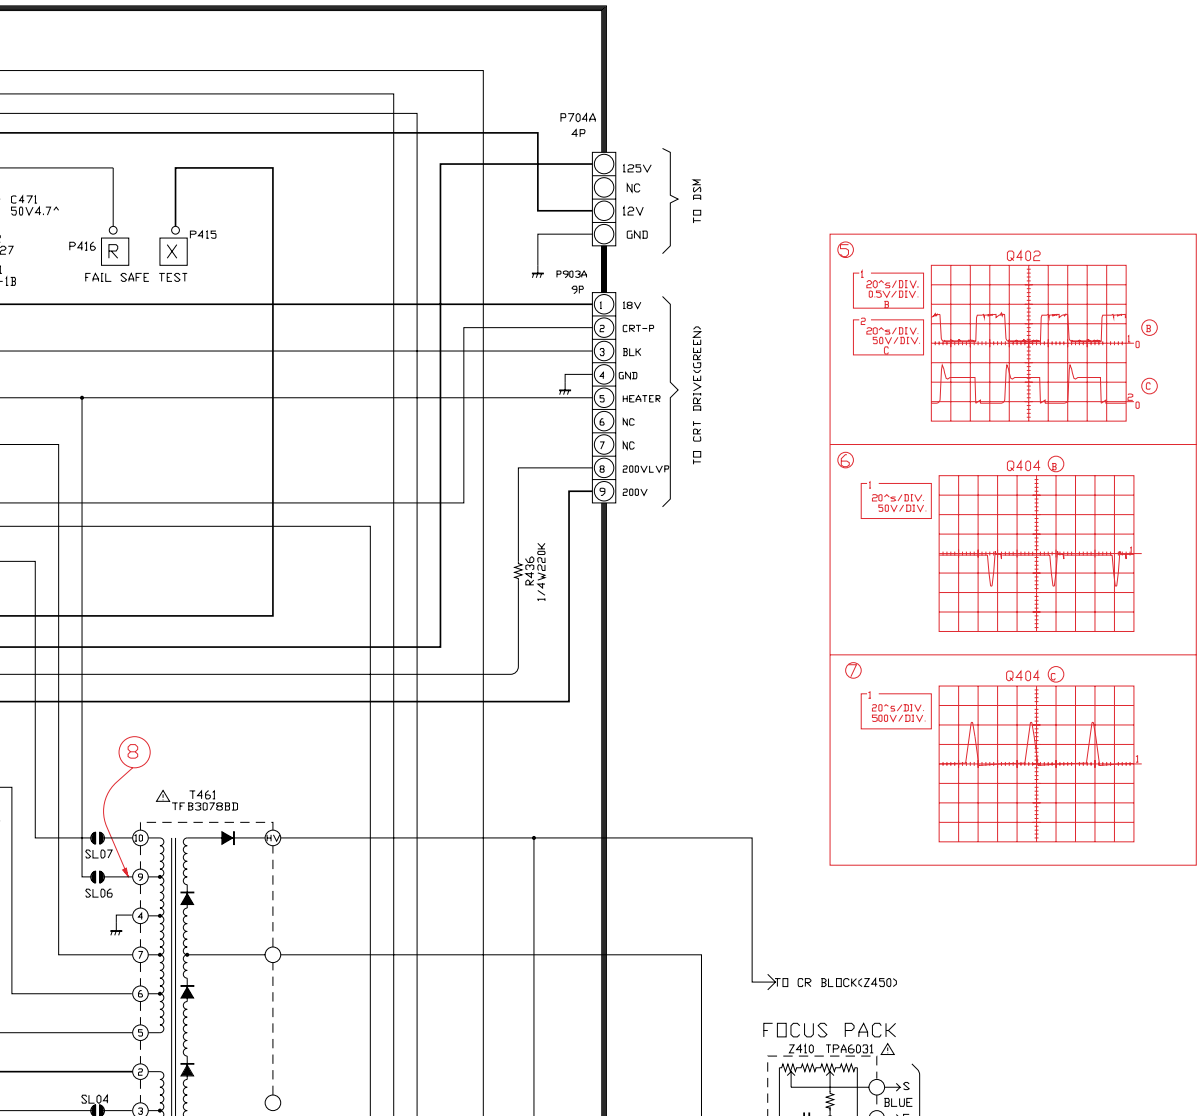
P704A
4P
125V
NC
12V
GND
TO DSM
P903A
9P
1B
CRT-P
BLK
GND
HEATER
NC
NC
200VLVP
200V
TO CRT DRIVE(GREEN)
C471
50V4.7^
P416
R
FAIL SAFE
X
P415
TEST
R426
1/4W220K
8
T461
TFB3078BD
SL07
SL06
SL04
TO CR BLOCK(Z450)
FOCUS PACK
Z410_TPA6031
S
BLUE
5
Q402
20^s/DIV.
0.5V/DIV.
B
20^s/DIV.
50V/DIV.
C
6
Q404
B
20^s/DIV.
50V/DIV.
7
Q404
C
20^s/DIV.
500V/DIV.

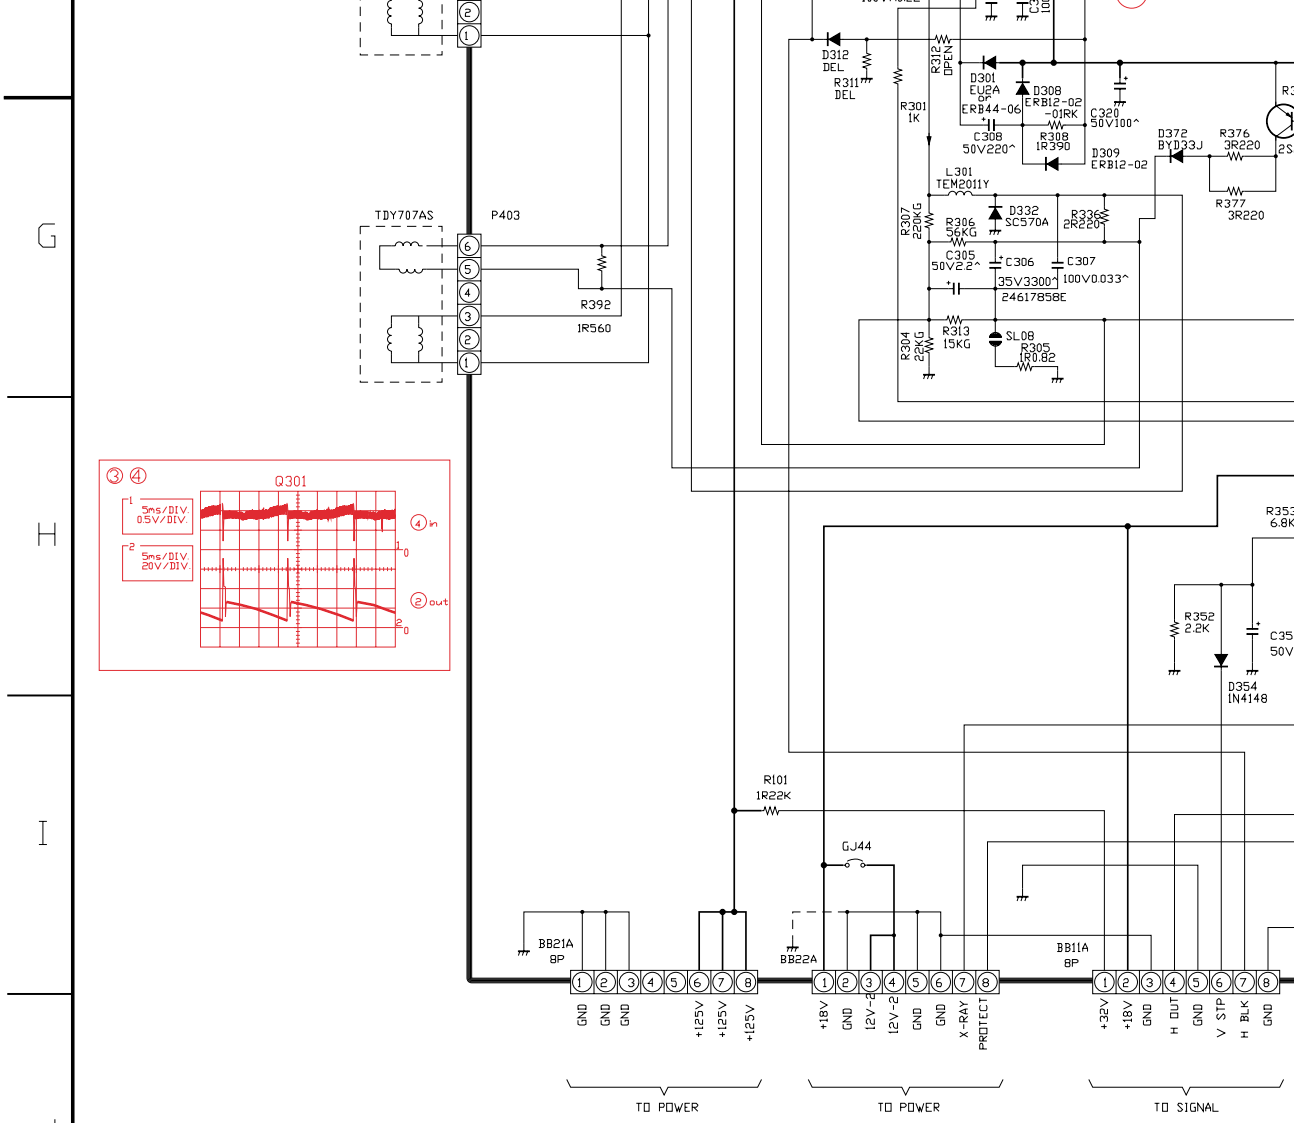
TDY707AS
P403
R392
1R560
D312
DEL
R311
DEL
R312
OPEN
D301
EU2A
5F
ERB44-06
D308
ERB12-02
-01RK
C308
50V220^
R308
1R390
C320
50V100^
D309
ERB12-02
D372
BYD33J
R376
3R220
R377
3R220
L301
TEM2011Y
R307
220KG
R306
56KG
D332
SC570A
R336
2R220
C305
50V2.2^
C306
35V3300^
C307
100V0.033^
24617858E
R313
15KG
R304
22KG
SL08
R305
1R0.82
R301
1K
③④
Q301
5ms/DIV.
0.5V/DIV.
5ms/DIV.
20V/DIV.
④in
②out
R352
2.2K
D354
1N4148
R101
1R22K
GJ44
BB21A
8P
BB22A
BB11A
8P
GND
GND
GND
+125V
+125V
+125V
+18V
GND
12V-2
12V-2
GND
GND
X-RAY
PROTECT
+32V
+18V
GND
H OUT
GND
V STP
H BLK
GND
TO POWER
TO POWER
TO SIGNAL

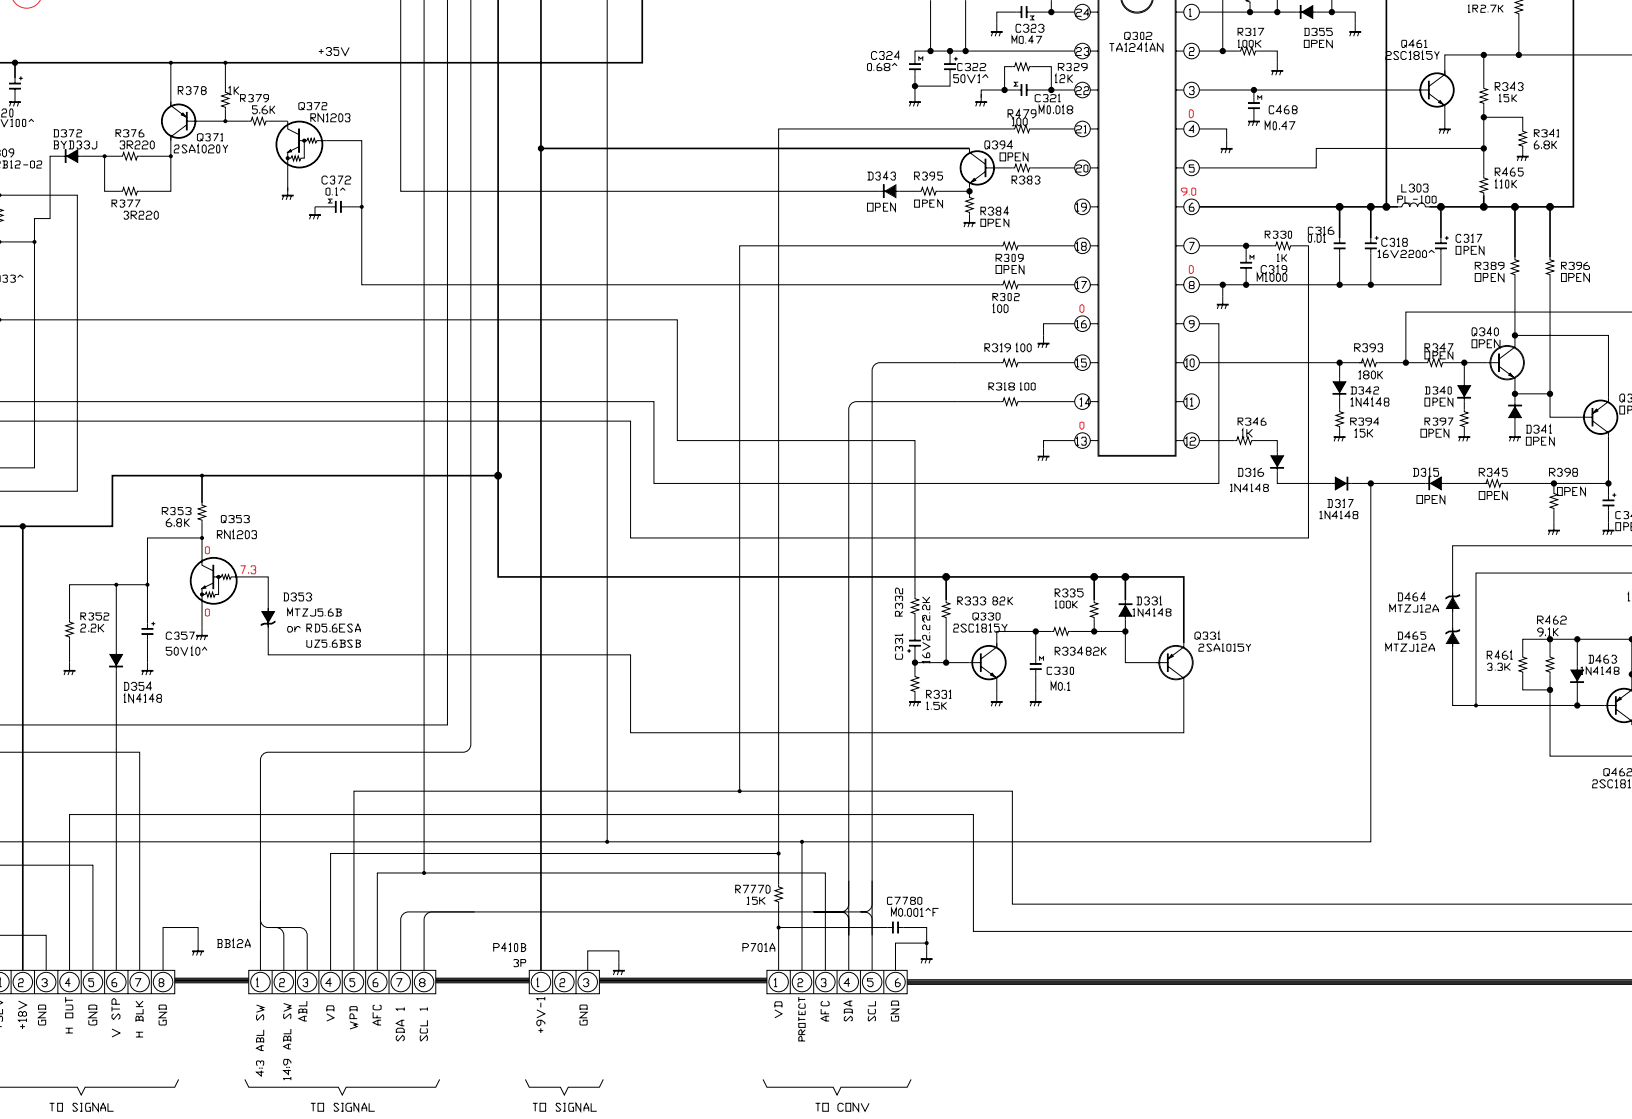
+35V
R378 4K
R379 5.6K
Q371 2SA1020Y
Q372 RN1203
D372 BYD33J
R376 3R220
R377 3R220
C372 0.1^
C323 M0.47
C324 0.68^
C322 50V1^
R329 12K
C321 M0.018
R479 100
Q394 OPEN
R383
D343 OPEN
R395 OPEN
R384 OPEN
R309 OPEN
R302 100
R319 100
R318 100
Q302 TA1241AN
R317 100K
D355 OPEN
C468 M0.47
R2.7K
Q461 2SC1815Y
R343 15K
R341 6.8K
R465 110K
L303 PL~100
C316 0.01
C318 16V2200^
C317 OPEN
R389 OPEN
R396 OPEN
R330 1K
C319 M1000
R393 180K
Q340 OPEN
R347 OPEN
D342 1N4148
R394 15K
D340 OPEN
R397 OPEN
D341 OPEN
R346 1K
D316 1N4148
D317 1N4148
D315 OPEN
R345 OPEN
R398 OPEN
R353 6.8K
Q353 RN1203
7.3
D353 MTZJ5.6B or RD5.6ESA UZ5.6BSB
R352 2.2K
C357 50V10^
D354 1N4148
R332
C331 16V2.2^2K
R333 82K
Q330 2SC1815Y
R335 100K
D331 1N4148
R334 82K
C330 M0.1
R331 1.5K
Q331 2SA1015Y
D464 MTZJ12A
D465 MTZJ12A
R462 9.1K
R461 3.3K
D463 N4148
Q462 2SC181
R7770 15K
C7780 M0.001^F
P701A
BB12A
P410B 3P
+18V
GND
H OUT
GND
V STP
H BLK
GND
4:3 ABL SW
14:9 ABL SW
ABL
VD
WPD
AFC
SDA 1
SCL 1
+9V-1
GND
VD
PROTECT
AFC
SDA
SCL
GND
TO SIGNAL
TO SIGNAL
TO SIGNAL
TO CONV

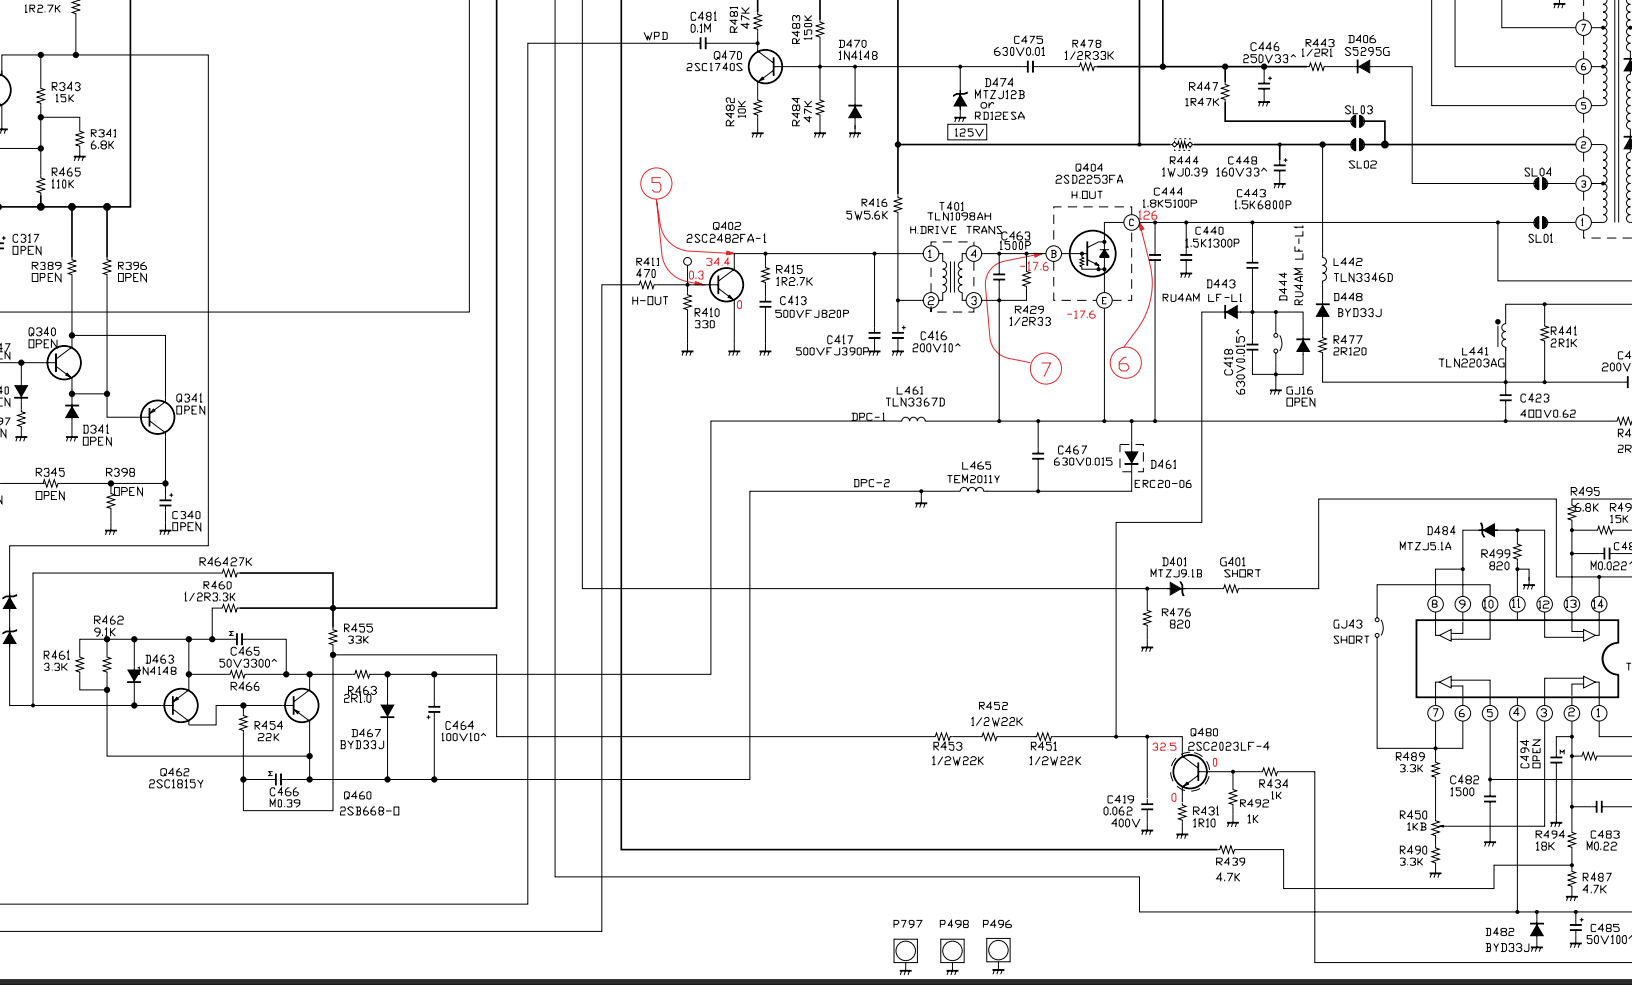
R343 15K
R341 6.8K
R465 110K
C317 OPEN
R389 OPEN
R396 OPEN
Q340 OPEN
Q341 OPEN
D341 OPEN
R345 OPEN
R398 OPEN
C340 OPEN
R46427K
R460 1/2R3.3K
R462 9.1K
R461 3.3K
D463 1N4148
C465 50V3300^
R466
R455 33K
R463 2R1.0
D467 BYD33J
C464 100V10^
R454 22K
Q462 2SC1815Y
C466 M0.39
Q460 2SB668-□
C481 0.1M
R481 47K
WPD
Q470 2SC1740S
R482 10K
R483 150K
R484 47K
D470 1N4148
C475 630V0.01
R478 1/2R33K
D474 MTZJ12B OR RD12ESA
125V
C446 250V33^
R443 1/2R1
D406 S5295G
R447 1R47K
SL03
SL02
R444 1WJ0.39
C448 160V33^
SL04
SL01
Q404 2SD2253FA H.OUT
C444 1.8K5100P
C443 1.5K6800P
R416 5W5.6K
T401 TLN1098AH H.DRIVE TRANS
C463 1500P
C440 1.5K1300P
L442 TLN3346D
D443 RU4AM LF-LI
D444 RU4AM LF-LI
D448 BYD33J
R477 2R120
C418 630V0.015^
GJ16 OPEN
L441 TLN2203AG
R441 2R1K
C423 400V0.62
Q402 2SC2482FA-1
R411 470
H-OUT
R410 330
R415 1R2.7K
C413 500VFJ820P
C417 500VFJ390P
C416 200V10^
R429 1/2R33
L461 TLN3367D
DPC-1
C467 630V0.015
D461 ERC20-06
L465 TEM2011Y
DPC-2
D401 MTZJ9.1B
G401 SHORT
R476 820
D484 MTZJ5.1A
R499 820
R495 5.8K
GJ43 SHORT
R452 1/2W22K
R453 1/2W22K
R451 1/2W22K
Q480 2SC2023LF-4
C419 0.062 400V
R431 1R10
R434 1K
R492 1K
R439 4.7K
R489 3.3K
C482 1500
C494 OPEN
R450 1KB
R490 3.3K
R494 18K
C483 M0.22
R487 4.7K
D482 BYD33J
C485 50V100^
P797
P498
P496

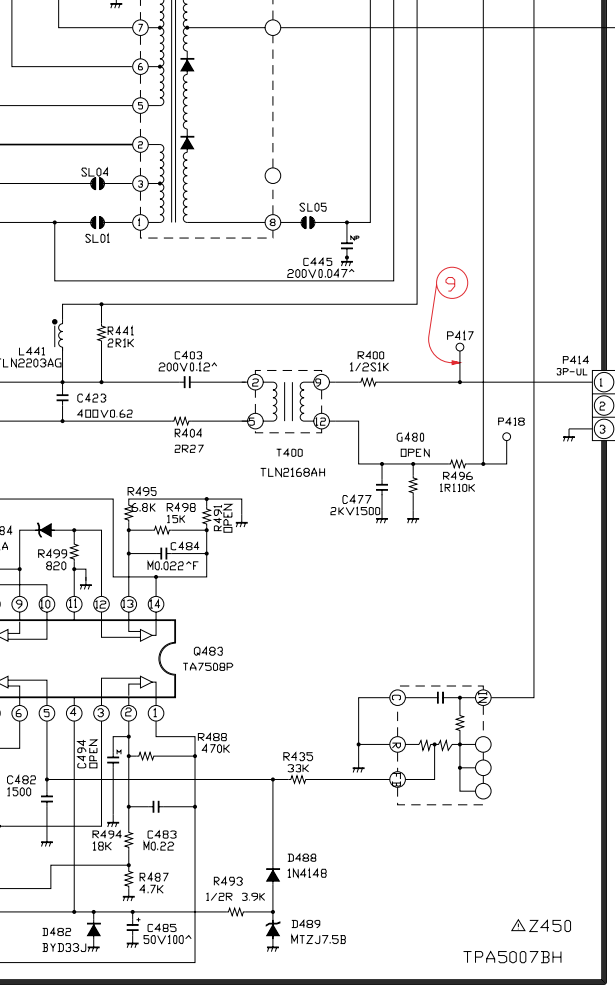

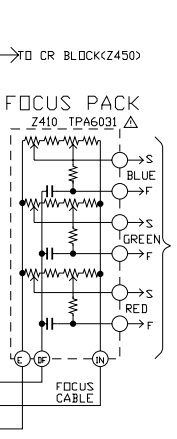

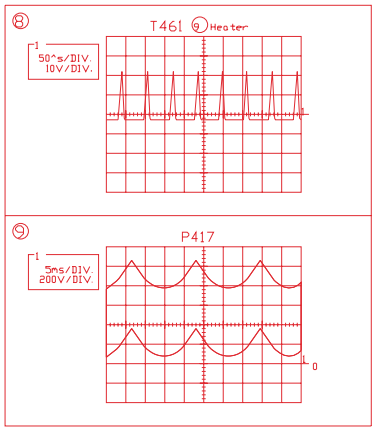

DEF
40PW13G/B 2/7

13 14 15 16

U907
PB9405A
D-CONVER

U906
PB9404A
POWER

LIVE AREA

U909
PB8773A
CONVERReference)

CONVER/POWER
D-CONV
40PW13G/B3/7

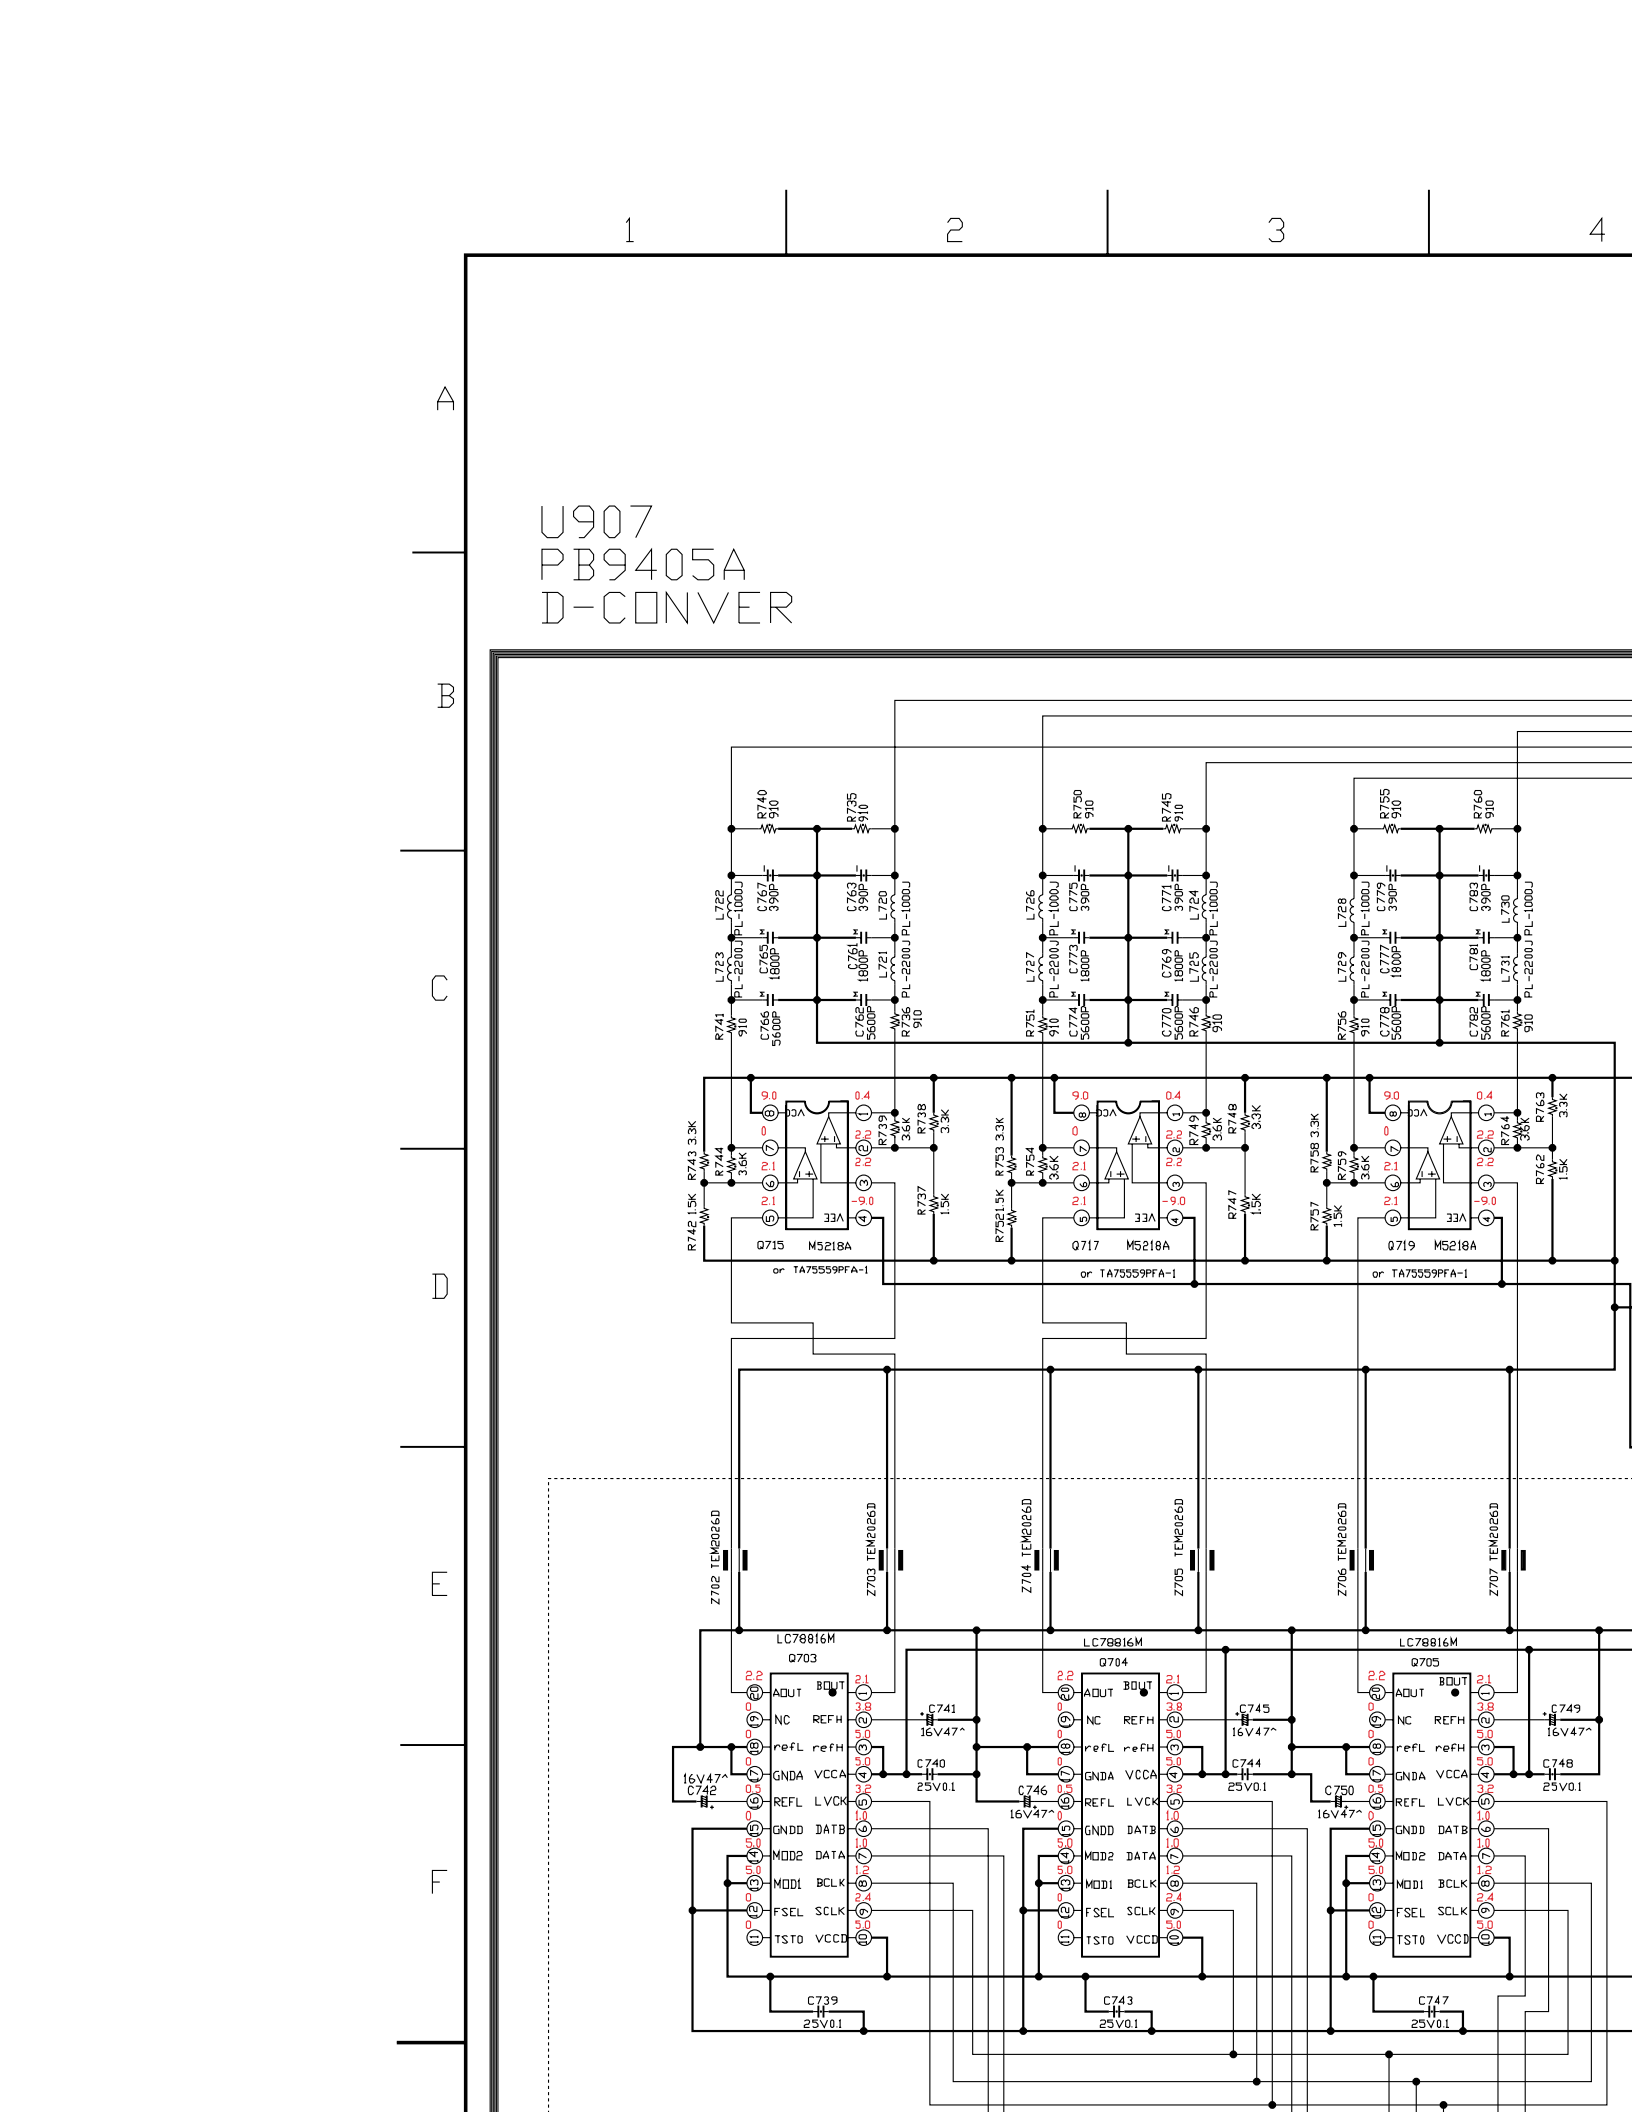
1
2
3
4
A
B
C
D
E
F
U907
PB9405A
D-CONVER
Q715 M5218A
or TA75559PFA-1
Q717 M5218A
or TA75559PFA-1
Q719 M5218A
or TA75559PFA-1
Z702 TEM2026D
Z703 TEM2026D
Z704 TEM2026D
Z705 TEM2026D
Z706 TEM2026D
Z707 TEM2026D
LC78816M
Q703
LC78816M
Q704
LC78816M
Q705
ADOUT
NC
refL
GNDA
REFL
GNDD
MOD2
MOD1
FSEL
TST0
BOUT
REFH
refH
VCCA
LVCK
DATB
DATA
BCLK
SCLK
VCCD

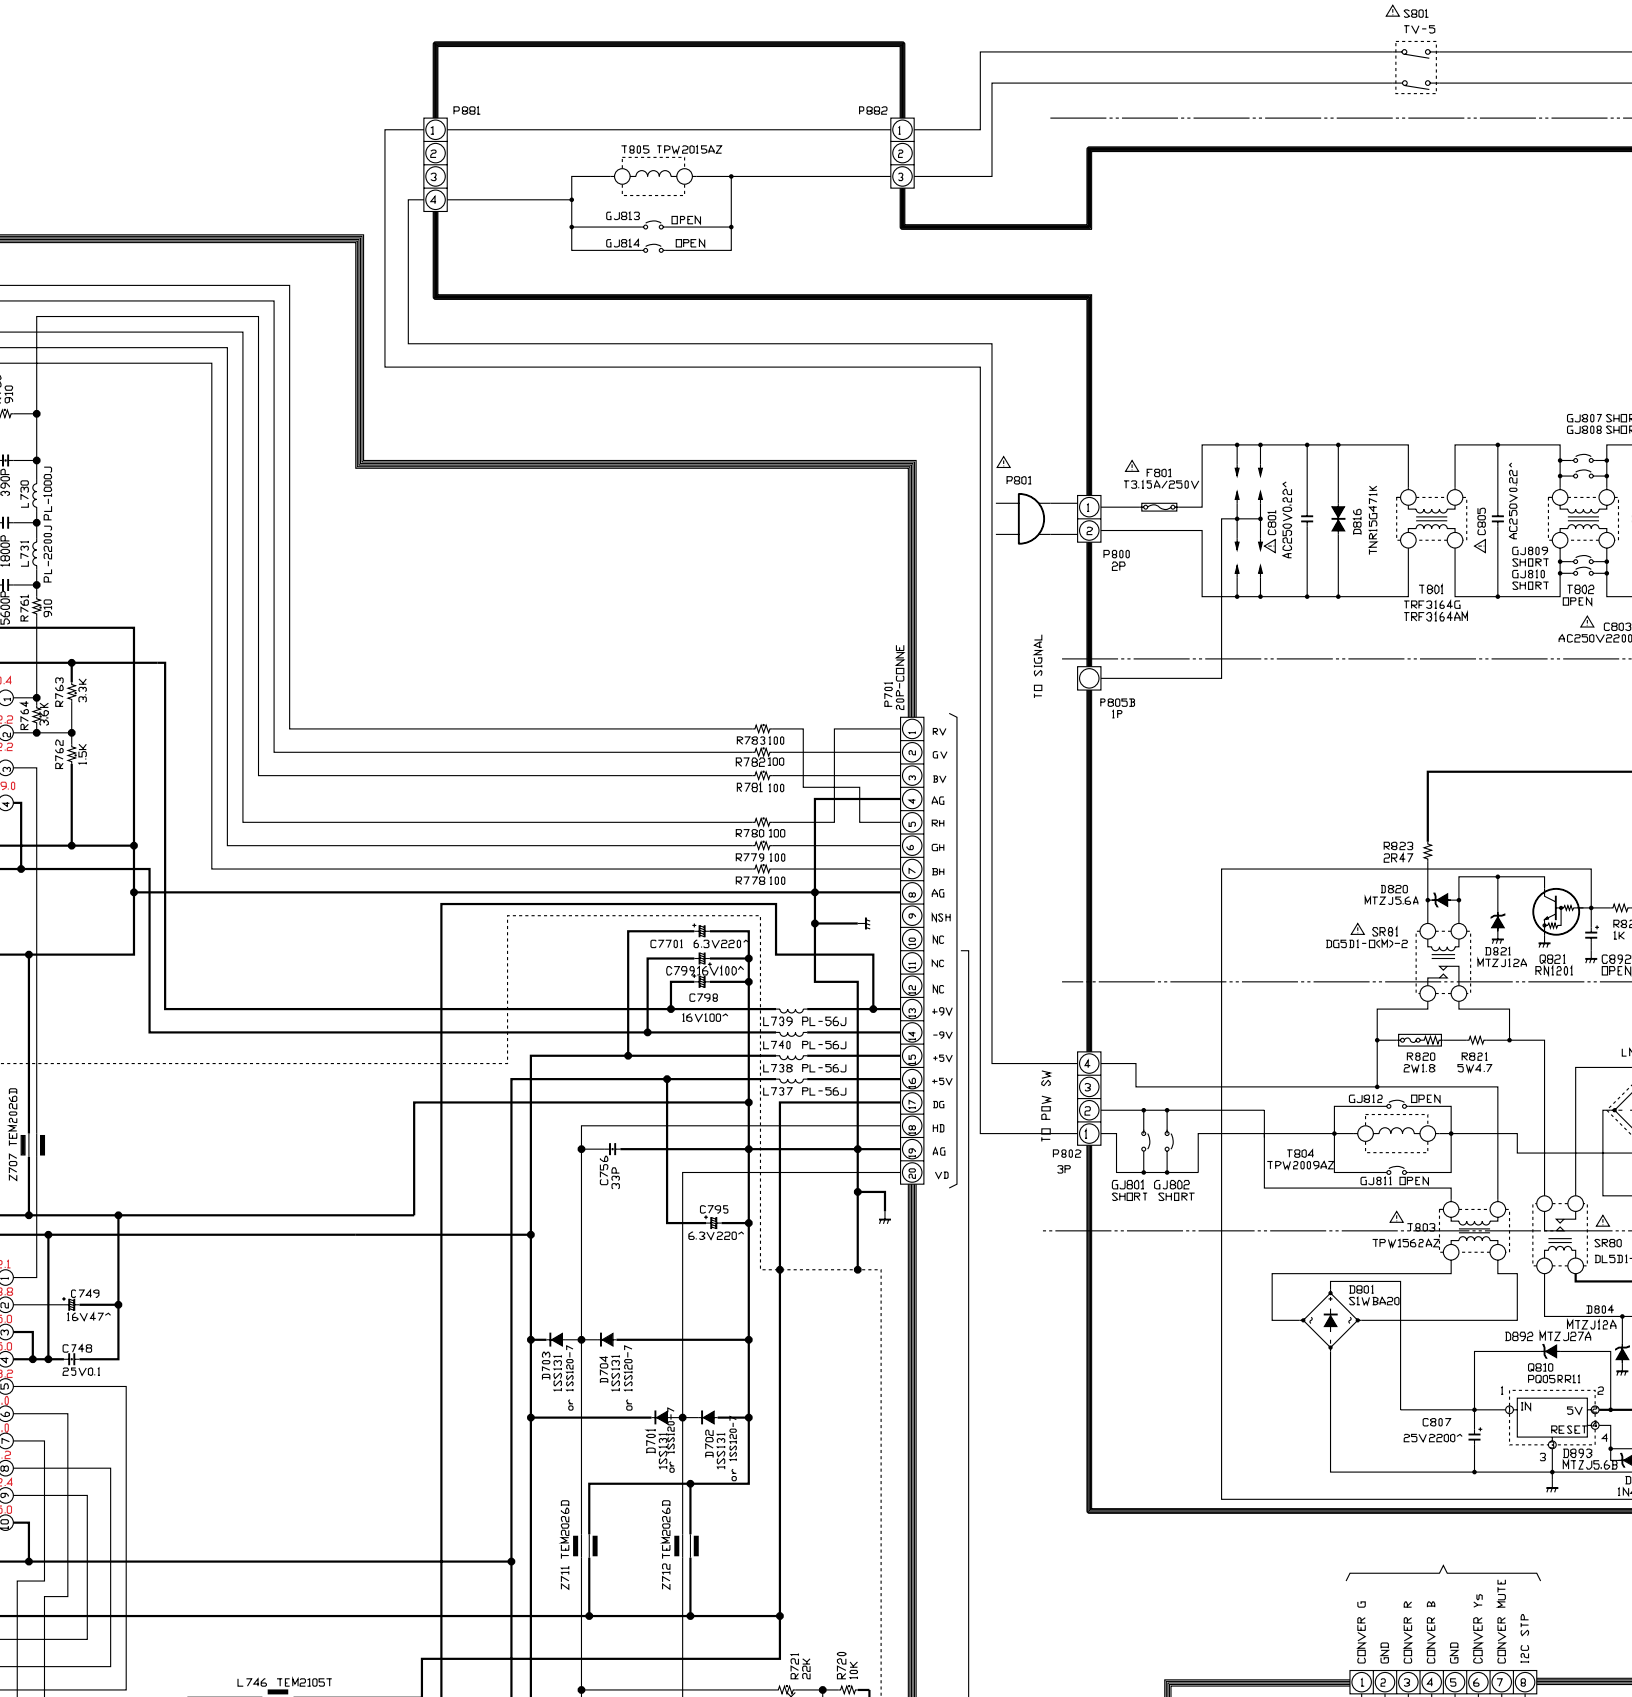
P881
P882
T805 TPW2015AZ
GJ813 OPEN
GJ814 OPEN
S801
TV-5
P801
P800
2P
F801
T3.15A/250V
C801
AC250V0.22^
D816
TNR15G471K
C805
AC250V0.22^
GJ809
SHORT
GJ810
SHORT
T801
TRF3164G
TRF3164AM
T802
OPEN
C803
AC250V2200
GJ807 SHOR
GJ808 SHOR
TO SIGNAL
P805B
1P
P701
20P-CONNE
RV
GV
BV
AG
RH
GH
BH
AG
NSH
NC
NC
NC
+9V
-9V
+5V
+5V
DG
HD
AG
VD
R783 100
R782 100
R781 100
R780 100
R779 100
R778 100
C7701 6.3V220^
C7916.3V100^
C798
16V100^
L739 PL-56J
L740 PL-56J
L738 PL-56J
L737 PL-56J
C756
33P
C795
6.3V220^
D703
1SS131
or 1SS120-7
D704
1SS131
or 1SS120-7
D701
1SS131
or 1SS120-7
D702
1SS131
or 1SS120-7
Z711 TEM2026D
Z712 TEM2026D
Z707 TEM2026D
C749
16V47^
C748
25V0.1
L746 TEM2105T
R721
22K
R720
10K
R823
2R47
D820
MTZJ5.6A
SR81
DGSD1-(KM)-2
D821
MTZJ12A
Q821
RN1201
C892
OPEN
R820
2W1.8
R821
5W4.7
TO POW SW
P802
3P
GJ801
SHORT
GJ802
SHORT
GJ812 OPEN
T804
TPW2009AZ
GJ811 OPEN
T803
TPW1562AZ
D801
SLWBA20
D804
MTZJ12A
D892 MTZJ27A
Q810
PQ05RR11
IN
5V
RESET
C807
25V2200^
D893
MTZJ5.6B
CONVER G
GND
CONVER R
CONVER B
GND
CONVER Ys
CONVER MUTE
I2C STP

U906
PB9404A
POWER

POWER

LIVE AREA

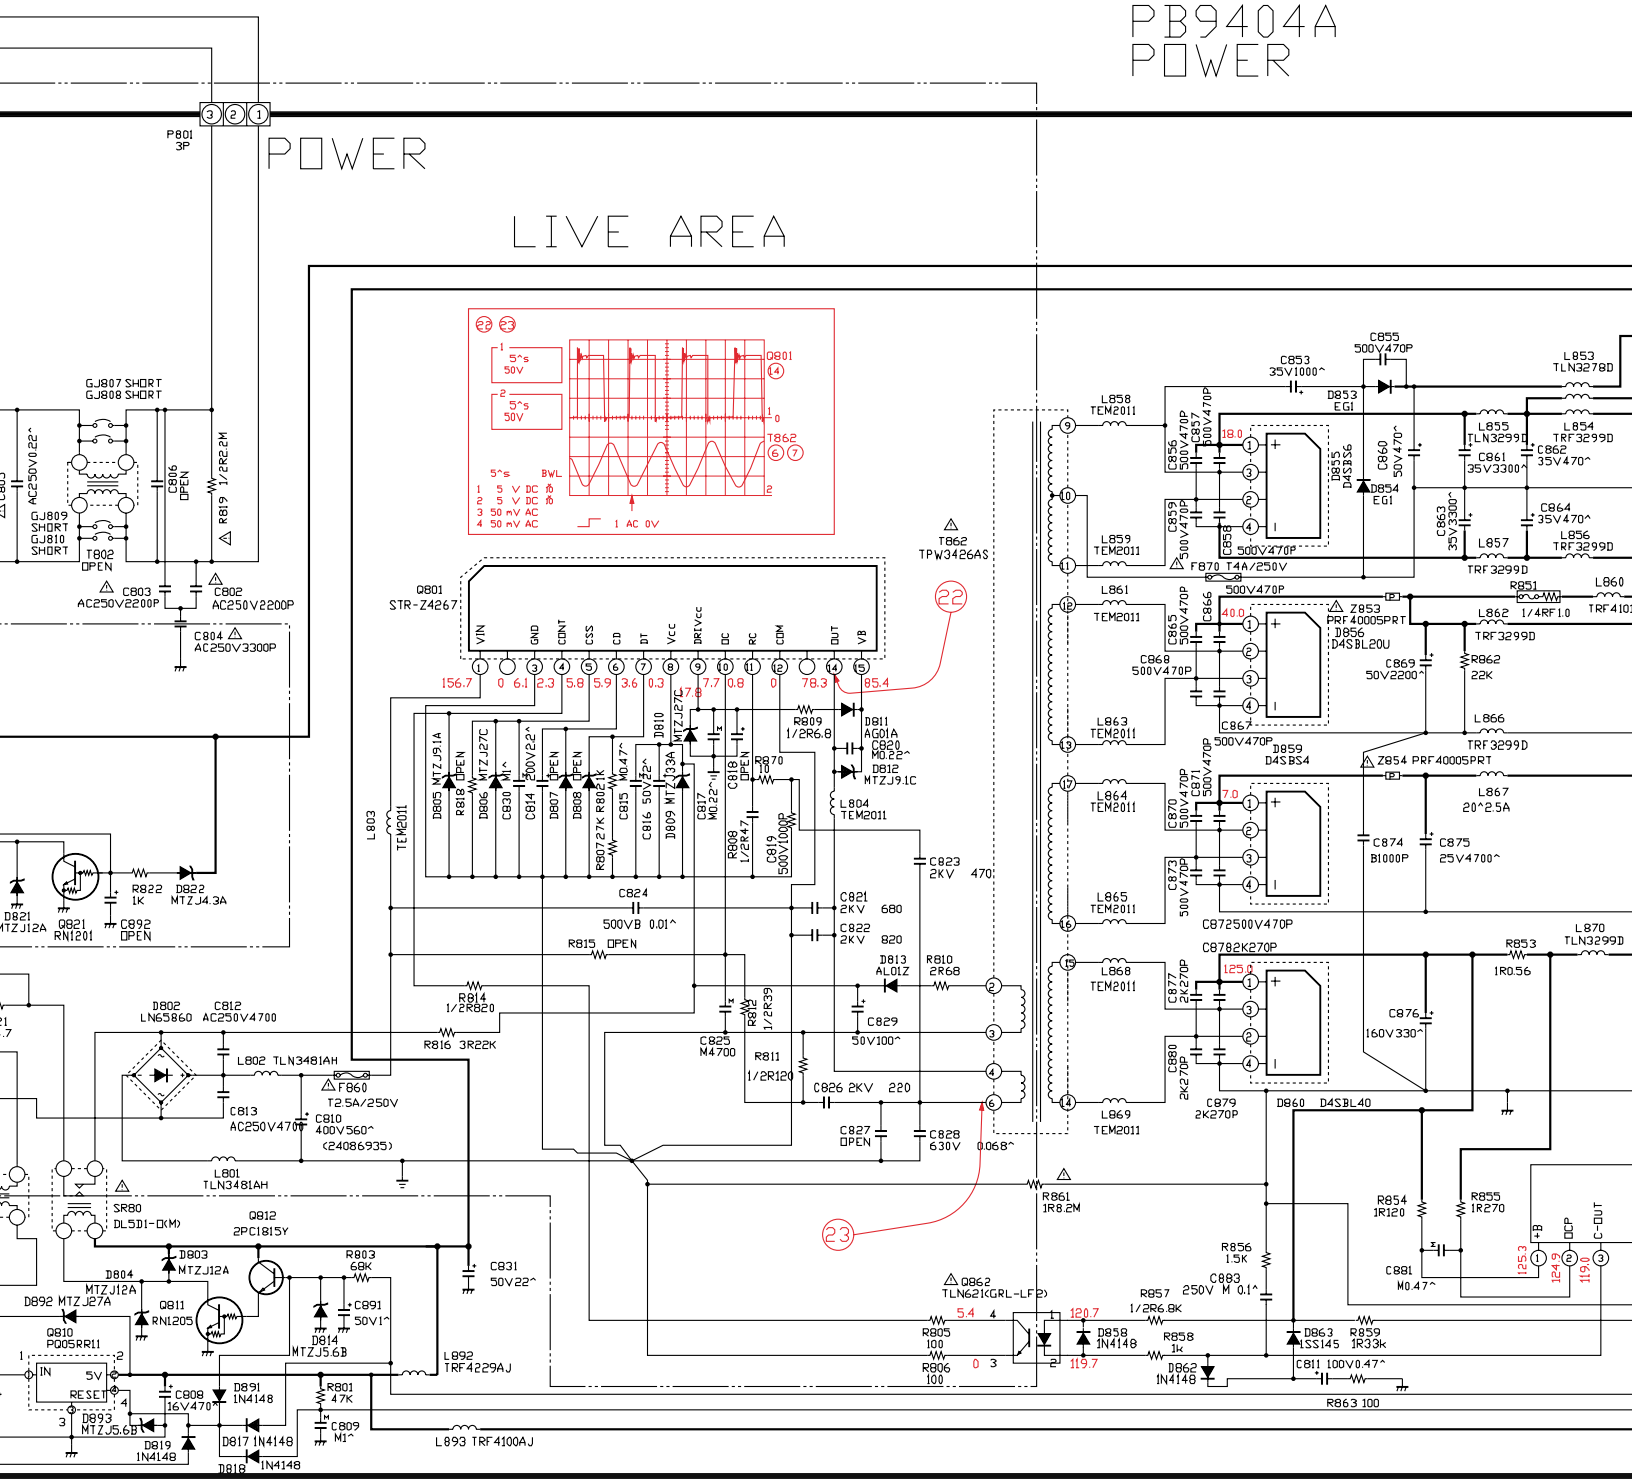

U909
PB8773A
CONVERReferenceX

CONVER MUTE
I2C STP

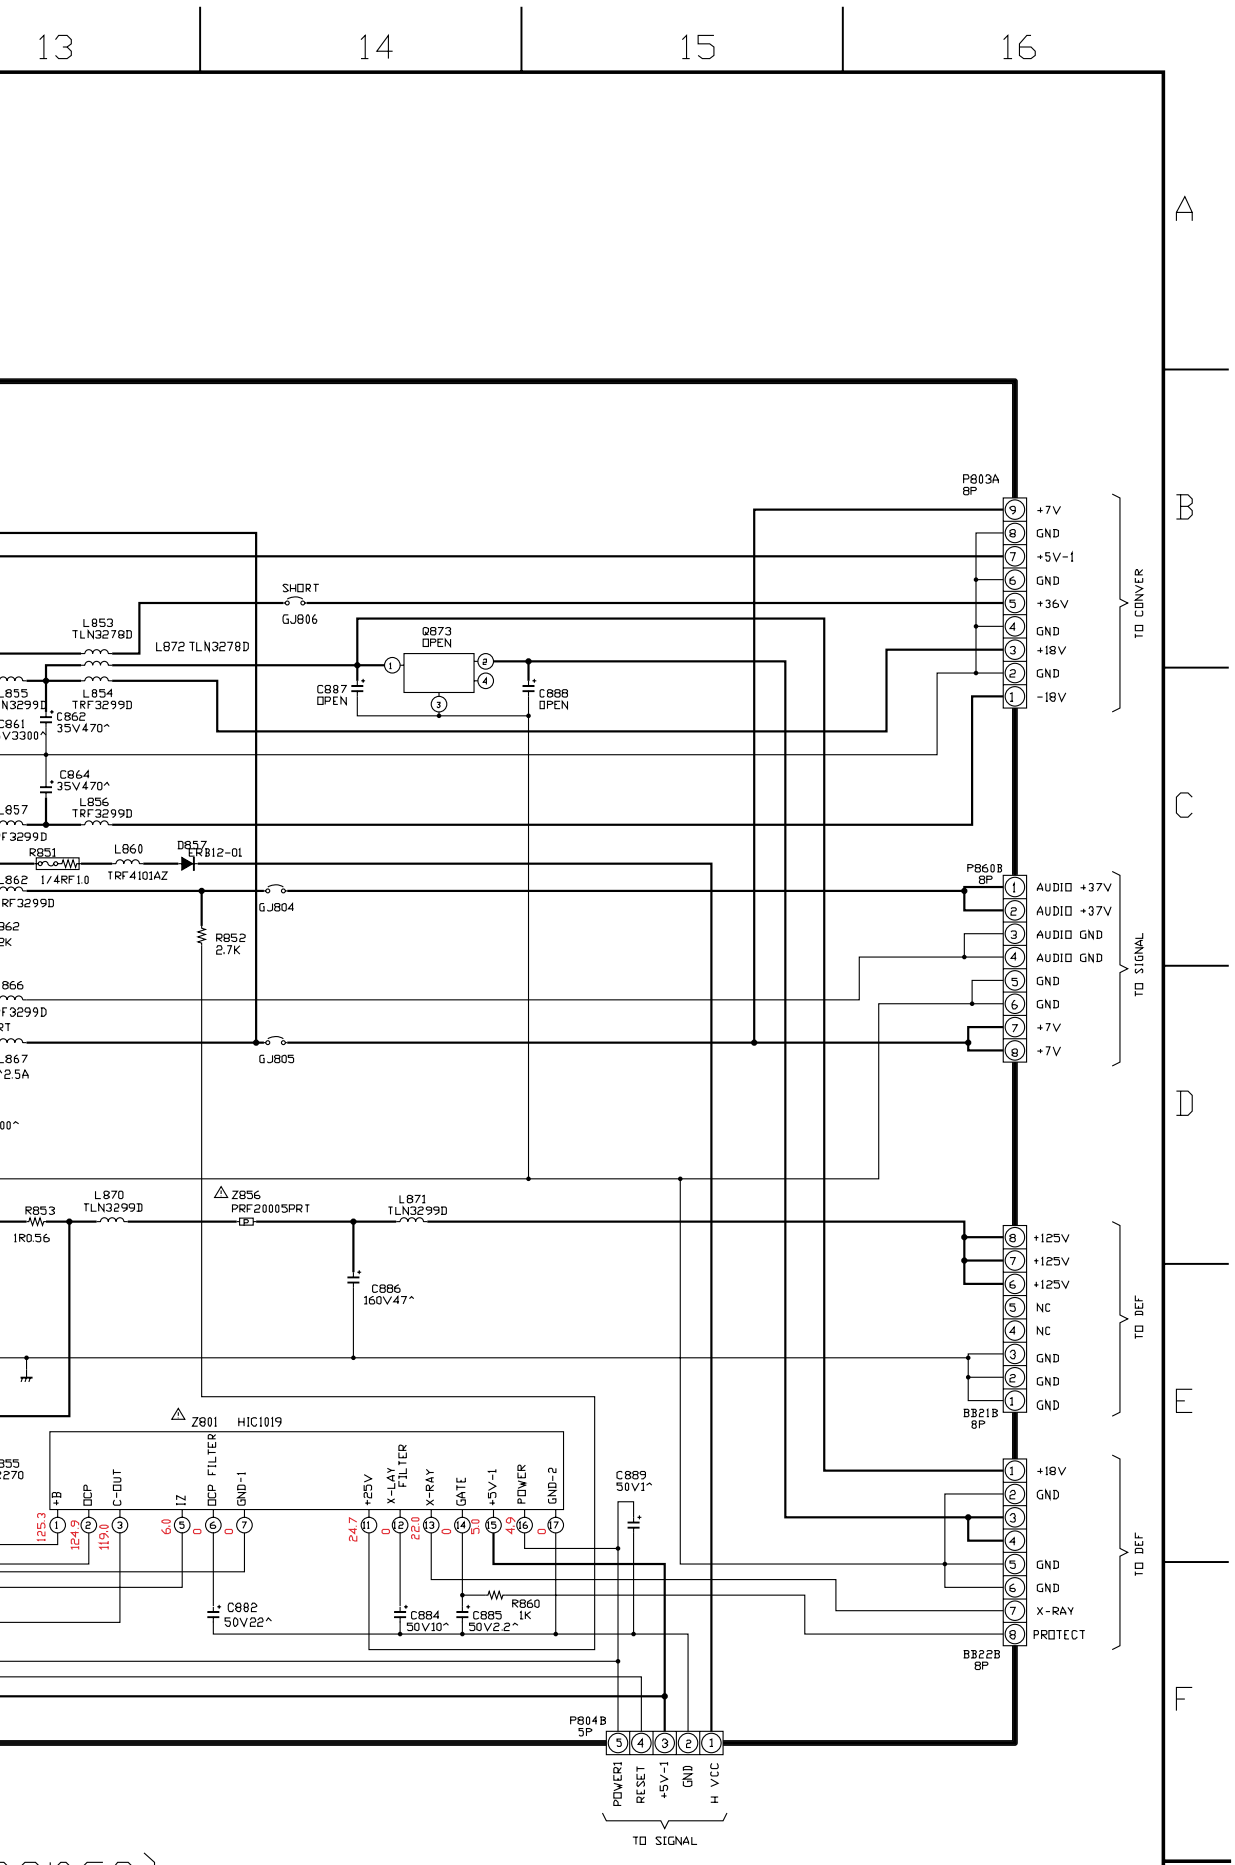
13
14
15
16
A
B
C
D
E
F
P803A
8P
+7V
GND
+5V-1
GND
+36V
GND
+18V
GND
-18V
TO CONVER
SHORT
GJ806
L853
TLN3278D
L872 TLN3278D
L854
TRF3299D
C862
35V470^
Q873
OPEN
C887
OPEN
C888
OPEN
C864
35V470^
L856
TRF3299D
R851
1/4RF1.0
L860
TRF4101AZ
D857
1SR812-01
GJ804
R852
2.7K
GJ805
P860B
8P
AUDIO +37V
AUDIO +37V
AUDIO GND
AUDIO GND
GND
GND
+7V
+7V
TO SIGNAL
R853
1R0.56
L870
TLN3299D
Z856
PRF20005PRT
L871
TLN3299D
C886
160V47^
+125V
+125V
+125V
NC
NC
GND
GND
GND
BB21B
8P
TO DEF
Z801
HIC1019
+B
OCP
C-OUT
IZ
OCP FILTER
GND-1
+25V
X-LAY FILTER
X-RAY
GATE
+5V-1
POWER
GND-2
C889
50V1^
C882
50V22^
C884
50V10^
C885
50V2.2^
R860
1K
+18V
GND
GND
X-RAY
PROTECT
BB22B
8P
TO DEF
P804B
5P
POWER
RESET
+5V-1
GND
H VCC
TO SIGNAL

rence)

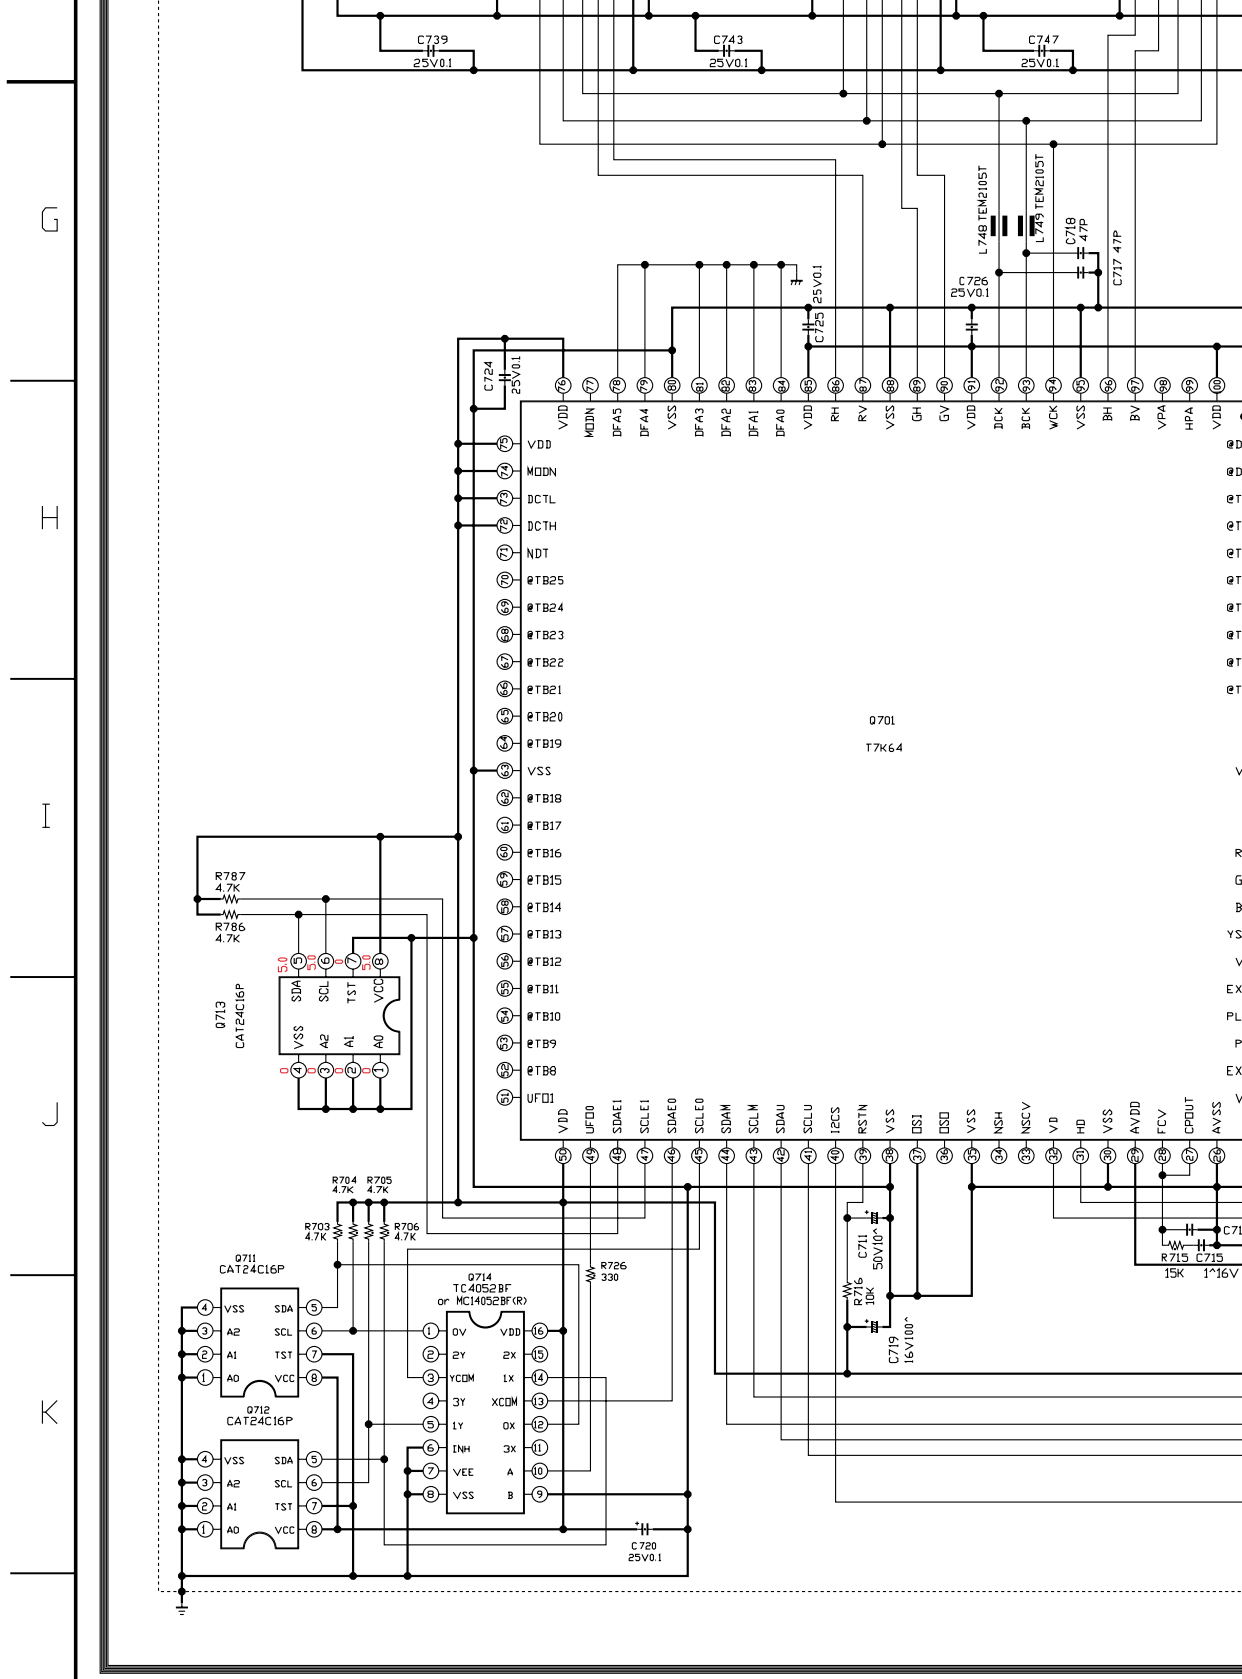
C739 25V0.1
C743 25V0.1
C747 25V0.1
L748 TEM2105T
L749 TEM2105T
C718 47P
C717 47P
C726 25V0.1
C725 25V0.1
C724 25V0.1
Q701
T7K64
VDD
MODN
DCTL
DCTH
NDT
@TB25
@TB24
@TB23
@TB22
@TB21
@TB20
@TB19
VSS
@TB18
@TB17
@TB16
@TB15
@TB14
@TB13
@TB12
@TB11
@TB10
@TB9
@TB8
UFO1
R787 4.7K
R786 4.7K
Q713 CAT24C16P
SDA SCL TST VCC VSS A2 A1 A0
R704 4.7K
R705 4.7K
R703 4.7K
R706 4.7K
R726 330
Q711 CAT24C16P
Q712 CAT24C16P
Q714 TC4052BF or MC14052BF(R)
0V 2Y YCOM 3Y 1Y INH VEE VSS VDD 2X 1X XCOM 0X 3X A B
C720 25V0.1
C711 50V10^
R716 10K
C719 16V100^
R715 15K
C715 1^16V

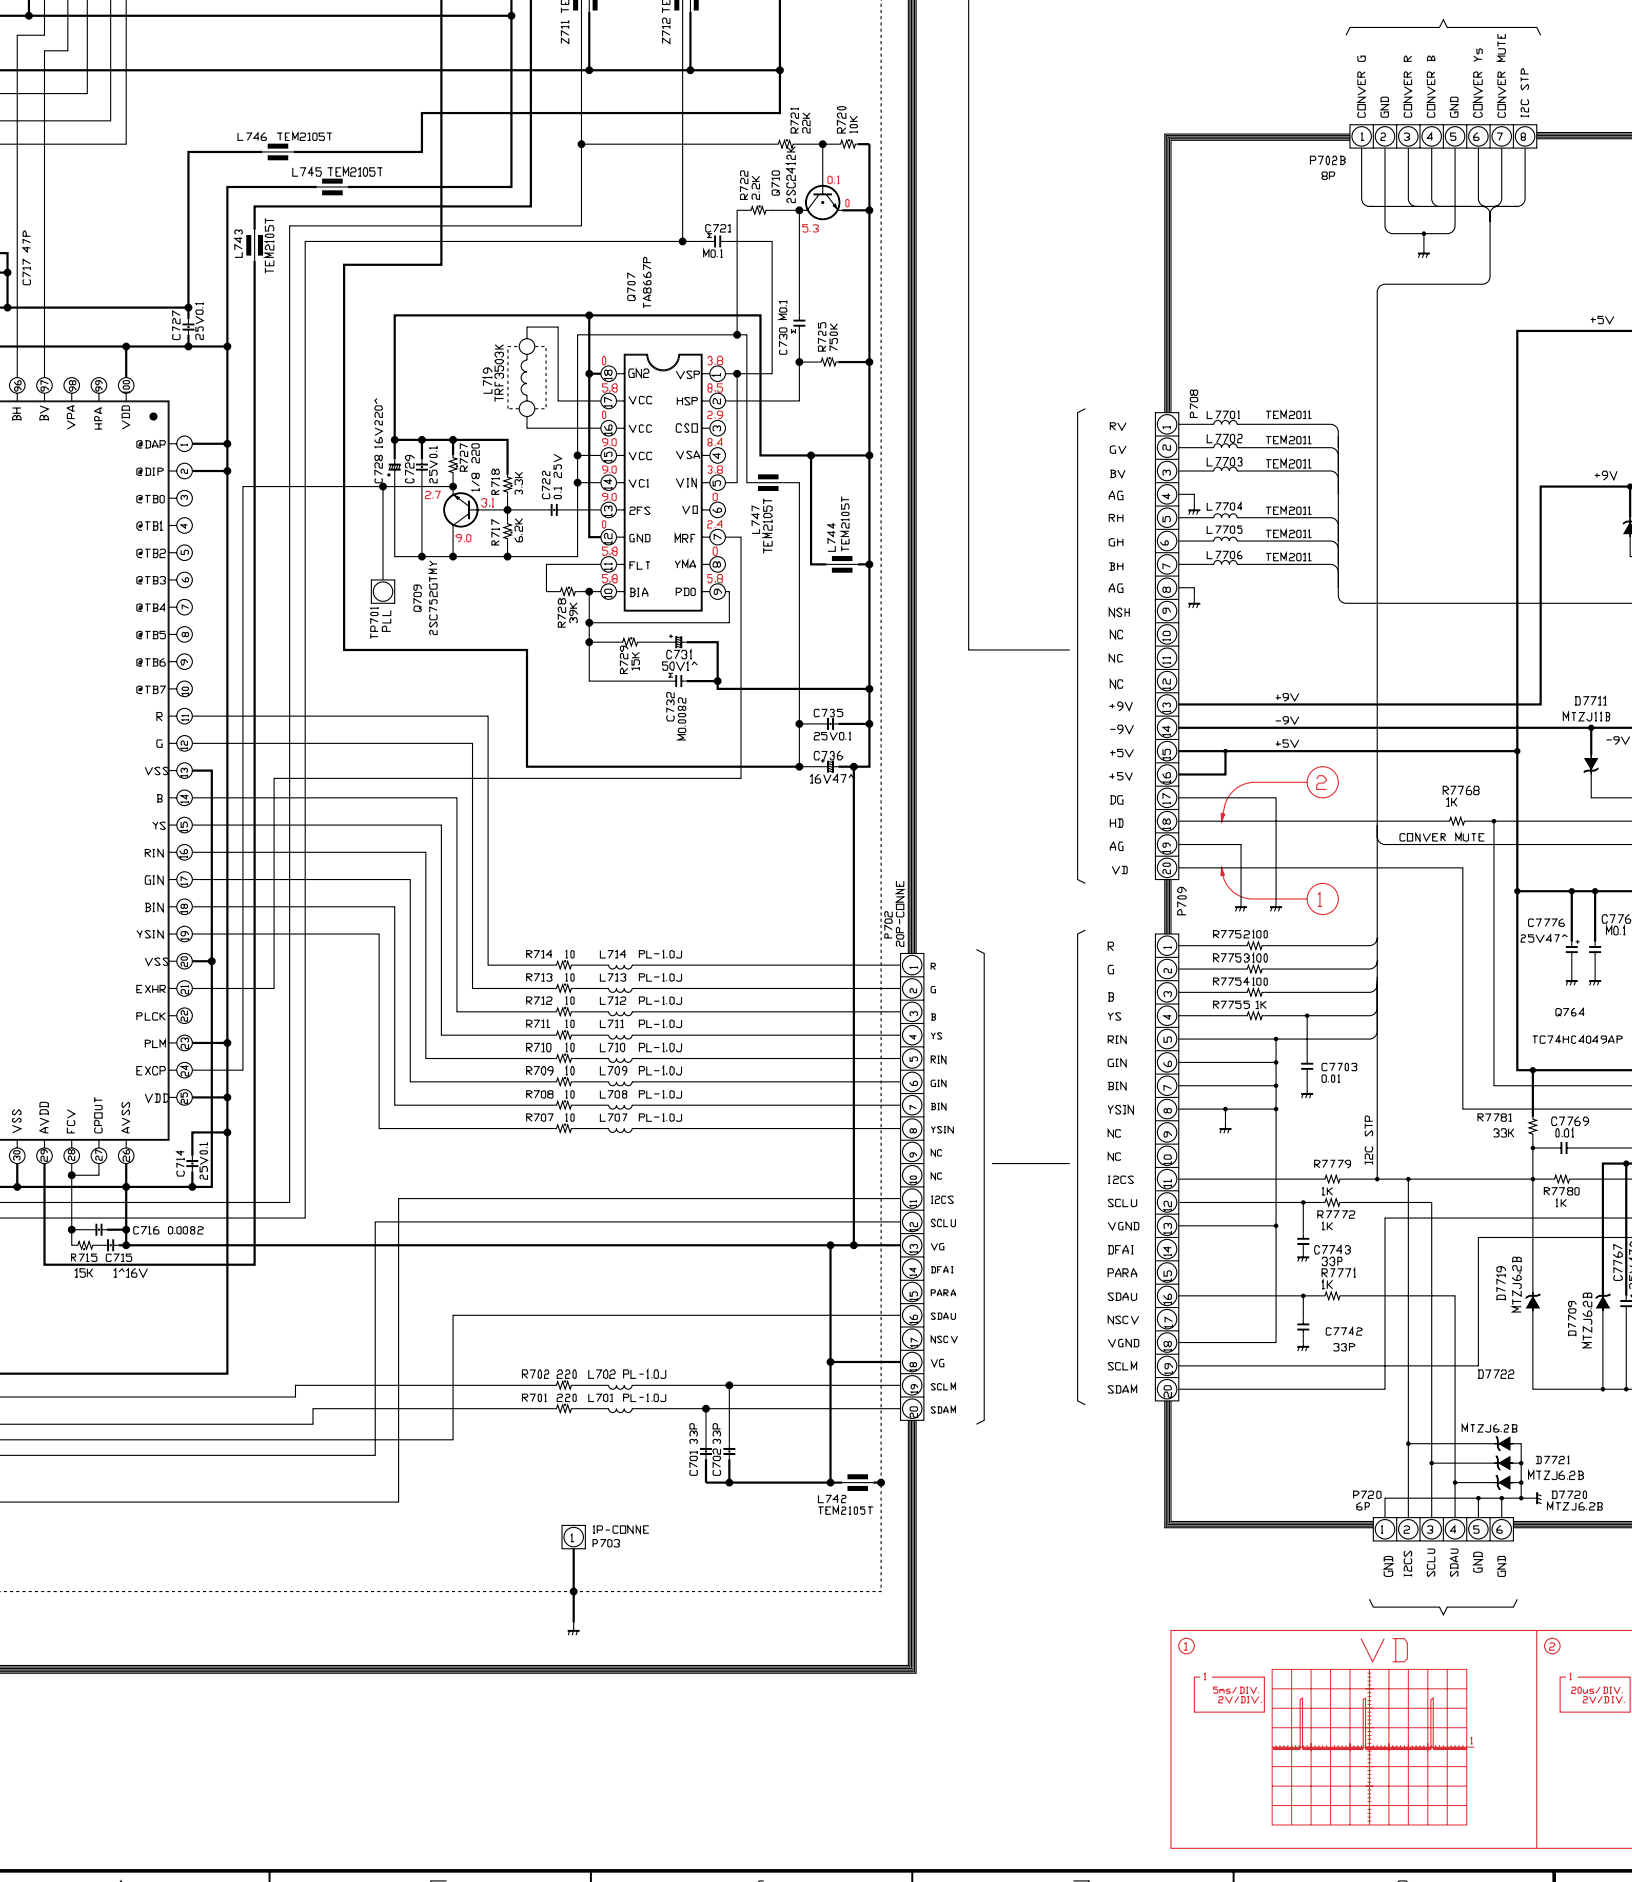
L746 TEM2105T
L745 TEM2105T
L743 TEM2105T
C717 47P
C727 25V0.1
R721 22K
R720 10K
R722 2.2K
Q710 2SC2412K
C721 M0.1
Q707 TA8667P
C730 M0.1
R725 750K
L719 TRF3503K
C728 16V220
C729 25V0.1
R727 1/8 220
R718 3.3K
R717 6.2K
C722 0.1 25V
TP701 PLL
Q709 2SC7526TMY
R728 39K
R729 15K
C731 50V1^
C732 M0.0082
L747 TEM2105T
L744 TEM2105T
C735 25V0.1
C736 16V47^
P702 20P-CONNE
R714 10 L714 PL-1.0J
R713 10 L713 PL-1.0J
R712 10 L712 PL-1.0J
R711 10 L711 PL-1.0J
R710 10 L710 PL-1.0J
R709 10 L709 PL-1.0J
R708 10 L708 PL-1.0J
R707 10 L707 PL-1.0J
R702 220 L702 PL-1.0J
R701 220 L701 PL-1.0J
C701 33P
C702 33P
L742 TEM2105T
C716 0.0082
R715 15K
C715 1^16V
C714 25V0.1
1P-CONNE P703
P702B 8P
CONVER G
GND
CONVER R
CONVER B
GND
CONVER Ys
CONVER MUTE
I2C STP
P708
L7701 TEM2011
L7702 TEM2011
L7703 TEM2011
L7704 TEM2011
L7705 TEM2011
L7706 TEM2011
+5V
+9V
-9V
D7711 MTZJ11B
R7768 1K
CONVER MUTE
P709
R7752100
R7753100
R7754100
R7755 1K
C7703 0.01
C7776 25V47^
C776 M0.1
Q764 TC74HC4049AP
R7781 33K
C7769 0.01
R7780 1K
R7779 1K
R7772 1K
C7743 33P
R7771 1K
C7742 33P
D7719 MTZJ6.2B
D7709 MTZJ6.2B
D7722
D7721 MTZJ6.2B
D7720 MTZJ6.2B
P720 6P
GND
I2CS
SCLU
SDAU
GND
GND
VD
5ms/DIV. 2V/DIV.
20us/DIV. 2V/DIV.

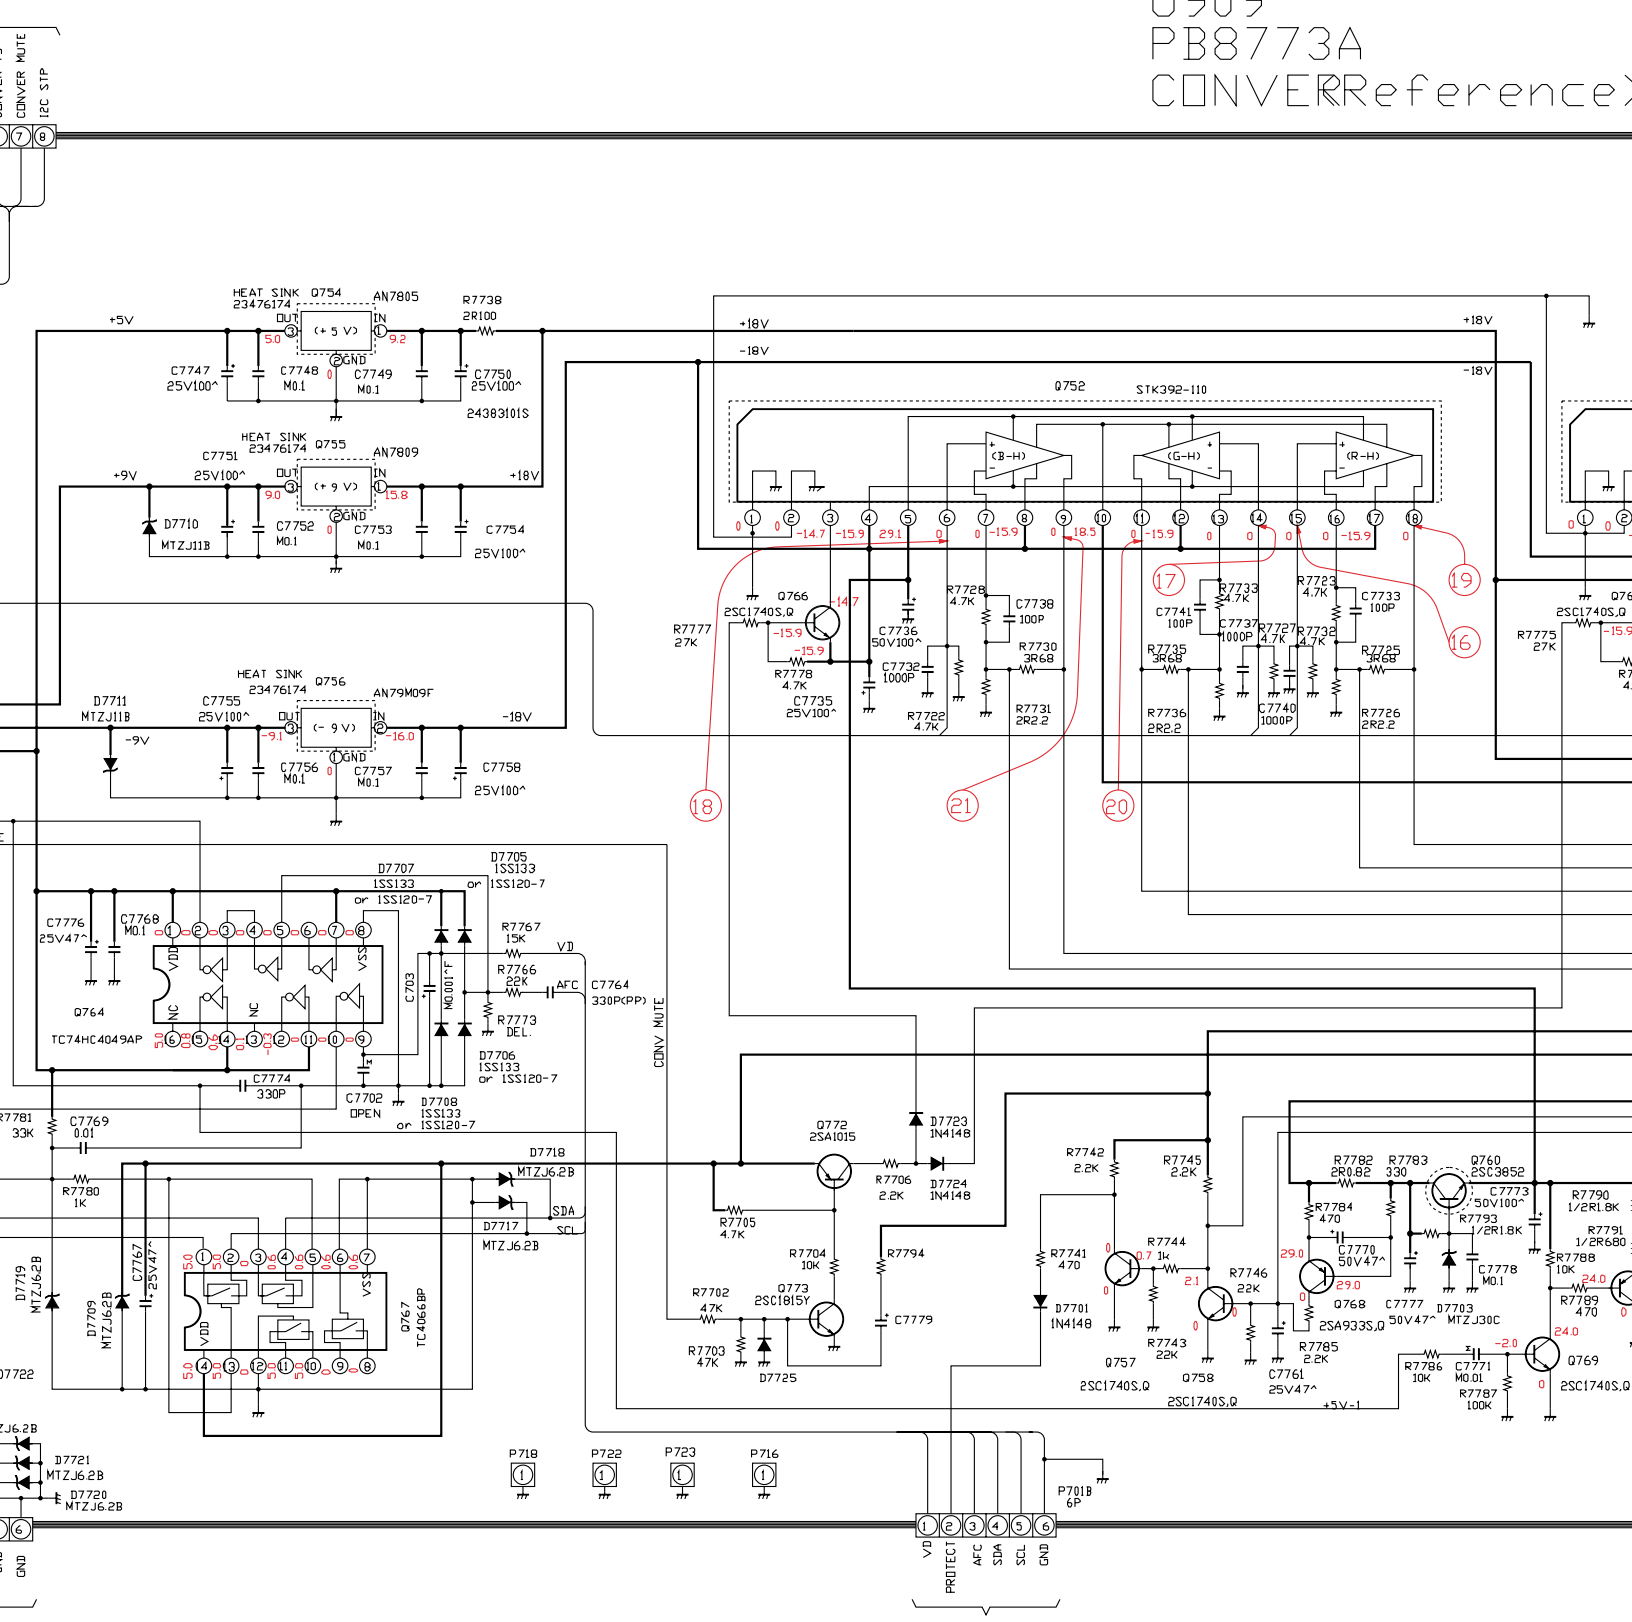
HEAT SINK 23476174 Q754
AN7805
+5V
(+ 5 V)
R7738 2R100
C7747 25V100^
C7748 M0.1
C7749 M0.1
C7750 25V100^
2438301S
HEAT SINK 23476174 Q755
AN7809
+9V
(+ 9 V)
+18V
C7751 25V100^
D7710 MTZJ11B
C7752 M0.1
C7753 M0.1
C7754 25V100^
HEAT SINK 23476174 Q756
AN79M09F
D7711 MTZJ11B
-9V
(- 9 V)
-18V
C7755 25V100^
C7756 M0.1
C7757 M0.1
C7758 25V100^
Q752 STK392-110
(B-H)
(G-H)
(R-H)
Q766 2SC1740S,Q
R7777 27K
R7778 4.7K
C7735 25V100^
C7736 50V100^
C7732 1000P
R7722 4.7K
R7728 4.7K
C7738 100P
R7730 3R68
R7731 2R2.2
C7741 100P
C7737 1000P
R7727 4.7K
R7733 4.7K
C7733 100P
R7723 4.7K
R7732 4.7K
R7735 3R68
R7736 2R2.2
C7740 1000P
R7726 2R2.2
R7725 3R68
R7775 27K
Q764 TC74HC4049AP
C7776 25V47^
C7768 M0.1
C7774 330P
C7702 OPEN
C703 M0.001^
R7767 15K
R7766 22K
R7773 DEL.
C7764 330P(PP)
D7707 1SS133 or 1SS120-7
D7705 1SS133 or 1SS120-7
D7706 1SS133 or 1SS120-7
D7708 1SS133 or 1SS120-7
CONV MUTE
R7781 33K
C7769 0.01
R7780 1K
D7718 MTZJ6.2B
D7717 MTZJ6.2B
SDA
SCL
D7719 MTZJ6.2B
D7709 MTZJ6.2B
C7767 25V47^
Q767 TC4066BP
D7722
D7721 MTZJ6.2B
D7720 MTZJ6.2B
Q772 2SA1015
D7723 1N4148
R7706 2.2K
D7724 1N4148
R7705 4.7K
R7704 10K
R7794
R7702 47K
Q773 2SC1815Y
C7779
R7703 47K
D7725
R7742 2.2K
R7745 2.2K
R7741 470
D7701 1N4148
R7744 1K
R7746 22K
R7743 22K
Q757 2SC1740S,Q
Q758 2SC1740S,Q
R7785 2.2K
C7761 25V47^
+5V-1
R7782 2R0.82
R7783 330
Q760 2SC3852
C7773 50V100^
R7784 470
C7770 50V47^
R7793 1/2R1.8K
C7778 M0.1
Q768 2SA933S,Q
C7777 50V47^
D7703 MTZJ30C
R7790 1/2R1.8K
R7791 1/2R680
R7788 10K
R7789 470
R7786 10K
C7771 M0.01
R7787 100K
Q769 2SC1740S,Q
P718
P722
P723
P716
P701B 6P
VD
PROTECT
AFC
SDA
SCL
GND
CONVER MUTE
I2C STP
17
18
19
20
21
16

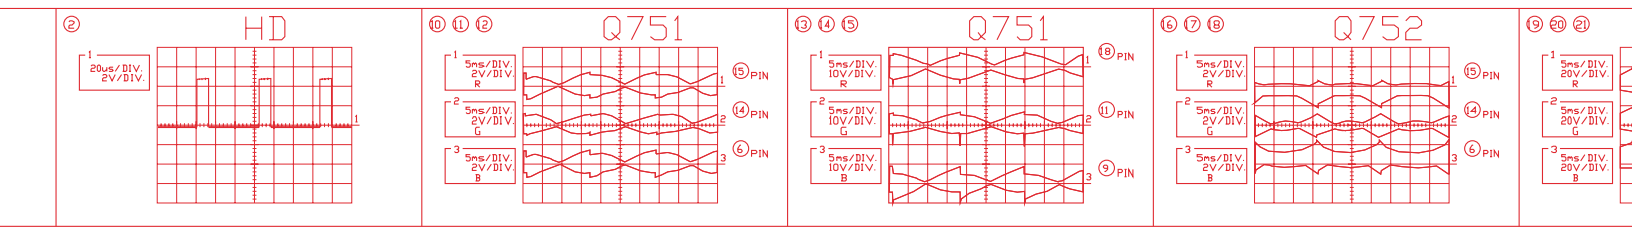
② HD
20us/DIV. 2V/DIV.
⑩ ⑪ ⑫ Q751
5ms/DIV. 2V/DIV. R
5ms/DIV. 2V/DIV. G
5ms/DIV. 2V/DIV. B
15 PIN
14 PIN
6 PIN
⑬ ⑭ ⑮ Q751
5ms/DIV. 10V/DIV. R
5ms/DIV. 10V/DIV. G
5ms/DIV. 10V/DIV. B
18 PIN
11 PIN
9 PIN
⑥ ⑦ ⑧ Q752
5ms/DIV. 2V/DIV. R
5ms/DIV. 2V/DIV. G
5ms/DIV. 2V/DIV. B
15 PIN
14 PIN
6 PIN
⑨ ⑳ ㉑
5ms/DIV. 20V/DIV. R
5ms/DIV. 20V/DIV. G
5ms/DIV. 20V/DIV. B

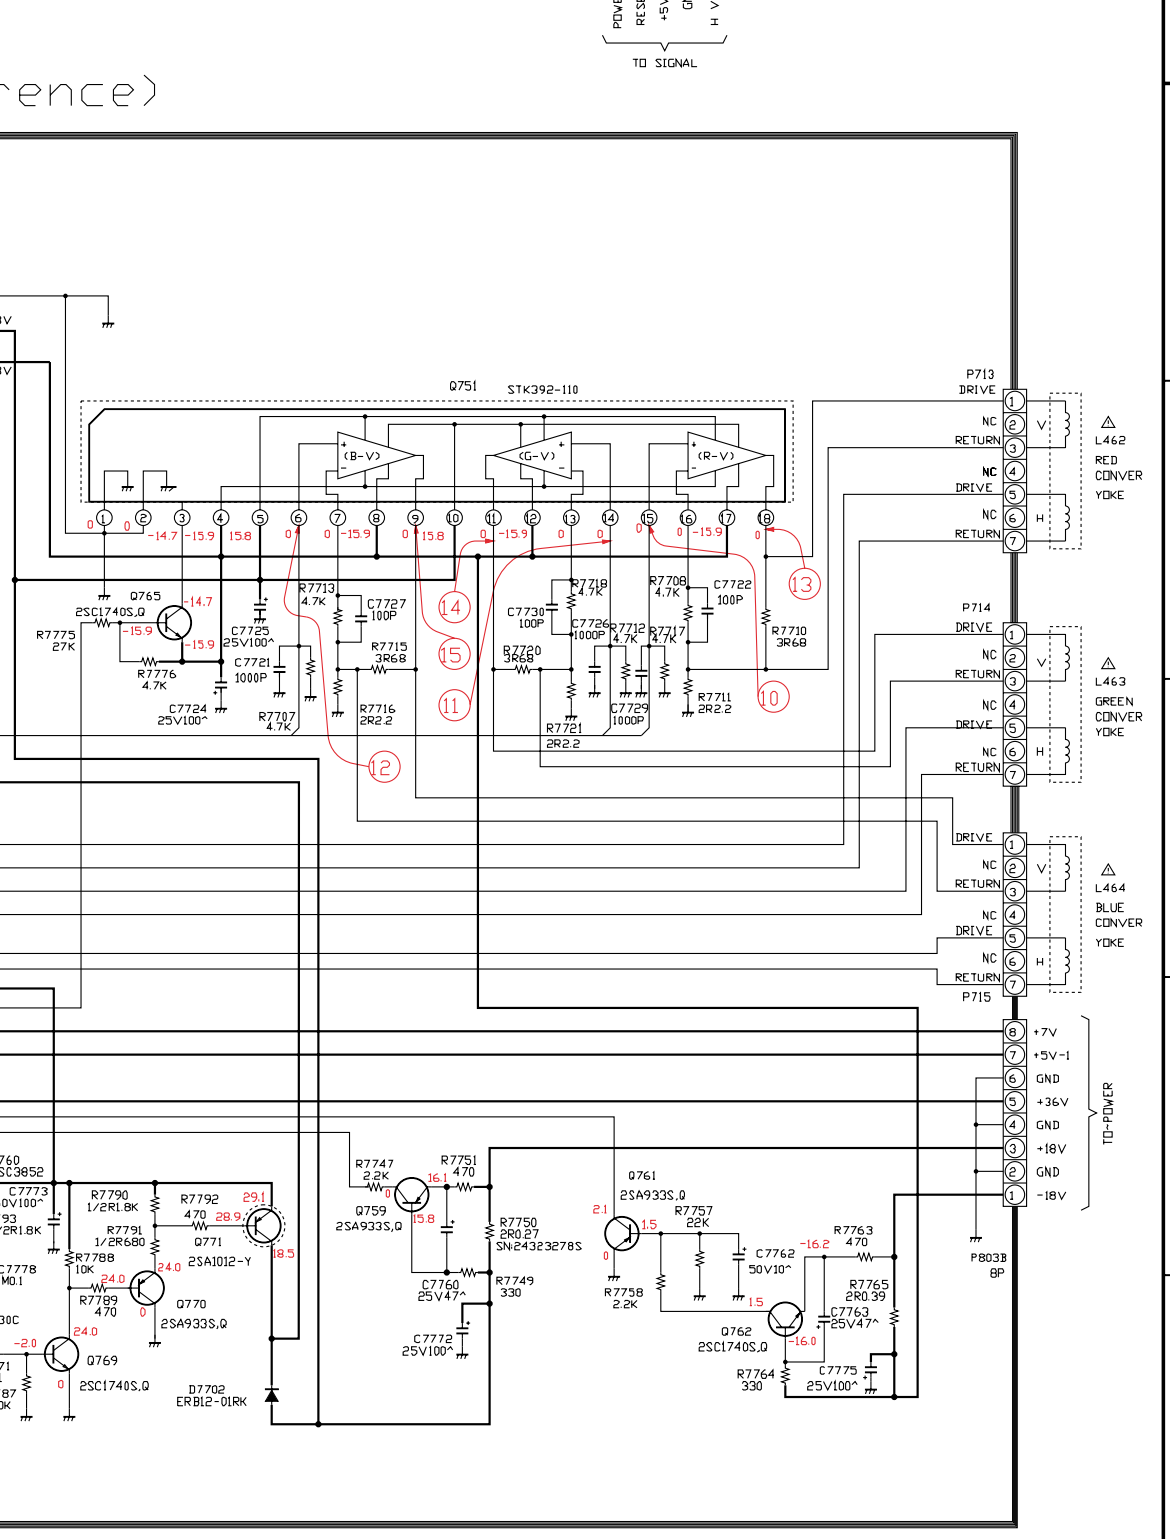

CONVER/POWER
D-CONV
40PW13G/B3/7

G H I J K L

13 14 15 16

U905 VCD PB8768G

V/C/D
40PW13G/B4/7

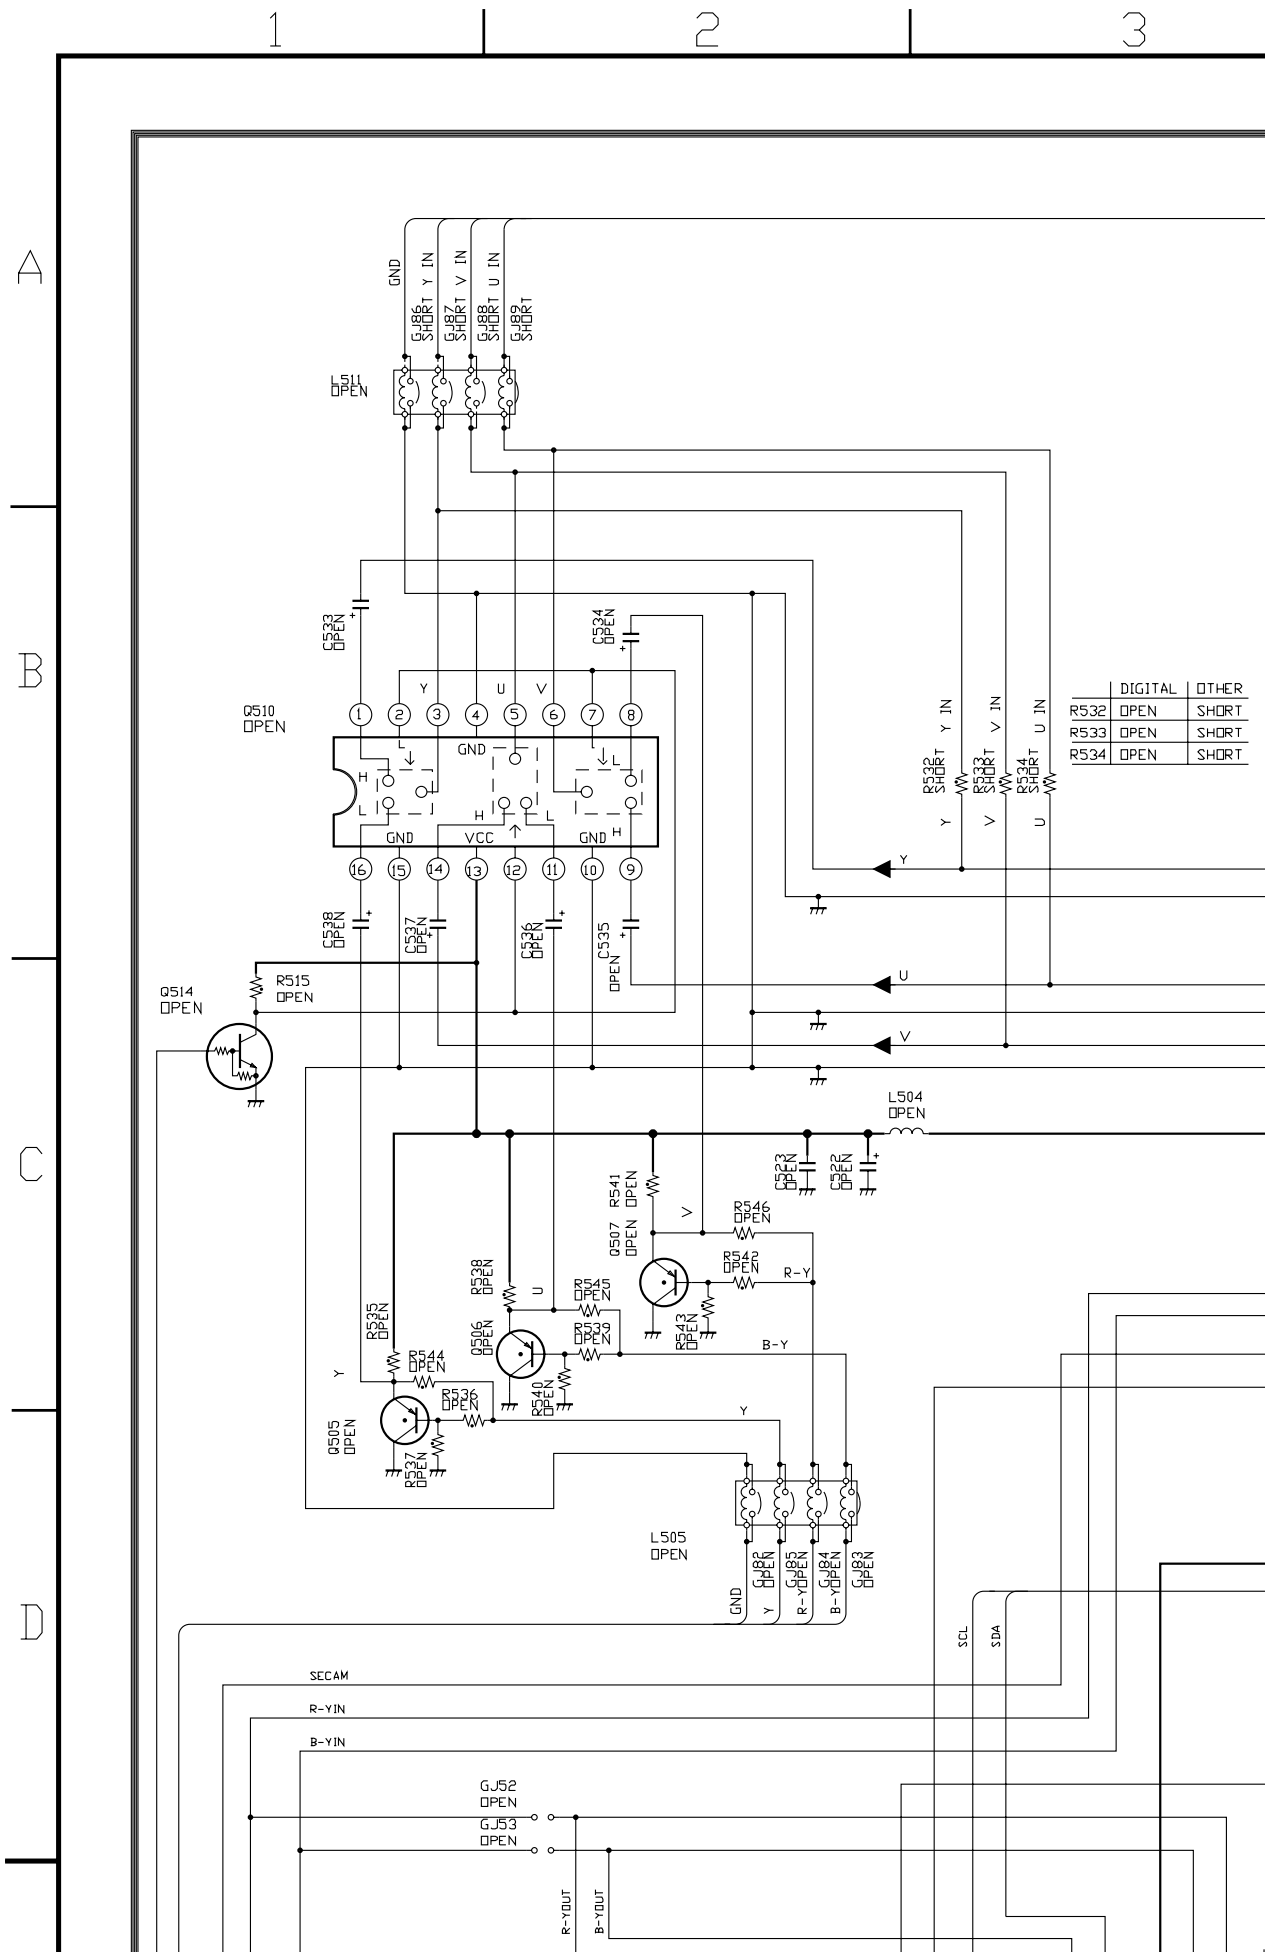
1
2
3
A
B
C
D
GND
GJ86 SHORT Y IN
GJ87 SHORT V IN
GJ88 SHORT U IN
GJ89 SHORT
L511 OPEN
C533 OPEN
C534 OPEN
Q510 OPEN
Y
U
V
GND
VCC
R532 SHORT Y IN
R533 SHORT V IN
R534 SHORT U IN
DIGITAL OTHER
R532 OPEN SHORT
R533 OPEN SHORT
R534 OPEN SHORT
C538 OPEN
C537 OPEN
C536 OPEN
C535 OPEN
Q514 OPEN
R515 OPEN
L504 OPEN
C523 OPEN
C522 OPEN
R541 OPEN
Q507 OPEN
R546 OPEN
R545 OPEN
R-Y
R538 OPEN
Q506 OPEN
R539 OPEN
R543 OPEN
B-Y
R535 OPEN
R544 OPEN
R536 OPEN
R540 OPEN
Q505 OPEN
R537 OPEN
L505 OPEN
GJ82 OPEN
GJ85 OPEN
GJ84 OPEN
GJ83 OPEN
SECAM
R-YIN
B-YIN
GJ52 OPEN
GJ53 OPEN
R-YOUT
B-YOUT
SCL
SDA

	DIGITAL	OTHER
2532	OPEN	SHORT
2533	OPEN	SHORT
2534	OPEN	SHORT

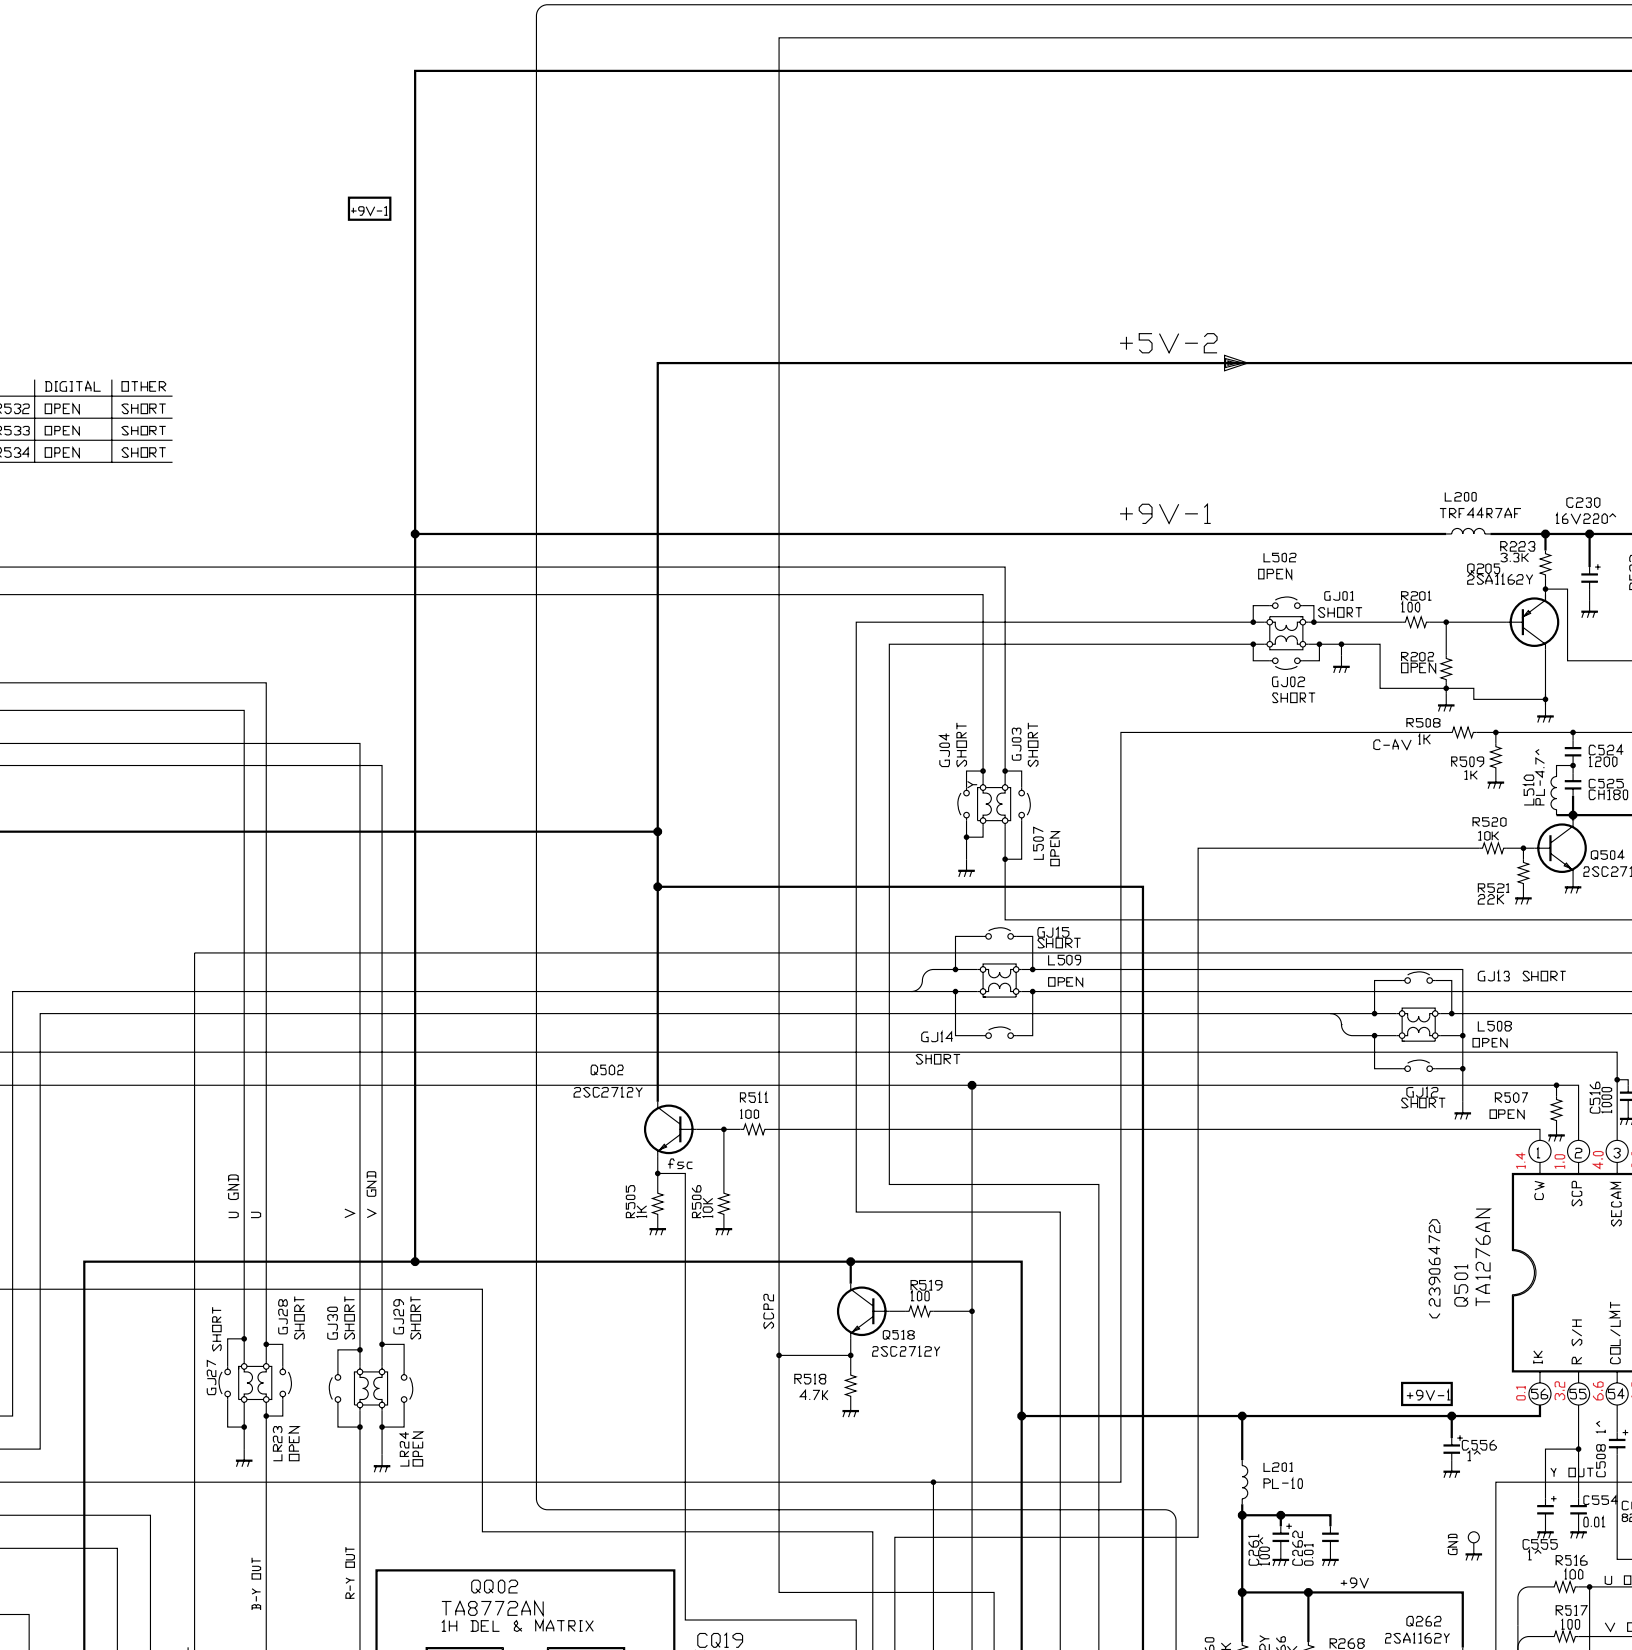

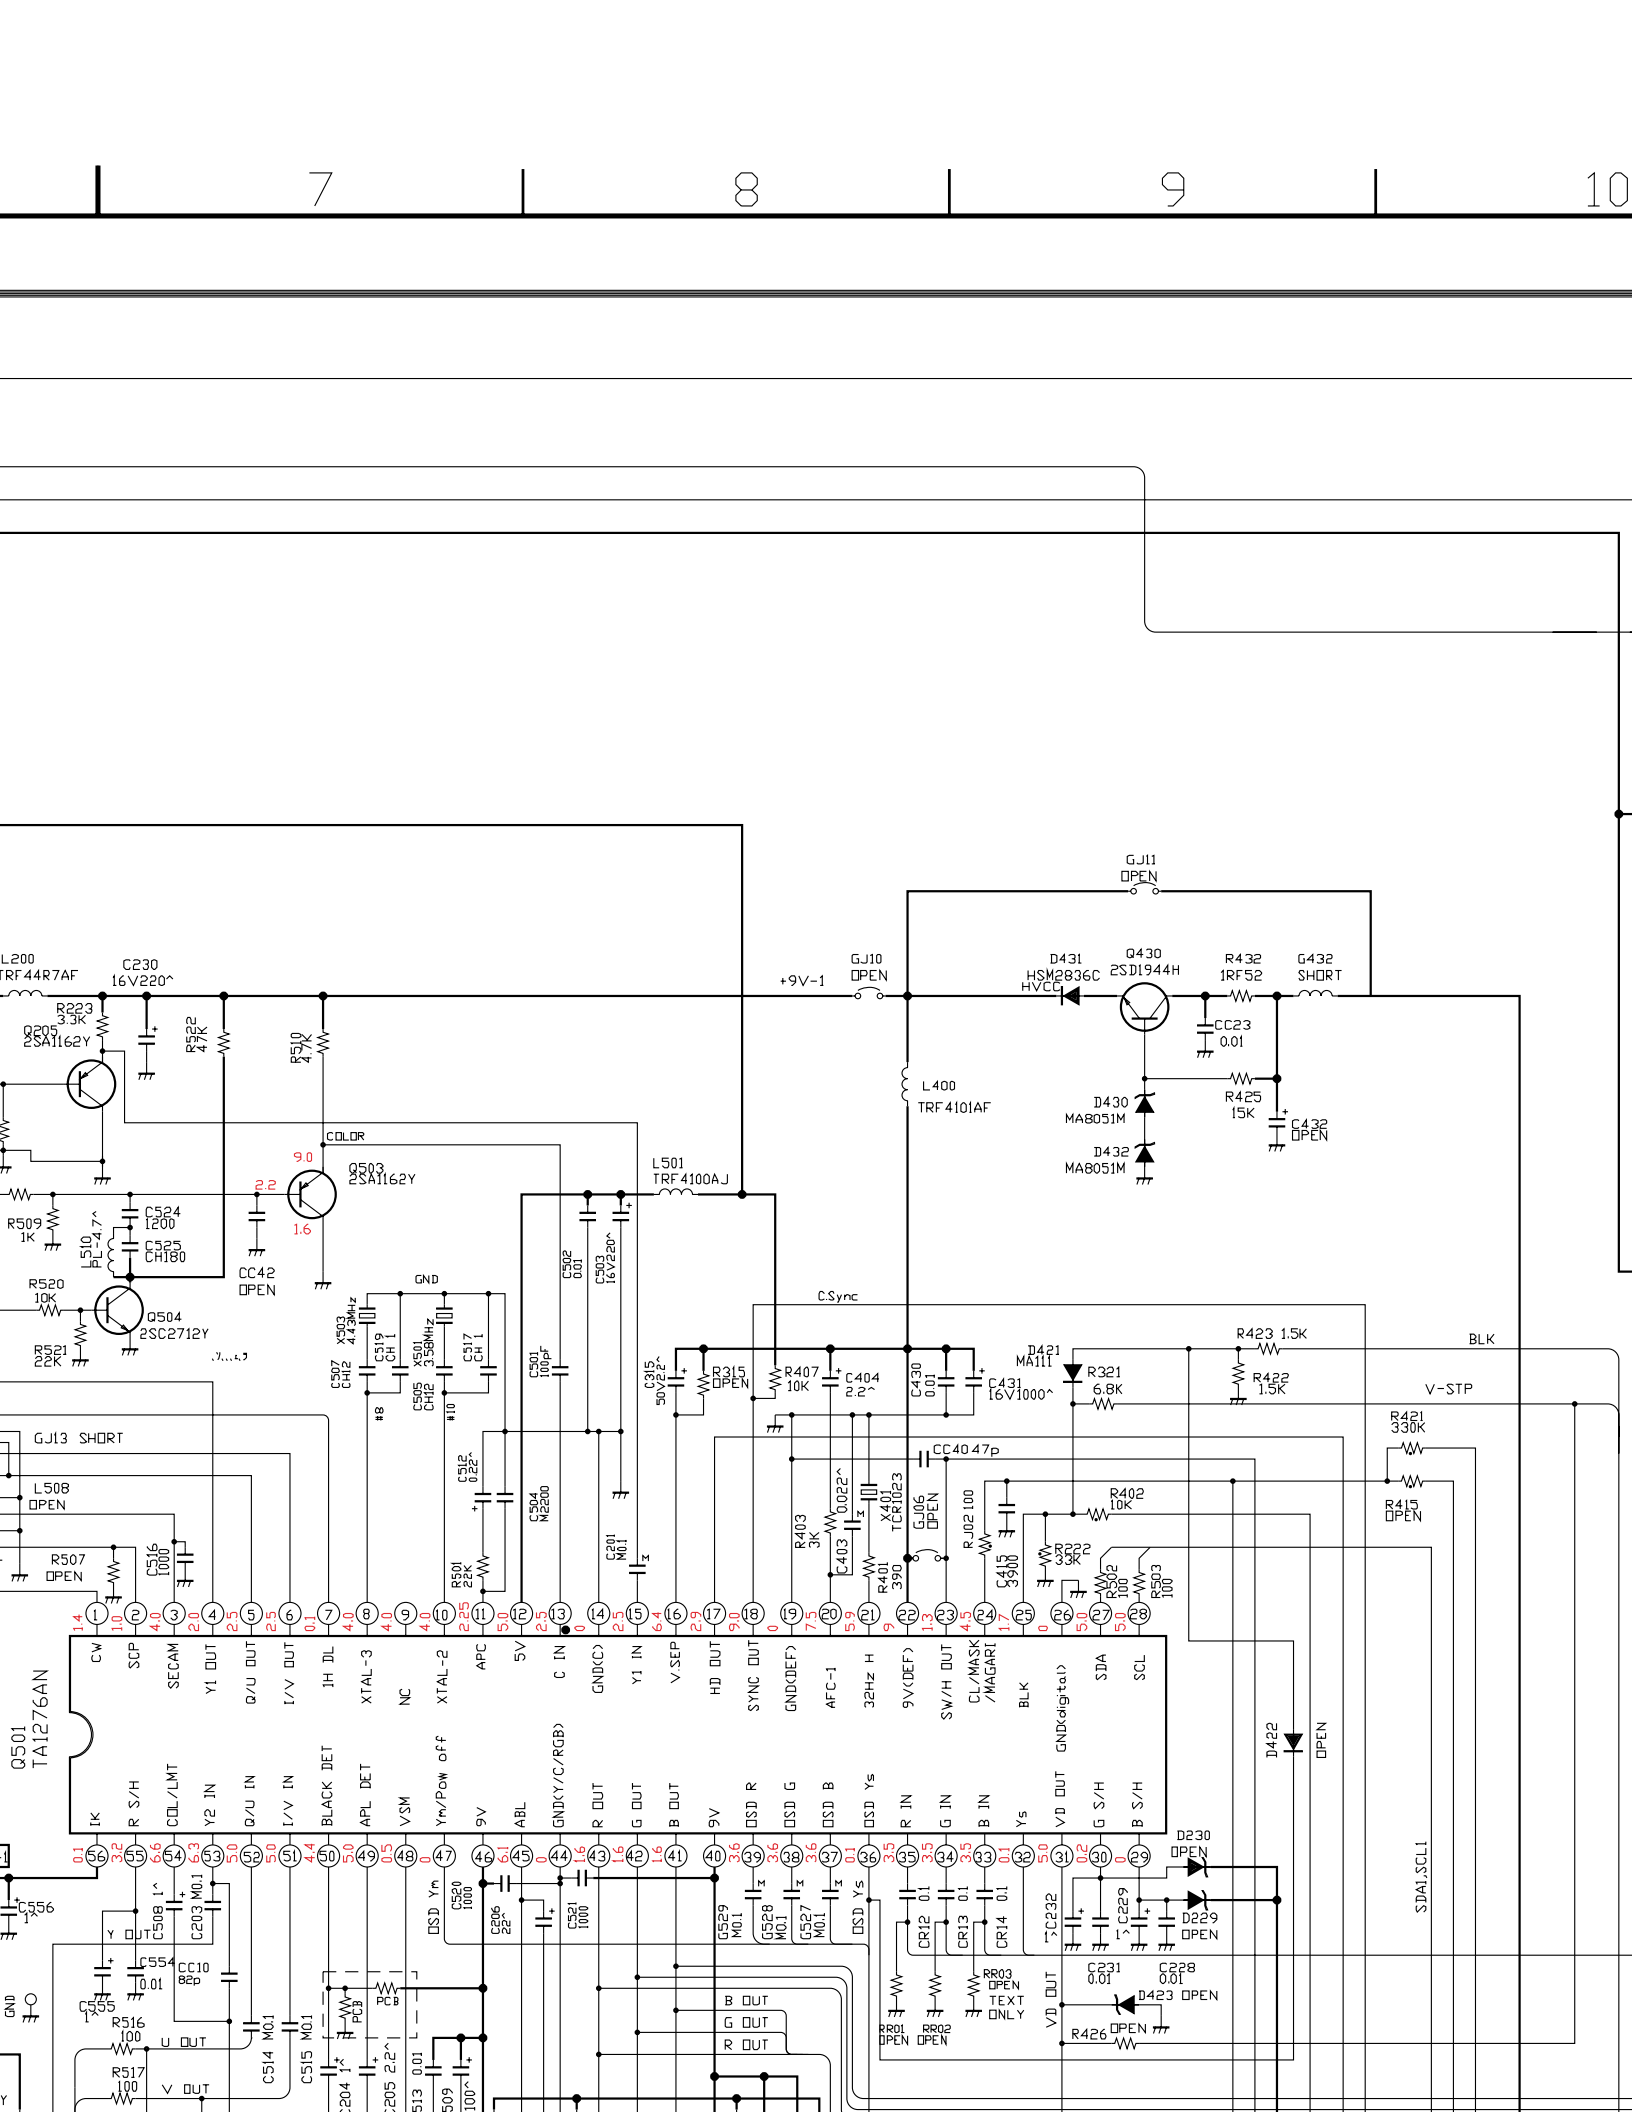
7
8
9
10
GJ11
OPEN
L200
TRF44R7AF
C230
16V220^
+9V-1
GJ10
OPEN
D431
HSM2836C
HVCC
Q430
2SD1944H
R432
1RF52
G432
SHORT
R223
3.3K
Q205
2SA1162Y
R522
47K
R510
47K
CC23
0.01
L400
TRF4101AF
D430
MA8051M
D432
MA8051M
R425
15K
C432
OPEN
COLOR
9.0
Q503
2SA1162Y
1.6
2.2
L501
TRF4100AJ
R509
1K
L510
4.7^
C524
1200
C525
CH180
CC42
OPEN
R520
10K
Q504
2SC2712Y
R521
22K
GND
X503
4.43MHz
C519
CH 1
C507
CH12
X501
3.58MHz
C517
CH 1
C505
CH12
#8
#10
C502
0.01
C503
16V220^
C501
100P
C.Sync
C315
50V22^
R315
OPEN
R407
10K
C404
2.2^
C430
0.01
C431
16V1000^
D421
MA111
R321
6.8K
R423 1.5K
R422
1.5K
BLK
V-STP
R421
330K
R415
OPEN
GJ13 SHORT
L508
OPEN
R507
OPEN
C516
1000
C512
0.22
C504
N2200
R501
22K
C201
M01
CC4047P
R403
3K
C403
0.022^
X401
TCR1023
R401
390
GJ06
OPEN
RJ02
100
R402
10K
C415
3900
R222
33K
R502
100
R503
100
Q501
TA1276AN
CW
SCP
SECAM
Y1 OUT
Q/U OUT
I/V OUT
1H DL
XTAL-3
NC
XTAL-2
APC
5V
C IN
GND(C)
Y1 IN
V.SEP
HD OUT
SYNC OUT
GND(DEF)
AFC-1
32Hz H
9V(DEF)
SW/H OUT
CL/MASK /MAGARI
BLK
GND(digital)
SDA
SCL
IK
R S/H
COL/LMT
Y2 IN
Q/U IN
I/V IN
BLACK DET
APL DET
VSM
Ym/Pow off
9V
ABL
GND(Y/C/RGB)
R OUT
G OUT
B OUT
9V
OSD R
OSD G
OSD B
OSD Ys
R IN
G IN
B IN
Ys
VD OUT
G S/H
B S/H
D422
OPEN
D230
OPEN
D229
OPEN
SDA1,SCL1
C556
1^
Y OUT
C554
0.01
C555
1^
CC10
82P
C508
1^
C203
M01
C514
M01
C515
M01
R516
100
U OUT
R517
100
V OUT
PCB
C520
1000
C206
22^
C521
1000
G529
M01
G528
M01
G527
M01
CR12
0.1
CR13
0.1
CR14
0.1
C232
1^
C229
1^
RR01
OPEN
RR02
OPEN
RR03
OPEN
TEXT ONLY
C231
0.01
C228
0.01
D423 OPEN
R426
OPEN
B OUT
G OUT
R OUT

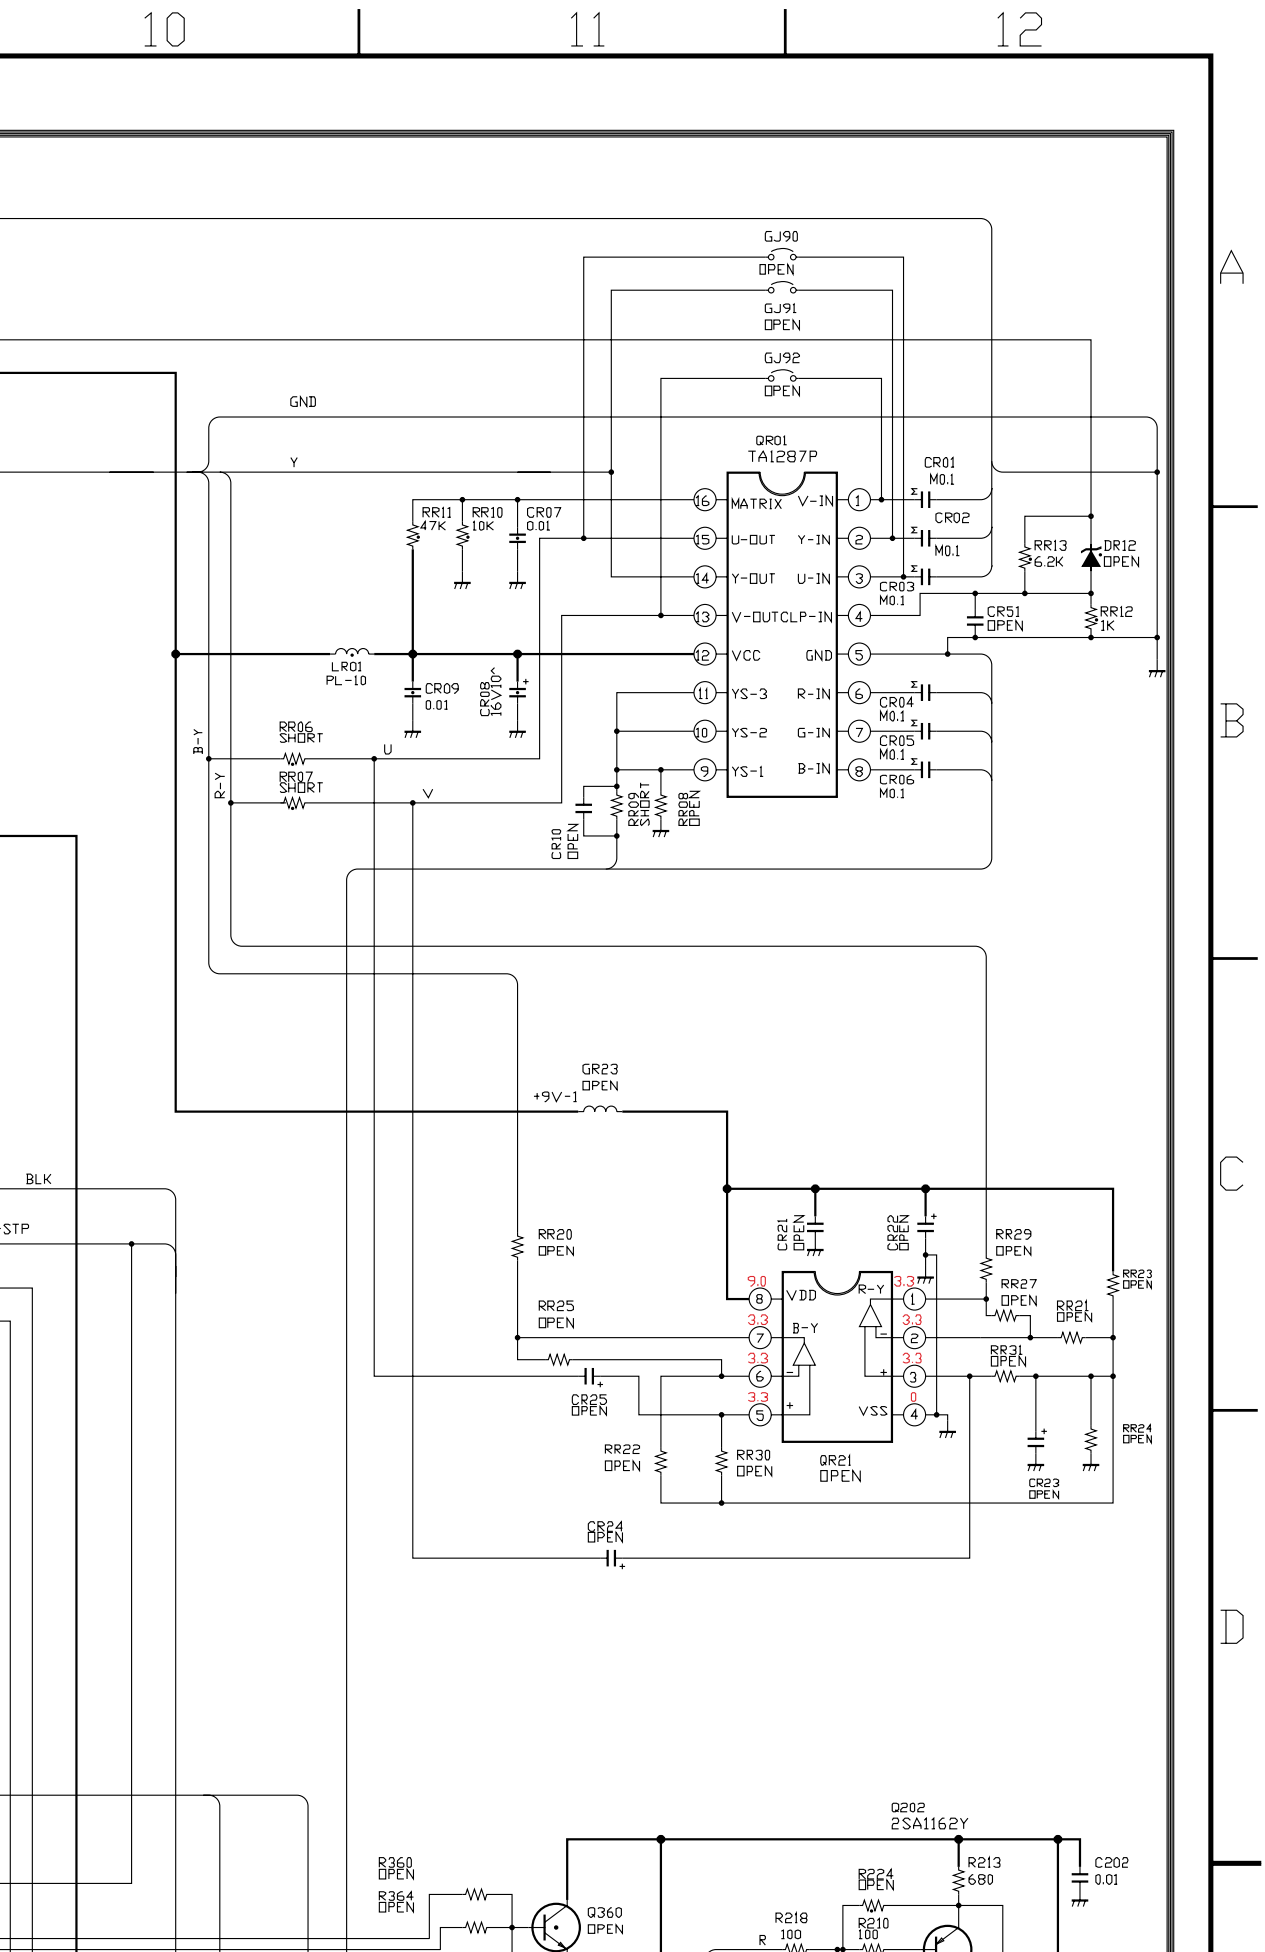
10
11
12
A
B
C
D
GJ90
OPEN
GJ91
OPEN
GJ92
OPEN
GND
Y
QR01
TA1287P
MATRIX
V-IN
U-OUT
Y-IN
Y-OUT
U-IN
V-OUTCLP-IN
VCC
GND
YS-3
R-IN
YS-2
G-IN
YS-1
B-IN
CR01 M0.1
CR02 M0.1
CR03 M0.1
CR04 M0.1
CR05 M0.1
CR06 M0.1
RR11 47K
RR10 10K
CR07 0.01
RR13 6.2K
DR12 OPEN
CR51 OPEN
RR12 1K
LR01 PL-10
CR09 0.01
CR08 16V10
RR06 SHORT
RR07 SHORT
RR09 SHORT
RR08 OPEN
CR10 OPEN
B-Y
R-Y
U
V
GR23 OPEN
+9V-1
BLK
STP
RR20 OPEN
RR25 OPEN
CR25 OPEN
CR21 OPEN
CR22 OPEN
RR29 OPEN
RR27 OPEN
RR23 OPEN
RR21 OPEN
RR31 OPEN
RR24 OPEN
CR23 OPEN
RR22 OPEN
RR30 OPEN
QR21 OPEN
CR24 OPEN
VDD
VSS
R-Y
B-Y
9.0
3.3
0
Q202
2SA1162Y
R360 OPEN
R364 OPEN
Q360 OPEN
R224 OPEN
R213 680
C202 0.01
R218 100
R210 100

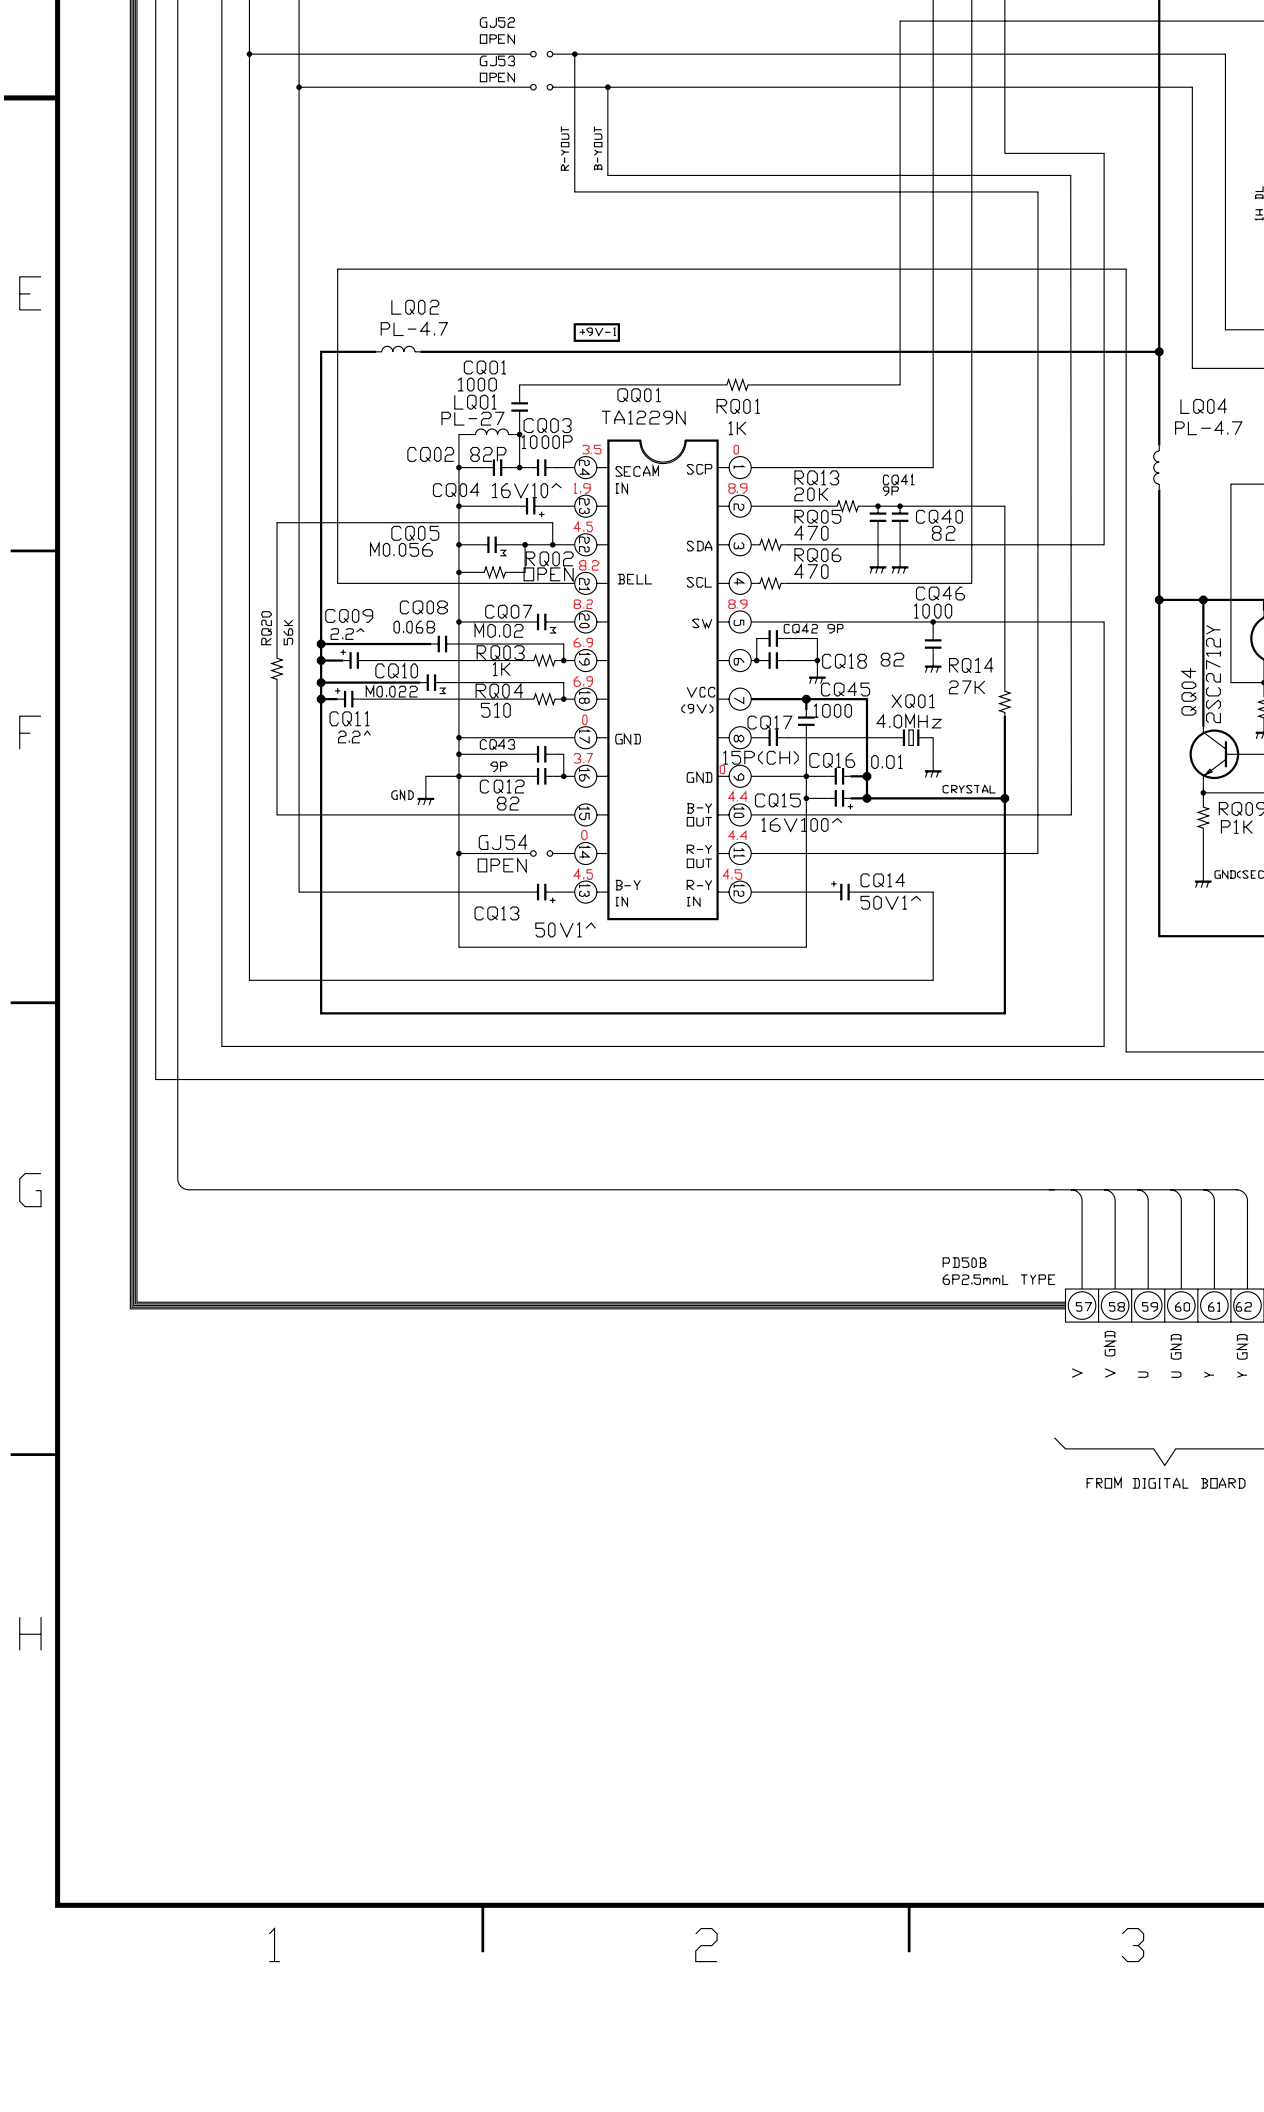
GJ52 OPEN
GJ53 OPEN
R-YOUT
B-YOUT
LQ02 PL-4.7
+9V-1
CQ01 1000
LQ01 PL-27
CQ03 1000P
QQ01 TA1229N
RQ01 1K
CQ02 82P
CQ04 16V10^
CQ05 M0.056
RQ02 OPEN
CQ09 2.2^
CQ08 0.068
CQ07 M0.02
RQ03 1K
CQ10 M0.022
RQ04 510
CQ11 2.2^
CQ43 9P
CQ12 82
GND
GJ54 OPEN
CQ13 50V1^
SECAM IN
BELL
B-Y IN
SCP
SDA
SCL
SW
VCC (9V)
GND
B-Y OUT
R-Y OUT
R-Y IN
RQ13 20K
CQ41 9P
RQ05 470
CQ40 82
RQ06 470
CQ46 1000
CQ42 9P
CQ18 82
RQ14 27K
CQ45 1000
XQ01 4.0MHz
CQ17 15P(CH)
CQ16 0.01
CRYSTAL
CQ15 16V100^
CQ14 50V1^
RQ20 56K
LQ04 PL-4.7
QQ04 2SC2712Y
RQ09 P1K
PD50B 6P2.5mmL TYPE
57 58 59 60 61 62
V V GND U U GND Y Y GND
FROM DIGITAL BOARD

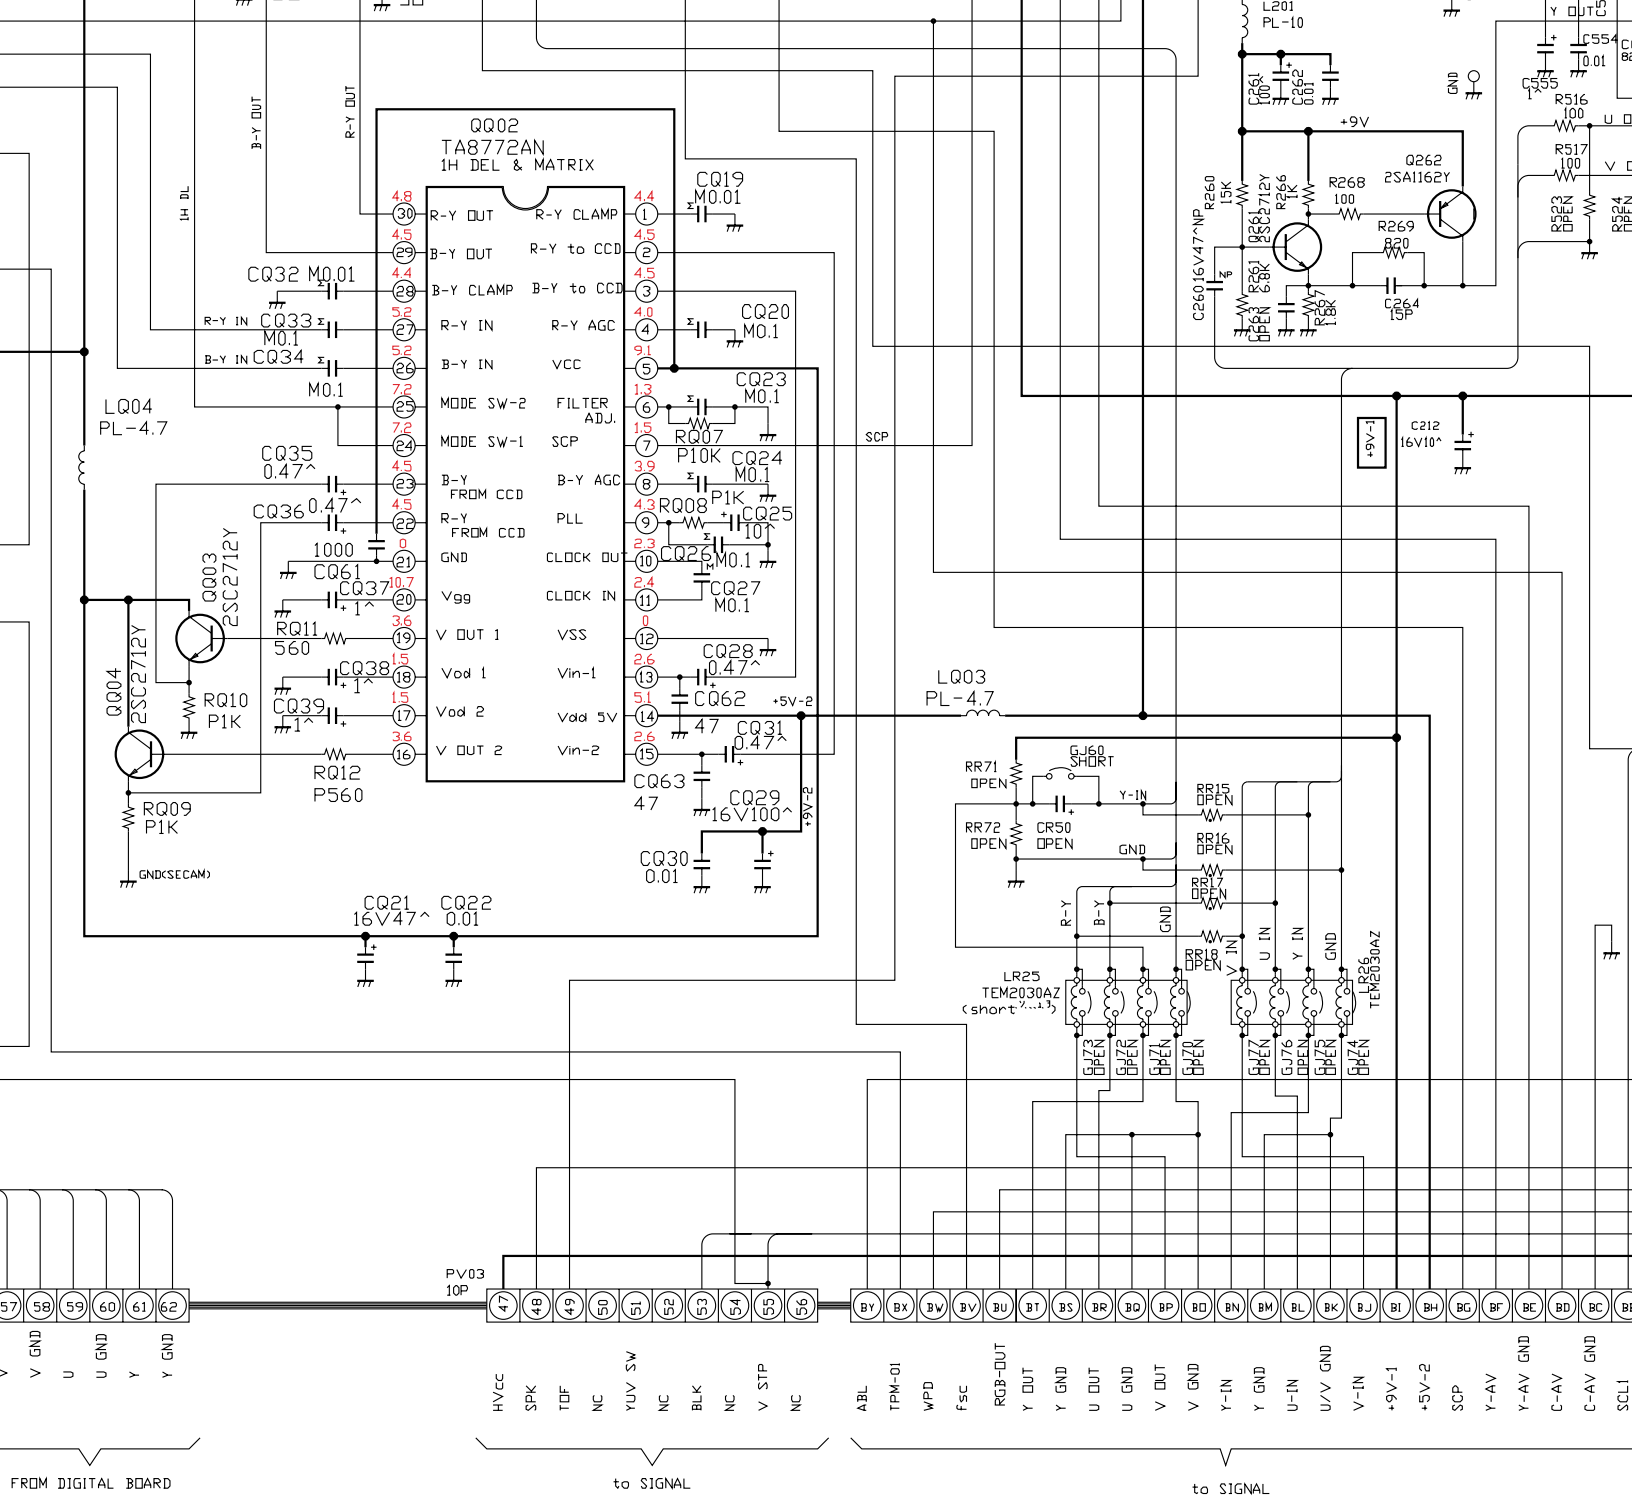
QQ02
TA8772AN
1H DEL & MATRIX
R-Y OUT
B-Y OUT
B-Y CLAMP
R-Y IN
B-Y IN
MODE SW-2
MODE SW-1
B-Y FROM CCD
R-Y FROM CCD
GND
Vgg
V OUT 1
Vod 1
Vod 2
V OUT 2
R-Y CLAMP
R-Y to CCD
B-Y to CCD
R-Y AGC
VCC
FILTER ADJ.
SCP
B-Y AGC
PLL
CLOCK OUT
CLOCK IN
VSS
Vin-1
Vdd 5V
Vin-2
CQ19 M0.01
CQ20 M0.1
CQ23 M0.1
RQ07 P10K
CQ24 M0.1
RQ08 P1K
CQ25 10^
CQ26 M0.1
CQ27 M0.1
CQ28 0.47^
CQ62 47
CQ31 0.47^
CQ63 47
CQ29 16V100^
CQ30 0.01
CQ21 16V47^
CQ22 0.01
CQ32 M0.01
CQ33 M0.1
CQ34 M0.1
CQ35 0.47^
CQ36 0.47^
CQ61 1000
CQ37 1^
CQ38 1^
CQ39 1^
RQ11 560
RQ10 P1K
RQ09 P1K
RQ12 P560
QQ03 2SC2712Y
QQ04 2SC2712Y
LQ04 PL-4.7
LQ03 PL-4.7
GND(SECAM)
+5V-2
+9V-2
SCP
1H DL
L201 PL-10
C261 100
C262 0.01
C554 0.01
C555 1^
R516 100
R517 100
R523 OPEN
R524 OPEN
+9V
Q262 2SA1162Y
R260 15K
R261 6.8K
R266 1K
R268 100
R269 820
C26016V47^NP
C263 OPEN
R267 1.8K
C264 15P
+9V-1
C212 16V10^
GJ60 SHORT
RR71 OPEN
RR72 OPEN
CR50 OPEN
RR15 OPEN
RR16 OPEN
RR17 OPEN
RR18 OPEN
Y-IN
GND
R-Y
B-Y
U IN
Y IN
V IN
LR25 TEM2030AZ (short)
LR26 TEM2030AZ
GJ73 OPEN
GJ72 OPEN
GJ71 OPEN
GJ70 OPEN
GJ77 OPEN
GJ76 OPEN
GJ75 OPEN
GJ74 OPEN
PV03
10P
V GND
U
U GND
Y
Y GND
HVcc
SPK
TDF
NC
YUV SW
NC
BLK
NC
V STP
NC
ABL
TPM-01
WPD
Fsc
RGB-OUT
Y OUT
Y GND
U OUT
U GND
V OUT
V GND
Y-IN
Y GND
U-IN
U/V GND
V-IN
+9V-1
+5V-2
SCP
Y-AV
Y-AV GND
C-AV
C-AV GND
SCL1
FROM DIGITAL BOARD
to SIGNAL
to SIGNAL

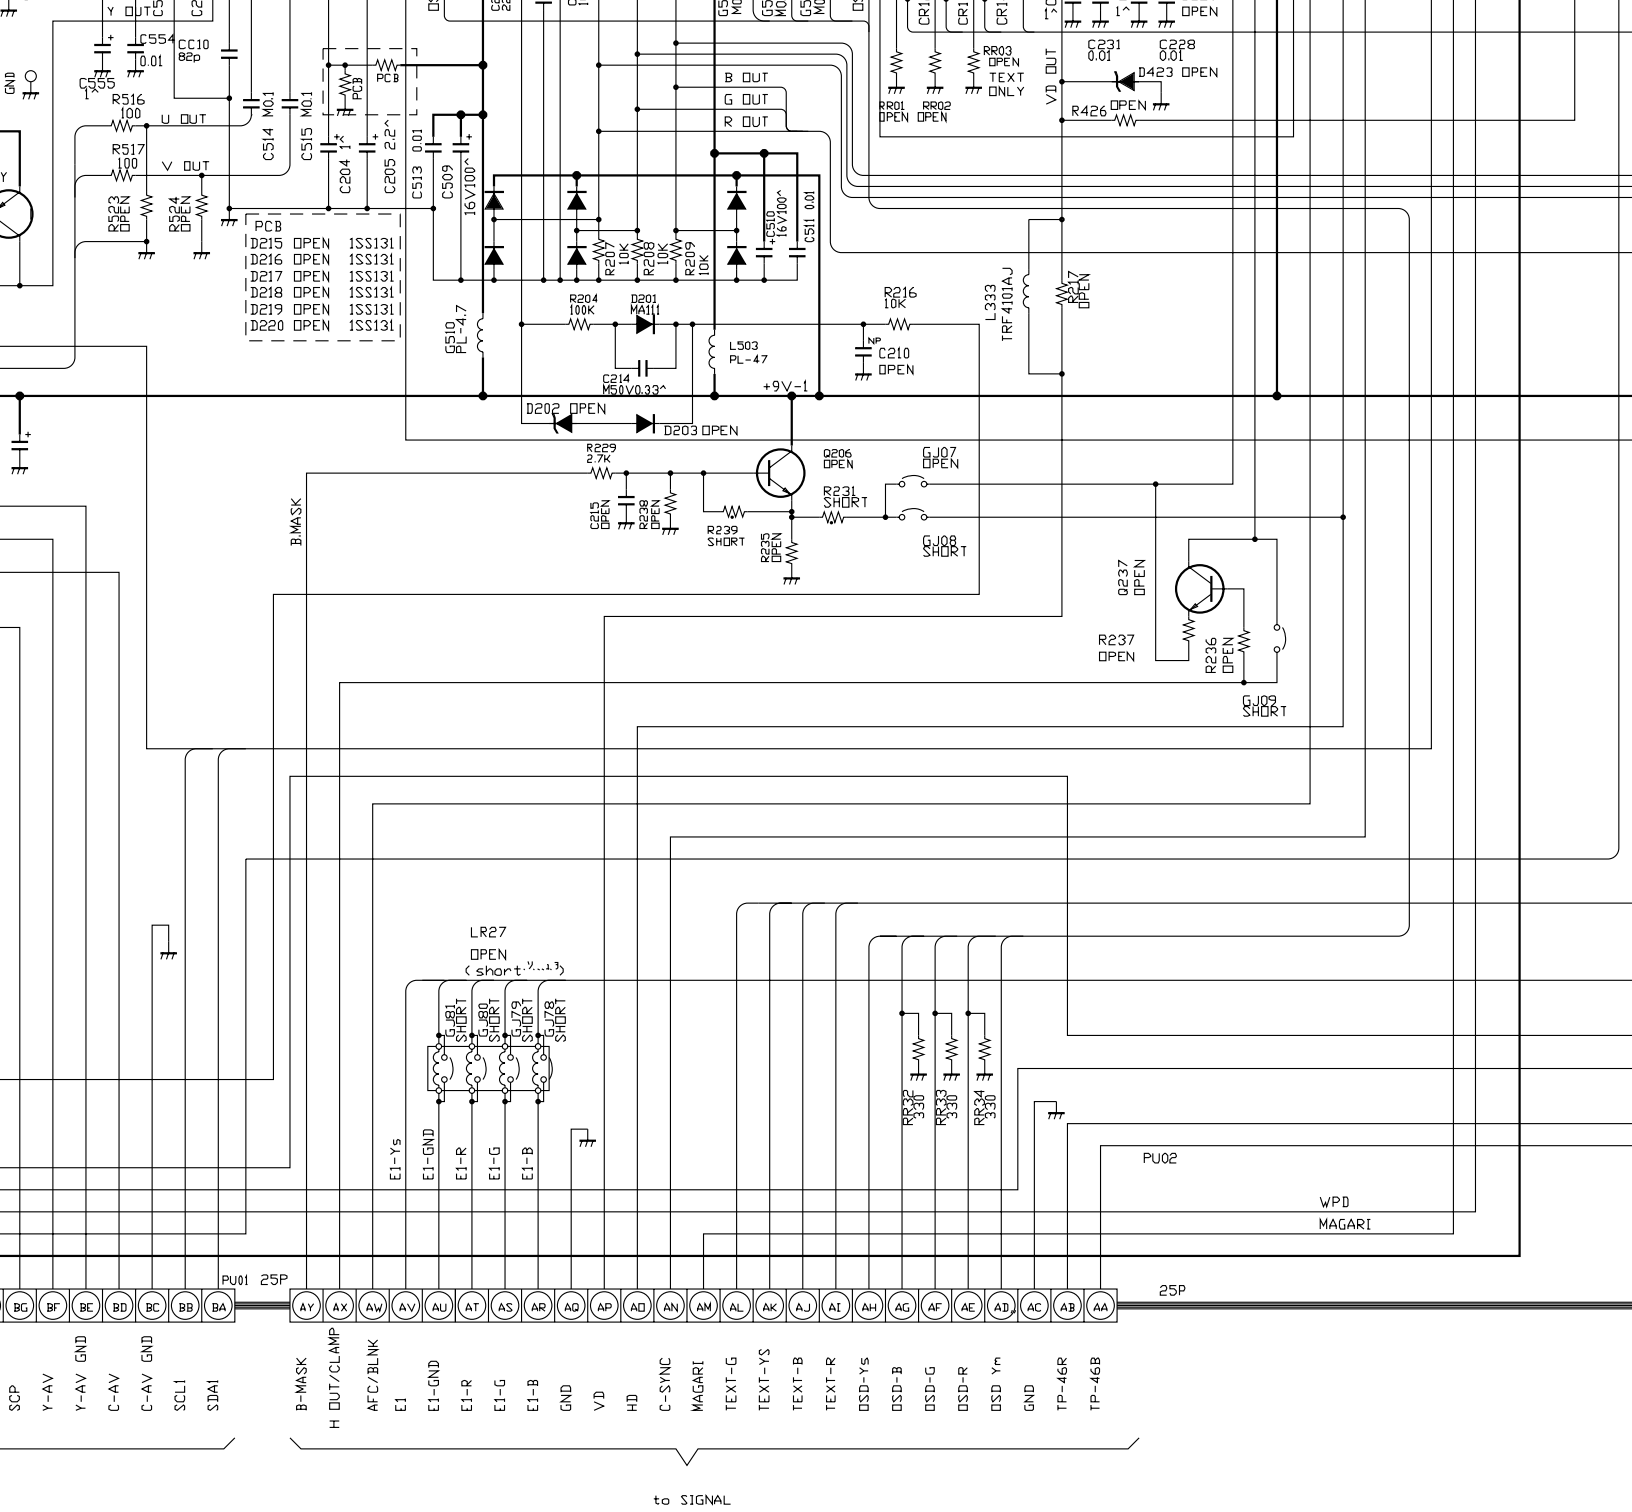

U905 VCD PB8768G

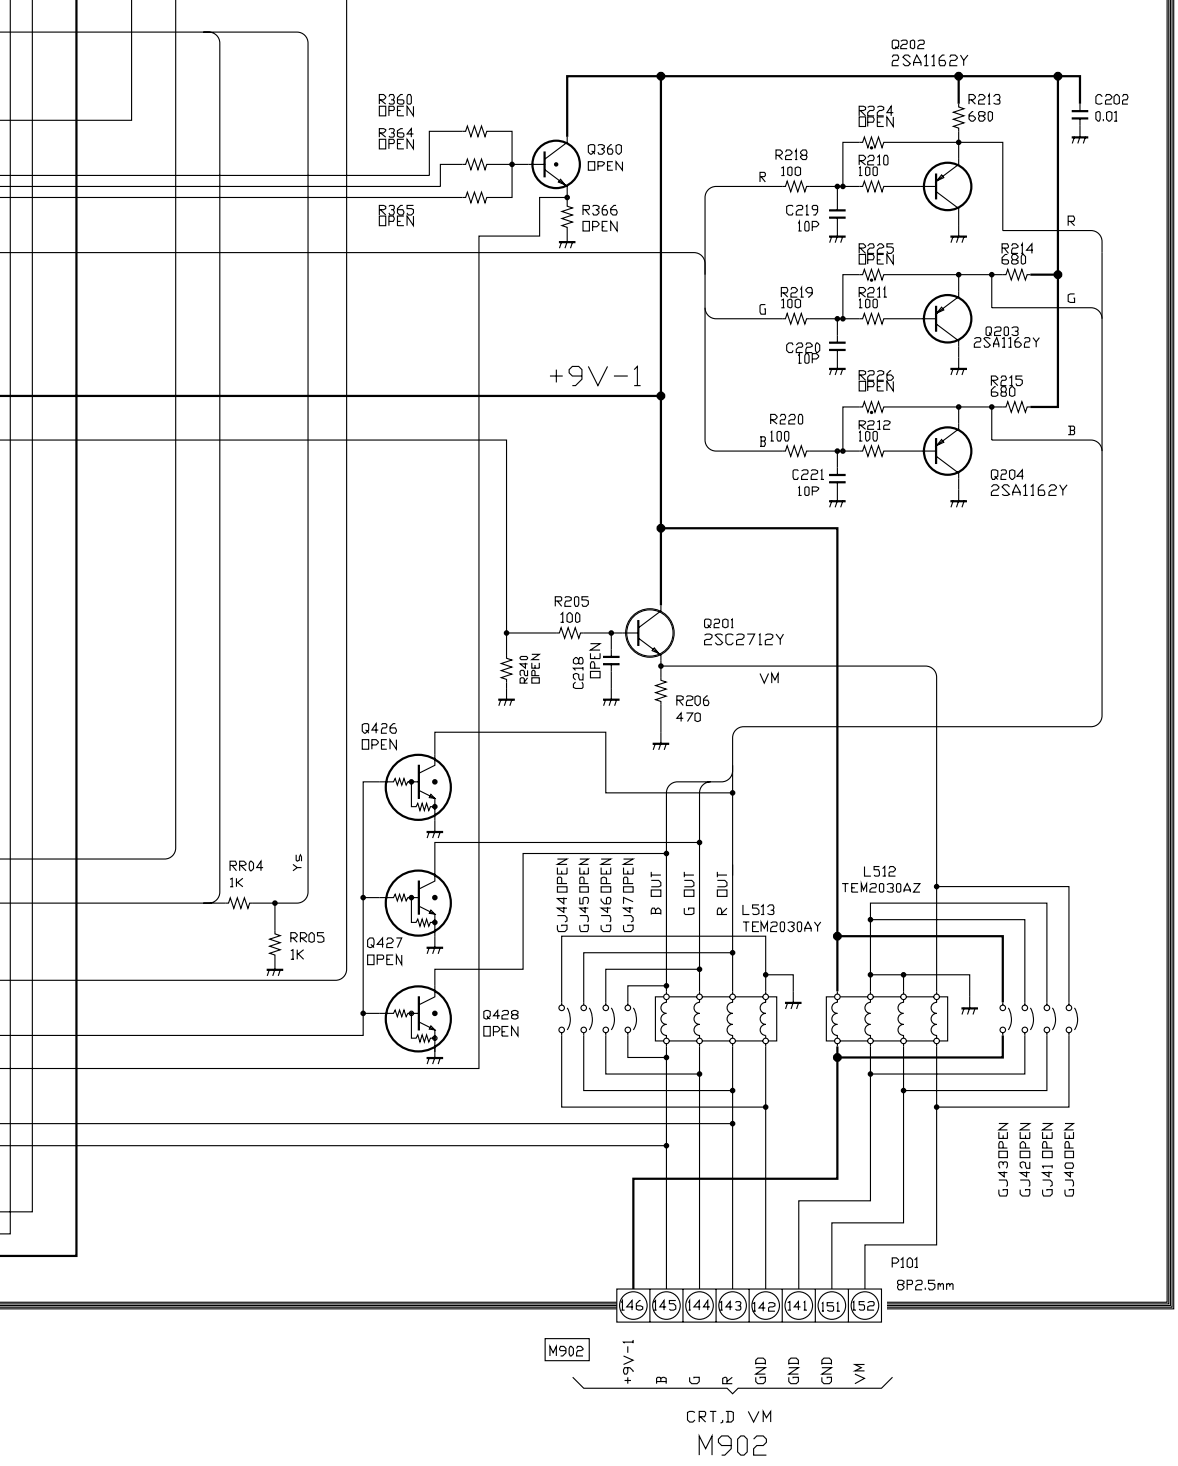

V/C/D

40PW13G/B4/7

E F G H

10 11 12

U910 BACK-T PB8774C

U903 ED-WAC PB8892B

AUDIO OUT (FIX)

S-VIDEO

BACK-T/ED-WAC
40PW13G/B 5/7

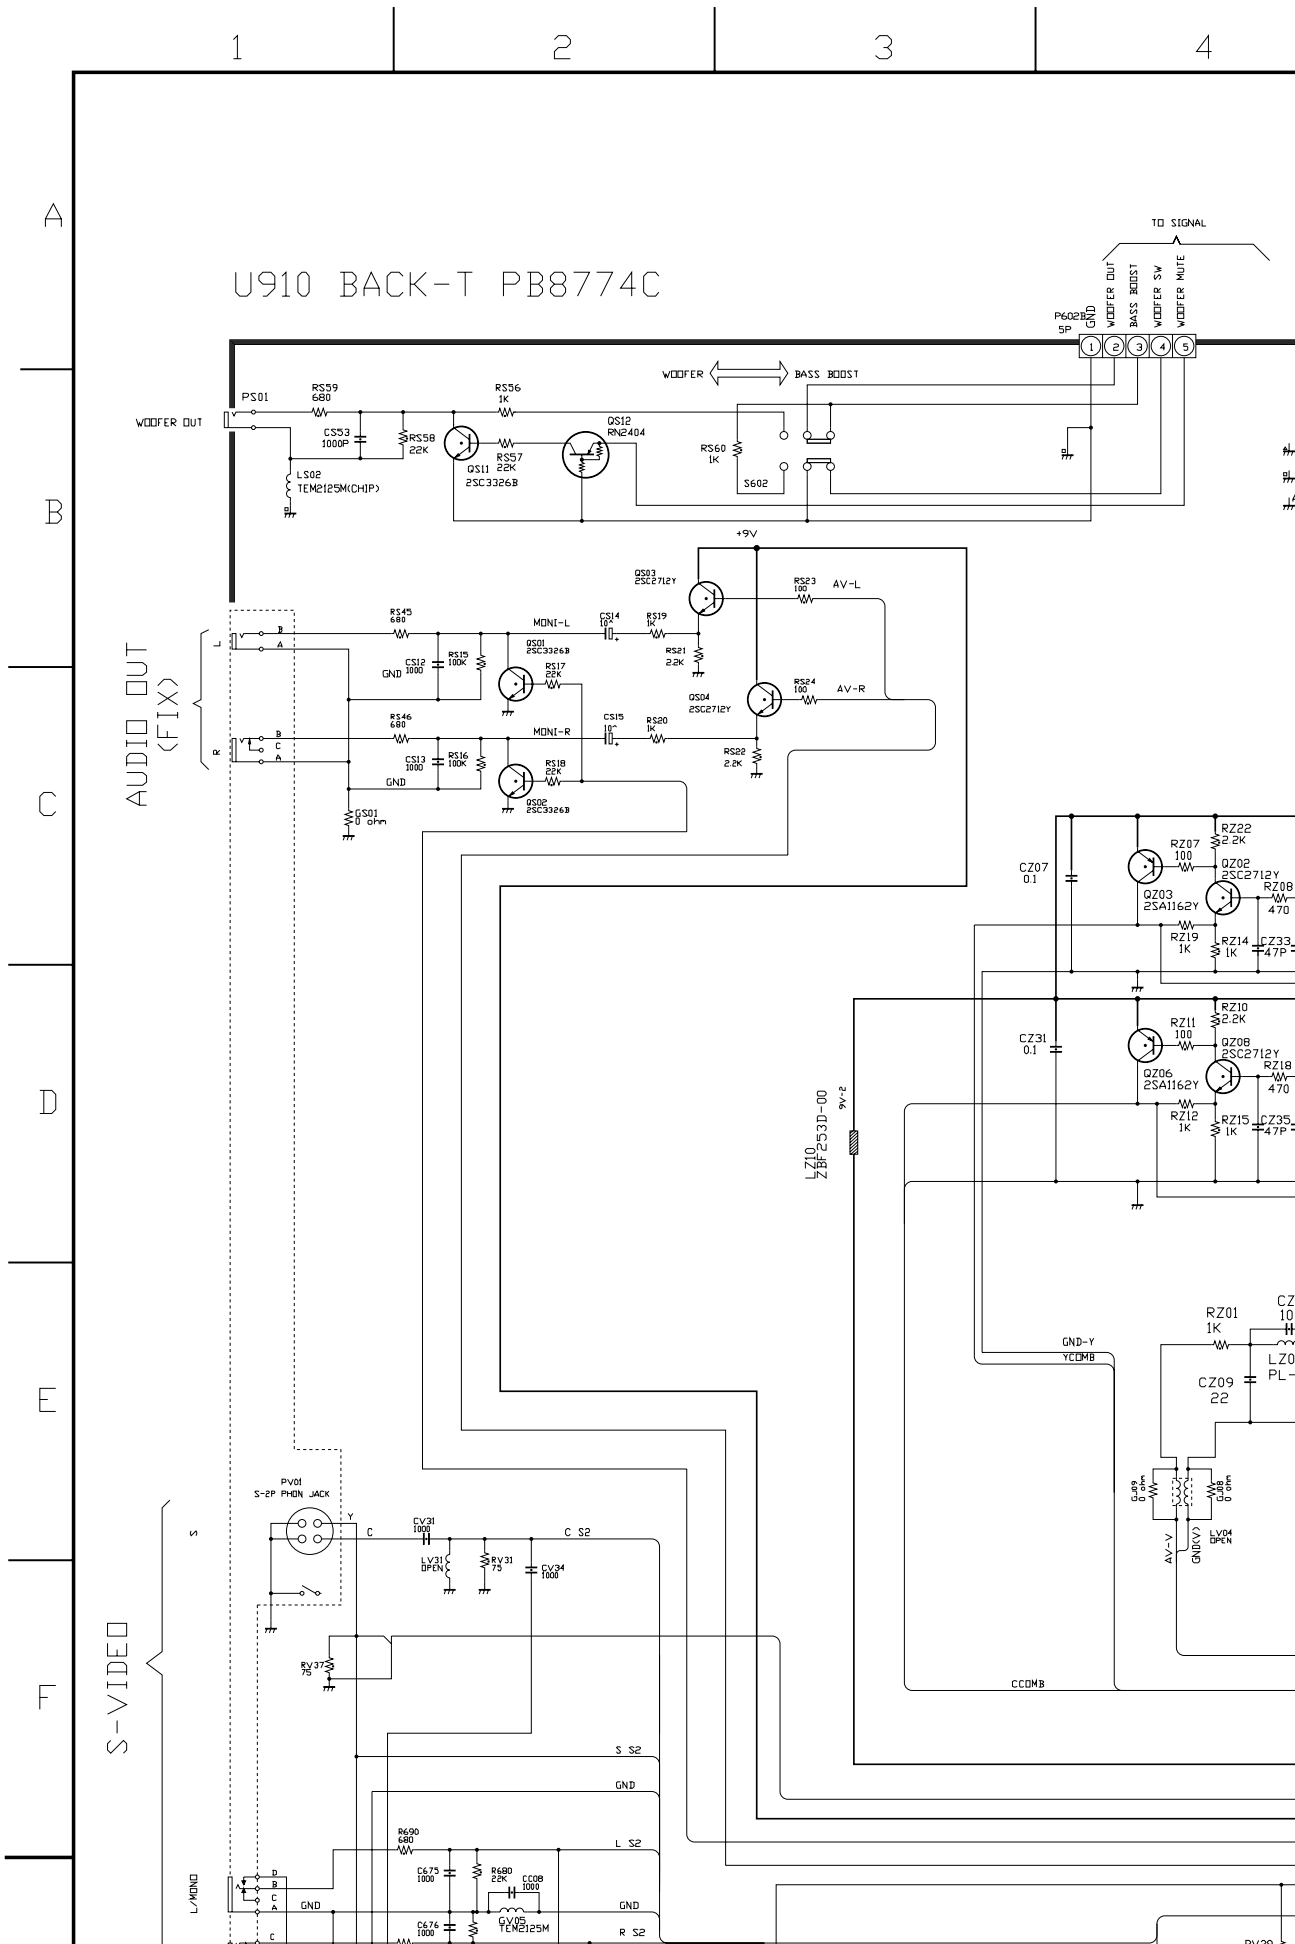
U910 BACK-T PB8774C
TO SIGNAL
P602B
5P
GND
WOOFER OUT
BASS BOOST
WOOFER SW
WOOFER MUTE
WOOFER
BASS BOOST
WOOFER OUT
PS01
RS59 680
CS53 1000P
RS58 22K
RS56 1K
QS12 RN2404
QS11 2SC3326B
RS57 22K
RS60 1K
S602
LS02 TEM2125M(CHIP)
+9V
AUDIO OUT (FIX)
L
R
QS03 2SC2712Y
RS23 100
AV-L
RS45 680
MONI-L
CS14 10
RS19 1K
QS01 2SC3326B
CS12 1000
RS15 100K
RS17 22K
RS21 2.2K
QS04 2SC2712Y
RS24 100
AV-R
RS46 680
MONI-R
CS15 10
RS20 1K
CS13 1000
RS16 100K
RS18 22K
RS22 2.2K
QS02 2SC3326B
GS01 0 OHM
GND
CZ07 0.1
RZ07 100
RZ22 2.2K
QZ02 2SC2712Y
QZ03 2SA1162Y
RZ08 470
RZ19 1K
RZ14 1K
CZ33 47P
CZ31 0.1
RZ11 100
RZ10 2.2K
QZ08 2SC2712Y
QZ06 2SA1162Y
RZ18 470
RZ12 1K
RZ15 1K
CZ35 47P
LZ10 28F253D-00
9V-2
RZ01 1K
CZ 10
GND-Y
YCOMB
LZ0 PL-
CZ09 22
GND(Y)
LY04 OPEN
AV-Y
CCOMB
S-VIDEO
S
PV01 S-2P PHON JACK
Y
C
CV31 1000
C S2
LV31 OPEN
RV31 75
CV34 1000
RV37 75
S S2
GND
L/MONO
R690 680
L S2
C675 1000
R680 22K
CC08 1000
GND
GV05 TEM2125M
C676 1000
R S2

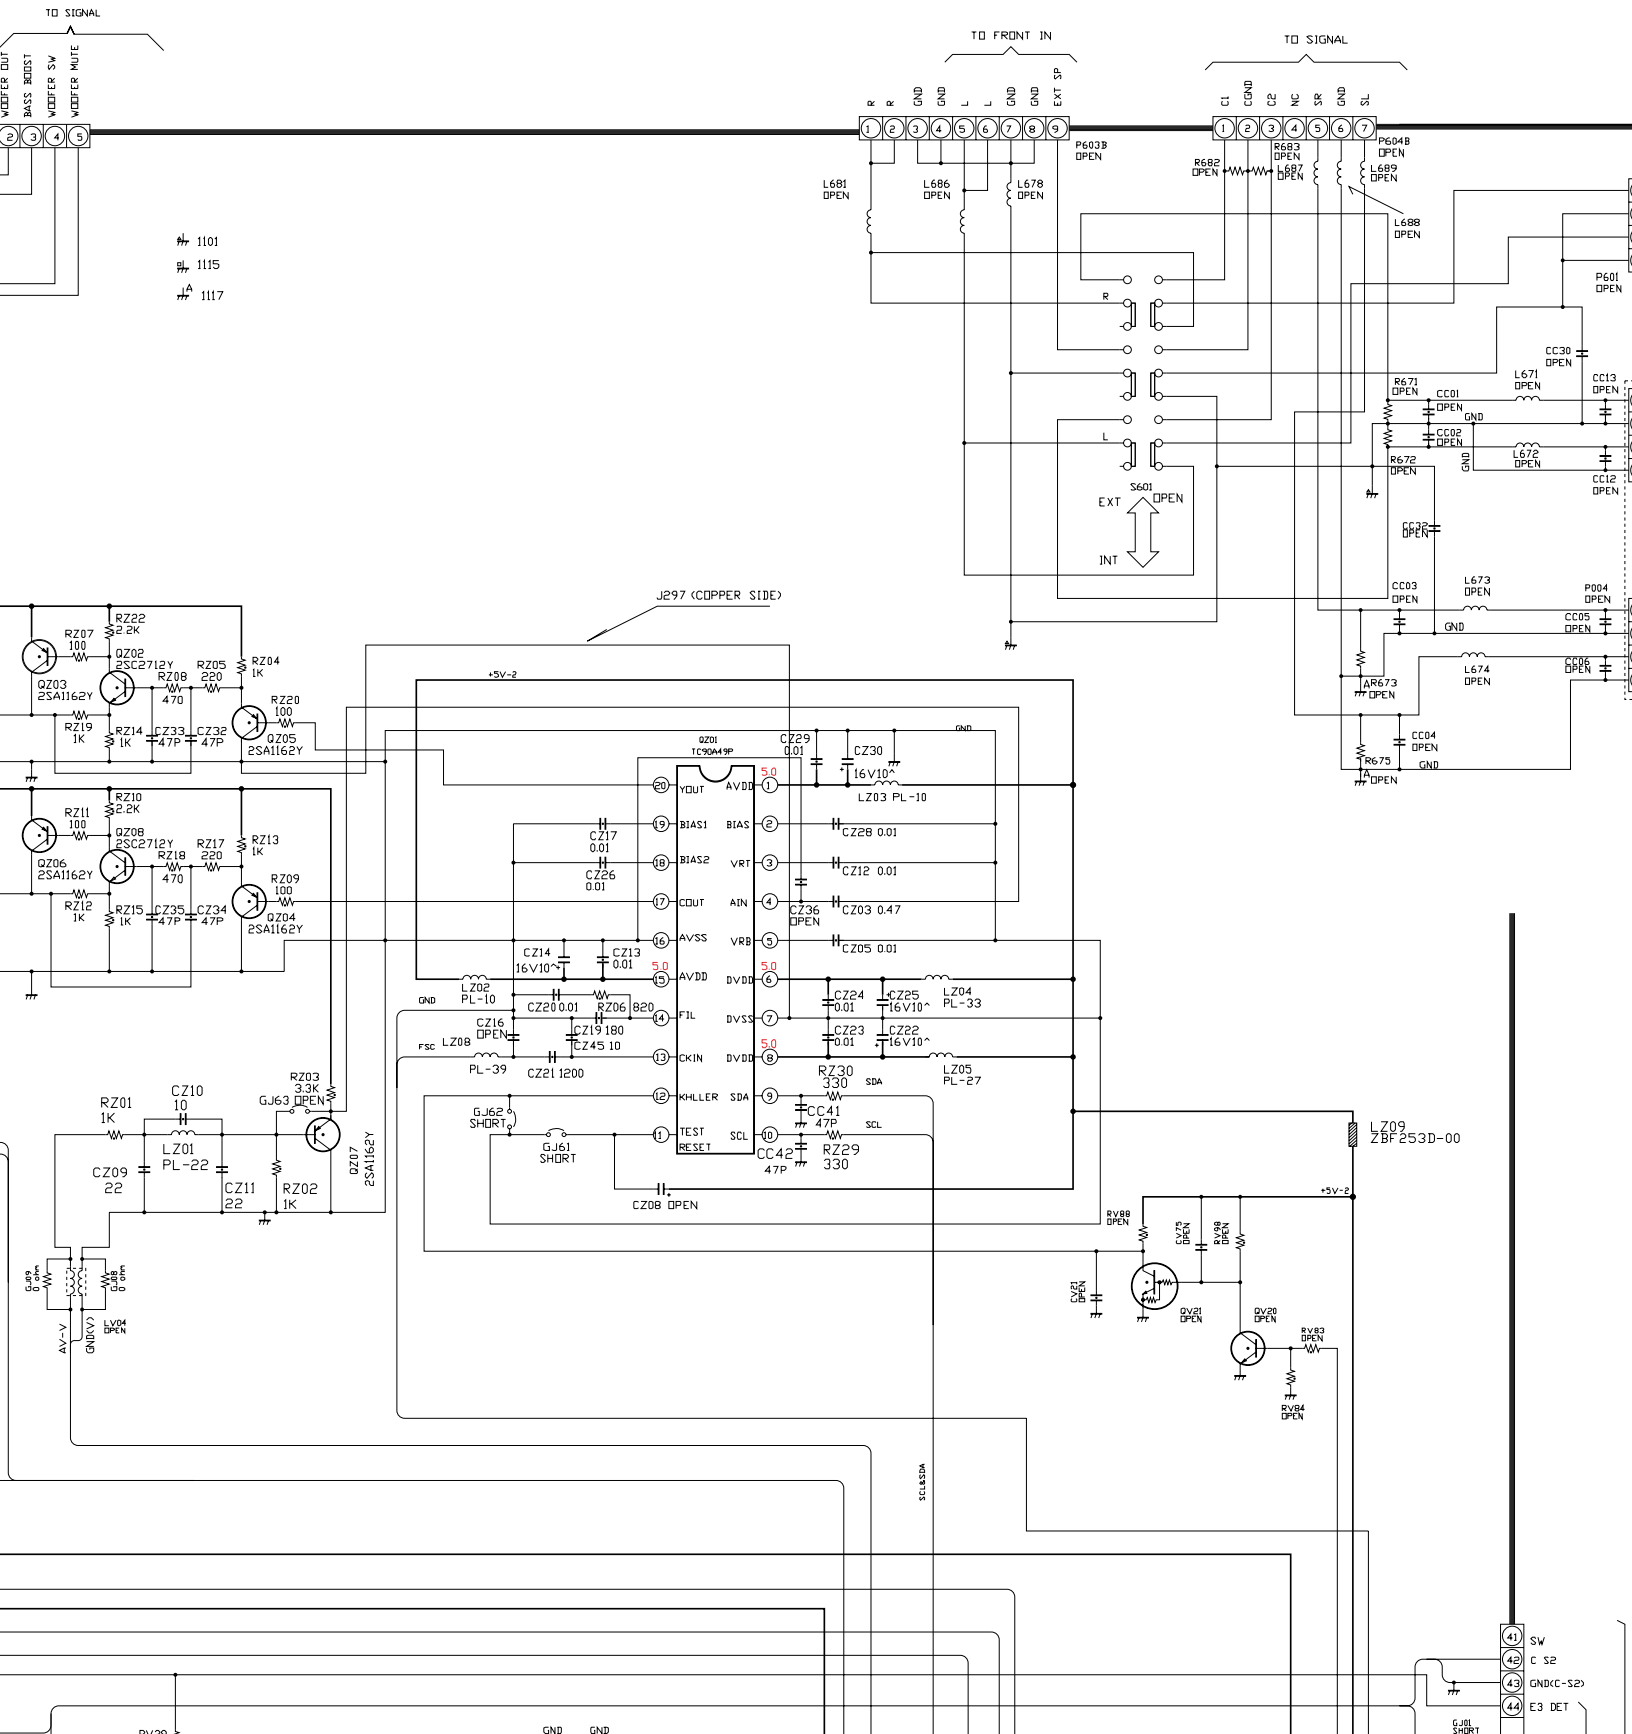
TO SIGNAL
WOOFER OUT
BASS BOOST
WOOFER SW
WOOFER MUTE
TO FRONT IN
R
R
GND
GND
L
L
GND
GND
EXT SP
P603B OPEN
TO SIGNAL
C1
CGND
C2
NC
SR
GND
SL
P604B OPEN
R683 OPEN
R682 OPEN
L687 OPEN
L689 OPEN
L688 OPEN
L681 OPEN
L686 OPEN
L678 OPEN
1101
1115
1117
P601 OPEN
R671 OPEN
CC01 OPEN
CC02 OPEN
R672 OPEN
L671 OPEN
L672 OPEN
CC30 OPEN
CC13 OPEN
CC12 OPEN
GND
S601
EXT
OPEN
INT
CC32 OPEN
CC03 OPEN
L673 OPEN
P004 OPEN
CC05 OPEN
CC06 OPEN
L674 OPEN
AR673 OPEN
CC04 OPEN
R675 OPEN
J297 (COPPER SIDE)
+5V-2
RZ22 2.2K
QZ02 2SC2712Y
QZ03 2SA1162Y
RZ07 100
RZ08 470
RZ05 220
RZ04 1K
RZ20 100
QZ05 2SA1162Y
RZ19 1K
RZ14 1K
CZ33 47P
CZ32 47P
RZ10 2.2K
QZ08 2SC2712Y
QZ06 2SA1162Y
RZ11 100
RZ18 470
RZ17 220
RZ13 1K
RZ09 100
QZ04 2SA1162Y
RZ12 1K
RZ15 1K
CZ35 47P
CZ34 47P
QZ01 TC90A49P
YOUT
BIAS1
BIAS2
COUT
AVSS
AVDD
FIL
CKIN
KHLLER
TEST RESET
AVDD
BIAS
VRT
AIN
VRB
DVDD
DVSS
DVDD
SDA
SCL
CZ29 0.01
CZ30 16V10^
LZ03 PL-10
CZ17 0.01
CZ26 0.01
CZ28 0.01
CZ12 0.01
CZ36 OPEN
CZ03 0.47
CZ05 0.01
CZ14 16V10^
CZ13 0.01
LZ02 PL-10
CZ20 0.01
RZ06 820
CZ19 180
CZ45 10
CZ16 OPEN
LZ08 PL-39
CZ21 1200
CZ24 0.01
CZ25 16V10^
LZ04 PL-33
CZ23 0.01
CZ22 16V10^
LZ05 PL-27
RZ30 330
CC41 47P
RZ29 330
CC42 47P
GJ62 SHORT
GJ61 SHORT
CZ08 OPEN
RZ01 1K
CZ10 10
RZ03 3.3K
GJ63 OPEN
LZ01 PL-22
CZ09 22
CZ11 22
RZ02 1K
QZ07 2SA1162Y
GJ09 0 ohm
GJ08 0 ohm
AV-V
GND(V)
LV04 OPEN
LZ09 ZBF253D-00
RV88 OPEN
RV87 OPEN
RV89 OPEN
CV21 OPEN
QV21 OPEN
QV20 OPEN
RV83 OPEN
RV84 OPEN
SCLSDA
41 SW
42 C S2
43 GND(C-S2)
44 E3 DET
GJ01 SHORT
GND
GND

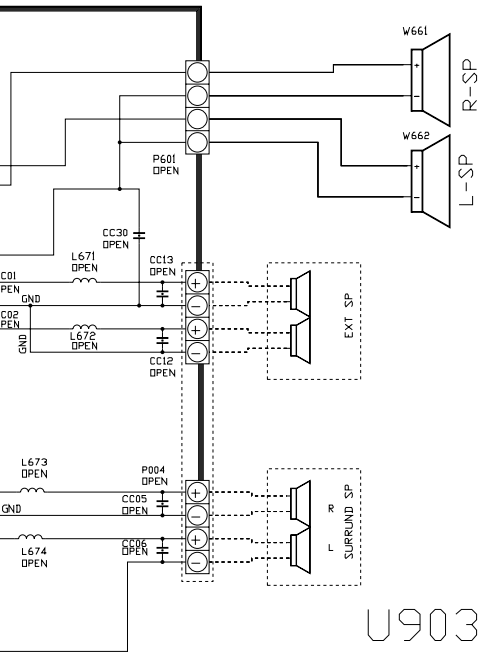

U903 ED-WAC PB8892B

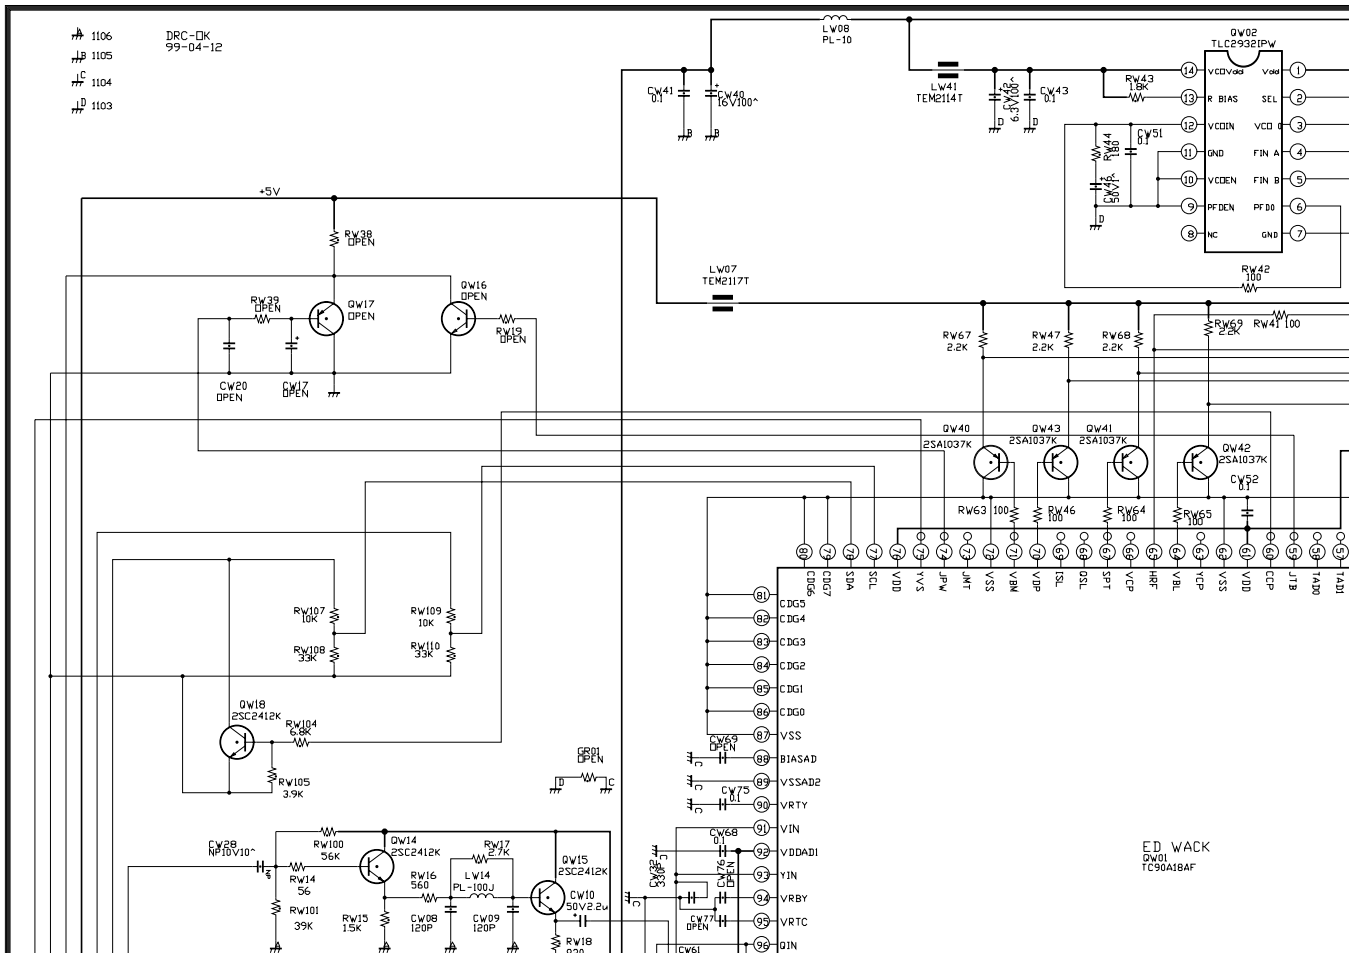

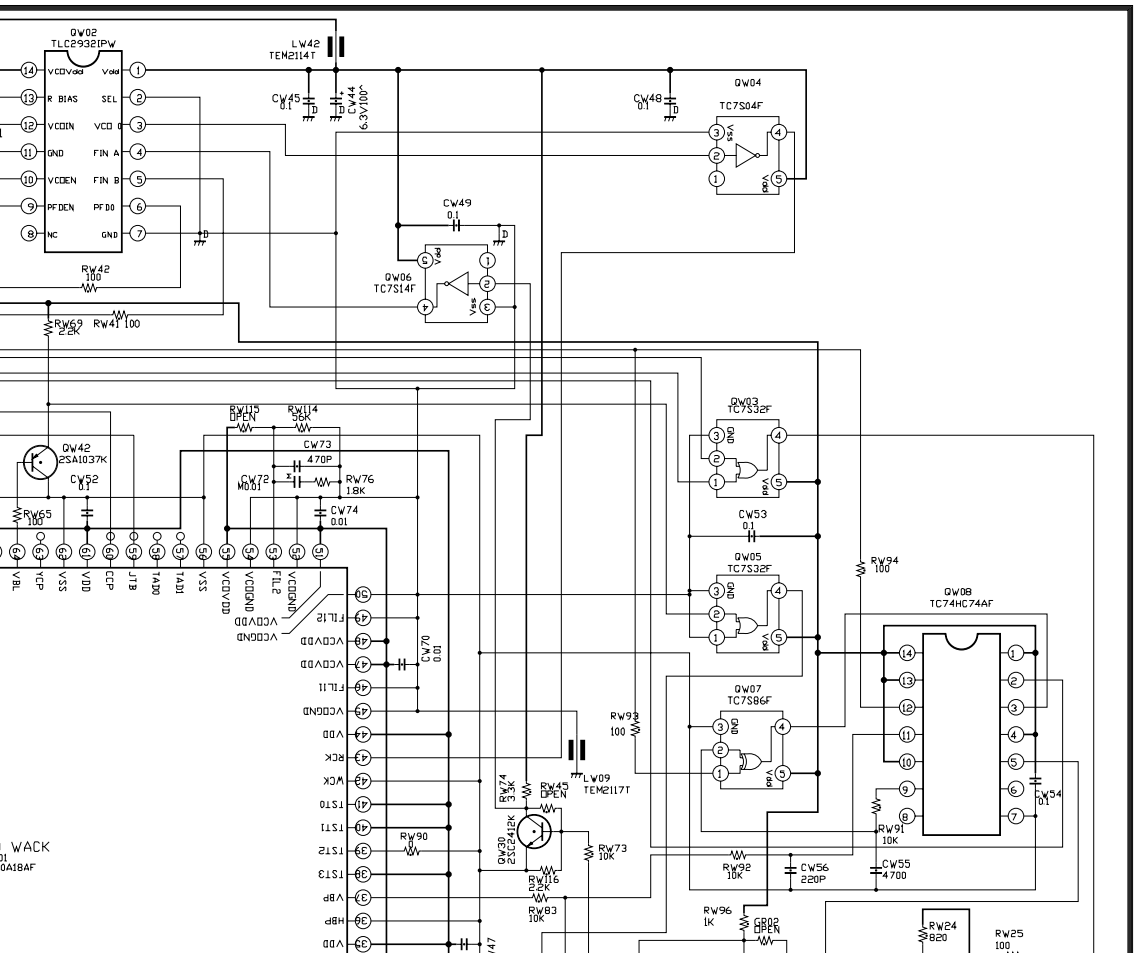
QW02
TLC2932IPW
LW42
TEM2114T
CW45
0.1
CW44
6.3V100P
CW48
0.1
QW04
TC7S04F
CW49
0.1
QW06
TC7S14F
RW42
100
RW69
22K
RW41
100
RW115
OPEN
RW114
36K
QW42
2SA1037K
CW52
0.1
CW73
470P
CW72
MODI
RW76
18K
CW74
0.01
RW65
100
QW03
TC7S32F
CW53
0.1
QW05
TC7S32F
RW94
100
QW08
TC74HC74AF
QW07
TC7S86F
RW93
100
LW09
TEM2117T
RW74
3.3K
RW45
OPEN
QW30
2SC2412K
RW116
2.2K
RW73
10K
RW90
0
RW83
10K
RW92
10K
CW56
220P
CW55
4700
RW91
10K
CW54
0.1
RW96
1K
CD02
OPEN
RW24
820
RW25
100
CW70
0.01
VBL
TCP
VSS
VDD
CCP
JTB
TADO
TADI
VSS
VCCVDD
VCCGND
FIL2
VCCGND
FIL12
VCCVDD
VCCGND
FIL11
VCCGND
VDD
RCK
WCK
TST0
TST1
TST2
TST3
VBP
HBP
VDD
WACK
0A18AF

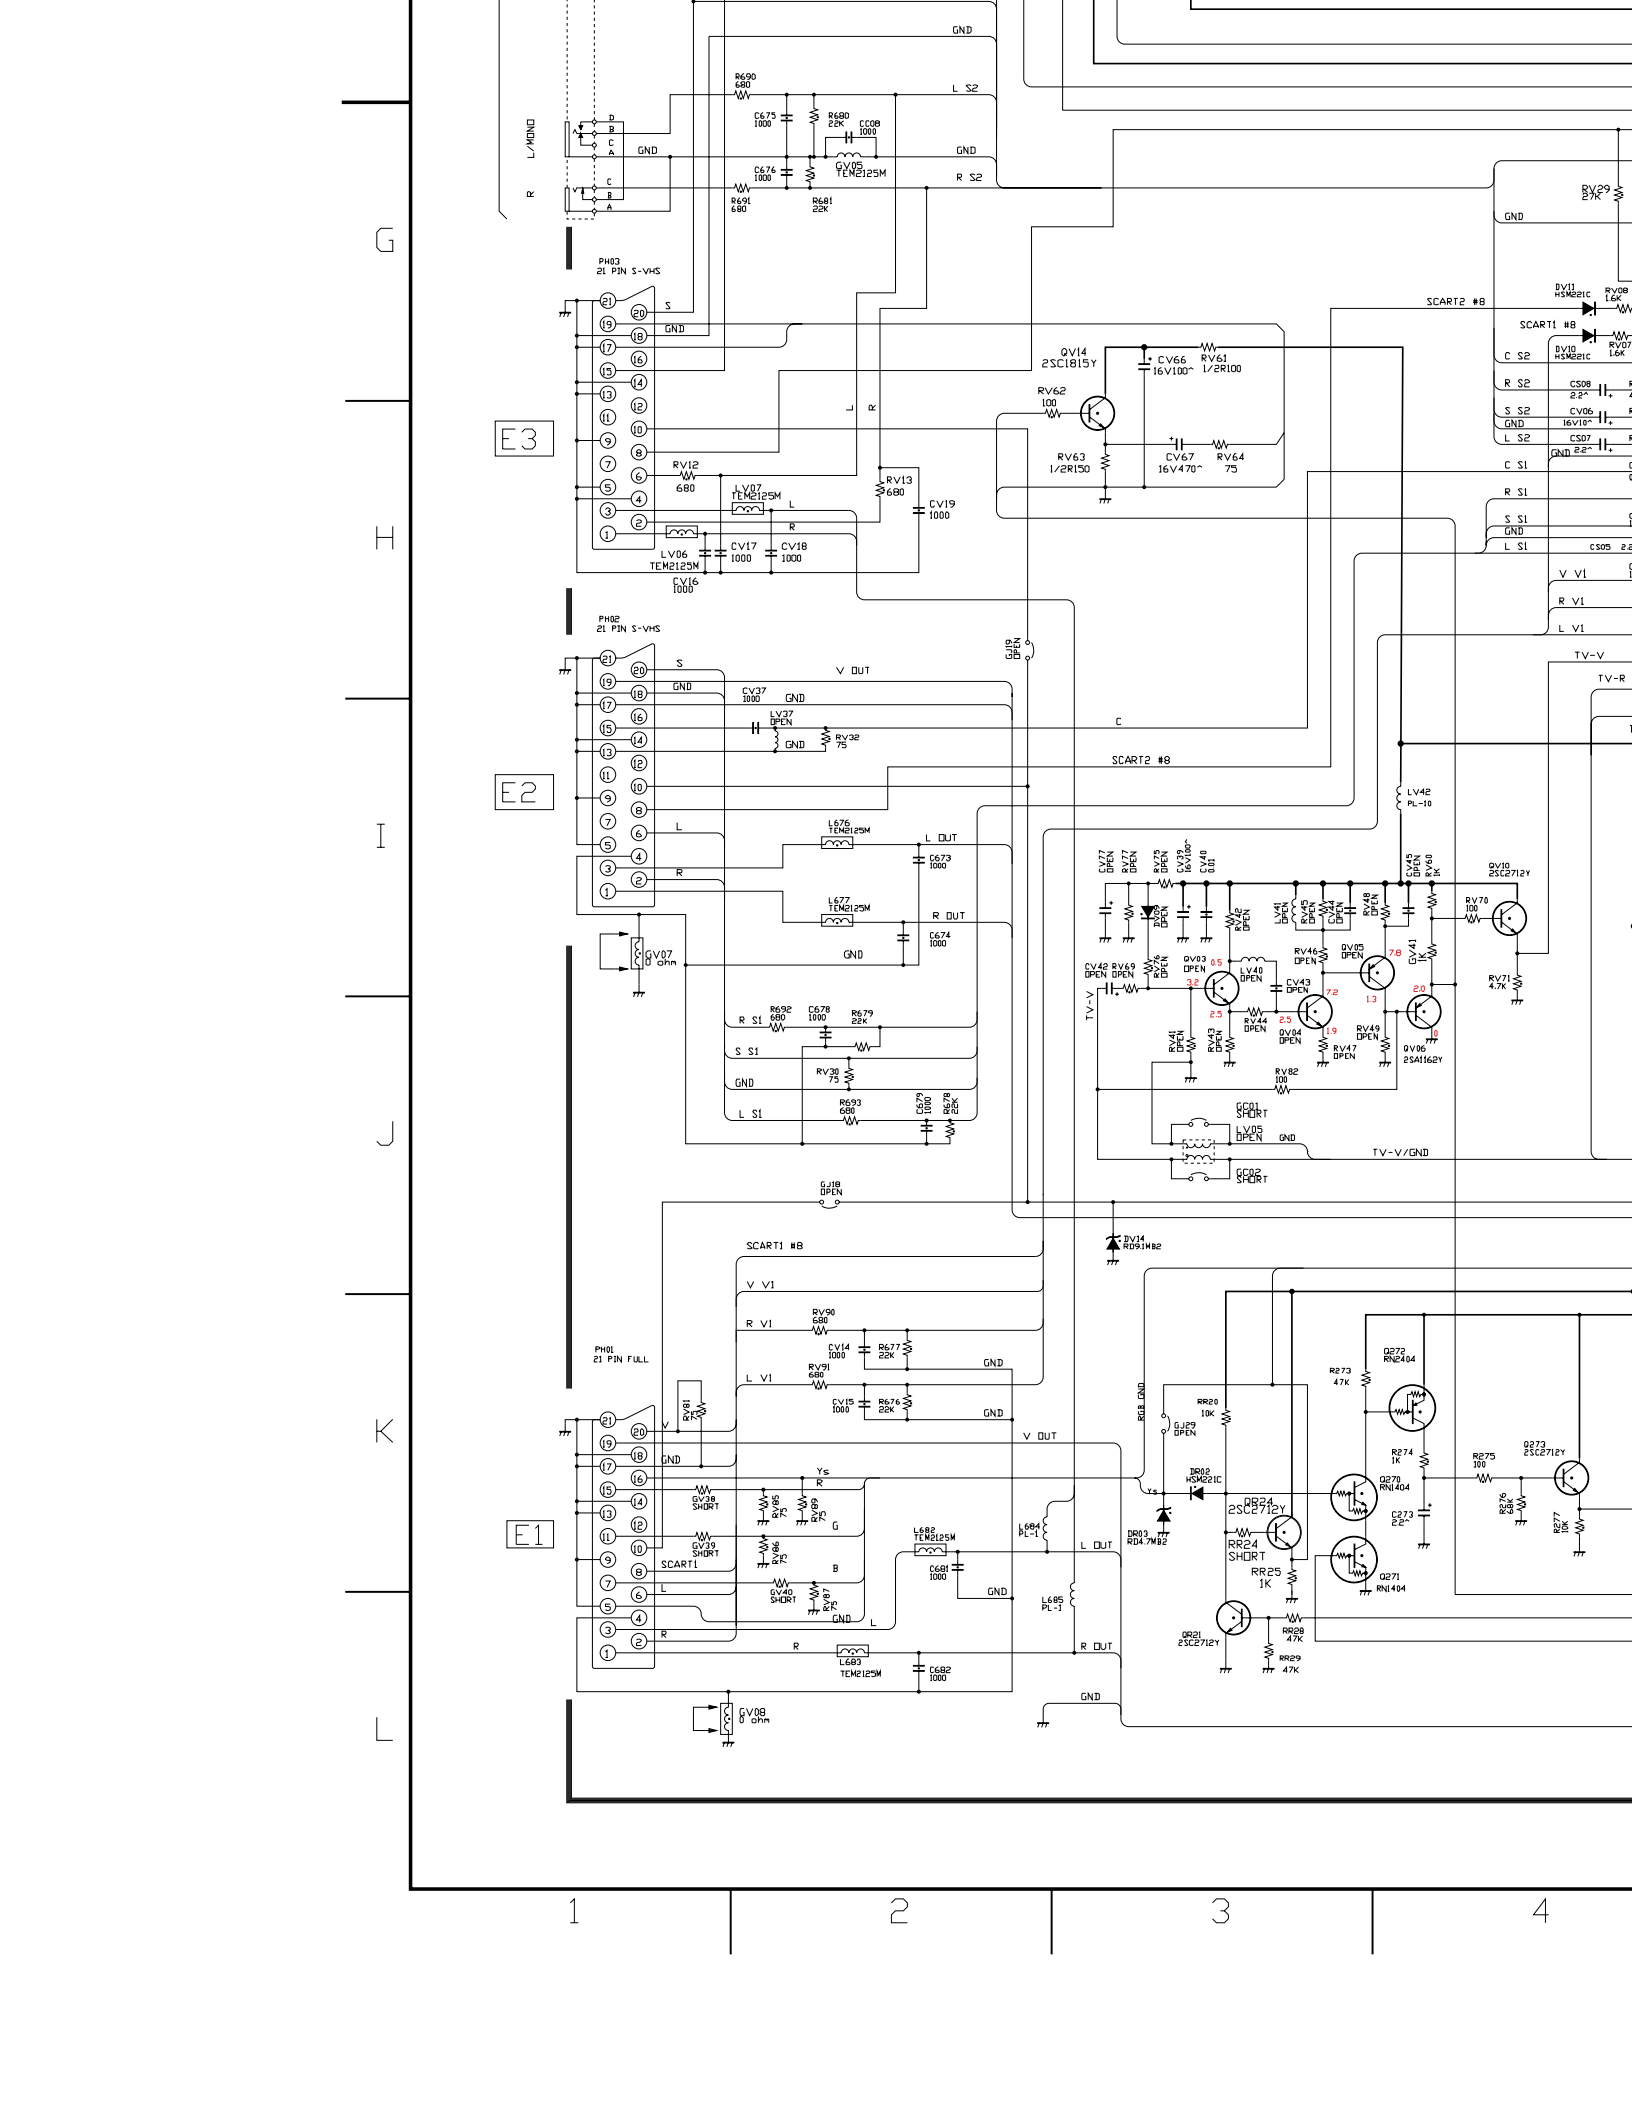
PH03
21 PIN S-VHS
PH02
21 PIN S-VHS
PH01
21 PIN FULL
E1
E2
E3
SCART1 #8
SCART2 #8
TV-V
TV-V/GND
L/MONO
GND
V OUT
L OUT
R OUT
C
S
L
R
V
Ys
G
B
RV90 680
RV91 680
RV92 680
RV93 680
RV94 680
RV95 75
RV96 75
RV97 75
RV98 75
RV99 75
RV30 75
RV32 75
RV12 680
RV13 680
RV61 1/2R100
RV62 100
RV63 1/2R150
RV64 75
RV70 100
RV71 4.7K
RV82 100
RR20 10K
RR24 SHORT
RR25 1K
RR28 47K
RR29 47K
R273 47K
R274 1K
R275 100
R276 47K
R277 1K
CV66 16V100^
CV67 16V470^
CV14 1000
CV15 1000
CV16 1000
CV17 1000
CV18 1000
CV19 1000
CV37 1000
CV42 OPEN
CV43 OPEN
CV45 OPEN
CV46 1K
CV40 0.01
C673 1000
C674 1000
C675 1000
C676 1000
C678 1000
C679 1000
C680 1000
C681 1000
C682 1000
C683 1000
C684 1000
C685 1000
R677 22K
R678 22K
R679 22K
R680 22K
R681 22K
R690 680
R691 680
R692 680
R693 680
CC08 1000
CS08 2.2^
CV06 16V10^
CS07 2.2^
CS05 2.2
GV05 TEM2125M
GV07 0 ohm
GV08 0 ohm
GV38 SHORT
GV39 SHORT
GV40 SHORT
LV05 OPEN
LV06 TEM2125M
LV07 TEM2125M
LV37 OPEN
LV40 OPEN
LV42 PL-10
L676 TEM2125M
L677 TEM2125M
L682 TEM2125M
L683 TEM2125M
L684 PL-1
L685 PL-1
GC01 SHORT
GC02 SHORT
GJ18 OPEN
GJ19 OPEN
GJ29 OPEN
QV14 2SC1815Y
QV10 2SC2712Y
QV03 OPEN
QV04 OPEN
QV05 OPEN
QV06 2SA1162Y
QR21 2SC2712Y
QR24 2SC2712Y
QV41 1K
DV14 RD91MB2
DR02 HSM221C
DR03 RD4.7MB2
DV10 HSM221C
DV11 HSM221C
Q270 RN1404
Q271 RN1404
Q272 RN2404
Q273 2SC2712Y
RGB GND
G
H
I
J
K
L
1
2
3
4

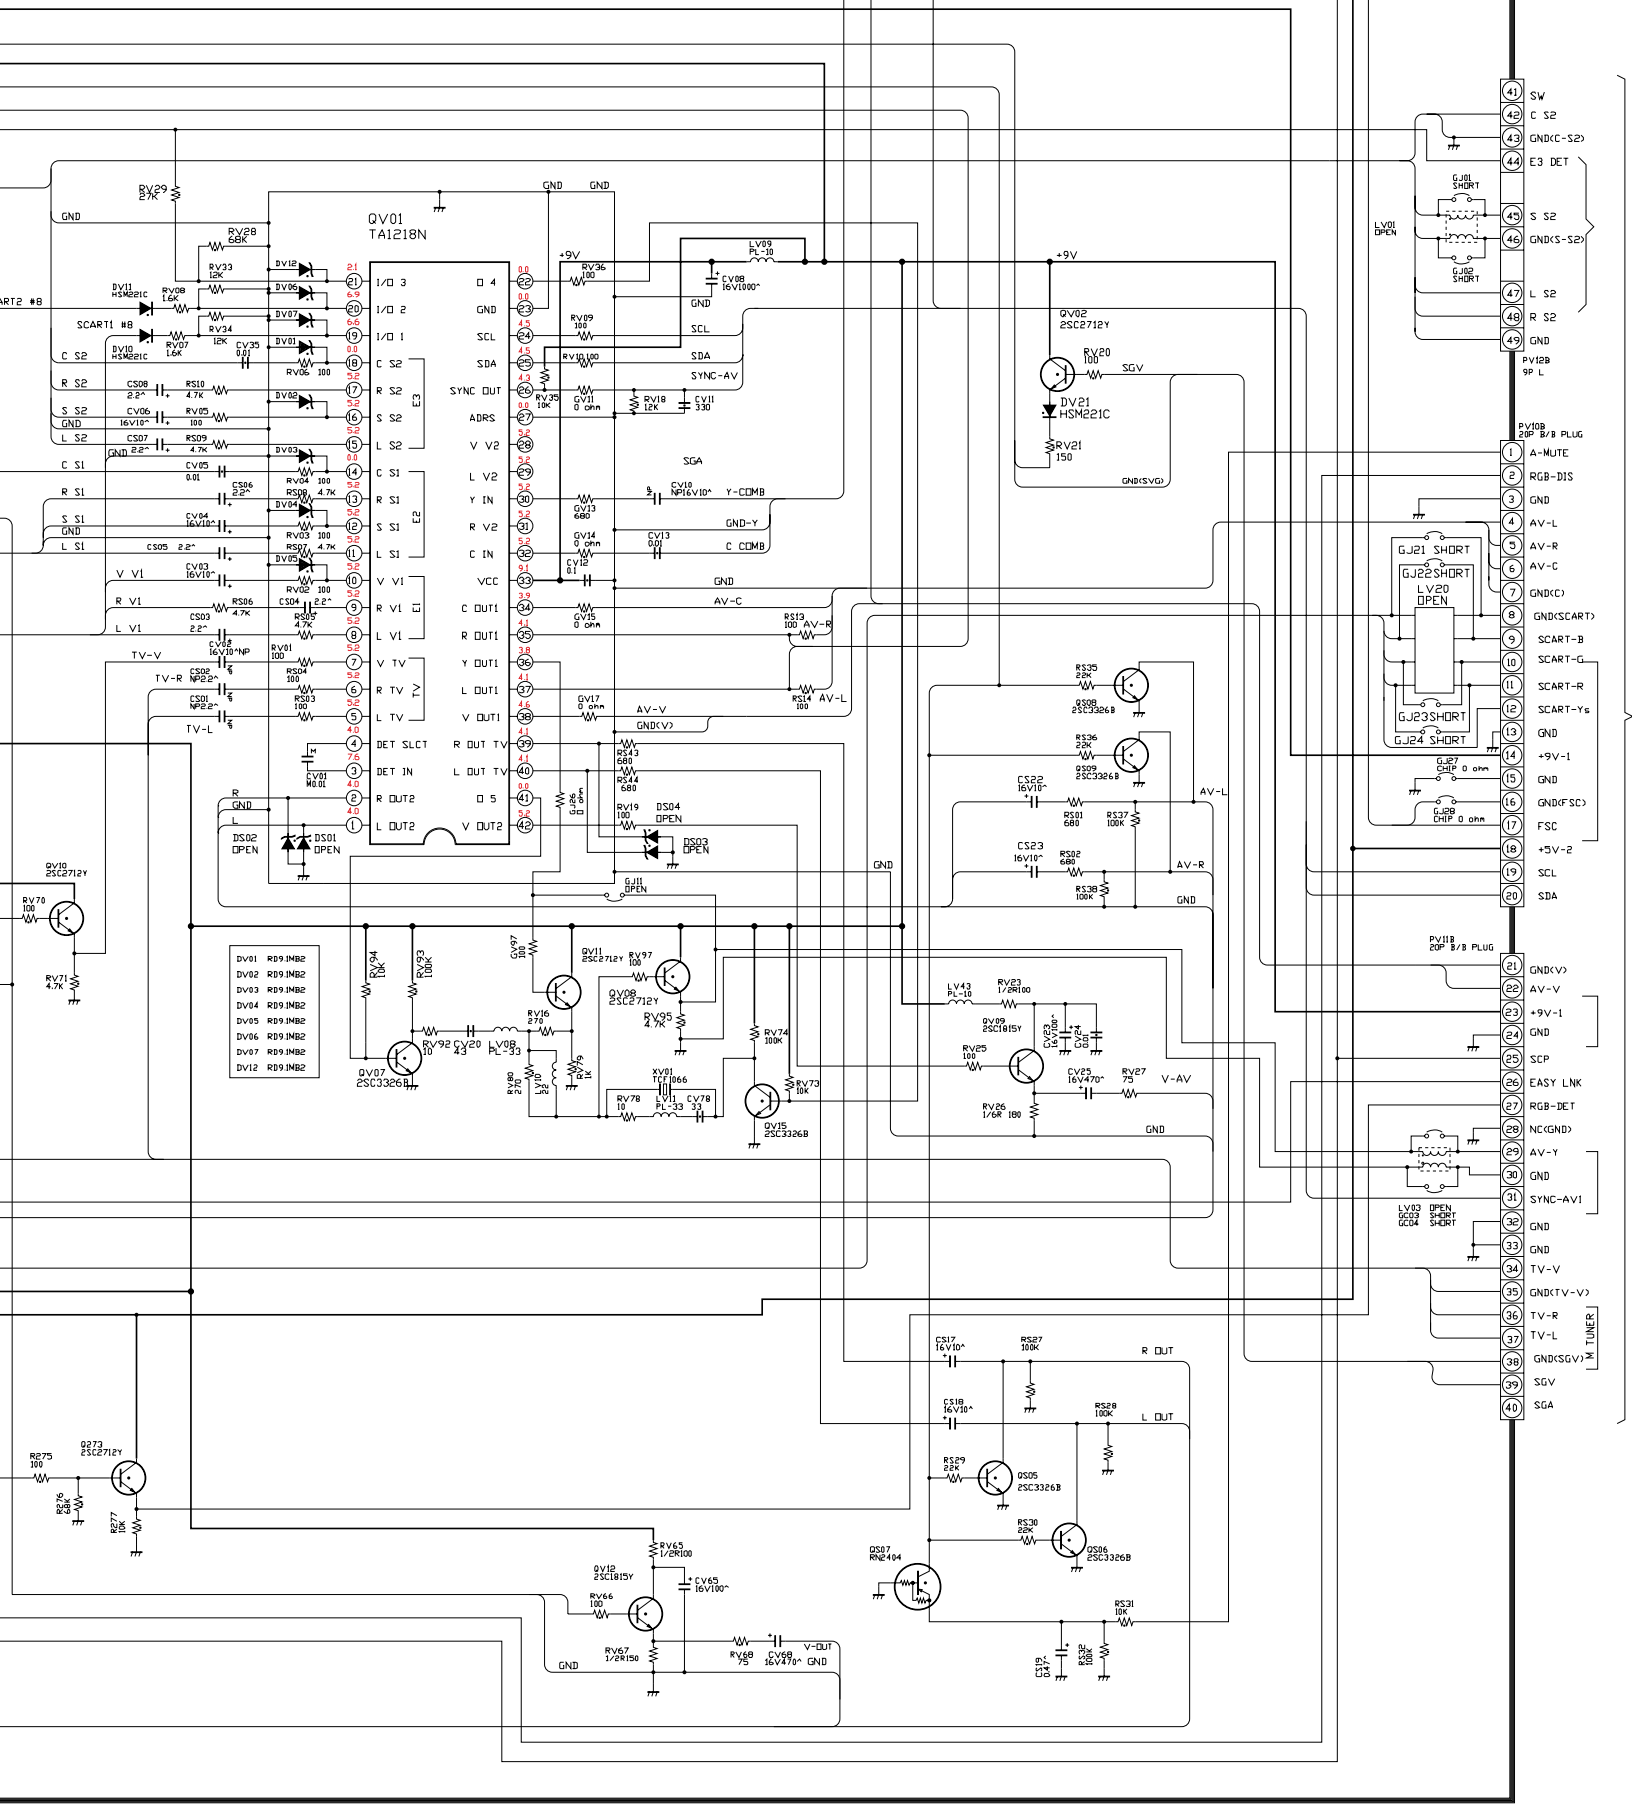
QV01
TA1218N
I/O 3
I/O 2
I/O 1
C S2
R S2
S S2
L S2
C S1
R S1
S S1
L S1
V V1
R V1
L V1
TV-V
TV-R
TV-L
DET SLCT
DET IN
R OUT2
L OUT2
O 4
GND
SCL
SDA
SYNC OUT
ADRS
V V2
L V2
Y IN
R V2
C IN
VCC
C OUT1
R OUT1
Y OUT1
L OUT1
V OUT1
R OUT TV
L OUT TV
O 5
V OUT2
E3
E2
E1
TV
SCART1 #8
SGA
Y-COMB
C COMB
GND-Y
AV-C
AV-V
AV-L
AV-R
V-AV
R OUT
L OUT
V-OUT
SGV
GND(SVG)
GND(C-S2)
GND(S-S2)
GND(SCART)
GND(FSC)
GND(V)
GND(TV-V)
GND(SGV)
SW
C S2
E3 DET
S S2
R S2
L S2
A-MUTE
RGB-DIS
AV-L
AV-R
AV-C
SCART-B
SCART-G
SCART-R
SCART-Ys
+9V-1
FSC
+5V-2
SCL
SDA
SCP
EASY LNK
RGB-DET
NC(GND)
AV-Y
SYNC-AV1
TV-V
TV-R
TV-L
SGV
SGA
TV TUNER
GJ01 SHORT
GJ02 SHORT
GJ21 SHORT
GJ22 SHORT
LV20 OPEN
GJ23 SHORT
GJ24 SHORT
LV01 OPEN
LV03 OPEN
GC03 SHORT
GC04 SHORT
PV12B 9P L
PV10B 20P B/B PLUG
PV11B 20P B/B PLUG
DS01 OPEN
DS02 OPEN
DS03 OPEN
DS04 OPEN
DV01 RD9.1MB2
DV02 RD9.1MB2
DV03 RD9.1MB2
DV04 RD9.1MB2
DV05 RD9.1MB2
DV06 RD9.1MB2
DV07 RD9.1MB2
DV12 RD9.1MB2
QV01 TA1218N
QV02 2SC2712Y
QV03 2SC3326B
QV04 2SC1815Y
QV05 2SC3326B
QV06 2SC3326B
QV07 2SC3326B
QV08 2SC2712Y
QV09 2SC1815Y
QV10 2SC2712Y
QV11 2SC2712Y
QV12 2SC1815Y
QV13 2SC2712Y
QV15 2SC3326B
QS01 2SC3326B
QS05 2SC3326B
QS06 2SC3326B
QS07 RN2404
XV01 TCC1066
DV21 HSM221C
+9V
GND

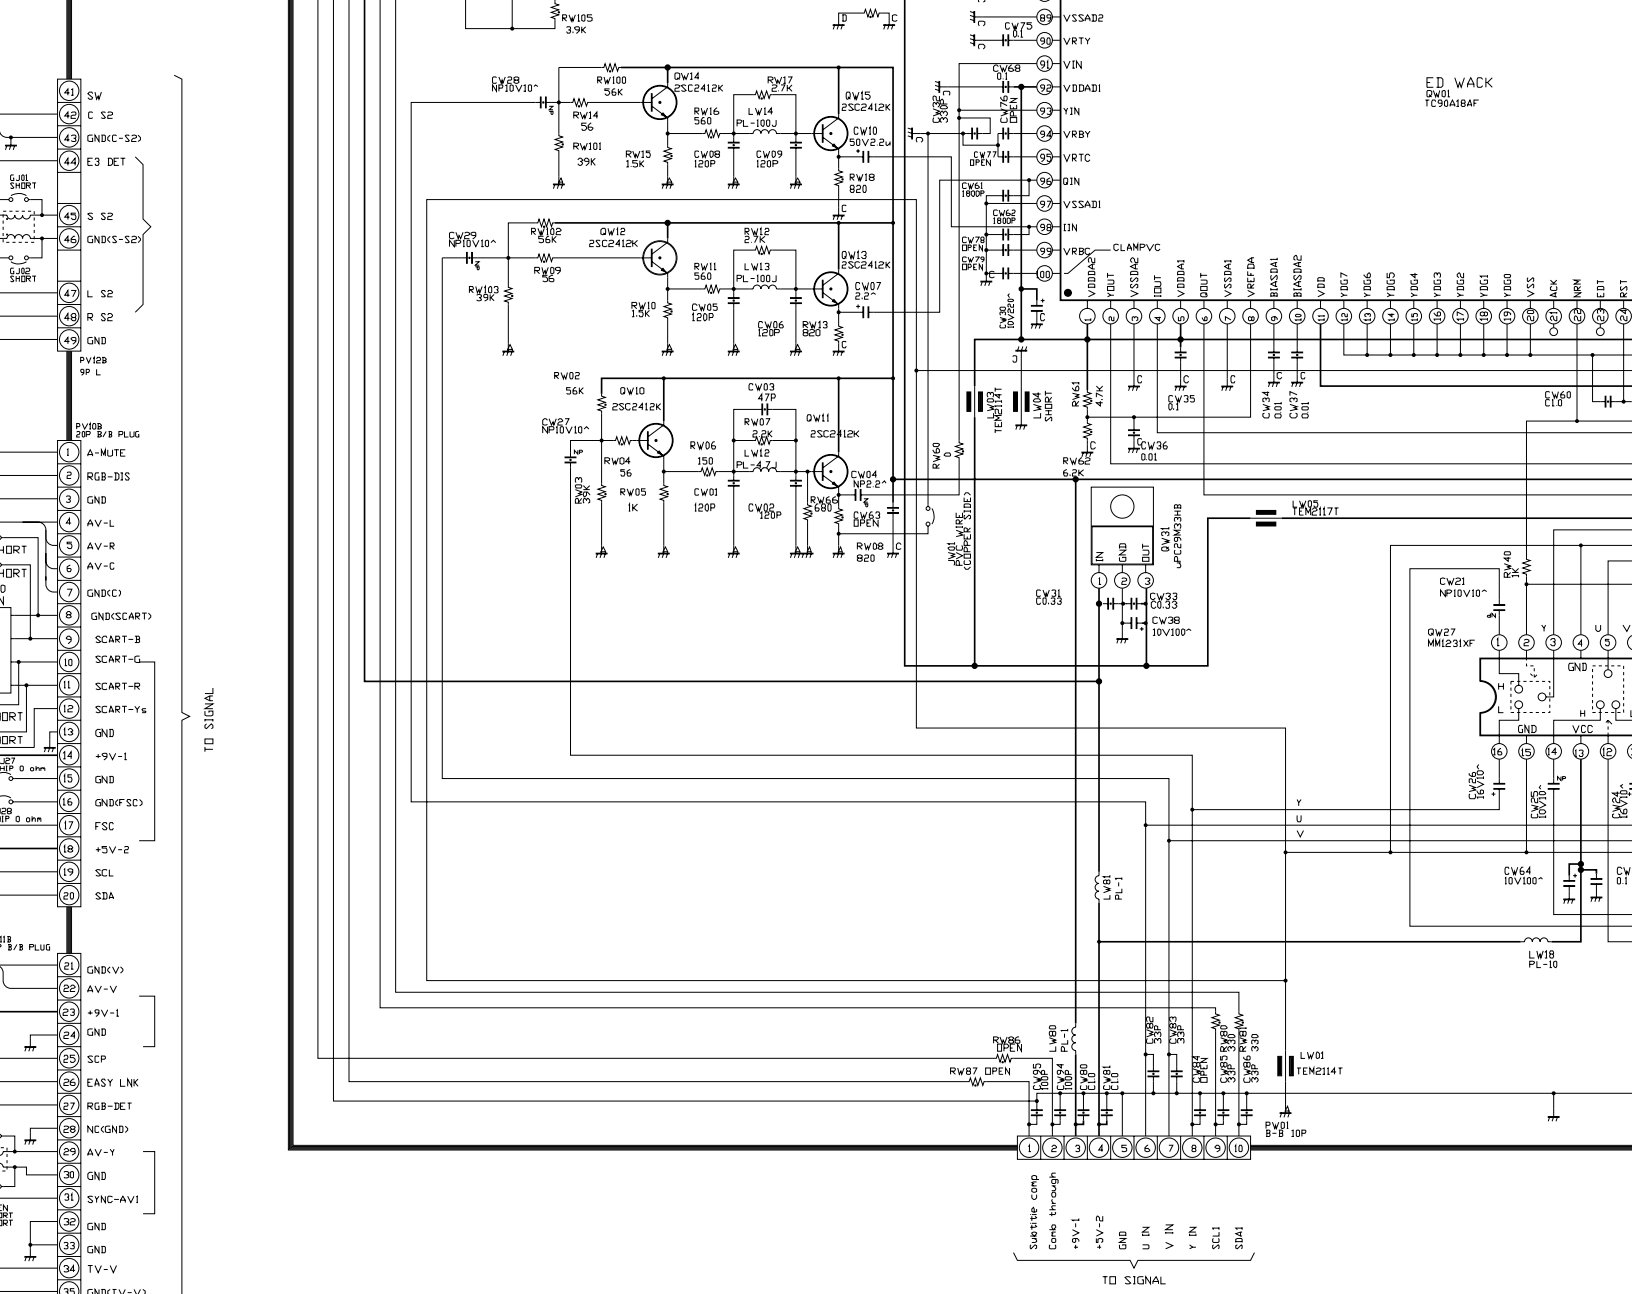
ED WACK
QW01
TC90A18AF
CLAMPVC
TO SIGNAL
Subtitle comp
Comb through
+9V-1
+5V-2
GND
U IN
V IN
Y IN
SCL1
SDA1
TO SIGNAL

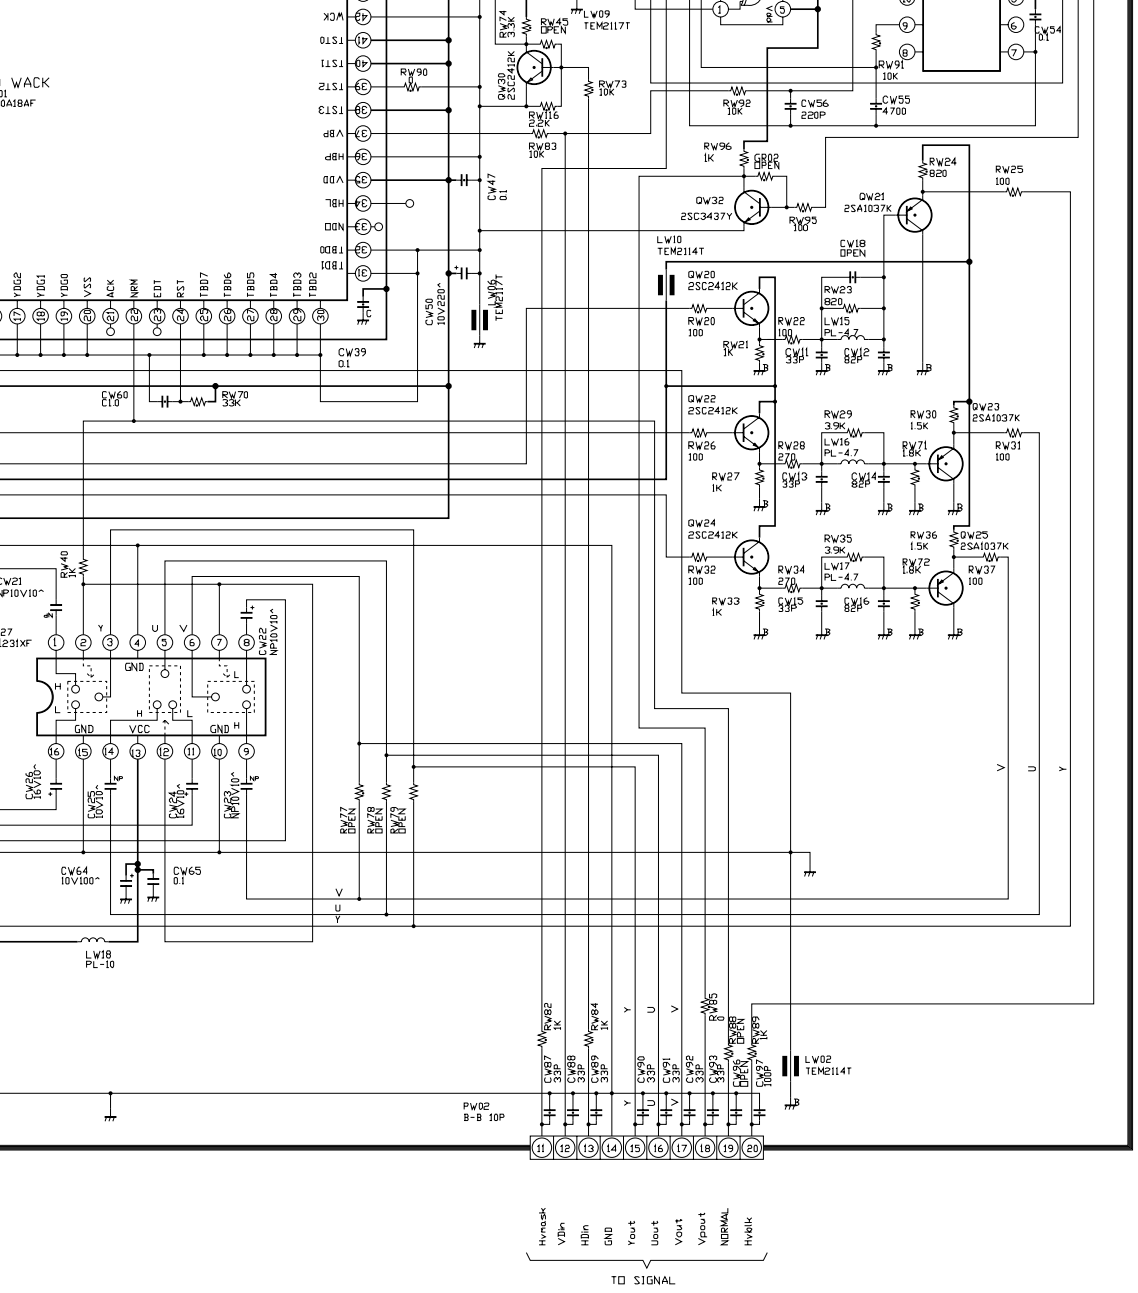

BACK-T/ED-WAC
40PW13G/B 5/7

G H I J K L

13 14 15 16

U901D SVM PB8764D-4

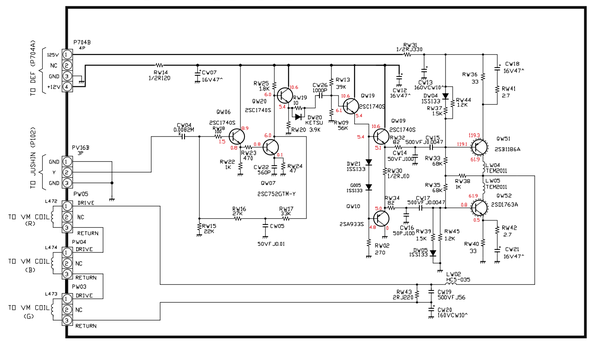

1 2 3 4

A B C D E F

U901D SVM PB8764D-4

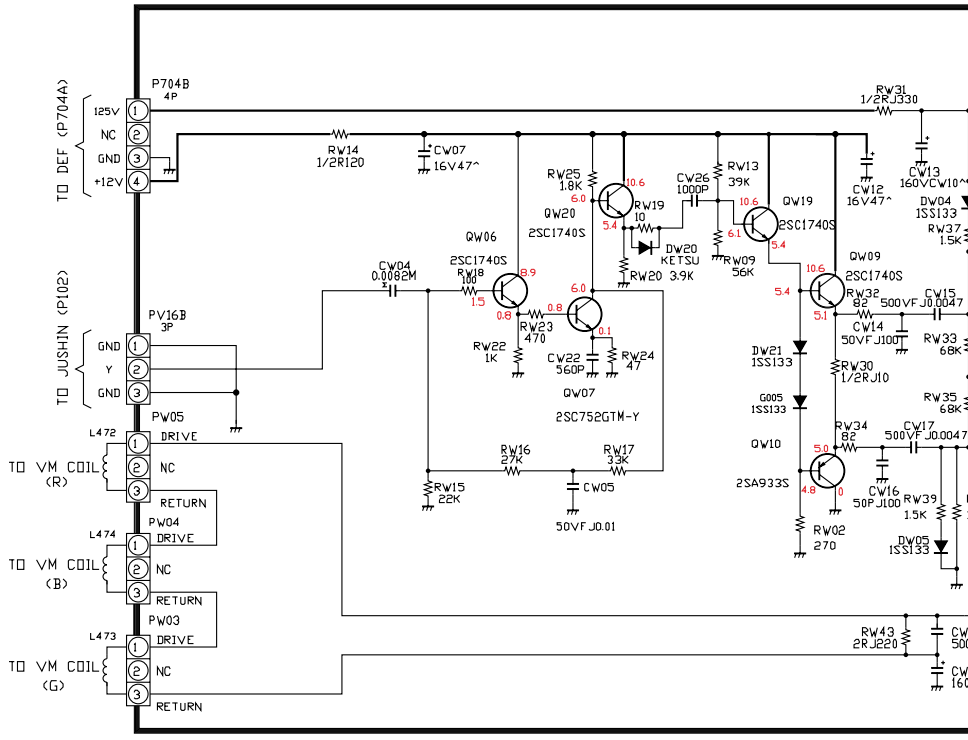

U911B RMT PB9406A-3

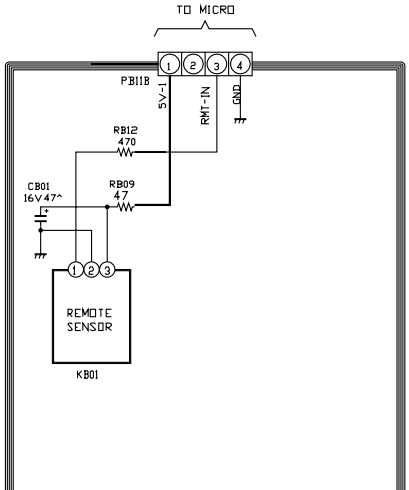

U911C LED PB94

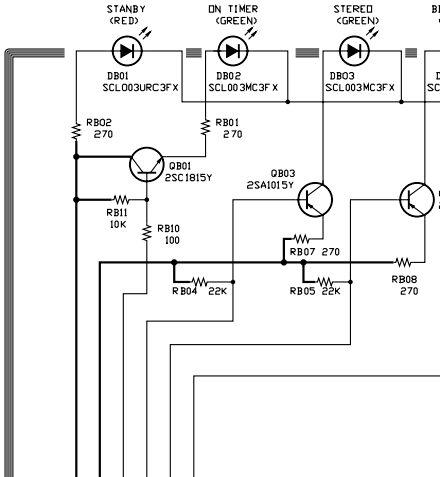

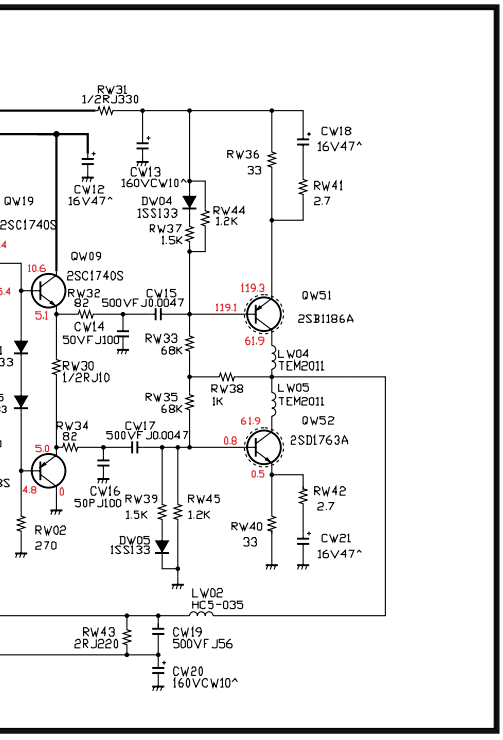

U901A CRT-D/R PB8764D-1

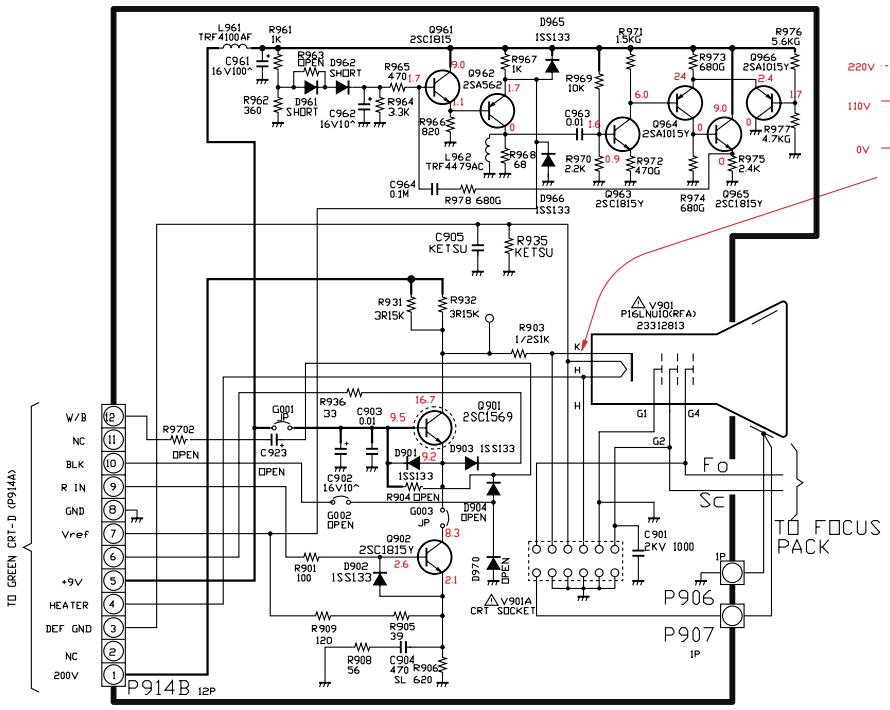

D PB9406A-2

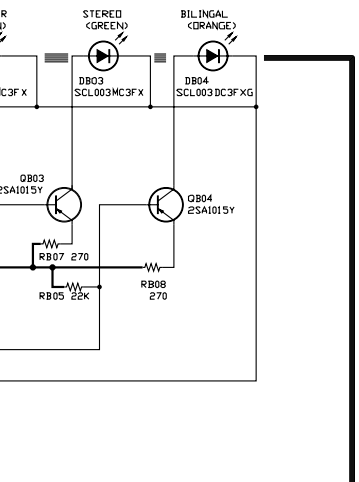

U911A FRONT PB9406A-1

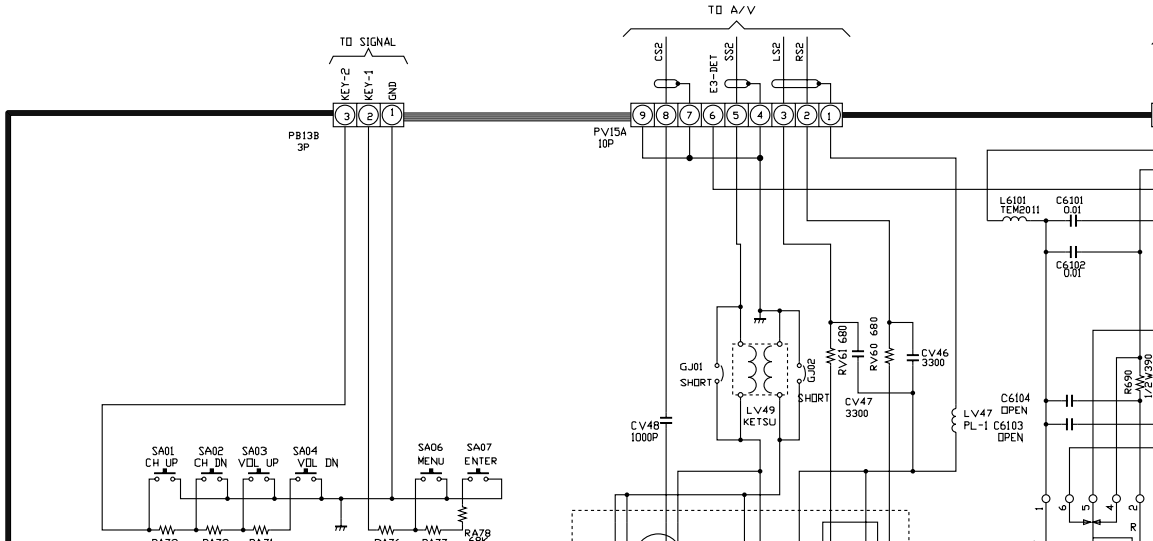

U901B CRT-D/GPB8764D-2

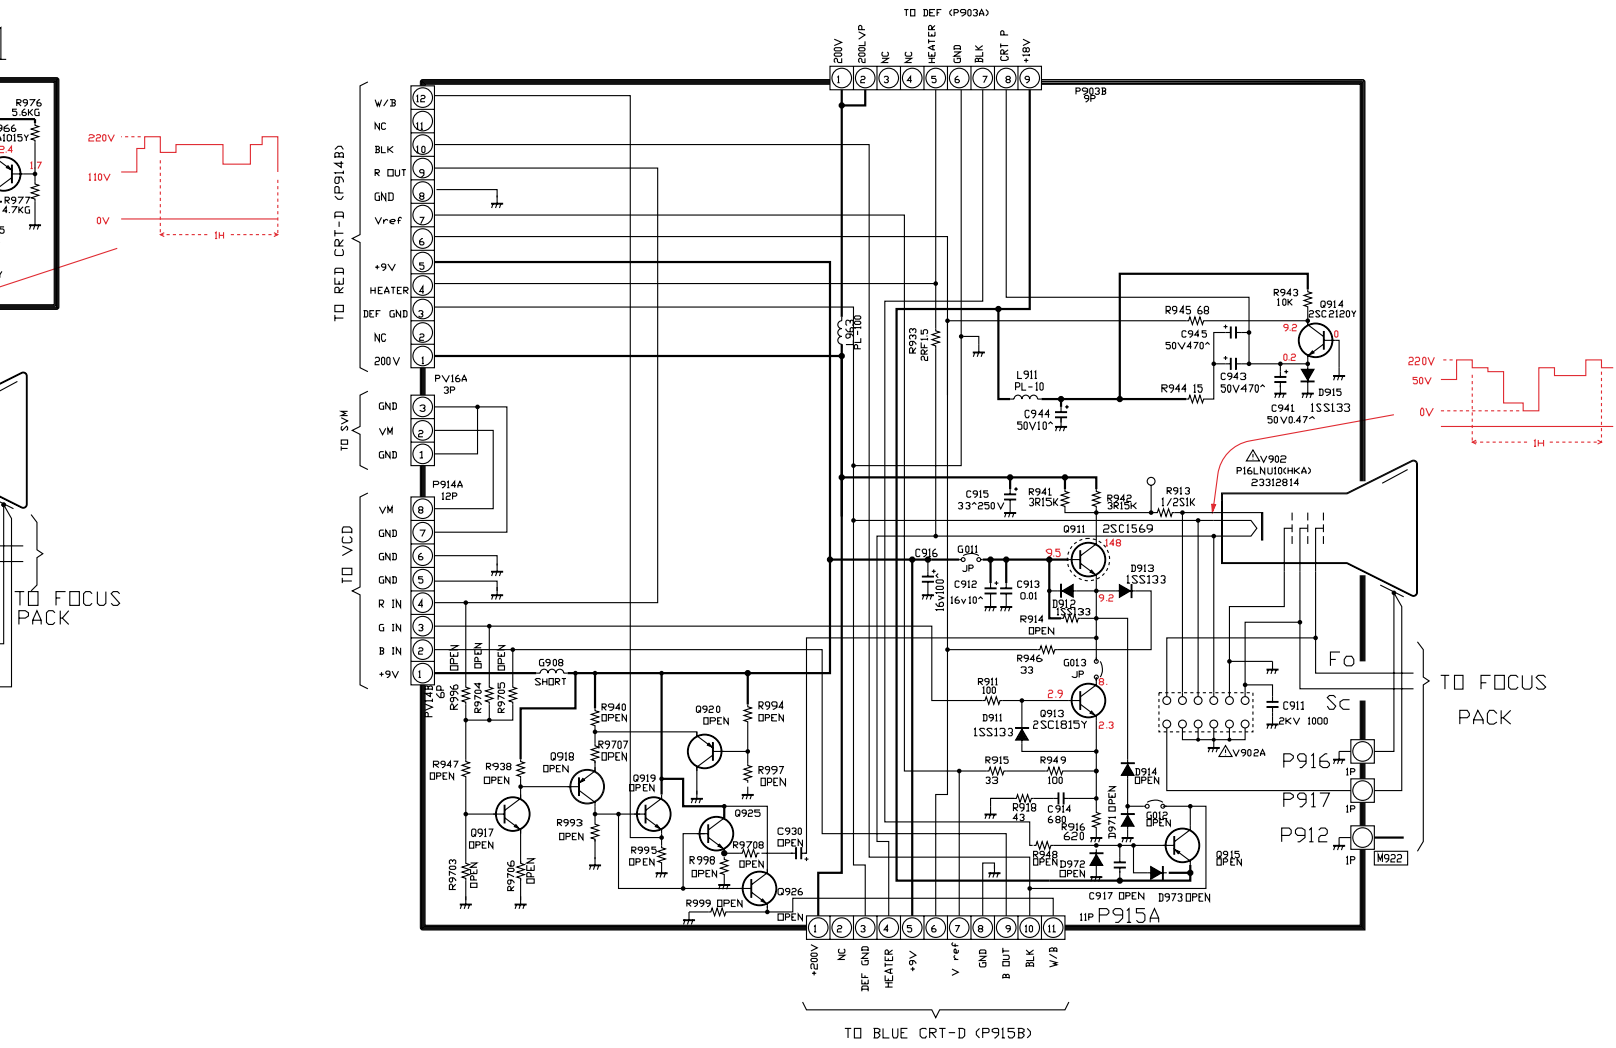

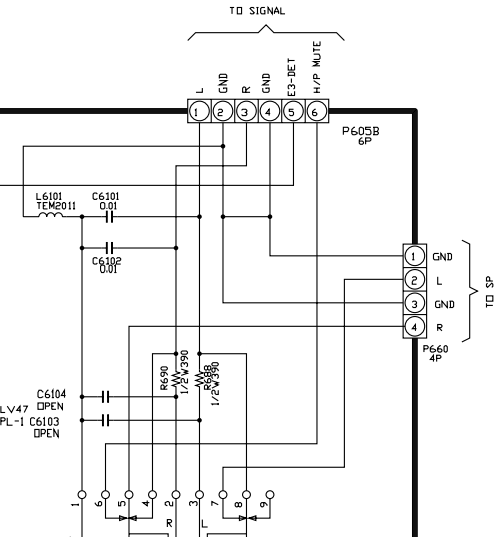

U906 TEXT P9411A

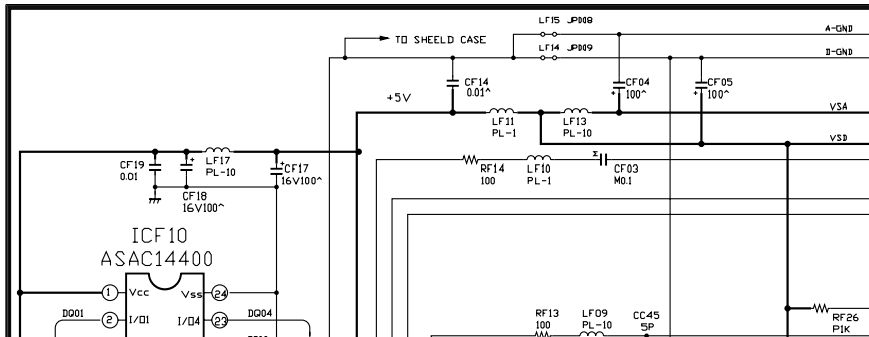

13 14 15 16

A B C D E F

U901C CRT-D/BPB8764D-3

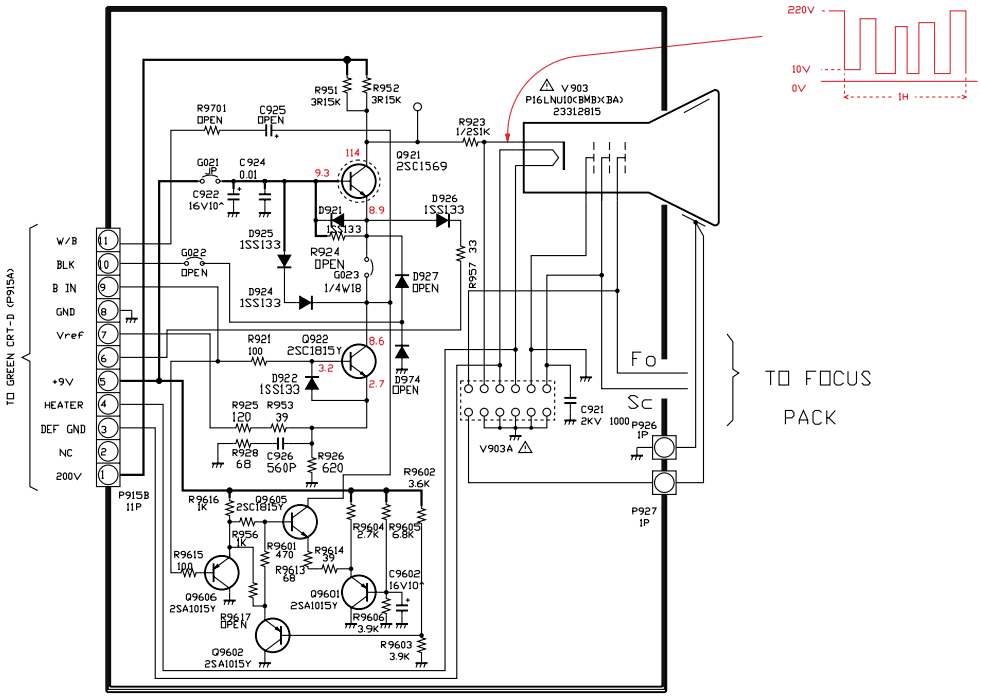

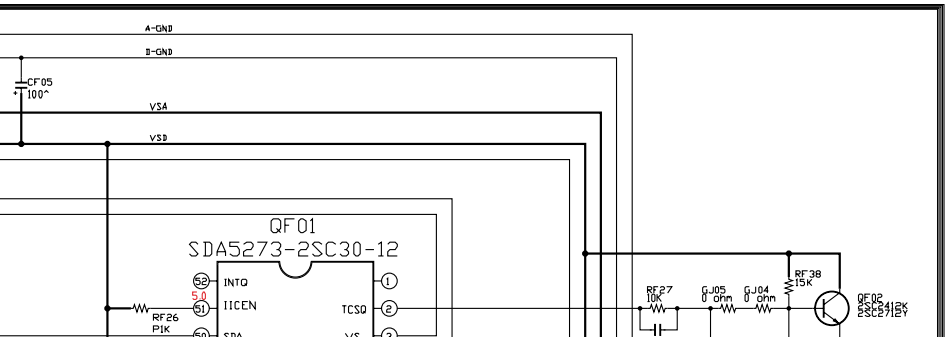

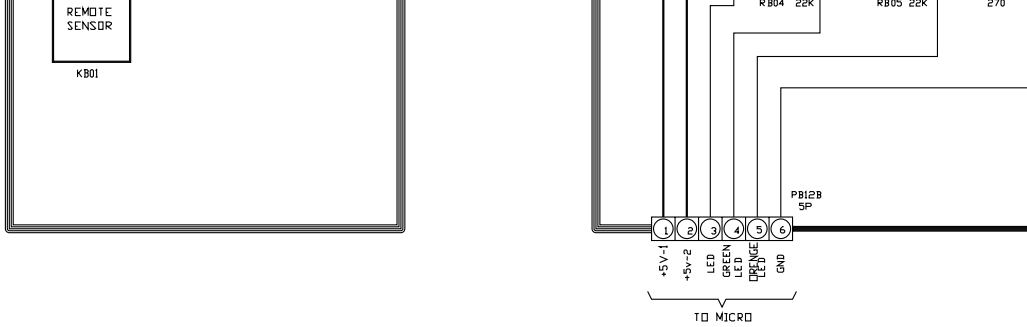
REMOTE
SENSOR
KB01
RB04 22K
RB05 22K
270
PB12B
5P
1
2
3
4
5
6
+5V-1
+5v-2
LED
GREEN
LED
ORANGE
LED
GND
TO MICRO

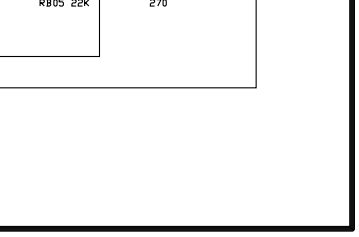

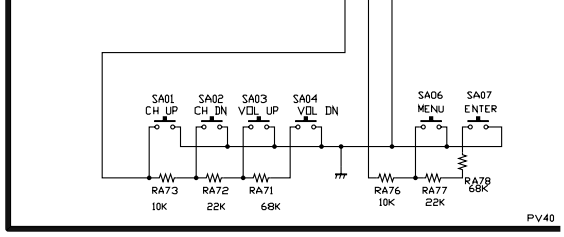

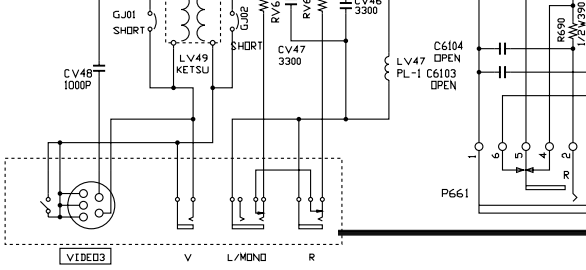

NOTE:

1. RESISTOR Resistance is shown in ohm (K = 1,000. M = 1,000,000) , All resistors sre 1/6W and 5% carbon resistor,unless otherwise noted as the following marks.
   1/2R : Metal or Metal oxide of 1/2 watt 1/2S : Solid of 1/2 watt
   1RF : Fuse resistor of 1 watt 10W : Cement of 10 watts
   K = ± 10% G = ± 2% F = ± 1%

2.CAPACITOR Unless otherwise noted in schematic,all capacitor valuse less than 1 are expressed values more than 1 in pF.
All capacitors are ceramic 50V, unless otherwise noted as the following marks.
Electrolitic capacitor Mylar capacitor

3. The parts indicated with ⚠ have special characteristics should be replaced with identical parts only.

4. This schematic diagram is the latest the time of copying, so it must be changet in acordance with all inform modification notices.

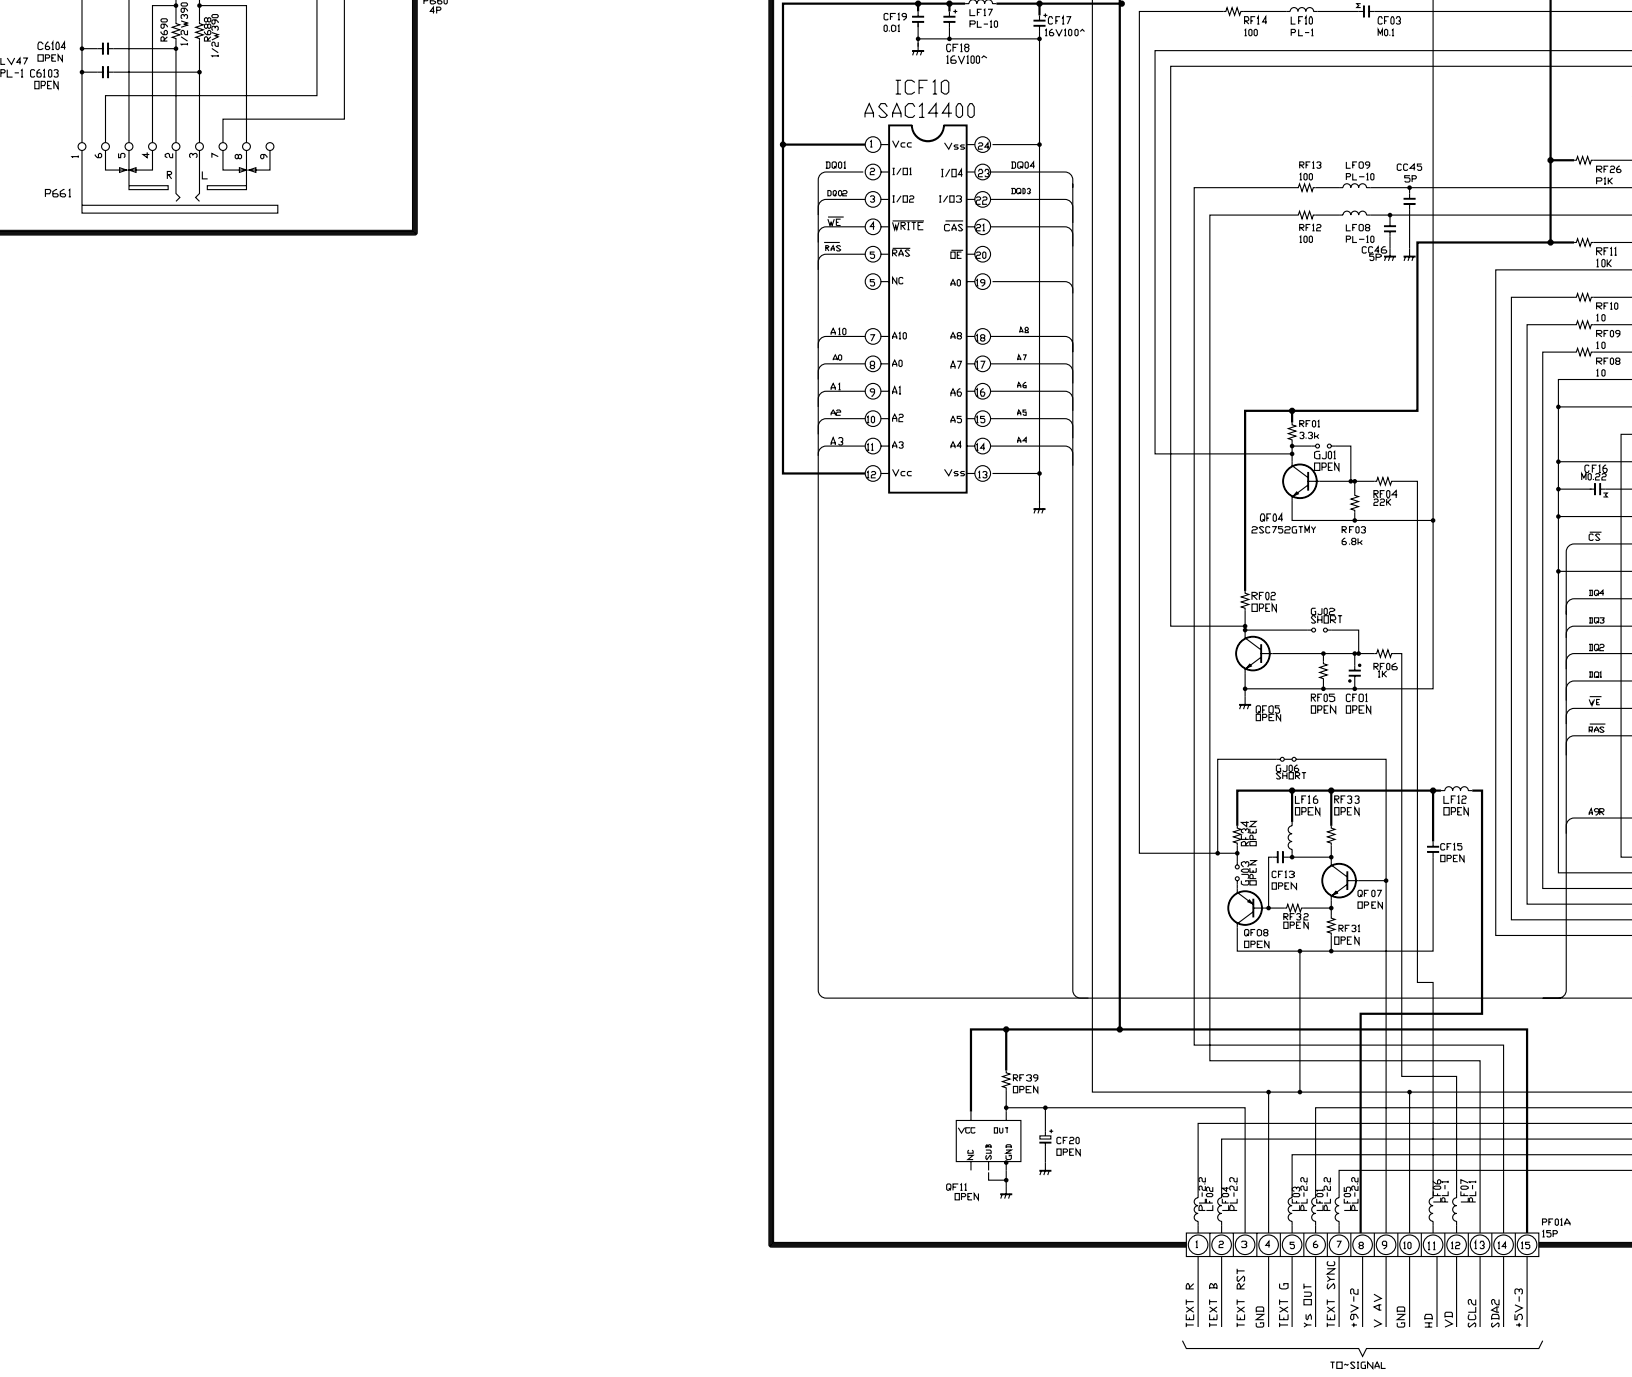

esistors sre 1/6W and 5% toierance
rks.
2S : Solid of 1/2 Watt
W : Cement of 10 Watts

ss than 1 are expressed in ^F,and the
he following marks.
citor
d with identical parts only.
et in acordance with all informed

9	10	11	12	13

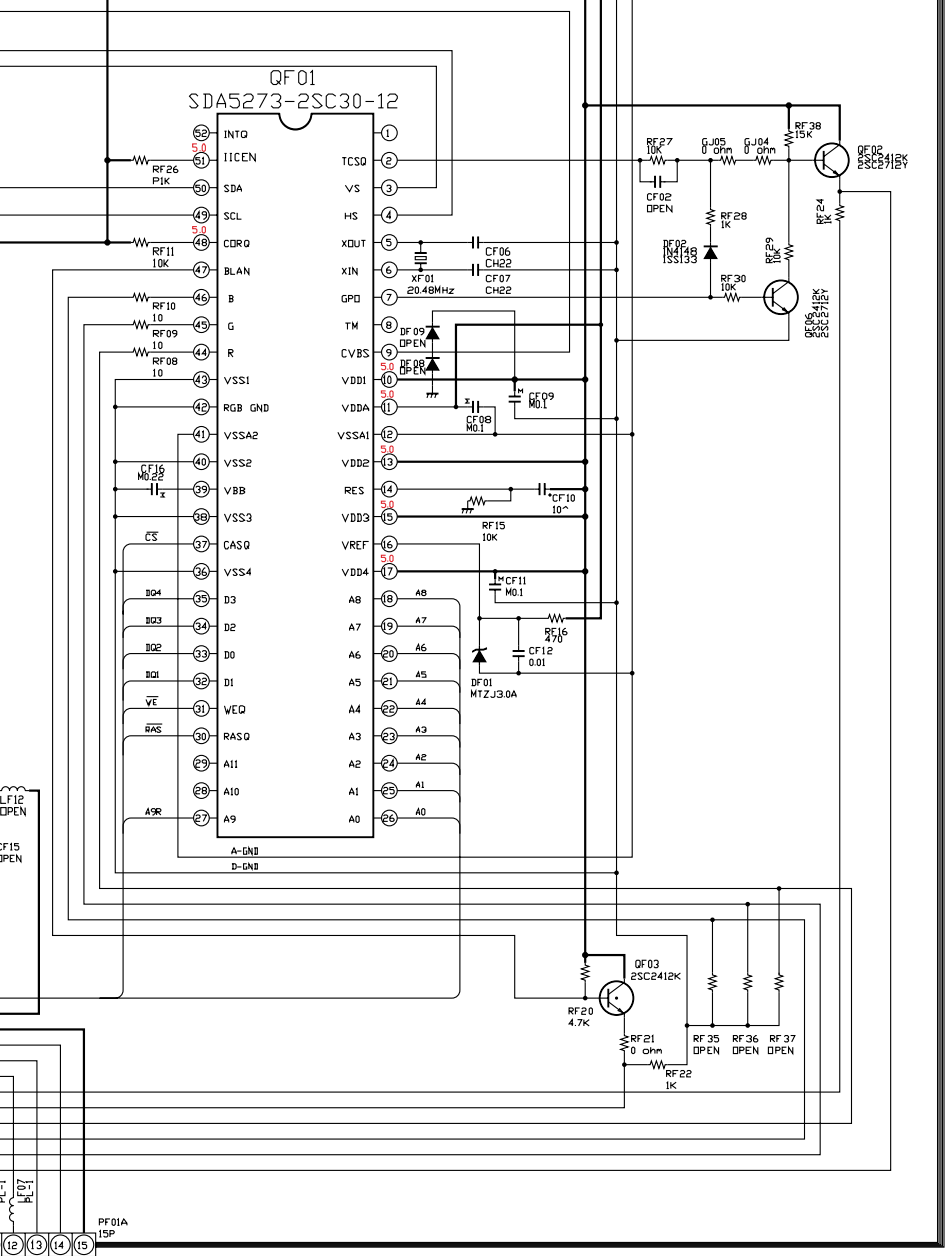

CRT-D R G B
SVM TEXT
FRONT-IN RMT-IN
40PW13G/B6/7

G H I J K L

13 14 15 16

U909 PC BOARD ASSY CONVER PB9836A

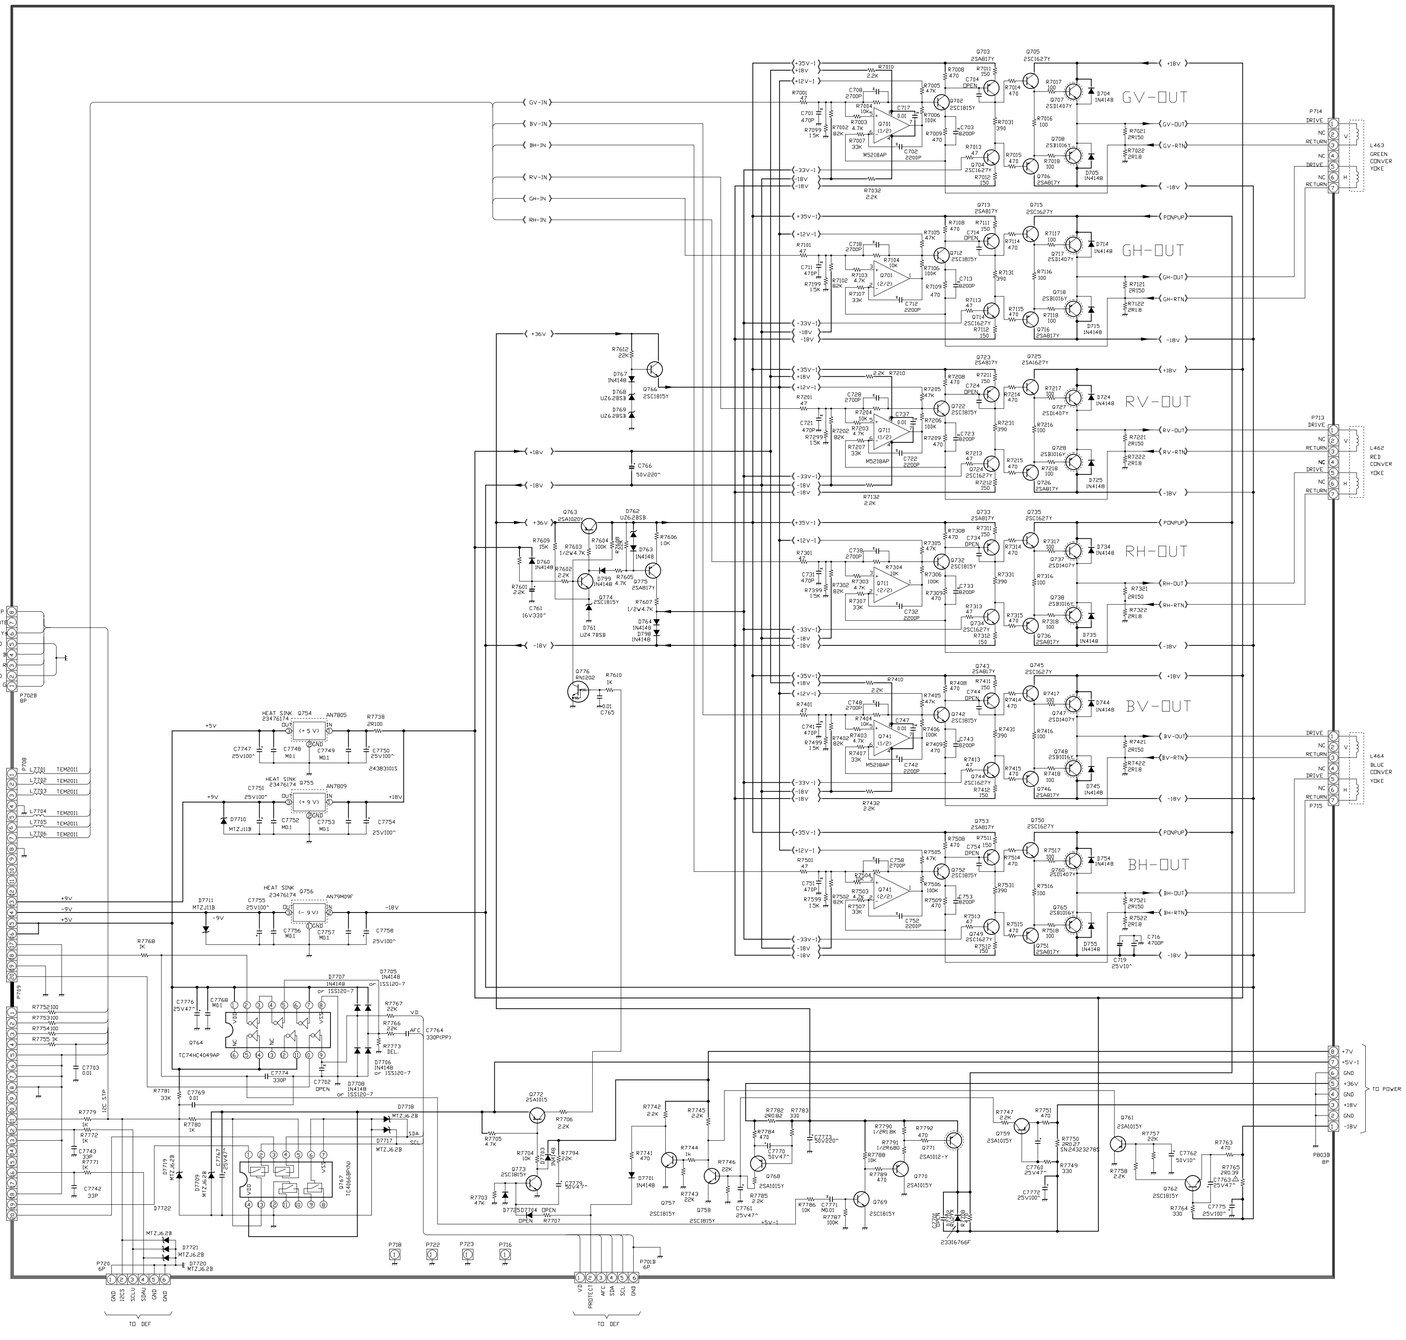

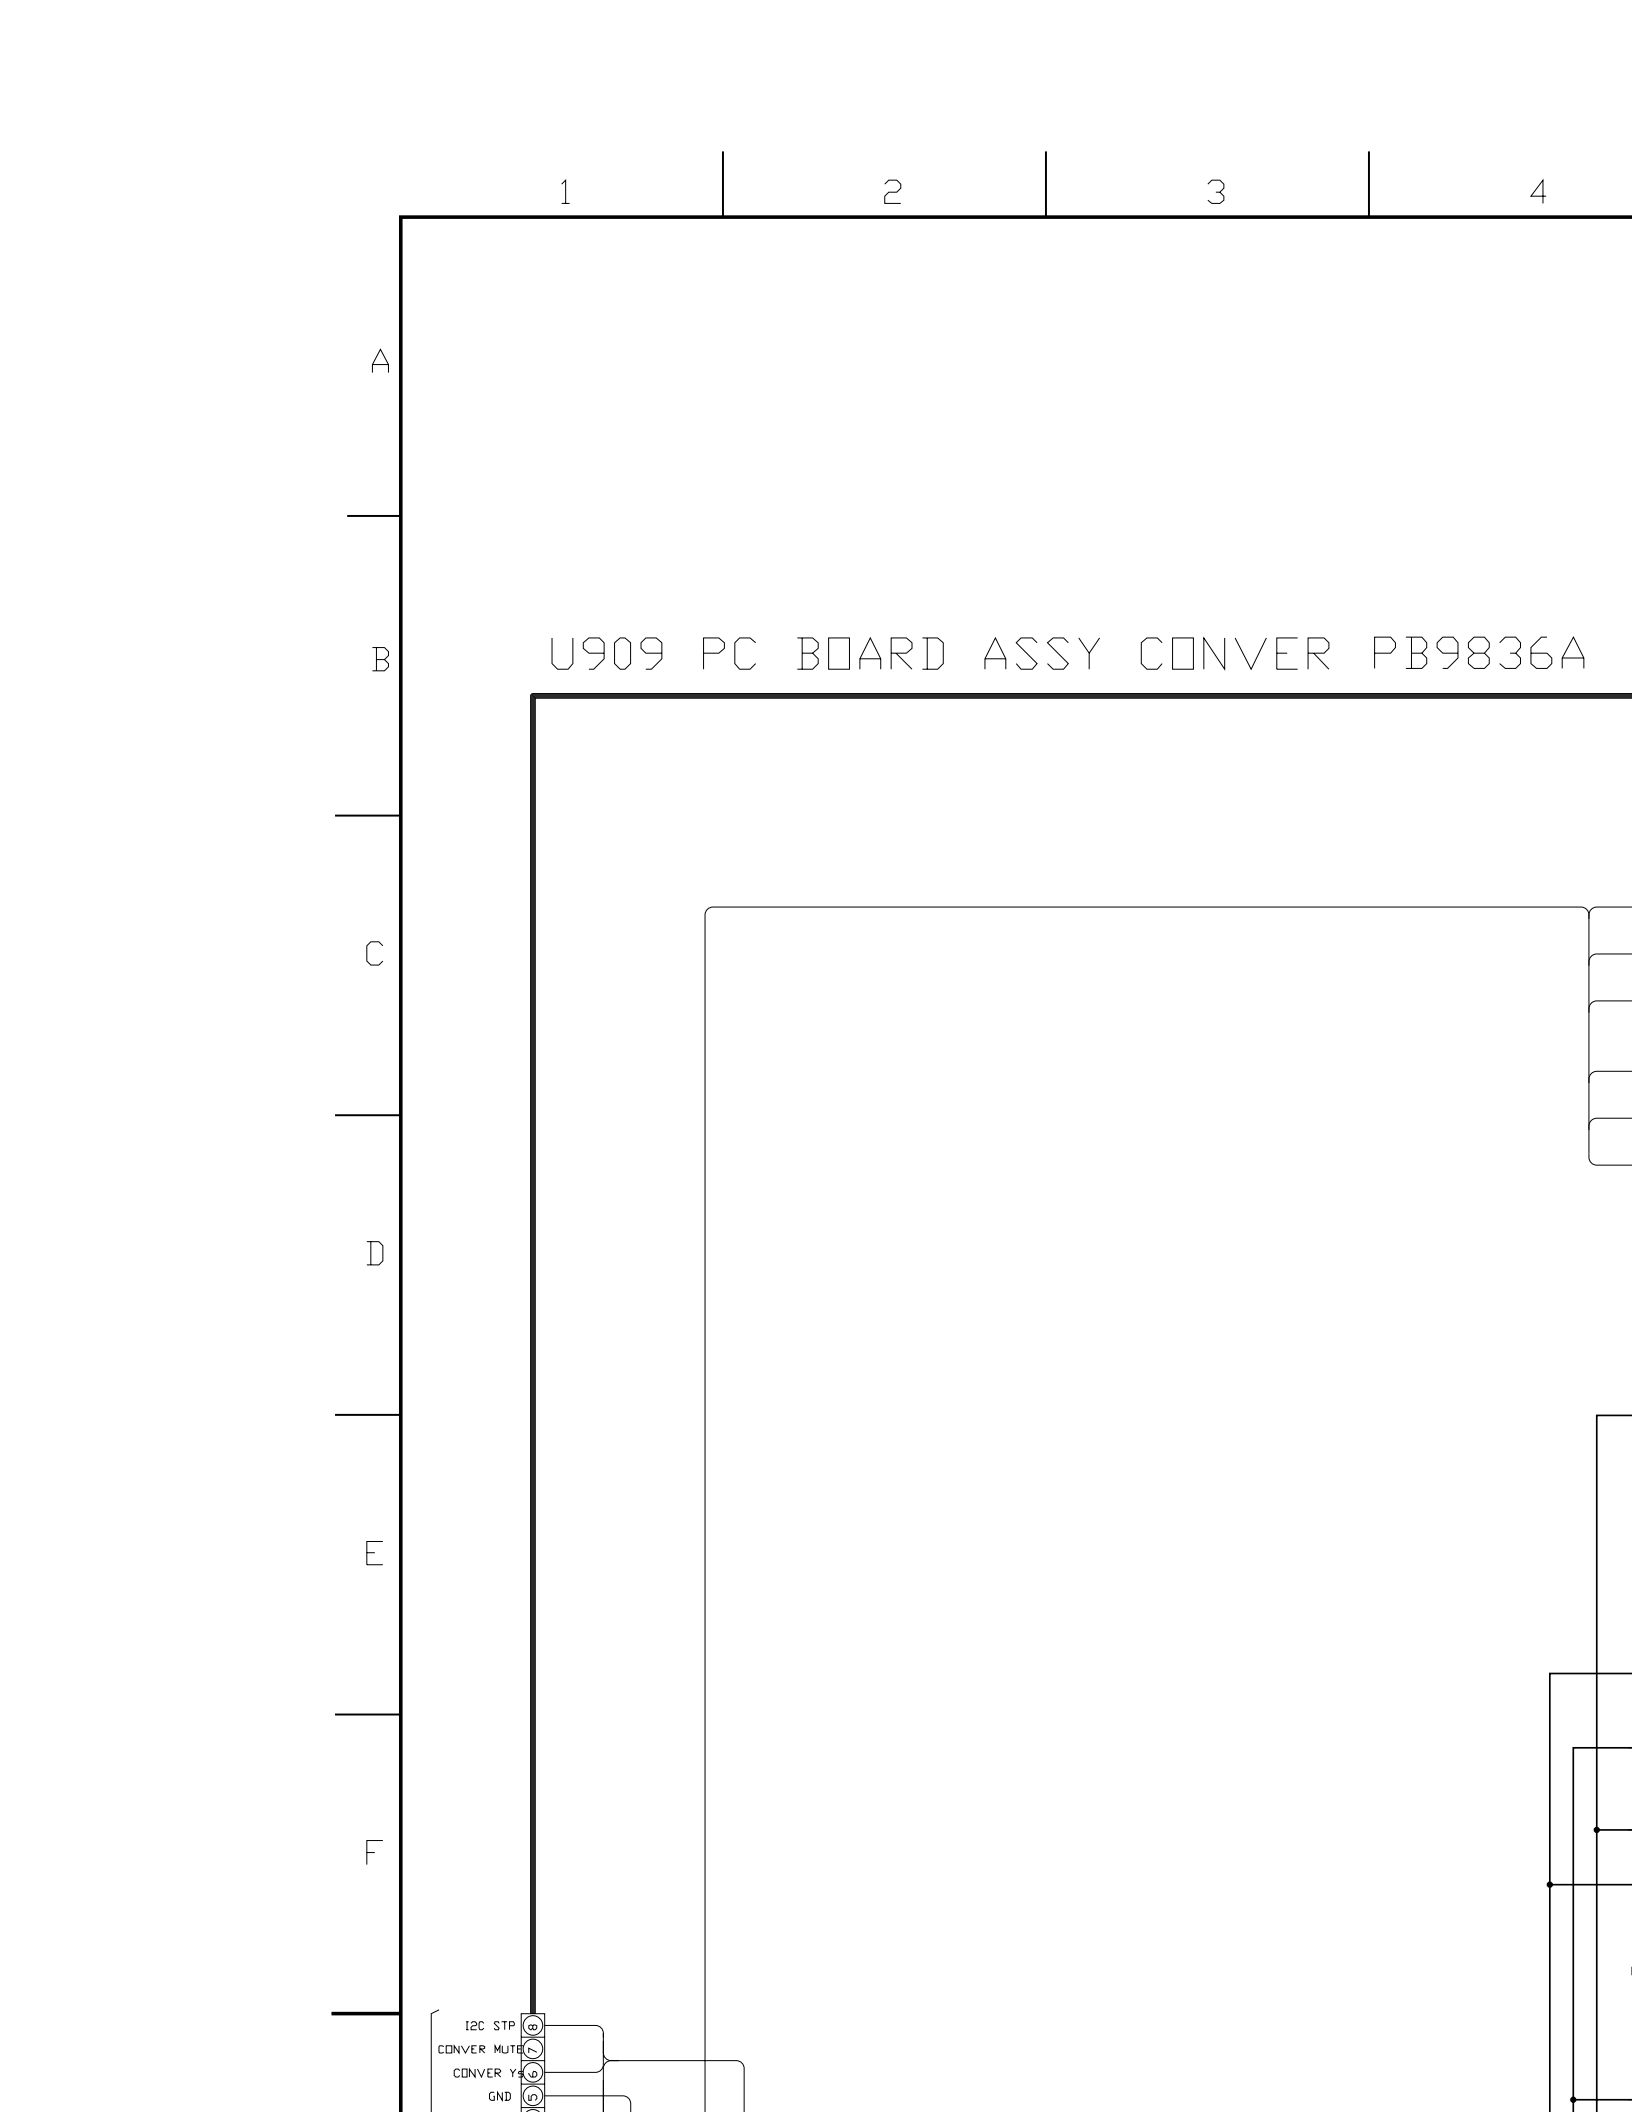
1
2
3
4
A
B
C
D
E
F
U909 PC BOARD ASSY CONVER PB9836A
I2C STP
CONVER MUTE
CONVER YS
GND

9836A

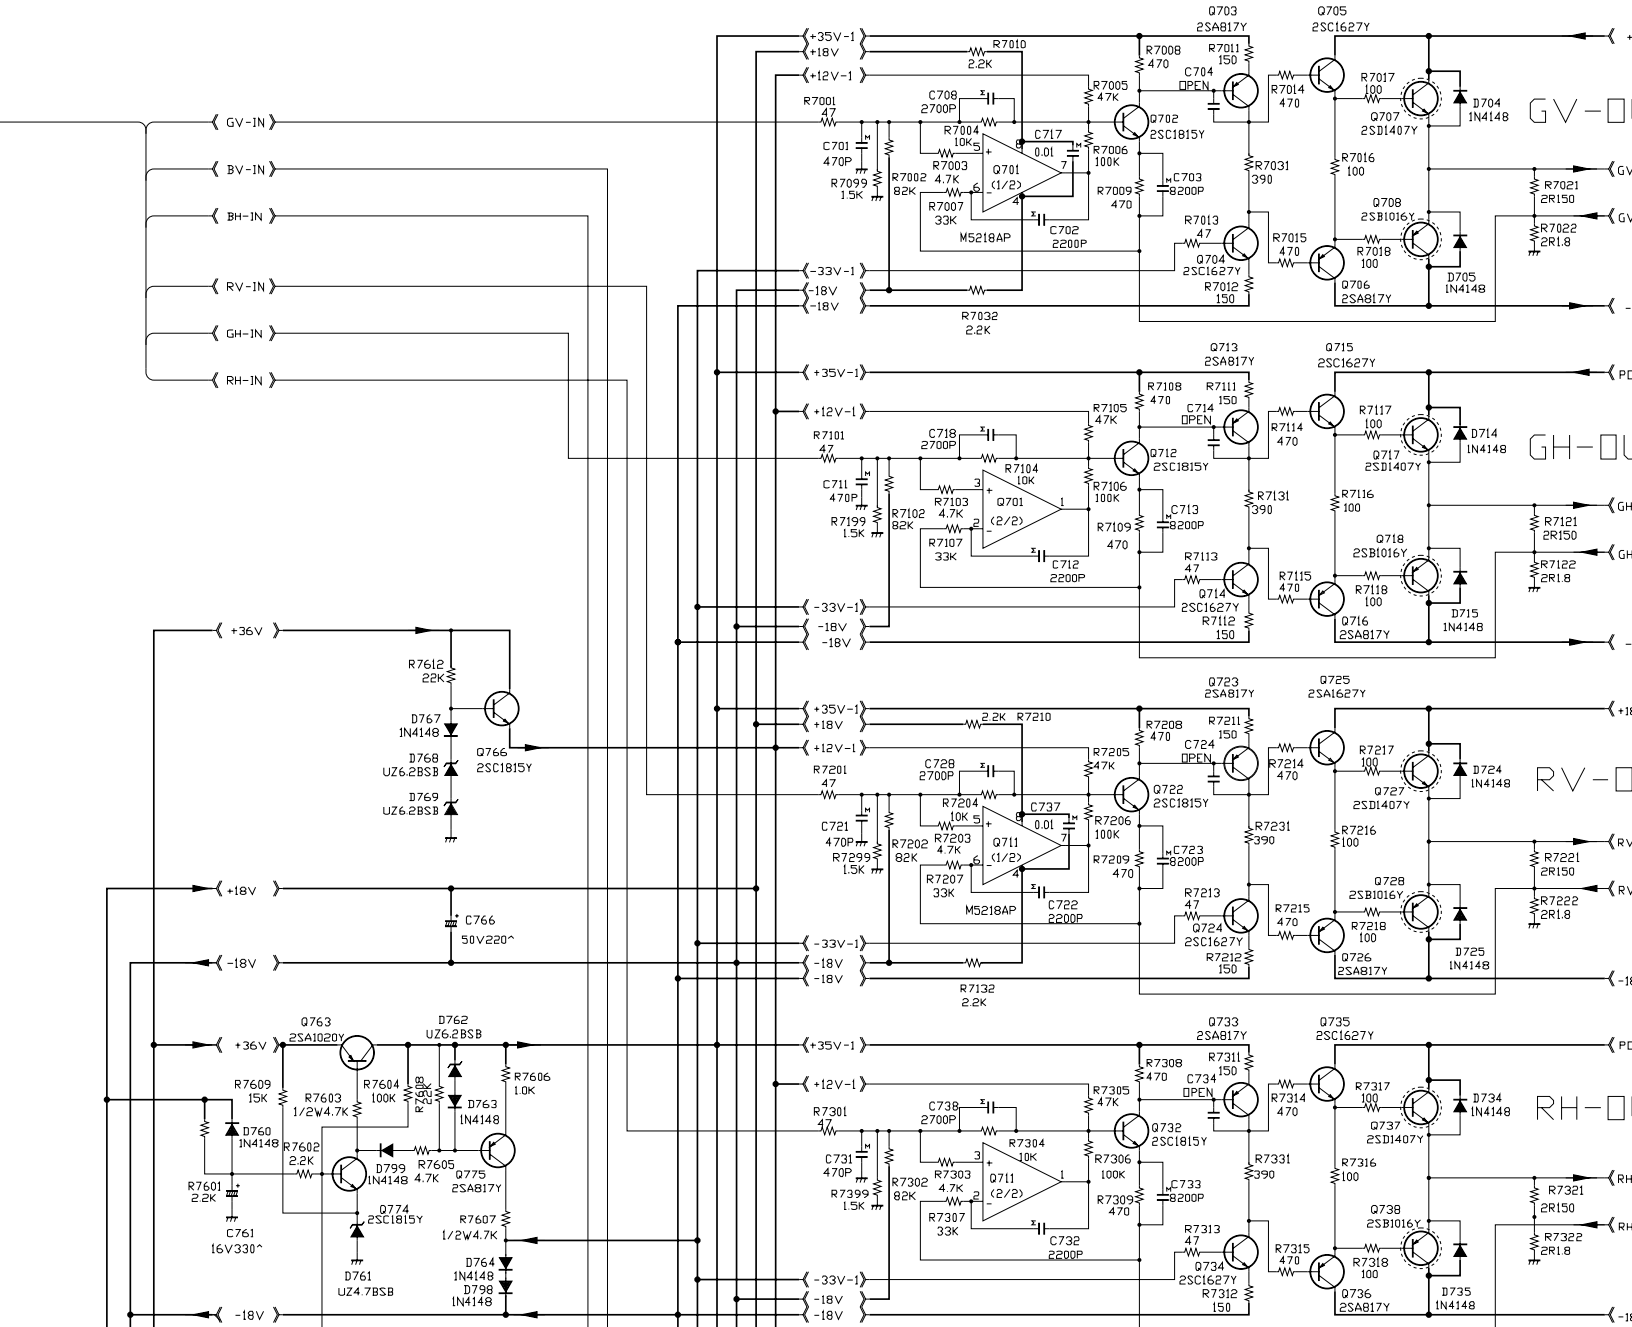
GV-IN
BV-IN
BH-IN
RV-IN
GH-IN
RH-IN
+35V-1
+18V
+12V-1
-33V-1
-18V
+36V
Q703 2SA817Y
Q705 2SC1627Y
Q702 2SC1815Y
Q704 2SC1627Y
Q706 2SA817Y
Q707 2SD1407Y
Q708 2SB1016Y
D704 1N4148
D705 1N4148
M5218AP
Q701 (1/2)
Q713 2SA817Y
Q715 2SC1627Y
Q712 2SC1815Y
Q714 2SC1627Y
Q716 2SA817Y
Q717 2SD1407Y
Q718 2SB1016Y
D714 1N4148
D715 1N4148
Q701 (2/2)
Q723 2SA817Y
Q725 2SA1627Y
Q722 2SC1815Y
Q724 2SC1627Y
Q726 2SA817Y
Q727 2SD1407Y
Q728 2SB1016Y
D724 1N4148
D725 1N4148
Q711 (1/2)
Q733 2SA817Y
Q735 2SC1627Y
Q732 2SC1815Y
Q734 2SC1627Y
Q736 2SA817Y
Q737 2SD1407Y
Q738 2SB1016Y
D734 1N4148
D735 1N4148
Q711 (2/2)
Q763 2SA1020Y
Q766 2SC1815Y
Q774 2SC1815Y
Q775 2SA817Y
Q799 1N4148
D762 UZ6.2BSB
D763 1N4148
D760 1N4148
D761 UZ4.7BSB
D764 1N4148
D767 1N4148
D768 UZ6.2BSB
D769 UZ6.2BSB
D798 1N4148
C766 50V220^
C761 16V330^
R7612 22K
R7609 15K
R7603 1/2W4.7K
R7604 100K
R7606 1.0K
R7602 2.2K
R7605 4.7K
R7601 2.2K
R7607 1/2W4.7K
R7010 2.2K
R7032 2.2K
R7210 2.2K
R7132 2.2K
C708 2700P
C701 470P
C704 OPEN
C717 0.01
C702 2200P
C703 8200P
C718 2700P
C711 470P
C714 OPEN
C712 2200P
C713 8200P
C728 2700P
C721 470P
C724 OPEN
C737 0.01
C722 2200P
C723 8200P
C738 2700P
C731 470P
C734 OPEN
C732 2200P
C733 8200P
R7001 47
R7099 1.5K
R7002 82K
R7003 4.7K
R7004 10K
R7005 47K
R7006 100K
R7007 33K
R7008 470
R7009 470
R7011 150
R7012 150
R7013 47
R7014 470
R7015 470
R7031 390
R7016 100
R7017 100
R7018 100
R7021 2R150
R7022 2R1.8
R7101 47
R7199 1.5K
R7102 82K
R7103 4.7K
R7104 10K
R7105 47K
R7106 100K
R7107 33K
R7108 470
R7109 470
R7111 150
R7112 150
R7113 47
R7114 470
R7115 470
R7131 390
R7116 100
R7117 100
R7118 100
R7121 2R150
R7122 2R1.8
R7201 47
R7299 1.5K
R7202 82K
R7203 4.7K
R7204 10K
R7205 47K
R7206 100K
R7207 33K
R7208 470
R7209 470
R7211 150
R7212 150
R7213 47
R7214 470
R7215 470
R7231 390
R7216 100
R7217 100
R7218 100
R7221 2R150
R7222 2R1.8
R7301 47
R7399 1.5K
R7302 82K
R7303 4.7K
R7304 10K
R7305 47K
R7306 100K
R7307 33K
R7308 470
R7309 470
R7311 150
R7312 150
R7313 47
R7314 470
R7315 470
R7331 390
R7316 100
R7317 100
R7318 100
R7321 2R150
R7322 2R1.8
GV-O
GH-O
RV-O
RH-O

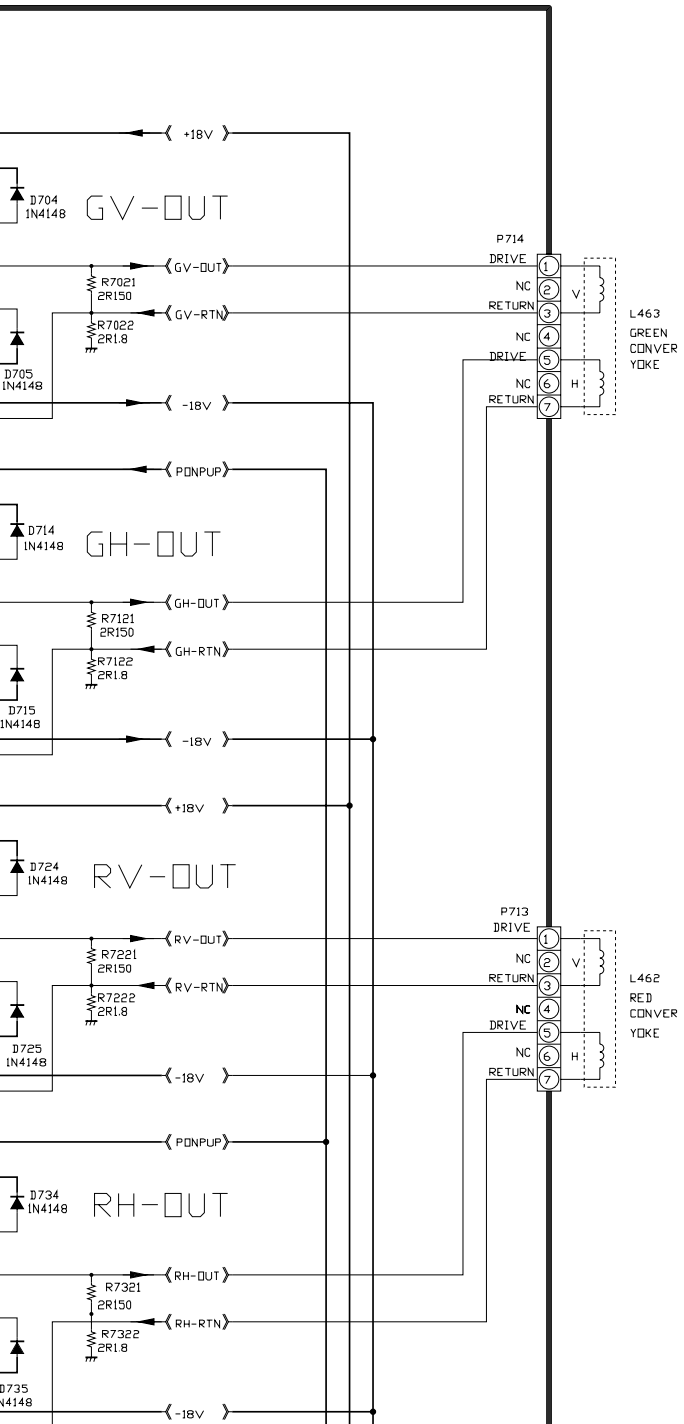
+18V
D704
1N4148
GV-OUT
GV-OUT
R7021
2R150
GV-RTN
R7022
2R1.8
D705
1N4148
-18V
P714
DRIVE
NC
RETURN
NC
DRIVE
NC
RETURN
V
H
L463
GREEN
CONVER
YOKE
PONPUP
D714
1N4148
GH-OUT
GH-OUT
R7121
2R150
GH-RTN
R7122
2R1.8
D715
1N4148
-18V
+18V
D724
1N4148
RV-OUT
RV-OUT
R7221
2R150
RV-RTN
R7222
2R1.8
D725
1N4148
-18V
P713
DRIVE
NC
RETURN
NC
DRIVE
NC
RETURN
V
H
L462
RED
CONVER
YOKE
PONPUP
D734
1N4148
RH-OUT
RH-OUT
R7321
2R150
RH-RTN
R7322
2R1.8
D735
N4148
-18V


13
14
15
16
A
B
C
D
E
F

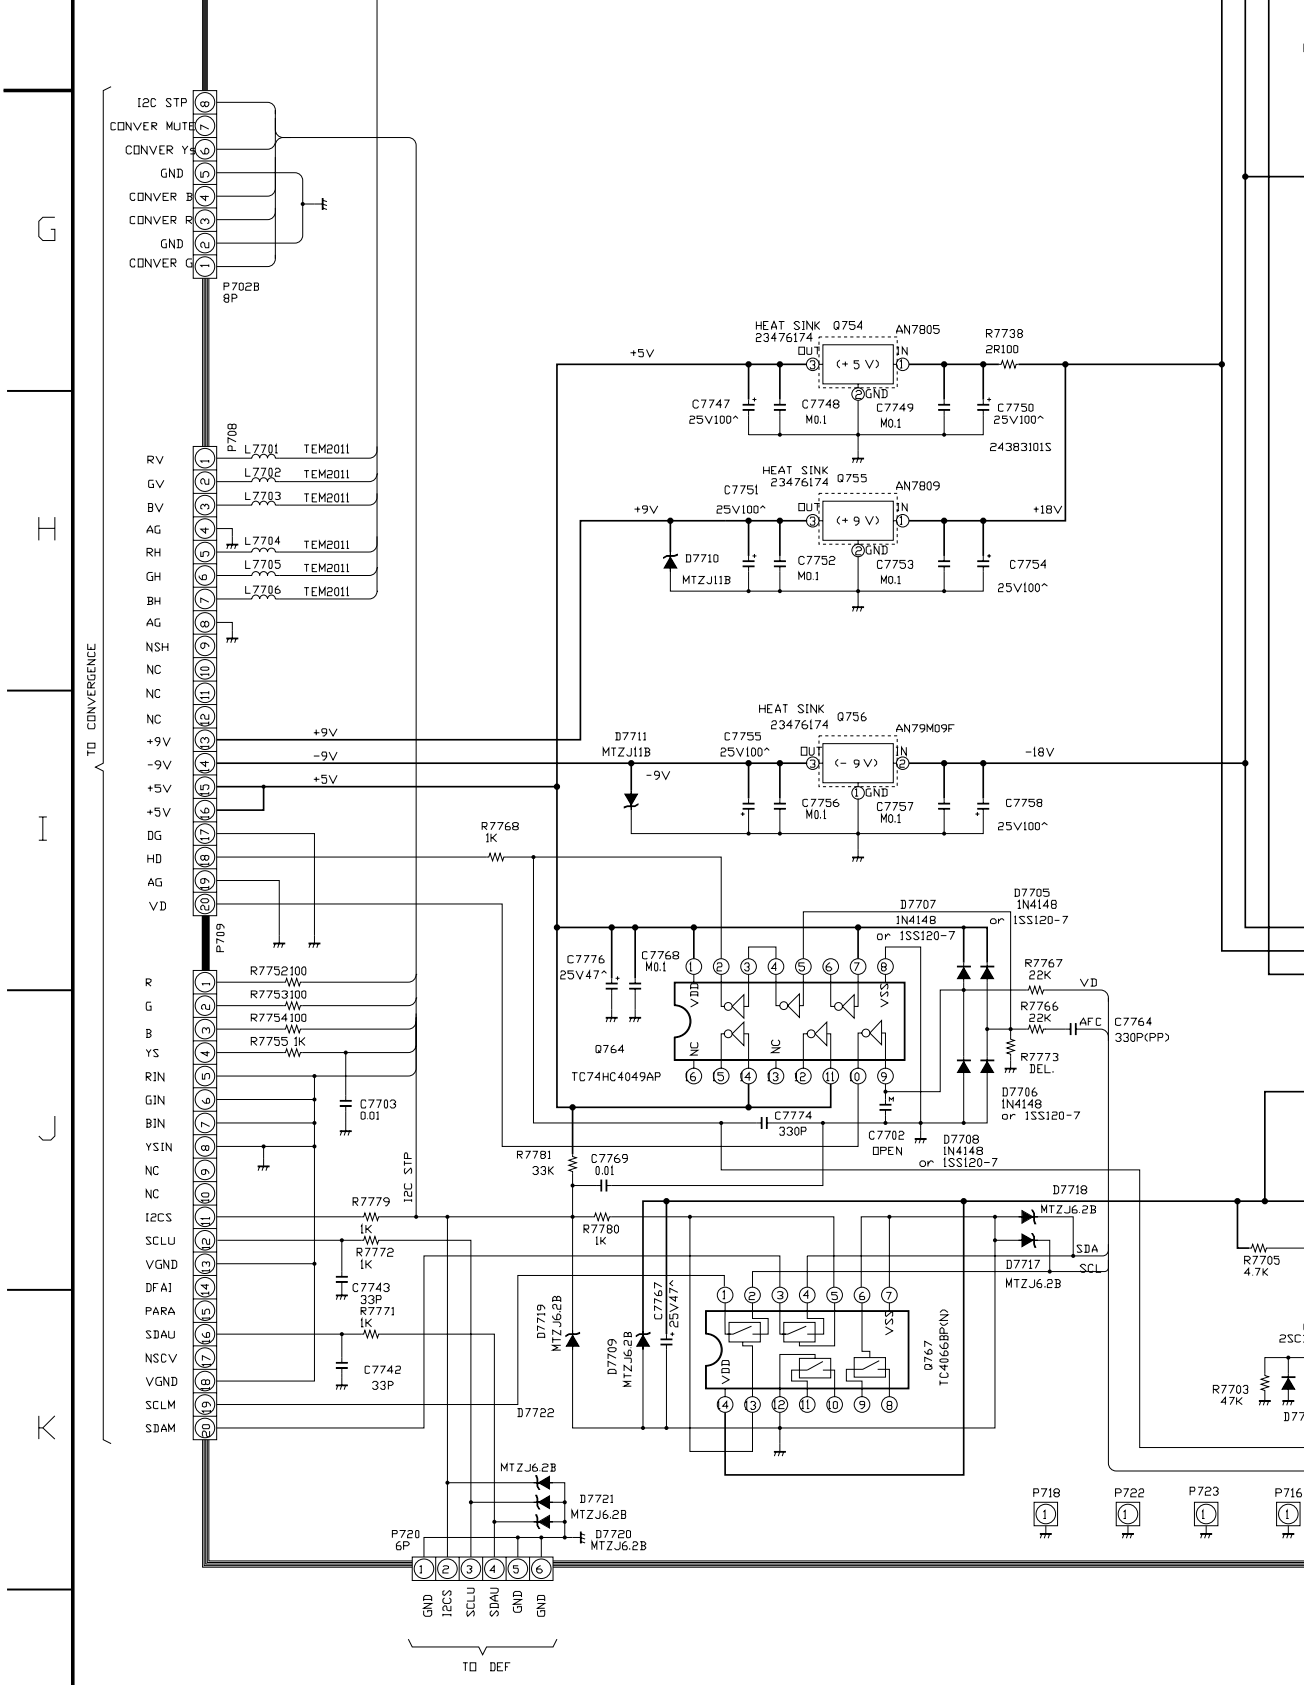
I2C STP
CONVER MUTE
CONVER YS
GND
CONVER B
CONVER R
GND
CONVER G
P702B
8P
P708
RV
GV
BV
AG
RH
GH
BH
AG
NSH
NC
NC
NC
+9V
-9V
+5V
+5V
DG
HD
AG
VD
L7701 TEM2011
L7702 TEM2011
L7703 TEM2011
L7704 TEM2011
L7705 TEM2011
L7706 TEM2011
TO CONVERGENCE
P709
HEAT SINK 23476174 Q754
AN7805
(+ 5 V)
R7738 2R100
C7747 25V100^
C7748 M0.1
C7749 M0.1
C7750 25V100^
24383101S
HEAT SINK 23476174 Q755
AN7809
(+ 9 V)
+18V
C7751 25V100^
D7710 MTZJ11B
C7752 M0.1
C7753 M0.1
C7754 25V100^
HEAT SINK 23476174 Q756
AN79M09F
(- 9 V)
-18V
D7711 MTZJ11B
C7755 25V100^
C7756 M0.1
C7757 M0.1
C7758 25V100^
R7768 1K
D7707 1N4148 or 1SS120-7
D7705 1N4148 or 1SS120-7
C7776 25V47^
C7768 M0.1
Q764
TC74HC4049AP
R7767 22K
R7766 22K
AFC
C7764 330P(PP)
R7773 DEL.
D7706 1N4148 or 1SS120-7
C7774 330P
C7702 OPEN
D7708 1N4148 or 1SS120-7
R7781 33K
C7769 0.01
R7752 100
R7753 100
R7754 100
R7755 1K
C7703 0.01
R
G
B
YS
RIN
GIN
BIN
YSIN
NC
NC
I2CS
SCLU
VGND
DFAI
PARA
SDAU
NSCV
VGND
SCLM
SDAM
R7779 1K
R7772 1K
C7743 33P
R7771 1K
C7742 33P
R7780 1K
I2C STP
D7718 MTZJ6.2B
D7717 MTZJ6.2B
SDA
SCL
R7705 4.7K
D7719 MTZJ6.2B
D7709 MTZJ6.2B
C7767 25V47^
Q767 TC4066BP(N)
R7703 47K
D7722
MTZJ6.2B
D7721 MTZJ6.2B
D7720 MTZJ6.2B
P720 6P
GND
I2CS
SCLU
SDAU
GND
GND
TO DEF
P718
P722
P723
P716

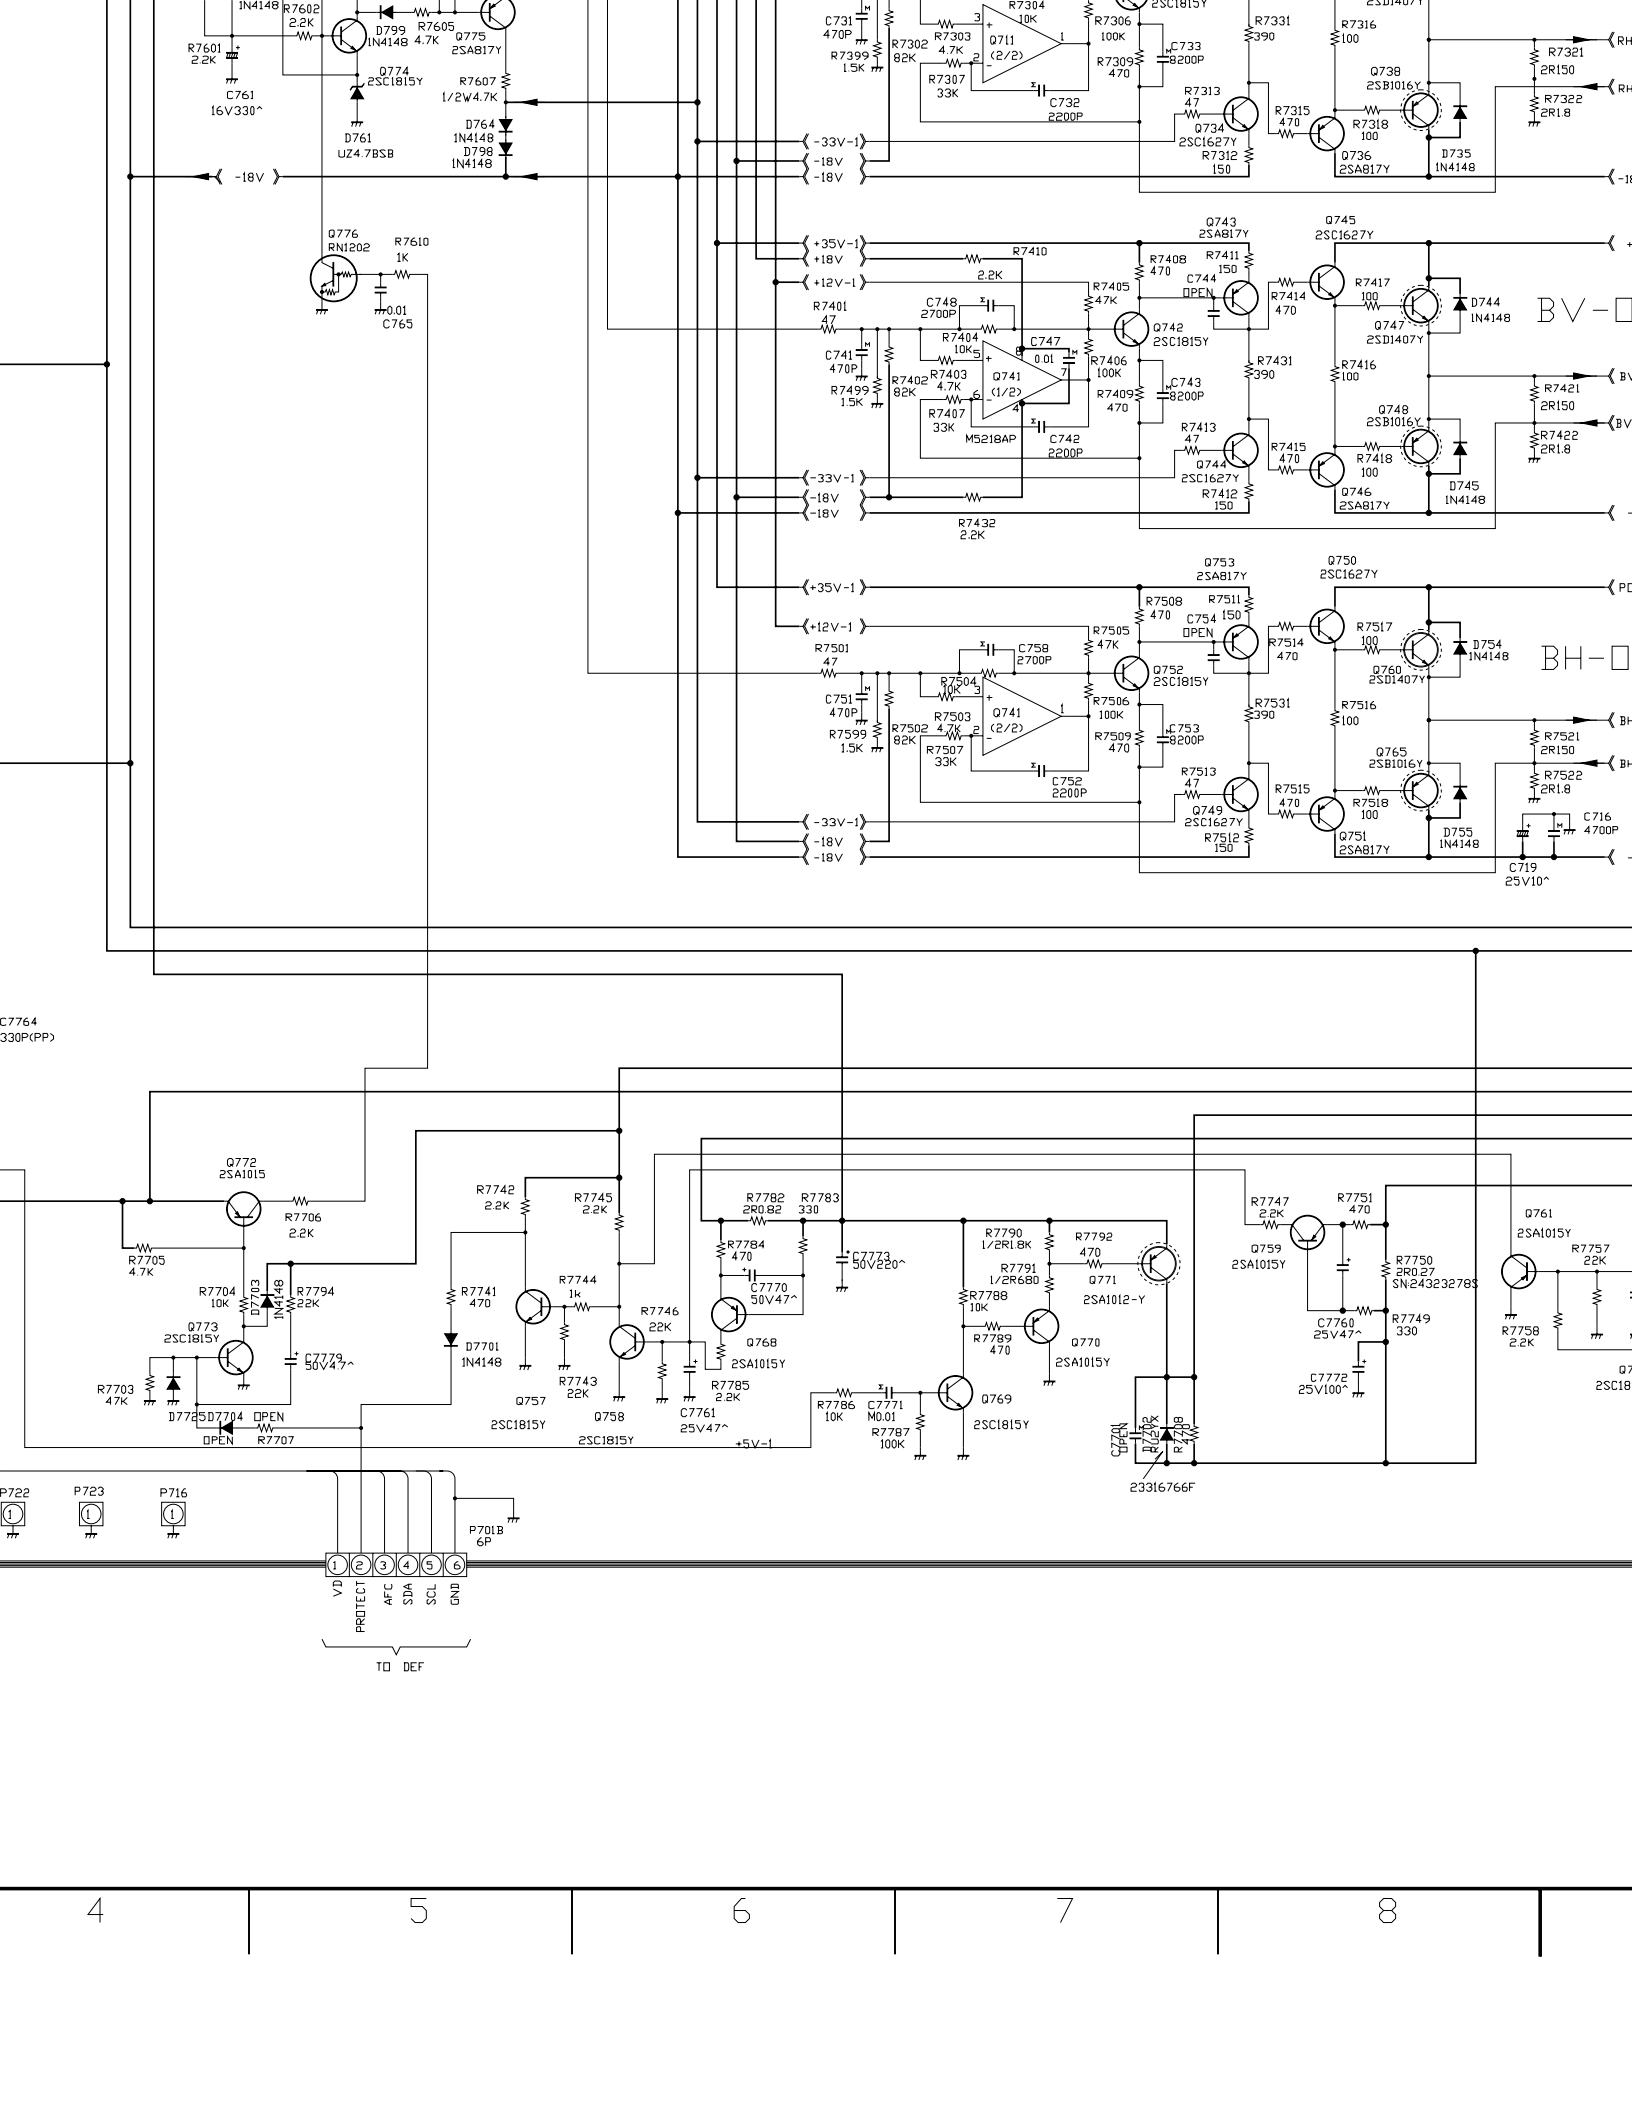
-18V
-33V-1
-18V
-18V
+35V-1
+18V
+12V-1
-33V-1
-18V
-18V
+35V-1
+12V-1
-33V-1
-18V
-18V
R7601 2.2K
R7602 2.2K
D799 1N4148
R7605 4.7K
Q775 2SA817Y
Q774 2SC1815Y
C761 16V330^
D761 UZ4.7BSB
R7607 1/2W4.7K
D764 1N4148
D798 1N4148
Q776 RN1202
R7610 1K
0.01 C765
R7410 2.2K
R7408 470
R7411 150
Q743 2SA817Y
Q745 2SC1627Y
C744 OPEN
R7414 470
R7417 100
D744 1N4148
Q747 2SD1407Y
R7401 47
C748 2700P
R7404 10K
C747 0.01
R7405 47K
Q742 2SC1815Y
R7406 100K
R7409 470
C741 470P
R7499 1.5K
R7402 82K
R7403 4.7K
R7407 33K
Q741 (1/2) M5218AP
C743 8200P
C742 2200P
R7431 390
R7416 100
R7421 2R150
R7422 2R1.8
Q748 2SB1016Y
R7418 100
D745 1N4148
Q746 2SA817Y
R7413 47
Q744 2SC1627Y
R7415 470
R7412 150
R7432 2.2K
Q753 2SA817Y
Q750 2SC1627Y
R7508 470
R7511 150
C754 OPEN
R7514 470
R7517 100
D754 1N4148
Q760 2SD1407Y
R7501 47
C758 2700P
R7504 10K
R7505 47K
Q752 2SC1815Y
R7506 100K
R7509 470
C751 470P
R7599 1.5K
R7502 82K
R7503 4.7K
R7507 33K
Q741 (2/2)
C753 8200P
C752 2200P
R7531 390
R7516 100
R7521 2R150
R7522 2R1.8
Q765 2SB1016Y
R7518 100
D755 1N4148
Q751 2SA817Y
R7513 47
Q749 2SC1627Y
R7515 470
R7512 150
C716 4700P
C719 25V10^
C7764 330P(PP)
Q772 2SA1015
R7706 2.2K
R7705 4.7K
R7704 10K
D7703 1N4148
R7794 22K
Q773 2SC1815Y
C7779 50V47^
R7703 47K
D7785 D7704 OPEN
OPEN R7707
R7742 2.2K
R7745 2.2K
R7741 470
R7744 1k
R7746 22K
R7743 22K
Q757 2SC1815Y
Q758 2SC1815Y
D7701 1N4148
R7782 2R0.82
R7783 330
R7784 470
C7770 50V47^
Q768 2SA1015Y
R7785 2.2K
C7761 25V47^
+5V-1
C7773 50V220^
R7790 1/2R1.8K
R7791 1/2R680
R7788 10K
R7789 470
Q770 2SA1015Y
R7786 10K
C7771 M0.01
R7787 100K
Q769 2SC1815Y
R7792 470
Q771 2SA1012-Y
C7701 OPEN
R7702 2K
R7708 4.7K
23316766F
R7747 2.2K
Q759 2SA1015Y
R7751 470
R7750 2R0.27 SN:243232785
C7760 25V47^
R7749 330
C7772 25V100^
Q761 2SA1015Y
R7757 22K
R7758 2.2K
P722
P723
P716
P701B 6P
1 VD
2 PROTECT
3 AFC
4 SDA
5 SCL
6 GND
TO DEF

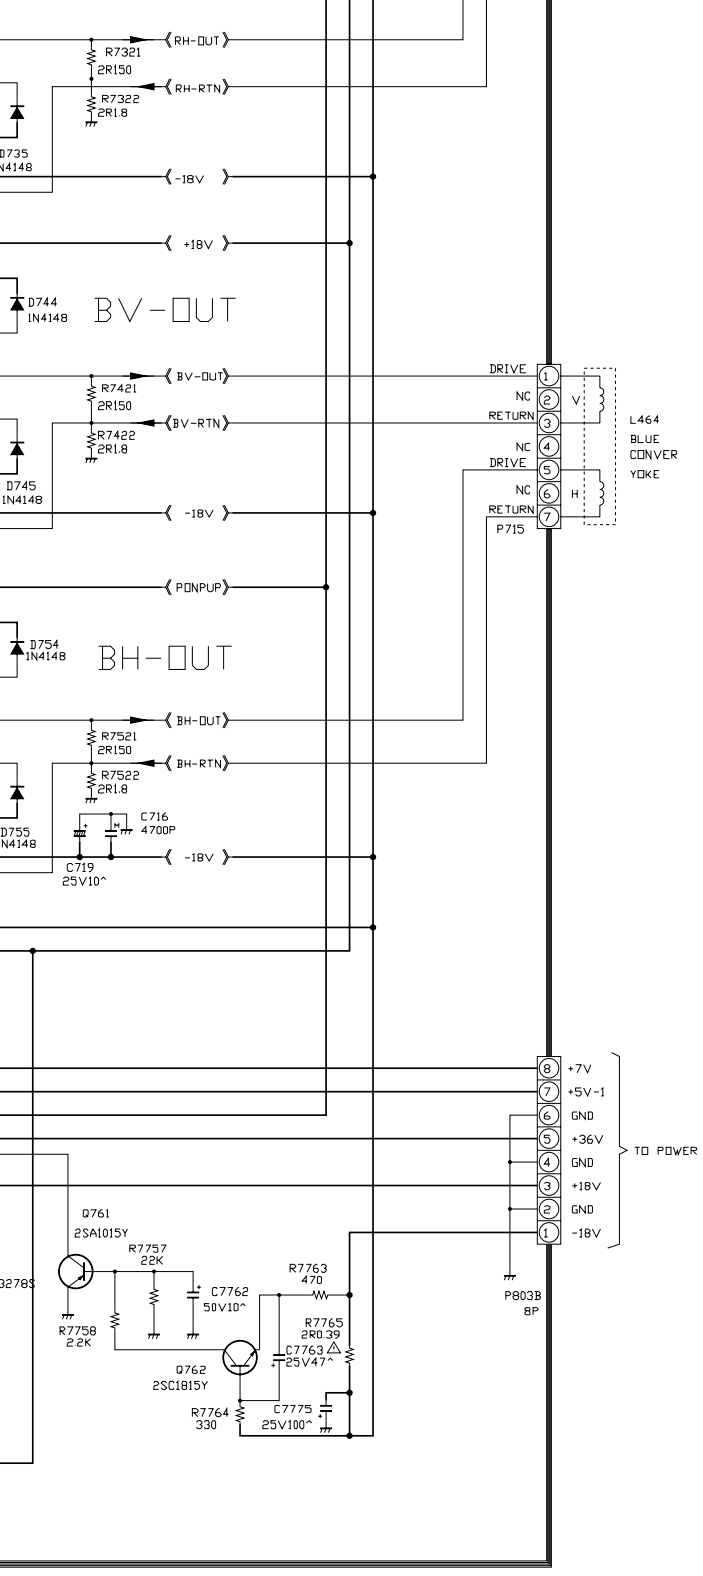
RH-OUT
R7321
2R150
RH-RTN
R7322
2R1.8
D735
N4148
-18V
+18V
D744
1N4148
BV-OUT
BV-OUT
R7421
2R150
BV-RTN
R7422
2R1.8
D745
1N4148
-18V
PONPUP
D754
1N4148
BH-OUT
BH-OUT
R7521
2R150
BH-RTN
R7522
2R1.8
D755
N4148
C716
4700P
C719
25V10^
-18V
DRIVE
NC
RETURN
NC
DRIVE
NC
RETURN
P715
V
H
L464
BLUE
CONVER
YOKE
+7V
+5V-1
GND
+36V
GND
+18V
GND
-18V
TO POWER
P803B
8P
Q761
2SA1015Y
R7757
22K
R7758
2.2K
C7762
50V10^
R7763
470
R7765
2R0.39
C7763
25V47^
Q762
2SC1815Y
R7764
330
C7775
25V100^

G

H

I

J

K

L

CONVER OUT
40PW13G/B7/7

13 | 14 | 15 | 16